

Sun Dual 10GbE SPF+ PCIe 2.0 Low Profile Adapter

User's Guide



Part No. 820-7898-11
May 2010, Revision A

Copyright © 2010, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related software documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle USA, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure the safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. UNIX is a registered trademark licensed through X/Open Company, Ltd.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Copyright © 2010, Oracle et/ou ses affiliés. Tous droits réservés.

Ce logiciel et la documentation qui l'accompagne sont protégés par les lois sur la propriété intellectuelle. Ils sont concédés sous licence et soumis à des restrictions d'utilisation et de divulgation. Sauf disposition de votre contrat de licence ou de la loi, vous ne pouvez pas copier, reproduire, traduire, diffuser, modifier, breveter, transmettre, distribuer, exposer, exécuter, publier ou afficher le logiciel, même partiellement, sous quelque forme et par quelque procédé que ce soit. Par ailleurs, il est interdit de procéder à toute ingénierie inverse du logiciel, de le désassembler ou de le décompiler, excepté à des fins d'interopérabilité avec des logiciels tiers ou tel que prescrit par la loi.

Les informations fournies dans ce document sont susceptibles de modification sans préavis. Par ailleurs, Oracle Corporation ne garantit pas qu'elles soient exemptes d'erreurs et vous invite, le cas échéant, à lui en faire part par écrit.

Si ce logiciel, ou la documentation qui l'accompagne, est concédé sous licence au Gouvernement des Etats-Unis, ou à toute entité qui délivre la licence de ce logiciel ou l'utilise pour le compte du Gouvernement des Etats-Unis, la notice suivante s'applique :

U.S. GOVERNMENT RIGHTS. Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

Ce logiciel ou matériel a été développé pour un usage général dans le cadre d'applications de gestion des informations. Ce logiciel ou matériel n'est pas conçu ni n'est destiné à être utilisé dans des applications à risque, notamment dans des applications pouvant causer des dommages corporels. Si vous utilisez ce logiciel ou matériel dans le cadre d'applications dangereuses, il est de votre responsabilité de prendre toutes les mesures de secours, de sauvegarde, de redondance et autres mesures nécessaires à son utilisation dans des conditions optimales de sécurité. Oracle Corporation et ses affiliés déclinent toute responsabilité quant aux dommages causés par l'utilisation de ce logiciel ou matériel pour ce type d'applications.

Oracle et Java sont des marques déposées d'Oracle Corporation et/ou de ses affiliés. Tout autre nom mentionné peut correspondre à des marques appartenant à d'autres propriétaires qu'Oracle.

AMD, Opteron, le logo AMD et le logo AMD Opteron sont des marques ou des marques déposées d'Advanced Micro Devices. Intel et Intel Xeon sont des marques ou des marques déposées d'Intel Corporation. Toutes les marques SPARC sont utilisées sous licence et sont des marques ou des marques déposées de SPARC International, Inc. UNIX est une marque déposée concédée sous licence par X/Open Company, Ltd.

Ce logiciel ou matériel et la documentation qui l'accompagne peuvent fournir des informations ou des liens donnant accès à des contenus, des produits et des services émanant de tiers. Oracle Corporation et ses affiliés déclinent toute responsabilité ou garantie expresse quant aux contenus, produits ou services émanant de tiers. En aucun cas, Oracle Corporation et ses affiliés ne sauraient être tenus pour responsables des pertes subies, des coûts occasionnés ou des dommages causés par l'accès à des contenus, produits ou services tiers, ou à leur utilisation.



Adobe PostScript

Contents

Using This Documentation ix

Understanding the Low Profile Adapter 1

- Shipping Kit Contents 2
- Product Description 2
- Front Panel Connectors and LEDs 3
- Physical Characteristics 5
- Performance Specifications 6
- Power and Environmental Requirements 7
- Hardware and Software Requirements 7
- OS Patches and Updates 8
- Solaris Platform Installation Overview 9
- Linux Platform Installation Overview 10
- Microsoft Windows Platform Installation Overview 11

Installing the Driver 13

- ▼ Verify the Driver Version on a Solaris Platform 14
- ▼ Remove the Driver From a Solaris Platform 15
- ▼ Download and Install the Driver on a Linux Platform 15
- ▼ Remove the Driver From a Linux Platform 17
- ▼ Download and Install the Driver on a Microsoft Windows Platform 18
- ▼ Remove the Driver From a Microsoft Windows Platform 19

Installing the Low Profile Adapter 21

- ▼ Install the SFP+ Transceivers 21
- ▼ Install the Adapter in a System 23
- ▼ Verify the Installation in a Solaris SPARC System 24
- ▼ Verify the Installation in a Solaris x86 System 26
- ▼ Verify the Installation in a Linux System 27
- ▼ Verify the Installation in a Microsoft Windows System 28

Configuring the Network 29

- ▼ Create `/etc/hostname.ixgbe#` Files 29
- ▼ Configure the Network Host Files With the `ifconfig` Command 30
- ▼ Boot Over the Network Using PXE 31
- ▼ Boot Solaris x86 and Linux Systems Over a 10GbE Network 31
- ▼ Install the Solaris OS Over a 10GbE Network on SPARC Systems 33

Configuring the Driver Parameters 37

Driver Parameters for the Solaris OS 37

- ▼ Set `ixgbe` Driver Parameters in the Solaris OS 39

Solaris OS Performance Variables 40

- ▼ Improve Performance in the Solaris OS 40

Driver Parameters for Linux 42

- ▼ Set Driver Parameters in Linux 43
- ▼ Configure Jumbo Frames in Solaris OS 43
- ▼ Configure Jumbo Frames in Linux 44

Configuring Link Aggregation in a Solaris Environment 45

Link Aggregation Overview 45

- ▼ Configure Link Aggregations 46
- ▼ Display Information About Link Aggregations 47
- ▼ Delete Link Aggregations 48

Configuring VLANs 49

VLAN Overview 50

VLAN Configuration 52

▼ Configure Static VLANs in a Solaris Environment 53

VLAN Naming Format 54

▼ Configure VLANs in a Linux Environment 55

▼ Configure VLANs in a Microsoft Windows Environment 56

▼ Configure Bonding for Multiple ixgbe Interfaces 57

▼ Remove Bonding 58

Index 59

Using This Documentation

This guide provides hardware and software installation instructions for the Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter from Oracle. This guide also describes how to configure the `ixgbe` driver for the Oracle Solaris Operating System and the Linux and Microsoft Windows Server operating systems. `ixgbe` is the name of the driver for the Intel 82599-based devices.

These instructions are designed for enterprise system administrators with experience installing network hardware and software.

Note – In this document the term “x86” refers to 64-bit and 32-bit systems manufactured using processors compatible with the AMD64, Intel Xeon, or Intel Pentium product families.

Related Documentation

The documents listed as online are available at:

(<http://docs.sun.com/app/docs/prod/dual.spf.lowpro#hic>)

Application	Title	Part Number	Format	Location
Product notes	<i>Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter Product Notes</i>	820-7899	PDF, HTML	Online
User's guide	<i>Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter User's Guide</i>	820-7898	PDF, HTML	Online

Application	Title	Part Number	Format	Location
Getting started	<i>Sun Network Interface Card Products Getting Started Guide</i>	821-1929	Hardcopy	Shipping kit
Safety and compliance	<i>Important Safety Information for Sun Hardware Systems</i>	821-1590	Hardcopy	Shipped with server
	<i>Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter Safety and Compliance Guide</i>	821-0055	PDF	Online

Documentation, Support, and Training

These web sites provide additional resources:

Sun Function	URL
Documentation	(http://docs.sun.com/)
Support	(http://www.sun.com/support/)
Training	(http://www.sun.com/training/)

Documentation Feedback

Submit comments about this document by clicking the Feedback[+] link at: [\(http://www.sun.com/hwdocs/feedback\)](http://www.sun.com/hwdocs/feedback) . Include the title and part number of your document with your feedback:

Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter User's Guide, part number 820-7898-11

Understanding the Low Profile Adapter

These topics provide an overview of the Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter:

Description	Links
Understand the adapter.	"Shipping Kit Contents" on page 2 "Product Description" on page 2 "Front Panel Connectors and LEDs" on page 3 "Physical Characteristics" on page 5 "Performance Specifications" on page 6 "Power and Environmental Requirements" on page 7
Understand the hardware and software requirements.	"Hardware and Software Requirements" on page 7 "OS Patches and Updates" on page 8
Understand how to install the adapter.	"Solaris Platform Installation Overview" on page 9 "Linux Platform Installation Overview" on page 10 "Microsoft Windows Platform Installation Overview" on page 11

Related Information

- Sun 10GbE adapters web page
(<http://www.sun.com/products/networking/ethernet/10gethernetfamily>)
- ["Related Documentation" on page ix](#)

Shipping Kit Contents

The carton in which your Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter was shipped should contain the following items:

- Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter with a low profile bracket attached
- Standard height bracket, screws and washer
- *Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter Getting Started Guide*


Related Information

- [“Product Description” on page 2](#)
- [“Related Documentation” on page ix](#)

Product Description

The Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter is a 10 Gigabit Ethernet (10GbE) fiber network interface card (NIC) for PCI Express (PCIe) systems. The adapter is shown in the figure and provides the following features and benefits:

- Dual 10 Gigabit Ethernet ports
- Supports dual-rate SFP+ transceivers (fiber short reach and fiber long reach)
- Intel 82599EB 10 Gigabit Ethernet controller
- Industry PCIe 2.0 compliant
- IEEE 802.3ae 2002 compliant
- Intel I/O Acceleration Technology (I/OAT)
- TCP segmentation offloading (TSO)/large send offloading (LSO)
- Optimized queues – 32 transmit (Tx) and 64 receive (Rx) per port
- Support for most network operating systems (NOS)
- Remote management support
- RoHS compliant, lead-free technology
- Intel PROSet Utility for Windows Device Manager

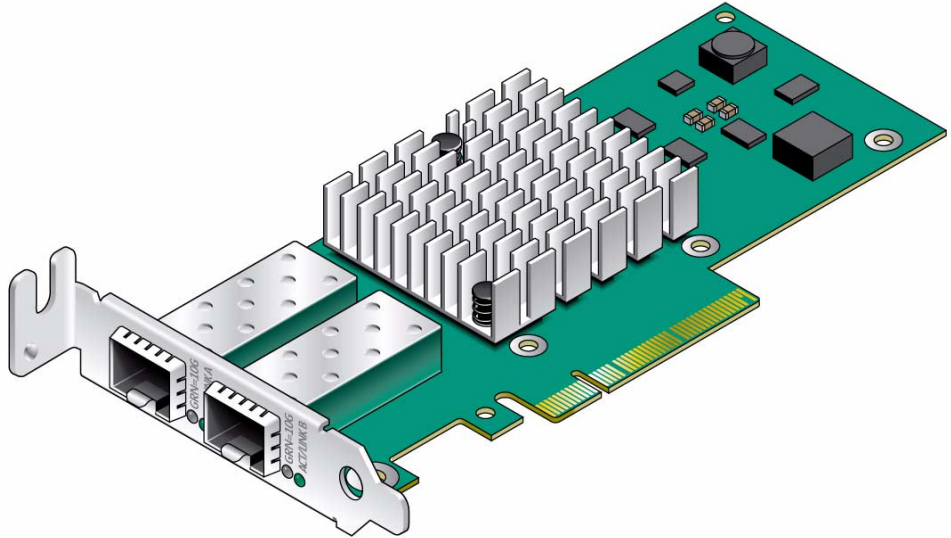

Related Information

- [“Front Panel Connectors and LEDs” on page 3](#)
- [“Install the SFP+ Transceivers” on page 21](#)
- [“Install the Adapter in a System” on page 23](#)
- [“Product Description” on page 2](#)
- [“Physical Characteristics” on page 5](#)
- [“Power and Environmental Requirements” on page 7](#)
- [“Hardware and Software Requirements” on page 7](#)

Front Panel Connectors and LEDs

On the front panel below each port, there are two LEDs dedicated to that port. The following figure and table explain the meaning of the LEDs for each port. Each port accepts a SFP+ optical transceiver. The SFP+ transceivers can be purchased separately or included with your adapter. In the figure, the upper port is port A and the lower port is port B.



Label	Color	Meaning
GRN=10G (port A)	Green	10GbE link
	Amber	1GbE link
ACT /LINK A	Green	On steady = Link up. Blinking = Activity on link.
GRN=10G (port B)	Green	10GbE link
	Amber	1GbE link
ACT/LINK B	Green	On steady = Link up. Blinking = Activity on link.

Related Information

- [“Install the SFP+ Transceivers” on page 21](#)
- [“Install the Adapter in a System” on page 23](#)
- [“Product Description” on page 2](#)
- [“Physical Characteristics” on page 5](#)

- [“Performance Specifications” on page 6](#)
- [“Power and Environmental Requirements” on page 7](#)

Physical Characteristics

Dimension	Measurement
Length	5.73 in. (145.5 mm)
Height	3.12 in. (79.3 mm) short bracket, 4.725 in. (120 mm) standard bracket

Related Information

- [“Product Description” on page 2](#)
- [“Front Panel Connectors and LEDs” on page 3](#)
- [“Performance Specifications” on page 6](#)
- [“Power and Environmental Requirements” on page 7](#)

Performance Specifications

Feature	Specification
Data rate supported per port	10 Gbit/sec, 1 Gbit/sec
Bus type	PCI Express V2.0, 5.0 gigatransfers/sec
Bus width	x8 lane PCI Express
Conforms to Ethernet standard	802.3
Boot ROM	2 Mbit SPI Flash
Electromagnetic interference (EMI)	FCC Class A

Related Information

- [“Product Description” on page 2](#)

- [“Front Panel Connectors and LEDs” on page 3](#)
- [“Physical Characteristics” on page 5](#)
- [“Power and Environmental Requirements” on page 7](#)

Power and Environmental Requirements

Specification	Measurement
Typical power consumption	14W (1.17A at 12V) dual port
Main host power supply	12 V \pm 15%
Operating temperature	35 to 70 °C (95 to 158 °F) module inlet temperature
Storage temperature	-40 to 70 °C (-40 to 158 °F)
Storage humidity	90% noncondensing relative humidity at 35 °C
Airflow	2 to 12 CFM

Related Information

- [“Product Description” on page 2](#)
- [“Front Panel Connectors and LEDs” on page 3](#)
- [“Physical Characteristics” on page 5](#)
- [“Performance Specifications” on page 6](#)

Hardware and Software Requirements

Before using the Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter, ensure that your system meets the hardware and software requirements in the following table.

Supported Hardware and Operating Systems	Supported Products
Hardware, Sun servers	Platforms supported include: <ul style="list-style-type: none">• Sun Fire X4170 server• Sun Fire X4270 server• Sun Fire X4275 server For the most up-to-date supported platforms, check the product web page for the specific server and its I/O options.
Optical transceivers	SFP+ transceiver (short haul) SFP+ transceiver (long haul)
Operating systems	Operating systems supported include: <ul style="list-style-type: none">• Solaris 10 5/09 OS and Solaris 10 10/09 OS• OpenSolaris 2009.06 OS• Red Hat Enterprise Linux (RHEL) 4.8 (32-bit and 64-bit) and 5.4 (32-bit and 64-bit)• SUSE Linux Enterprise Server (SLSE) 9 SP5 (64-bit), 10 SP3 (64-bit), and 11 (64-bit)• Microsoft Windows Server 2003 (32-bit and 64-bit)• Microsoft Windows Server 2008 SP2 (64-bit) and R2 (64-bit)• VMware ESX 3.5 and 4.0 For the most up-to-date supported operating systems, check the product web page for the specific server.

Note that hardware and software support changes over time. For the latest information concerning I/O options supported by your server, check:

(<http://www.sun.com/products/networking/ethernet/10gigethernetfamily/specs.xml>)

Related Information

- *Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter Product Notes*
- [“OS Patches and Updates” on page 8](#)

- Sun 10GbE adapters web page
(<http://www.sun.com/products/networking/ethernet/10gethernetfamily>)

OS Patches and Updates

Check the *Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter Product Notes (820-7899)* for the latest patches and updates. This document is available at:

(<http://docs.sun.com/app/docs/prod/dual.spf.lowpro#hic>)

To download the latest patches, go to:

(<http://sunsolve.sun.com/>)

In addition:

- Check the product web page at:
(<http://www.sun.com/products/networking/ethernet/10gethernetfamily>)
- To download the most recent drivers for the Solaris OS, go to:
(<http://www.sun.com/download>)
- To download the most recent drivers for Windows or a Linux OS, go to:
(<http://www.intel.com/support/network/adapter>)

Related Information

- *Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter Product Notes*
- “Hardware and Software Requirements” on page 7

Solaris Platform Installation Overview

Follow these steps to install the adapter on a Solaris platform.

Step	Description	Links
1.	Understand the low profile adapter.	“Understanding the Low Profile Adapter” on page 1
2.	Verify the driver installation.	“Verify the Driver Version on a Solaris Platform” on page 14
3.	Install the transceivers.	“Install the SFP+ Transceivers” on page 21
4.	Install the adapter.	“Install the Adapter in a System” on page 23
5.	Verify the adapter installation.	“Verify the Installation in a Solaris SPARC System” on page 24 “Verify the Installation in a Solaris x86 System” on page 26
6.	Configure the network.	“Create /etc/hostname.ixgbe# Files” on page 29 “Configure the Network Host Files With the ifconfig Command” on page 30
7.	Configure the driver parameters.	“Driver Parameters for the Solaris OS” on page 37 “Set ixgbe Driver Parameters in the Solaris OS” on page 39
8.	(Optional) Boot over the network.	“Boot Over the Network Using PXE” on page 31 “Boot Solaris x86 and Linux Systems Over a 10GbE Network” on page 31
9.	(Optional) Install the OS over the network.	“Install the Solaris OS Over a 10GbE Network on SPARC Systems” on page 33
10.	(Optional) Configure Jumbo Frames.	“Configure Jumbo Frames in Solaris OS” on page 43
11.	(Optional) Configure link aggregation.	“Link Aggregation Overview” on page 45 “Configure Link Aggregations” on page 46 “Display Information About Link Aggregations” on page 47 “Delete Link Aggregations” on page 48
12.	(Optional) Configure VLANs.	“VLAN Overview” on page 50 “VLAN Configuration” on page 52 “Configure Static VLANs in a Solaris Environment” on page 53
13.	(Optional) Configure bonding.	“Configure Bonding for Multiple ixgbe Interfaces” on page 57 “Remove Bonding” on page 58

Linux Platform Installation Overview

Follow these steps to install the adapter on a Linux platform.

Step	Description	Links
1.	Understand the low profile adapter.	“Understanding the Low Profile Adapter” on page 1
2.	Install the driver.	“Download and Install the Driver on a Linux Platform” on page 15
3.	Install the transceivers.	“Install the SFP+ Transceivers” on page 21
4.	Install the adapter.	“Install the Adapter in a System” on page 23
5.	Verify the adapter installation.	“Verify the Installation in a Linux System” on page 27
6.	Boot over the network.	“Boot Solaris x86 and Linux Systems Over a 10GbE Network” on page 31
7.	Configure the driver parameters.	“Driver Parameters for Linux” on page 42 “Set Driver Parameters in Linux” on page 43
8.	(Optional) Configure Jumbo Frames.	“Configure Jumbo Frames in Linux” on page 44
9.	(Optional) Configure VLANs.	“VLAN Overview” on page 50 “VLAN Configuration” on page 52 “Configure VLANs in a Linux Environment” on page 55
10.	(Optional) Configure bonding.	“Configure Bonding for Multiple ixgbe Interfaces” on page 57 “Remove Bonding” on page 58

Microsoft Windows Platform Installation Overview

Follow these steps to install the adapter on a Microsoft Windows platform.

Step	Description	Links
1.	Understand the low profile adapter.	“Understanding the Low Profile Adapter” on page 1
2.	Install the driver.	“Download and Install the Driver on a Microsoft Windows Platform” on page 18
3.	Install the transceivers.	“Install the SFP+ Transceivers” on page 21

Step	Description	Links
4.	Install the adapter.	“Install the Adapter in a System” on page 23
5.	Verify the adapter installation.	“Verify the Installation in a Microsoft Windows System” on page 28
6.	(Optional) Configure VLANs.	“VLAN Overview” on page 50 “VLAN Configuration” on page 52 “Configure VLANs in a Microsoft Windows Environment” on page 56

Installing the Driver

The `ixgbe` device driver software comes bundled with Solaris software. These topics explain how to verify that the `ixgbe` device driver software is present on an x86 or SPARC system that uses the Solaris OS, and how to download and install the `ixgbe` driver on Linux and Microsoft Windows systems.

Description	Links
Verify or remove the driver on a Solaris platform.	“Verify the Driver Version on a Solaris Platform” on page 14 “Remove the Driver From a Solaris Platform” on page 15
Download, install, or remove the driver on a Linux platform.	“Download and Install the Driver on a Linux Platform” on page 15 “Remove the Driver From a Linux Platform” on page 17
Download, install, or remove the driver on a Windows platform.	“Download and Install the Driver on a Microsoft Windows Platform” on page 18 “Remove the Driver From a Microsoft Windows Platform” on page 19

Related Information

- [“Solaris Platform Installation Overview” on page 9](#)
- [“Linux Platform Installation Overview” on page 10](#)
- [“Microsoft Windows Platform Installation Overview” on page 11](#)
- [Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter Product Notes](#)
- [“OS Patches and Updates” on page 8](#)
- [“Configuring the Driver Parameters” on page 37](#)

▼ Verify the Driver Version on a Solaris Platform

Solaris 10 5/09 OS is the first release of Solaris to support the Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter and other Intel 82599 10GbE controller-based adapters. The Solaris `ixgbe` driver, version 1.0.9 and later, supports both the Intel 82599 and Intel 82598 families of network controllers.

The `ixgbe` drive comes bundled with the Solaris OS. Depending on your version of the Solaris 10 OS, you might or might not need to download the updated driver.

1. **Check the version of the installed driver to ensure that the adapter is properly loaded and is recognized by the Solaris OS.**

```
# modinfo | grep ixgbe
173 7b762000 17998 100 1 ixgbe (Intel 10Gb Ethernet 1.0.9)
```

If the version number is not 1.0.9 or later, you must install the latest driver patch. See [“OS Patches and Updates” on page 8](#).

Note – If the `ixgbe` driver is not listed, the driver might not be loaded. You can use the `modload` command to load the driver if needed. See the `modload(1M)` man page.

2. **Apply the necessary patch to get the latest driver:**

```
# patchadd /absolute_path/patchID
```

See the `patchadd(1M)` man page for more information.

Related Information

- [Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter Product Notes](#)
- [“OS Patches and Updates” on page 8](#)
- `patchadd(1M)` man page
- `modload(1M)` man page.
- [“Remove the Driver From a Solaris Platform” on page 15](#)

▼ Remove the Driver From a Solaris Platform

It is not necessary to remove a driver when its associated device is removed from a system. However, if you want to clean up your file systems or conserve space, you can easily remove a driver.

- **Remove the driver:**

```
# pkgrm SUNWixgbe*
```

See the `pkgrm(1M)` man page for more information.

Related Information

- “Verify the Driver Version on a Solaris Platform” on page 14
- `pkgrm(1M)` man page

▼ Download and Install the Driver on a Linux Platform

If your system uses the Red Hat or SUSE Linux operating system, you must download the `ixgbe` device driver to install it.

1. **Log in to your system.**
2. **In a browser, go to this location:**
[\(http://support.intel.com/support/network/adapter/\)](http://support.intel.com/support/network/adapter/)
3. **Select the following product:**
Intel 10 Gigabit XF SR Dual Port Server Adapter
4. **Select this option:**
Download drivers and software
5. **Select Linux as the operating system.**

6. Locate the following driver and select Download:

Network Adapter Driver for PCI-E 10 Gigabit Network Connections under Linux

7. Review and accept the software license agreement.

8. Select this option:

Download Network Adapter Driver for PCI-E 10 Gigabit Network Connections under Linux

The download begins. The file named `ixgbe-x.x.x.x.tar.gz` is saved in the `~/Desktop` directory of your system.

Note – The primary driver link is a buildable source archive that works with Linux 2.6.x kernels only and requires that the currently running kernel match the SRC RPM kernel files and headers in order to build the driver. See the bundled README file in the unpacked archive from Intel for more information.

For this example assume that the file is named `ixgbe-2.0.38.2.tar.gz`. The actual file might have different version or subversion numbers.

9. Copy the file containing the driver from `~/Desktop` to `/temp`.

10. Uncompress and untar the file:

```
# tar -zxvf ixgbe-2.0.38.2.tar.gz
```

11. Go to the newly created `src` directory:

```
# cd /temp/ixgbe-2.0.38.2/src
```

12. Compile the driver source file:

```
# make  
# make install
```

13. Load the `ixgbe` driver:

```
# modprobe ixgbe
```

14. Verify that the `ixgbe` driver has been successfully installed:

```
# lsmod | grep ixgbe
```

The output should be similar to the following:

```
ixgbe                118052  0
```

15. Check the `ixgbe` driver version:

```
# modinfo ixgbe | grep ver
```

For example, the output might be the following:

```
filename:           /lib/modules/2.6.18-53.el5/kernel/drivers/net/ixgbe/ixgbe.ko
version:            2.0.38.2ro
description:        Intel(R) 10 Gigabit PCI Express Network Driver
srcversion:         5CFF6AEB251050F8A4B746
vermagic:           2.6.18-53.el5 SMP mod_unload gcc-4.1
```

Related Information

- [“Remove the Driver From a Linux Platform” on page 17](#)

▼ Remove the Driver From a Linux Platform

It is not necessary to remove a driver when its associated device is removed from a system. However, if you want to clean up your file systems or conserve space, you can easily remove a driver.

- Use the `rmmmod` command:

```
# rmmmod ixgbe
```

Related Information

- [“Download and Install the Driver on a Linux Platform” on page 15](#)

▼ Download and Install the Driver on a Microsoft Windows Platform

If your system uses the Microsoft Windows Server 2003 or 2008 operating system, perform the following procedure to download and install the device driver.

1. **Log in to your system.**
2. **In a browser, go to this location:**
[\(http://support.intel.com/support/network/adapter/\)](http://support.intel.com/support/network/adapter/)
3. **Select the following product:**
Intel 10 Gigabit XF SR Dual Port Server Adapter
4. **Select this option:**
Download drivers and software
5. **Select one of the following as the operating system:**
 - **For a 64-bit driver:**
 - Windows Server 2003 Standard x64 Edition
 - Windows Server 2008 Standard x64
 - **For a 32-bit driver:**
 - Windows Server 2003 Standard Edition
 - Windows Server 2008 Standard
6. **Locate one of the following and select Download next to it:**
 - **For a 64-bit driver:**
 - Network Adapter Driver for Windows XP Professional x64 Edition or Windows Server 2003 x64 Edition
 - Network Adapter Driver for Windows Vista and Windows Server 2008 x64
 - **For a 32-bit driver:**
 - Network Adapter Drivers for Windows XP and Windows Server 2003
 - Network Adapter Driver for Windows Vista and Windows Server 2008
7. **Review and accept the software license agreement.**
8. **Select the driver name to start the download.**
9. **Click on the .exe files to install the driver.**
10. **Follow the instructions in the installation wizard.**

11. If the Found New Hardware Wizard screen is displayed, click **Cancel**.

The `autorun` utility automatically runs after you have extracted the files.

Related Information

- [“Remove the Driver From a Microsoft Windows Platform”](#) on page 19

▼ Remove the Driver From a Microsoft Windows Platform

It is not necessary to remove a driver when its associated device is removed from a system. However, if you want to clean up your file systems or conserve space, you can easily remove a driver.

1. From the Control Panel, double-click **Add/Remove Programs**.
2. Select **Intel PRO Network Connections Drivers**.
3. Click **Add/Remove**.
4. When the confirmation dialog displays, click **OK**.

Related Information

- [“Download and Install the Driver on a Microsoft Windows Platform”](#) on page 18

Installing the Low Profile Adapter

These topics describe how to install the low profile adapter.

Description	Links
Understand the connectors.	“Front Panel Connectors and LEDs” on page 3
Install the transceivers.	“Install the SFP+ Transceivers” on page 21
Install the adapter.	“Install the Adapter in a System” on page 23
Verify the adapter installation.	“Verify the Installation in a Solaris SPARC System” on page 24 “Verify the Installation in a Solaris x86 System” on page 26 “Verify the Installation in a Linux System” on page 27 “Verify the Installation in a Microsoft Windows System” on page 28

Related Information


- [“Solaris Platform Installation Overview” on page 9](#)
- [“Linux Platform Installation Overview” on page 10](#)
- [“Microsoft Windows Platform Installation Overview” on page 11](#)
- [Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter Safety and Compliance Guide](#)

▼ Install the SFP+ Transceivers

The Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter requires one small form-factor pluggable (SFP+) optical transceiver in at least one port to create an Ethernet connection. The optical transceivers are available from Sun Microsystems. Check the Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter product web page for available transceivers.


Note – Install the optical transceivers into the SFP+ connectors *before* installing the adapter into the system.

1. Pull the locking handle into the full horizontal position until you feel the handle click into position.

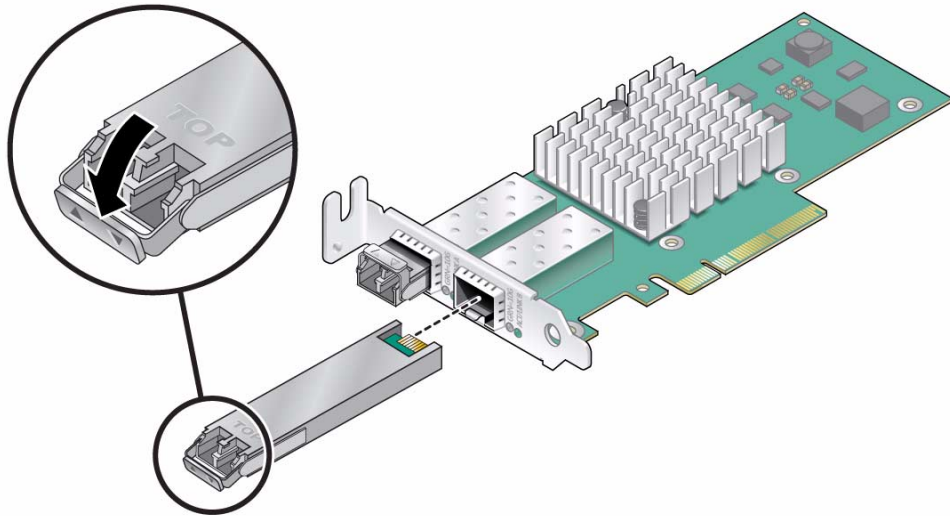

2. Holding the optical transceiver by the edges, align the transceiver with the slot in the adapter and slide the transceiver into the opening.
3. Applying even pressure at both corners of the transceiver, push the transceiver until it is firmly seated in the slot.
4. Lift the locking handle up and push the handle closed to lock the optical transceiver in place.

Note – If you pull the locking handle down when the optical transceiver module is installed, you must remove the module entirely and reinstall it. Pulling the handle down can disconnect the optical transceiver module, even though it might appear to be connected.

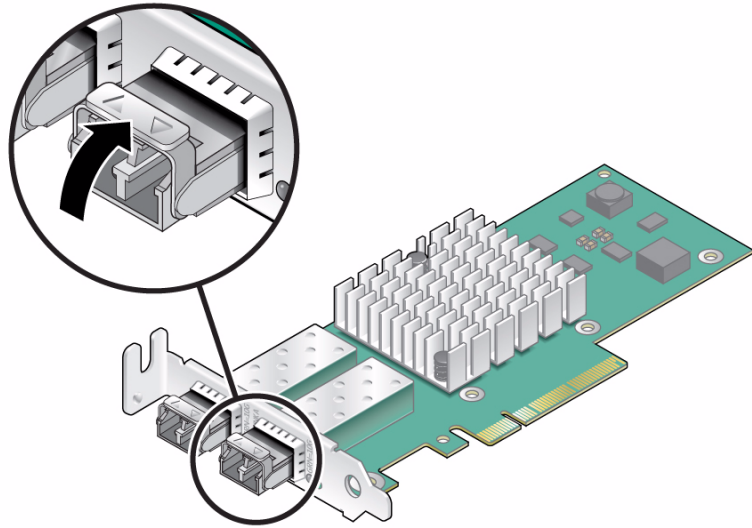

5. Repeat [Step 1](#) through [Step 4](#) to install the second optical transceiver.

Related Information

- “Front Panel Connectors and LEDs” on page 3
- Sun 10GbE adapters web page
(<http://www.sun.com/products/networking/ethernet/10gethernetfamily>)

▼ Install the Adapter in a System

The following instructions describe the basic tasks required to install the adapter card. Refer to your system installation or service manual for specific PCI Express (PCIe) card installation instructions.

1. **Halt and power off your system.**
2. **Power off all of the peripherals connected to your system.**
3. **Open the system unit.**
4. **Attach the adhesive copper strip of the antistatic wrist strap to the metal casing of the power supply.**

Wrap the other end twice around your wrist, with the adhesive side against your skin.

5. Holding the card by the edges, align the card edge connector with the PCIe slot.
6. Slide the card face plate into the small slot at the end of the PCIe opening.
7. Applying even pressure at both corners of the card, push the PCIe card until it is firmly seated in the slot.



Caution – Do not use excessive force when installing the card into the PCIe slot. You might damage the card's PCIe connector. If the card does not seat properly when you apply even pressure, remove the card and carefully reinstall it.

8. Detach the wrist strap and close the system unit.
9. Connect the optical cables to the SFP+ optical transceiver ports.
10. Power on the system.

Related Information

- [“Install the SFP+ Transceivers” on page 21](#)
- [“Front Panel Connectors and LEDs” on page 3](#)

▼ Verify the Installation in a Solaris SPARC System

Note – Verification is not required if your system supports dynamic reconfiguration (DR).

1. Power on the system.
2. When the banner appears, press the Stop-A key sequence to interrupt the boot process and display the OpenBoot (ok) prompt.

3. List the network devices on your system:

```
ok show-nets
a) /pci@7c0/pci@0/pci@9/network@0,1
b) /pci@7c0/pci@0/pci@9/network@0
c) /pci@7c0/pci@0/pci@2/network@0,1
d) /pci@7c0/pci@0/pci@2/network@0
e) /pci@780/pci@0/pci@8/network@0,1
f) /pci@780/pci@0/pci@8/network@0
g) /pci@780/pci@0/pci@1/network@0,1
h) /pci@780/pci@0/pci@1/network@0
q) NO SELECTION
Enter Selection, q to quit: q
```

If you do not see the device listed, check that the adapter is properly seated. If necessary, reinstall the adapter.

Note – Checking the `.properties` output for each device is the surest way to identify the device. Usually `/pci@780/pci@0/pci@8` or `/pci@7c0/pci@0/pci@9` correspond to PCIe slots, so look at those devices first.

4. Check the `.properties` output for each device.

The following examples assume that `/pci@7c0/pci@0/pci@9/network@0,1` is a port on the Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter.

a. Move to the device directory:

```
ok cd /pci@7c0/pci@0/pci@9/network@0,1
```

b. Display properties for the device:

```
ok .properties
```

The output will be similar to the following:

```
assigned-addresses 82090010 00000000 03100000 00000000 00080000
                   81090018 00000000 00002000 00000000 00000020
                   82090020 00000000 03180000 00000000 00004000
reg                 82090030 00000000 03200000 00000000 00080000
                   00090000 00000000 00000000 00000000 00000000
                   03090010 00000000 00000000 00000000 00080000
                   01090018 00000000 00000000 00000000 00000020
                   03090020 00000000 00000000 00000000 00004000
                   02090030 00000000 00000000 00000000 00080000
```

```

local-mac-address      00 1b 21 3c a2 dc
phy-type               xgf
version               Sun Dual 10GbE SFP+ PCIe 2.0 LP FCode 1.2 09/06/24
board-model           375-3617-01
model                 X1109a-z/1109a-z
compatible             pciex8086,10fb.108e.7b11.1
                     pciex8086,10fb.108e.7b11
                     pciex8086,10fb.1
                     pciex8086,10fb
                     pciexclass,020000
                     pciexclass,0200
address-bits           00000030
max-frame-size         00002400
network-interface-type ethernet
device_type            network
name                  network
fcode-rom-offset       0000e400
interrupts             00000001
cache-line-size        00000010
class-code             00020000
subsystem-id           00007b11
subsystem-vendor-id    0000108e
revision-id            00000001
device-id              000010fb
vendor-id              00008086

```

c. Type the following when you finish looking at the `.properties` values:

```
ok device-end
```

Related Information

- [“Install the Adapter in a System” on page 23](#)

▼ Verify the Installation in a Solaris x86 System

1. Power on the system.

2. Check the driver version on your system:

```
# modinfo | grep ixgbe
173 7b762000 17998 100 1 ixgbe (Intel 10Gb Ethernet 1.0.9)
```

If the version number is not 1.0.9 or newer, you must install the latest driver patch. See [“OS Patches and Updates” on page 8](#).

3. Check to see if the card is properly installed and recognized by the OS:

```
# grep ixgbe /etc/path_to_inst
```

If the card is properly installed, you will see output similar to the following:

```
"/pci@0,0/pci8086,3410@9/pci108e,7b11@0" 0 "ixgbe"
"/pci@0,0/pci8086,3410@9/pci108e,7b11@0,1" 1 "ixgbe"
```

Related Information

- [“Install the Adapter in a System” on page 23](#)

▼ Verify the Installation in a Linux System

- Verify the new network interface instances corresponding to the adapter:

```
# ifconfig -a | grep eth
eth3   Link encap:Ethernet  HWaddr 00:1B:21:17:67:B0
eth4   Link encap:Ethernet  HWaddr 00:1B:21:17:67:9B
```

Related Information

- [“Install the Adapter in a System” on page 23](#)

▼ Verify the Installation in a Microsoft Windows System

1. **Click Control Panel.**

2. **Click Network Connection.**

If the driver is installed correctly, the Ethernet adapter interfaces labeled as "Intel(R) 82599 10 Gigabit Dual Port Network Connection" will be displayed at the Network Connection window screen.

3. **In the Administration Tool, click Computer Management, Device Manager, and Network Adapter.**

4. **Check the driver version.**

The minimum Windows Server 2003 and 2008 driver version is 14.3.

Related Information

- ["Install the Adapter in a System" on page 23](#)

Configuring the Network

These topics describe how to configure the network.

Description	Links
Configure the network for a Solaris system.	“Create /etc/hostname.ixgbe# Files” on page 29 “Configure the Network Host Files With the ifconfig Command” on page 30
Boot over the network.	“Boot Over the Network Using PXE” on page 31 “Boot Solaris x86 and Linux Systems Over a 10GbE Network” on page 31
Install the Solaris OS over the network.	“Install the Solaris OS Over a 10GbE Network on SPARC Systems” on page 33

Related Information

- [“Solaris Platform Installation Overview” on page 9](#)
- [“Linux Platform Installation Overview” on page 10](#)
- [“Microsoft Windows Platform Installation Overview” on page 11](#)

▼ Create /etc/hostname.ixgbe# Files

Use this procedure to configure the network host files permanently. The new settings will be restored at each reboot.

1. **Create a file named /etc/hostname.ixgbe# for each ixgbe interface.**
where # is the interface’s instance number. In the new files, only insert a text hostname, then save and exit.
2. **Edit the /etc/hosts file to include an IP address and hostname for each ixgbe interface (that is, for each /etc/hostname.ixgbe# file).**

3. Boot the Solaris OS.

Now the `ixgbe` interfaces will be plumbed up automatically when you boot.

Related Information

- [“Configure the Network Host Files With the `ifconfig` Command” on page 30](#)
- Solaris 10 System Administrator Collection

▼ Configure the Network Host Files With the `ifconfig` Command

Use this procedure to configure the network host files dynamically on the command line. At reboot, the settings will revert.

1. Create a file named `/etc/hostname.ixgbe#` for each `ixgbe` interface.

where `#` is the `ixgbe` interface instance number you plan to use.

For example, to bring up `ixgbe0` at boot, create a file called `/etc/hostname.ixgbe0`, where `0` is the number of the `ixgbe` interface. If the instance number were `1`, the filename would be `/etc/hostname.ixgbe1`. The `/etc/hostname.ixgbe#` file must contain the host name for the appropriate `ixgbe` interface.

2. Get the `ixgbe` instances:

```
# dladm show-dev
```

The output might include lines similar to the following:

<code>ixgbe0</code>	<code>link: up</code>	<code>speed: 10000</code>	<code>Mbps duplex: full</code>
<code>nge0</code>	<code>link: up</code>	<code>speed: 1000</code>	<code>Mbps duplex: full</code>
<code>nge1</code>	<code>link: down</code>	<code>speed: 0</code>	<code>Mbps duplex: unknown</code>
<code>ixgbe1</code>	<code>link: up</code>	<code>speed: 10000</code>	<code>Mbps duplex: full</code>
<code>ixgbe2</code>	<code>link: up</code>	<code>speed: 10000</code>	<code>Mbps duplex: full</code>

3. Use the `ifconfig` command to set up the adapter's `ixgbe` interfaces.

Your `ifconfig` command might look similar to the following:

```
# ifconfig ixgbe0 plumb ip_address netmask 255.255.255.0 broadcast + up
```


Related Information

- “Create `/etc/hostname.ixgbe#` Files” on page 29
- `ifconfig(1M)` man page
- Solaris 10 System Administrator Collection

▼ Boot Over the Network Using PXE

PXE network boot is an environment to boot computers using a network interface independently of available data storage devices (such as hard disks) or installed operating systems. No boot media is required on the client system. With PXE, you can install an x86 based client over the network by using DHCP.

- **Boot over the network using PXE.**

Refer to “x86: Overview of Booting and Installing Over the Network With PXE” in the *Solaris 10 Installation Guide: Network-Based Installations* for more information at:

(<http://docs.sun.com/app/docs/doc/817-5504>)

Related Information

- “Boot Solaris x86 and Linux Systems Over a 10GbE Network” on page 31
- *Solaris 10 Installation Guide: Network-Based Installations*

▼ Boot Solaris x86 and Linux Systems Over a 10GbE Network

1. **Obtain the MAC address of the first adapter port by checking the label of the card.**

For the adapter, the MAC address on the label is for the first port. The second port’s MAC address is the MAC address from the label, plus 1.

2. **Set up the PXE boot server with the MAC addresses.**

3. **Plug the Ethernet cable into the adapter port.**

4. **Power on the system.**

5. **Press the F2 key or the Control-E keys to go to the BIOS menu.**

6. Go to the Boot - Boot Device Priority screen and ensure that the boot order of the network devices is higher than the hard drive.

7. Press the F10 key to save the boot configuration changes and exit BIOS.

The system should reboot after saving the boot configuration.

8. Press the F12 key to install the OS from the network.

If the cable is connected to the correct port, you should see the MAC address that you assigned to your PXE server displayed by BIOS.

```
image : pxe-mac-addr
PXE-E61: Media test failure, check cable
PXE-MOF: Exiting Intel Boot Agent.

NVIDIA Boot Agent 217.0513
Copyright (C) 2001-2005) NVIDIA Corporation
Copyright (C) 1997-2000) NVIDIA Corporation
PXE-E61: Media test failure, check cable
PXE-MOF: Exiting Intel Boot Agent.

NVIDIA Boot Agent 217.0513
Copyright (C) 2001-2005) NVIDIA Corporation
Copyright (C) 1997-2000) NVIDIA Corporation
PXE-E61: Media test failure, check cable
PXE-MOF: Exiting Intel Boot Agent.

Intel (R) Boot Agent GE v1.2.43 Beta-1
Copyright (C) 1997-2006) Intel Corporation

CLIENT MAC ADDR; 00 15 17 13 90 00 GUID: 00000000 0000 0000 0000
00144F26E0B7
```

9. Install the ixgbe driver and configure the Ethernet adapter.

10. After the Linux OS installation completes, use the BIOS to change the boot device priority to Boot from Hard Disk in order to boot up the newly installed OS.

Unless the boot device priority is changed, the OS installation process will repeat.

Related Information

- *Solaris 10 Installation Guide: Network-Based Installations*
- Solaris 10 System Administrator Collection

▼ Install the Solaris OS Over a 10GbE Network on SPARC Systems

The *Solaris Advanced Installation Guide* describes the full procedure for installing the Solaris Operating System over the network.

1. **Prepare an installation server and a client system for installing the Solaris Operating System over the network.**

- a. **Create an installation server that contains the image of the Solaris CD.**

- b. **Set up the client system to be installed over the network.**

The *Solaris Advanced Installation Guide* describes how to create the installation server and set up the client systems

Note – If you want to install the client system over a network that is not part of the same subnet, you must also create a boot server. The *Solaris Advanced Installation Guide* describes how to create a boot server.

2. **On the installation server, find the `root` directory of the client system by searching the `/etc/bootparams` file.**

```
# grep client-name /etc/bootparams
client_name root=server-name:/netinstall/Solaris_10/Tools/Boot
install=server-name:/netinstall boottype=:in rootopts=:rsize=32768
```

In this example, the `root` directory for the Solaris 10 client is `/netinstall`. In [Step 4](#), you would replace *root-directory* with `/netinstall`.

Note – If the `root` directory is not found in the `/etc/bootparams` file, refer to the *Solaris Advanced Installation Guide* for configuration instructions.

3. **On the installation server, download the Sun Dual 10GbE SFP+ PCIe 2.0 `ixgbe` driver onto the hard drive.**

You can download the driver from the following web site:

(<http://www.sun.com/download>)

4. On the installation server, install the Sun Dual 10GbE SFP+ PCIe 2.0 software to the client's `root` directory, as determined in [Step 2](#).

Replace *root-directory* with the location of the client's `root` directory.

```
# cd directory-where-driver-was-downloaded
# ls SUNWixgbe*
# pkgadd -R root-directory/Solaris_10/Tools/Boot -d . SUNWixgbe.v
```

Note – If the preceding commands do not work correctly, refer to the documentation for your version of the Solaris Operating System.

5. On the client system, shut down and halt the system to get to the OpenBoot (`ok`) prompt.

```
# shutdown -i0 -g0 -y. . .
(shutdown command messages omitted)
. . .
ok
```

6. At the `ok` prompt, find the device path of the 10-Gigabit Ethernet device.

You should see the full paths and names of the network devices, similar to the example below.

```
ok show-nets
a) /pci@7c0/pci@0/pci@9/network@0,1
b) /pci@7c0/pci@0/pci@9/network@0
c) /pci@7c0/pci@0/pci@2/network@0,1
d) /pci@7c0/pci@0/pci@2/network@0
e) /pci@780/pci@0/pci@8/network@0,1
f) /pci@780/pci@0/pci@8/network@0
g) /pci@780/pci@0/pci@1/network@0,1
h) /pci@780/pci@0/pci@1/network@0
q) NO SELECTION
Enter Selection, q to quit: q
```

7. At the `ok` prompt, boot the client system using the full device path of the 10-Gigabit Ethernet device, for example:

```
ok boot /pci@7c0/pci@0/pci@9/network@0,1
```

The boot takes about 3 minutes to complete. Then you see a menu for continuing to install the Solaris OS.

8. Proceed with the Solaris Operating System installation.

Refer to the *Solaris Advanced Installation Guide* for more information about installing the Solaris Operating System over the network.

9. Install the Sun Dual 10GbE SFP+ PCIe 2.0 adapter software on the client system.

The software installed in [Step 4](#) is required to boot the client system over the 10-Gigabit Ethernet interface. You now must install the software in order for the operating system to use the client’s 10-Gigabit Ethernet interfaces in normal operation.

Before installing the SUNWixgbe driver, ensure that the client system does not already have the driver installed.

```
# pkginfo | grep SUNWixgbe
```

- If the software is installed, this command will return the package name you typed in. In that case, skip to [Step 10](#).
- If the software is not installed, install the software from the download center at (<http://www.sun.com/download/>).

10. Confirm that the network host files have been configured correctly during the Solaris installation.

Although the Solaris software installation creates the client’s network configuration files, you might need to edit these files to match your specific networking environment. See [“Configure the Network Host Files With the ifconfig Command” on page 30](#) for more information about editing these files.

11. Display the configuration information for all datalinks or the specified datalink.

By default, the system is configured to have one datalink for each known network device.

```
# dladm show-dev
e1000g0      link: up      speed: 1000  Mbps      duplex: full
e1000g1      link: down    speed: 0     Mbps      duplex: half
e1000g2      link: down    speed: 0     Mbps      duplex: half
e1000g3      link: down    speed: 0     Mbps      duplex: half
ixgbe0       link: up      speed: 10000 Mbps      duplex: full
ixgbe0       link: up      speed: 10000 Mbps      duplex: full
```

Related Information

- *Solaris Advanced Installation Guide*
- *Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter Product Notes*
- [“Verify the Driver Version on a Solaris Platform” on page 14](#)

Configuring the Driver Parameters

The `ixgbe` device driver controls the adapter's interfaces. You can manually set the `ixgbe` device driver parameters to customize each device in your system.

These topics describe how to configure driver parameters.

Description	Links
Configure the driver parameters for the Solaris OS.	"Driver Parameters for the Solaris OS" on page 37 "Set <code>ixgbe</code> Driver Parameters in the Solaris OS" on page 39 "Solaris OS Performance Variables" on page 40 "Improve Performance in the Solaris OS" on page 40
Configure the driver parameters for Linux.	"Driver Parameters for Linux" on page 42 "Set Driver Parameters in Linux" on page 43
Configure Jumbo Frames.	"Configure Jumbo Frames in Solaris OS" on page 43 "Configure Jumbo Frames in Linux" on page 44

Related Information

- ["Solaris Platform Installation Overview" on page 9](#)
- ["Linux Platform Installation Overview" on page 10](#)
- ["Microsoft Windows Platform Installation Overview" on page 11](#)

Driver Parameters for the Solaris OS

Each `ixgbe` channel provides 10000BASE-T networking interfaces. The `ixgbe` driver is capable of supporting 10000 Mbit/sec, full-duplex.

The following table describes the functions of the Solaris driver parameters.

Type	Keyword	Description
Jumbo Frames	<code>default_mtu=<i>u</i></code>	Size of the default MTU (payload without the Ethernet header). Allowed values: 1500 to 15500 (default = 1500)
Flow Control	<code>flow_control</code>	Ethernet flow control. Allowed values: 0 - Disable 1 - Receive only 2 - Transmit only 3 - Receive and transmit (default)
Transmit Queues Number	<code>tx_queue_number</code>	Number of the transmit queues. Allowed values: 1 to 32 (default = 1) for Solaris 10 5/09 1 to 128 (default = 8) for Solaris 10 10/09
Transmit Queue Size	<code>tx_ring_size</code>	Number of the transmit descriptors per transmit queue. Allowed values: 64 to 4096 (default = 512 for Solaris 10 5/09 and default = 1024 for Solaris 10 10/09)
Receive Queues Number	<code>rx_queue_number</code>	Number of the receive queues. Allowed values: 1 to 32 (default = 1) for Solaris 10 5/09 1 to 128 (default = 8) for Solaris 10 10/09
Receive Queue Size	<code>rx_ring_size</code>	Number of the transmit descriptors per transmit queue. Allowed values: 64 to 4096 (default = 512 for Solaris 10 5/09 and default = 1024 for Solaris 10 10/09)

Note – The final values of `tx_queue_number` and `rx_queue_number` are decided by the number of interrupt vectors obtained by the driver. These values might be less than the specified values because of limited interrupt vector number.

Related Information

- [“Set ixgbe Driver Parameters in the Solaris OS” on page 39](#)
- [“Solaris OS Performance Variables” on page 40](#)
- [“Improve Performance in the Solaris OS” on page 40](#)

▼ Set ixgbe Driver Parameters in the Solaris OS

1. Obtain the hardware path names for the ixgbe devices in the device tree.

Check the `/etc/driver_aliases` file to identify the name associated with a particular device. For example:

```
# grep ixgbe /etc/driver_aliases
ixgbe "pciex8086,10fb"
```

2. Locate the path names and the associated instance numbers in the `/etc/path_to_inst` file.

For example:

```
# grep ixgbe /etc/path_to_inst
"/pci@0,0/pciex8086,3410@9/pci108e,7b11@0" 0 "ixgbe"
"/pci@0,0/pciex8086,3410@9/pci108e,7b11@0,1" 1 "ixgbe"
```

In the preceding example:

- The first part within the double quotes specifies the hardware node name in the device tree.
- The number not enclosed in quotes is the instance number (shown in bold for emphasis).
- The last part in double quotes is the driver name.

Note – To identify a PCIe device unambiguously in the `ixgbe.conf` file, use the name, parent name, and the unit address for the device. In the example, the name is `pciex8086,10fb`, the parent is `/pci@0,0/pci8086,3410@9`, and the unit address is 0. Refer to the `pci(4)` man page for more information about the PCIe device specification.

3. Set the parameters for the ixgbe devices in the `/kernel/drv/ixgbe.conf` file.

For example, to set the `flow_control` parameter to 3 for `ixgbe0`:

```
name = "pciex8086,10fb"
parent = "/pci@0,0/pci8086,3410@9"
unit-address = "0"
flow_control = 3;
```

4. Save the `ixgbe.conf` file.

5. Reboot the system.

Related Information

- [“Driver Parameters for the Solaris OS” on page 37](#)
- [“Solaris OS Performance Variables” on page 40](#)
- [“Improve Performance in the Solaris OS” on page 40](#)
- `pci(4)` man page

Solaris OS Performance Variables

Based on system configuration, you might need to tune some system and driver variables to appropriate values for better performance in Solaris. For example:

- `rx_queue_number` should be less than or equal to a minimum of `#CPU - 1`, and the MSI-X allocation limit (that is, `dde_msix_alloc_limit`).
- `ddi_msix_alloc_limit`, `pcplusmp:apic_multi_msi_max`, and `pcplusmp:apic_msix_max` should be equal to `rx_queue_number + 1`, as `tx` and other events, such as link status change, require an additional interrupt vector.
- `ip:ip_soft_rings_cnt` should be tuned based on system type.

Related Information

- [“Improve Performance in the Solaris OS” on page 40](#)
- [“Driver Parameters for the Solaris OS” on page 37](#)

▼ Improve Performance in the Solaris OS

Changes similar to the following might improve performance on both x86 and SPARC platforms.

1. Add the following lines to the `/etc/system` file:

```
set ddi_msix_alloc_limit=9
set pcplusmp:apic_multi_msi_max=9
set pcplusmp:apic_msix_max=9
set pcplusmp:apic_intr_policy=1
set ip:ip_soft_rings_cnt=4
set ip_squeue_soft_ring=1
```

2. Set the `rx_queue` number to 8 in the `/kernel/drv/ixgbe.conf` file:

```
rx_queue_number=8;
```

3. Reboot the server.

Related Information

- [“Solaris OS Performance Variables” on page 40](#)
- [“Driver Parameters for the Solaris OS” on page 37](#)
- [“Set ixgbe Driver Parameters in the Solaris OS” on page 39](#)

Driver Parameters for Linux

The following table lists the tunable `ixgbe` driver parameters for Linux operating systems and describes their function.

Keyword	Valid Range	Default Value	Description
FlowControl	0 to 3 (0=none, 1=Rx only, 2=Tx only, 3=Rx and Tx)	Read from the EEPROM. If EEPROM is not detected, default is 3.	This parameter controls the automatic generation (Tx) and response (Rx) to Ethernet PAUSE frames.
RxDescriptors	64 to 512	512	This value is the number of receive descriptors allocated by the driver. Increasing this value allows the driver to buffer more incoming packets. Each descriptor is 16 bytes. A receive buffer is also allocated for each descriptor and can be either 2048, 4056, 8192, or 16384 bytes, depending on the MTU setting. When the MTU size is 1500 or less, the receive buffer size is 2048 bytes. When the MTU is greater than 1500, the receive buffer size will be either 4056, 8192, or 16384 bytes. The maximum MTU size is 16114.
RxIntDelay	0 to 65535 (0=off)	72	This value delays the generation of receive interrupts in units of 0.8192 microseconds. Receive interrupt reduction can improve CPU efficiency if properly tuned for specific network traffic. Increasing this value adds extra latency to frame reception and can end up decreasing the throughput of TCP traffic. If the system is reporting dropped receives, this value might be set too high, causing the driver to run out of available receive descriptors.
TxDescriptors	80 to 4096	256	This value is the number of transmit descriptors allocated by the driver. Increasing this value allows the driver to queue more transmits. Each descriptor is 16 bytes.
XsumRX	0 to 1	1	A value of 1 indicates that the driver should enable IP checksum offload for received packets (both UDP and TCP) to the Ethernet adapter hardware.

Related Information

- “Driver Parameters for Linux” on page 42
- “Set Driver Parameters in Linux” on page 43
- “Configure Jumbo Frames in Linux” on page 44

▼ Set Driver Parameters in Linux

- Use the `ethtool` utility or the `configtool` utility to set parameters on a Linux platform.

Related Information

- “Driver Parameters for Linux” on page 42

▼ Configure Jumbo Frames in Solaris OS

Jumbo Frames can support up to 15000 MTU. The default value is 1500 MTU.

1. Add the following line in the `/kernel/drv/ixgbe.conf` file:

```
default_mtu = desired-frame-size
```

The *desired-frame-size* value can range from 1500 to 15500.

2. Reboot the server.
3. Use the `ifconfig` command to increase MTUs to allow transmission of Jumbo Frames.

For example, where the device name is `ixgbe0`, the following command increases MTUs to the maximum:

```
# ifconfig ixgbe0 plumb mtu 15360 up
```

Related Information

- “Driver Parameters for the Solaris OS” on page 37
- `ifconfig(1M)` man page

▼ Configure Jumbo Frames in Linux

Jumbo Frames can support up to 15000 MTU. The default value is 1500 MTU.

- Use the `ifconfig` command to increase MTUs to allow transmission of Jumbo Frames.

For example, where the IP address for `eth7` is `192.1.1.200`, the following command increases MTUs to the maximum:

```
# ifconfig eth7 192.1.1.200 mtu 9000 up
```

Related Information

- [“Driver Parameters for Linux” on page 42](#)
- `ifconfig(1M)` man page

Configuring Link Aggregation in a Solaris Environment

These topics describe how to configure link aggregation.

- [“Link Aggregation Overview”](#) on page 45
- [“Configure Link Aggregations”](#) on page 46
- [“Display Information About Link Aggregations”](#) on page 47
- [“Delete Link Aggregations”](#) on page 48

Related Information

- [“Solaris Platform Installation Overview”](#) on page 9
- [“Linux Platform Installation Overview”](#) on page 10
- [“Microsoft Windows Platform Installation Overview”](#) on page 11

Link Aggregation Overview

Link aggregation enables one or more network links to be aggregated together to form a link aggregation group. This link aggregation group appears to MAC clients as a regular link. Link aggregation, which is defined by IEEE 802.3ad, provides the following benefits:

- Increased bandwidth
- Linearly incremental bandwidth
- Load sharing
- Automatic configuration
- Rapid configuration and reconfiguration
- Deterministic behavior
- Low risk of duplication or misordering
- Support of existing IEEE 802.3ad MAC clients

Related Information

- [“Configure Link Aggregations” on page 46](#)
- [“Display Information About Link Aggregations” on page 47](#)
- [“Delete Link Aggregations” on page 48](#)

▼ Configure Link Aggregations

The example in this procedure aggregates sample interfaces `ixgbe0`, `ixgbe1`, `ixgbe2`, and `ixgbe3`. Arbitrary key numbers (1 and 2) are used for each aggregation.

Note – These commands change the contents of the `/etc/aggregation.conf` file.

1. Unplumb the interfaces to be aggregated:

```
# ifconfig ixgbe0 unplumb
# ifconfig ixgbe1 unplumb
# ifconfig ixgbe2 unplumb
# ifconfig ixgbe3 unplumb
```

2. Create a link aggregation group with key 1 containing the first two interfaces.

In this example, the `-l active` option turns on LACP mode:

```
# dladm create-aggr -l active -d ixgbe0 -d ixgbe1 1
# ifconfig aggr1 plumb
# ifconfig aggr1 192.2.2.84 up
```

3. Create a link aggregation group with key 2 containing the other two interfaces.

No mode is specified for the link aggregation group in this example:

```
# dladm create-aggr -d ixgbe2 -d ixgbe3 2
# ifconfig aggr2 plumb
# ifconfig aggr2 193.2.2.84 up
```

Related Information

- [“Link Aggregation Overview” on page 45](#)
- [“Display Information About Link Aggregations” on page 47](#)

- [“Delete Link Aggregations” on page 48](#)

▼ Display Information About Link Aggregations

The `ifconfig` and `dladm` commands provide different details about link aggregations, as in the following examples. For additional command options, see the man pages for `ifconfig` (1M) and `dladm` (1M).

- **Use the appropriate command to obtain the desired results.**
 - Use the `ifconfig` command to examine the details about a link aggregation:
The following examples display the information about the two link aggregations created in [“Configure Link Aggregations” on page 46](#).

```
# ifconfig aggr1
aggr1: flags=1000843<UP,BROADCAST,RUNNING,MULTICAST,IPv4> mtu 1500 index 32
  inet 192.2.2.84 netmask ffffffff broadcast 192.2.2.255
  ether 0:15:17:75:ff:81
# ifconfig aggr2
aggr2: flags=1000843<UP,BROADCAST,RUNNING,MULTICAST,IPv4> mtu 1500 index 33
  inet 193.2.2.84 netmask ffffffff broadcast 193.2.2.255
  ether 0:15:17:75:ff:83
```

- Use the `dladm show-aggr` command to show link aggregation status.
- Use the `dladm show-aggr -s` command to show link aggregation statistics.
- Use the `dladm show-aggr -L` command to display LACP-specific information.

Related Information

- [“Link Aggregation Overview” on page 45](#)
- [“Configure Link Aggregations” on page 46](#)
- [“Delete Link Aggregations” on page 48](#)
- `ifconfig` (1M) man page
- `dladm` (1M) man page

▼ Delete Link Aggregations

1. Use the `ifconfig` command to unplumb each link aggregation you want to delete.

For example:

```
# ifconfig aggr1 unplumb
# ifconfig aggr2 unplumb
```

2. Use the `dladm` command to delete each unwanted link aggregation.

For example:

```
# dladm delete-aggr 1
# dladm delete-aggr 2
```

Related Information

- [“Link Aggregation Overview” on page 45](#)
- [“Configure Link Aggregations” on page 46](#)
- [“Delete Link Aggregations” on page 48](#)
- [ifconfig \(1M\) man page](#)
- [dladm \(1M\) man page](#)

Configuring VLANs

These topics describe how to configure VLANs.

Description	Links
Understand VLAN.	“VLAN Overview” on page 50 “VLAN Configuration” on page 52
Configure VLANs.	“Configure Static VLANs in a Solaris Environment” on page 53 “VLAN Naming Format” on page 54 “Configure VLANs in a Linux Environment” on page 55 “Configure VLANs in a Microsoft Windows Environment” on page 56
Configure and remove bonding.	“Configure Bonding for Multiple <code>ixgbe</code> Interfaces” on page 57 “Remove Bonding” on page 58

Note – If you change any of the VLAN configuration parameters, you must reboot the system before the changes take effect. If you make changes and do not reboot, you might experience configuration problems.

Related Information

- [“Solaris Platform Installation Overview” on page 9](#)
- [“Linux Platform Installation Overview” on page 10](#)
- [“Microsoft Windows Platform Installation Overview” on page 11](#)
- Solaris 10 System Administrator Collection

VLAN Overview

With multiple VLANs on a card, a server with a single card can have a logical presence on multiple IP subnets. By default, you can define 128 VLANs for each VLAN-aware card on your server. However, you can increase this number by changing the system parameters.


If your network does not require multiple VLANs, you can use the default configuration, in which case no further configuration is necessary.

VLANs enable you to split your physical LAN into logical subparts, providing an essential tool for increasing the efficiency and flexibility of your network.

VLANs are commonly used to separate groups of network users into manageable broadcast domains, to create logical segmentation of workgroups, and to enforce security policies among each logical segment. Each defined VLAN behaves as its own separate network, with its traffic and broadcasts isolated from the others, increasing the bandwidth efficiency within each logical group.

Although VLANs are commonly used to create individual broadcast domains or separate IP subnets, it can be useful for a server to have a presence on more than one VLAN simultaneously. Several Sun products support multiple VLANs on a per-port or per-interface basis, allowing very flexible network configurations.

The following figure shows an example network that uses VLANs.

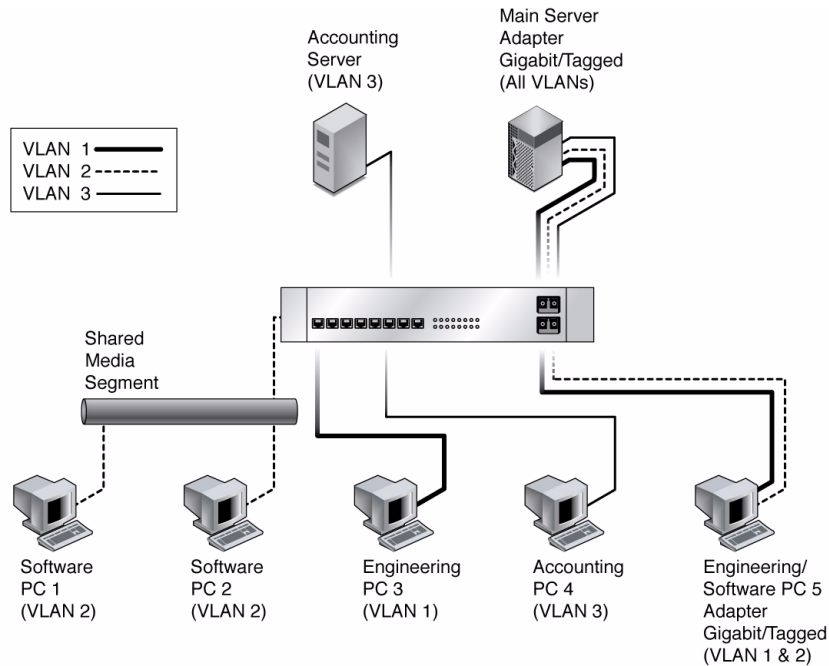

The example network has the following features:

The physical LAN network consists of a switch, two servers, and five clients. The LAN is logically organized into three different VLANs, each representing a different IP subnet.

- VLAN 1 is an IP subnet consisting of the Main Server, Client 3, and Client 5. This VLAN represents an engineering group.
- VLAN 2 includes the Main Server, Clients 1 and 2 by means of a shared media segment, and Client 5. This VLAN is a software development group.
- VLAN 3 includes the Main Server, the Accounting Server, and Client 4. This VLAN is an accounting group.

The Main Server is a high-use server that must be accessed from all VLANs and IP subnets. The server has a Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter installed. All three IP subnets are accessed by means of the single physical Ethernet adapter interface. The server is attached to one of the switch's Gigabit Ethernet ports, which is configured for VLANs 1, 2, and 3. Both the Ethernet adapter and the connected switch port have tagging turned on. Because of the tagging VLAN capabilities of both devices, the server is able to communicate on all three IP subnets in this network, but continues to maintain broadcast separation between all of those subnets. The following list describes the components of this network:

- The Accounting Server is available to only VLAN 3. The Accounting Server is isolated from all traffic on VLANs 1 and 2. The switch port connected to the server has tagging turned off.
- Clients 1 and 2 are attached to a shared media hub that is then connected to the switch. Clients 1 and 2 belong only to VLAN 2. Those clients are logically in the same IP subnet as the Main Server and Client 5. The switch port connected to this segment has tagging turned off.
- Client 3 is a member of VLAN 1. This client can communicate only with the Main Server and Client 5. Tagging is not enabled on Client 3's switch port.
- Client 4 is a member of VLAN 3. This client can communicate only with the servers. Tagging is not enabled on Client 4's switch port.
- Client 5 is a member of both VLANs 1 and 2. This client has a Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter installed. Client 5 is connected to switch port 10. Both the Ethernet adapter and the switch port are configured for VLANs 1 and 2, and both have tagging enabled.

VLAN tagging is only required to be enabled on switch ports that create trunk links to other VLAN-aware Ethernet switches, or on ports connected to tag-capable end-stations, such as servers or workstations with VLAN-aware Ethernet adapters.


Related Information

- [“VLAN Configuration” on page 52](#)
- [“Configure Static VLANs in a Solaris Environment” on page 53](#)
- [“Configure VLANs in a Linux Environment” on page 55](#)
- [“Configure VLANs in a Microsoft Windows Environment” on page 56](#)
- [“Configure Bonding for Multiple ixgbe Interfaces” on page 57](#)

VLAN Configuration

VLANs can be created according to various criteria, but each VLAN must be assigned a VLAN tag or VLAN ID (VID). The VID is a 12-bit identifier between 1 and 4094 that identifies a unique VLAN. For each network interface (`ixgbe0`, `ixgbe1`, `ixgbe2`, and so on), 4094 possible VLAN IDs can be selected for each port.

Tagging an Ethernet frame requires the addition of a tag header to the frame. The header is inserted immediately following the destination MAC address and the source MAC address. The tag header consists of two bytes of Ethernet Tag Protocol identifier (TPID, 0x8100) and two bytes of tag control information (TCI). The following figure shows the Ethernet tag header format.

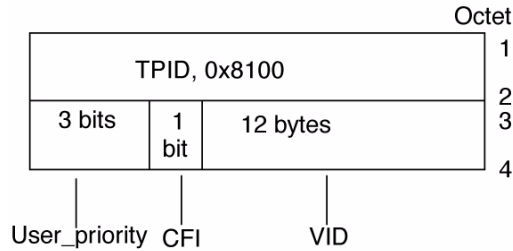

By default, a single VLAN is configured for every port, which groups all ports into the same broadcast domain, just as if there were no VLANs at all. This means that VLAN tagging for the switch port is turned off.

Note – If you configure a VLAN virtual device for an Ethernet adapter, all traffic sent or received by that Ethernet adapter must be in VLAN-tagged format.

Related Information

- [“VLAN Overview” on page 50](#)
- [“Configure Static VLANs in a Solaris Environment” on page 53](#)
- [“Configure VLANs in a Linux Environment” on page 55](#)
- [“Configure VLANs in a Microsoft Windows Environment” on page 56](#)
- [“Configure Bonding for Multiple ixgbe Interfaces” on page 57](#)

▼ Configure Static VLANs in a Solaris Environment

1. **Create one `/etc/hostname.ixgbe#` file for each VLAN that will be configured for each adapter on the server.**
See [“VLAN Naming Format” on page 54](#).
2. **Use the `ifconfig` command to configure each VLAN virtual device.**
Include the IP address in the command you type. For example, if the IP address is `192.2.2.84`, type:

```
# ifconfig ixgbe123002 plumb 192.2.2.84 up
```

3. Use the `ifconfig -a` command to see details about the VLAN devices.

This example shows the output of `ifconfig -a` on a system having VLAN devices `ixgbe123002` and `ixgbe224002`:

```
ixgbe123002: flags=201000843<UP,BROADCAST,RUNNING,MULTICAST,IPv4,CoS>\
  mtu 1500 index 4
inet 192.2.2.82 netmask ffffffff broadcast 192.2.2.255
ether 0:13:20:f5:f6:dc
ixgbe224002: flags=201000843<UP,BROADCAST,RUNNING,MULTICAST,IPv4,CoS>\
  mtu 1500 index 5
inet 0.0.0.0 netmask ffffffff
ether 0:13:20:f5:f6:dc
```

Note – In the preceding examples, the second NIC output for `ixgbe224002` was plumbed and enabled (that is, used the `up` option), but had no IP address. By default, the netmask and broadcast addresses are set by the system, which uses IP class C to make that setting 255.255.255.0. When the address is set, the `ifconfig` command by default does not display the broadcast address if the explicit IP address is not set.

Refer to the documentation that came with your switch for specific instructions for setting VLAN tagging and ports.

Related Information

- [“VLAN Naming Format” on page 54](#)
- [“VLAN Overview” on page 50](#)
- [“VLAN Configuration” on page 52](#)
- Solaris 10 System Administrator Collection
- `ifconfig(1M)` man page

VLAN Naming Format

When configuring VLANs, use the following naming format, which includes both the VID and the physical point of attachment (PPA):

VLAN logical PPA = 1000 * VID + *Device-PPA*

For example, 123000 = 1000 * 123 + 0.

So the VLAN interface will be `ixgbe123000`.

This format limits the maximum number of PPAs (instances) that you can configure in the `/etc/path_to_inst` file to 1000.

For example, if the virtual ID is 123 and the physical adapter is instance 2:

VLAN logical PPA = $1000 * VID + Device-PPA$

Thus, $123002 = 123000 + 2$.

So the VLAN interface is `ixgbe123002`. This format limits the maximum number of PPAs (instances) that can be configured in the `/etc/path_to_inst` file to 1000.

For example, on a server with Oracle's Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter having an instance of 2, belonging to a member of two VLANs, with VID 123 and 224, you would use `ixgbe123002` and `ixgbe224002`, respectively, as the two VLAN PPAs.

Related Information

- [“Configure Static VLANs in a Solaris Environment” on page 53](#)

▼ Configure VLANs in a Linux Environment

1. Ensure that the `ixgbe` module is loaded:

```
# modprobe ixgbe
```

2. Plumb the adapter's interface:

```
# ifconfig eth6 xxx.xxx.xx.xxx up
```

where `xxx.xxx.xx.xxx` = the IP address of the interface.

3. Add the VLAN instance (VID).

For example:

```
# vconfig add eth6 5
```

where `eth6` is the interface and `5` is the VID.

Note – In Linux systems, you can use any single digit as the VID.

4. Configure the ixgbe VLAN (eth6 in this example):

```
# ifconfig eth6.5 xxx.xxx.xx.xxx up
```

where *xxx.xxx.xx.xxx* = the IP address of the interface.

Related Information

- [“VLAN Overview” on page 50](#)
- [“VLAN Configuration” on page 52](#)

▼ Configure VLANs in a Microsoft Windows Environment

1. Click Control Panel.
2. Click Network Connection.
3. Click the folder icon from the sub-manual bar.
4. Right-click the Sun Dual 10GbE SFP+ PCIe 2.0 Low Profile Adapter port, then select Properties.
5. Click Configure.
6. Click VLAN, then click on New.
7. Type VLAN with *ID* (for example, type VLAN10).
8. Click Internet Protocol (TCP/IP).
9. Click Use the following IP address.
10. Type the IP address.
11. Click Subnet Mask.
The value 255.255.255.0 is displayed.
12. Click OK.
13. Repeat [Step 3](#) through [Step 10](#) until all the network ports are VLAN configured.

Note – Ensure that the firewall is configured to allow VLAN traffic. Otherwise, the VLAN might not operate properly.

Related Information

- [“VLAN Overview” on page 50](#)
- [“VLAN Configuration” on page 52](#)

▼ Configure Bonding for Multiple ixgbe Interfaces

1. Use the `modprobe` command to configure the mode:

```
# modprobe bonding mode=balance-rr miimon=100 max_bonds=1
```

In this command,

- `max_bonds` is the number of bond interfaces to be created.
- `mode` specifies the bonding policy. (This example uses `balance-rr`.)

2. Use the `ifconfig` command to create the bond:

```
# ifconfig bond0 192.2.2.15 netmask 255.255.255.0 broadcast 192.2.2.255  
# ifenslave bond0 eth4 eth5
```

In this command `bond0` is the bonding device.

3. Configure the `bond n` interfaces.

In this example, two bonds (`bond0` and `bond1`) are configured:

```
# modprobe bonding mode=balance-rr miimon=100 max_bonds=2  
# ifconfig bond0 192.2.2.15 netmask 255.255.255.0 broadcast 192.2.2.255  
# ifenslave bond0 eth4 eth5  
# ifconfig bond1 193.2.2.15 netmask 255.255.255.0 broadcast 193.2.2.255  
# ifenslave bond1 eth6 eth7
```

Related Information

- [“Remove Bonding” on page 58](#)

▼ Remove Bonding

- Use the `rmmmod` command to remove bonding:

```
# rmmmod bonding
```

Related Information

- [“Configure Bonding for Multiple ixgbe Interfaces” on page 57](#)

Index

A

adapter

- description, 2
- features, 2
- front panel, 3
- installing, 23
- LEDs, 3
- verifying installation in a Solaris SPARC system, 24
- verifying installation in Linux system, 27
- verifying installation in Microsoft Windows system, 28
- verifying installation in Solaris x86 system, 26

B

bonding

- configuring for multiple `ixgbe` interfaces, 57
- removing, 58

booting over the network, 29

- Solaris x86 over 10GbE network, 31
- using PXE, 31

bracket, standard height, 2

C

configuring the network host files

- creating `/etc/hostname.ixgbe#`, 29
- using `ifconfig`, 30

configuring VLANs, 52

- in a Linux environment, 55
- in a Solaris environment, 53
- in a Windows environment, 56

D

driver

- downloading and installing on a Microsoft Windows platform, 18
- downloading and installing on Linux

- platforms, 15

- installing, 13

- removing from a Linux platform, 17

- removing from a Microsoft Windows platform, 19

- removing from a Solaris platform, 15

- verifying on a Solaris platform, 14

driver parameters

- improving performance in Solaris OS, 40

- setting in Linux OS, 43

- setting in Solaris OS, 39

- tunable for Linux OS, 42

- tunable for Solaris OS, 37

F

features, 2

front panel, connectors and LEDs, 3

H

hardware and software requirements, 7

hardware components, 2

I

`ifconfig` command, 53

installation verification

- Linux system, 27

- Microsoft Windows, 28

- Solaris SPARC, 24

- Solaris x86, 26

installing the card, 23

installing the `ixgbe` driver

- on Linux platforms, 15

- on Windows platforms, 18

installing the transceivers, 21

- J**
- Jumbo Frames, 44
 - configuring in Linux, 44
 - configuring in Solaris OS, 43
- L**
- link aggregation
 - configuring in a Solaris environment, 46
 - deleting, 48
 - displaying information about, 47
 - overview, 45
- N**
- networking interfaces, 37
- O**
- optical transceivers, 8
 - OS patches and updates, 8
- P**
- patches, 8
 - patch clusters, 8
 - security patches, 8
 - performance specifications, 6
 - physical characteristic, 5
 - power and environmental requirements, 7
 - product description, 2
- R**
- related documentation, ix
 - removing the `ixgbe` driver
 - from Linux platforms, 17
 - from Windows platforms, 19
- S**
- setting `ixgbe` driver parameters, 37
 - SFP+ optical transceiver, 3
 - shipping kit contents, 2
 - Sun Dual 10GbE SFP+ PCIe 2.0 Adapter
 - interfaces, 37
 - supported operating systems, 8
- T**
- transceivers
 - installing, 21
- V**
- virtual device, 53
 - VLAN
 - configuration, 52
 - configuring in a Linux environment, 55
 - configuring in a Microsoft Windows environment, 56
 - configuring in a Solaris environment, 53
 - naming format, 54
 - overview, 50
 - VLAN ID, 52