

SPARC Enterprise M4000/M5000 Servers

Installation Guide



ORACLE

SPARC

Part No.: Part No.: E26845-01
Part No.: Manual Code: C120-E351-08EN
February 2012

Copyright © 2007, 2012, Oracle and/or its affiliates. All rights reserved.

Fujitsu Limited provided technical input and review on portions of this material.

Oracle and/or its affiliates and Fujitsu Limited each own or control intellectual property rights relating to products and technology described in this document, and such products, technology and this document are protected by copyright laws, patents, and other intellectual property laws and international treaties.

This document and the product and technology to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of such product or technology, or of this document, may be reproduced in any form by any means without prior written authorization of Oracle and/or its affiliates and Fujitsu Limited, and their applicable licensors, if any. The furnishings of this document to you does not give you any rights or licenses, express or implied, with respect to the product or technology to which it pertains, and this document does not contain or represent any commitment of any kind on the part of Oracle or Fujitsu Limited, or any affiliate of either of them.

This document and the product and technology described in this document may incorporate third-party intellectual property copyrighted by and/or licensed from the suppliers to Oracle and/or its affiliates and Fujitsu Limited, including software and font technology.

Per the terms of the GPL or LGPL, a copy of the source code governed by the GPL or LGPL, as applicable, is available upon request by the End User. Please contact Oracle and/or its affiliates or Fujitsu Limited.

This distribution may include materials developed by third parties.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Fujitsu and the Fujitsu logo are registered trademarks of Fujitsu Limited.

All SPARC trademarks are used under license and are registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon architectures developed by Oracle and/or its affiliates. SPARC64 is a trademark of SPARC International, Inc., used under license by Fujitsu Microelectronics, Inc. and Fujitsu Limited. Other names may be trademarks of their respective owners.

United States Government Rights - Commercial use. U.S. Government users are subject to the standard government user license agreements of Oracle and/or its affiliates and Fujitsu Limited and the applicable provisions of the FAR and its supplements.

Disclaimer: The only warranties granted by Oracle and Fujitsu Limited, and/or any affiliate of either of them in connection with this document or any product or technology described herein are those expressly set forth in the license agreement pursuant to which the product or technology is provided. EXCEPT AS EXPRESSLY SET FORTH IN SUCH AGREEMENT, ORACLE OR FUJITSU LIMITED, AND/OR THEIR AFFILIATES MAKE NO REPRESENTATIONS OR WARRANTIES OF ANY KIND (EXPRESS OR IMPLIED) REGARDING SUCH PRODUCT OR TECHNOLOGY OR THIS DOCUMENT, WHICH ARE ALL PROVIDED AS IS, AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID. Unless otherwise expressly set forth in such agreement, to the extent allowed by applicable law, in no event shall Oracle or Fujitsu Limited, and/or any of their affiliates have any liability to any third party under any legal theory for any loss of revenues or profits, loss of use or data, or business interruptions, or for any indirect, special, incidental or consequential damages, even if advised of the possibility of such damages.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.



Please
Recycle



Adobe PostScript

Copyright © 2007, 2012, Oracle et/ou ses sociétés affiliées. Tous droits réservés.

Fujitsu Limited a fourni et vérifié des données techniques de certaines parties de ce composant.

Oracle et/ou ses sociétés affiliées et Fujitsu Limited détiennent et contrôlent chacune des droits de propriété intellectuelle relatifs aux produits et technologies décrits dans ce document. De même, ces produits, technologies et ce document sont protégés par des lois sur le copyright, des brevets, d'autres lois sur la propriété intellectuelle et des traités internationaux.

Ce document, le produit et les technologies afférents sont exclusivement distribués avec des licences qui en restreignent l'utilisation, la copie, la distribution et la décompilation. Aucune partie de ce produit, de ces technologies ou de ce document ne peut être reproduite sous quelque forme que ce soit, par quelque moyen que ce soit, sans l'autorisation écrite préalable d'Oracle et/ou ses sociétés affiliées et de Fujitsu Limited, et de leurs éventuels bailleurs de licence. Ce document, bien qu'il vous ait été fourni, ne vous confère aucun droit et aucune licence, expresses ou tacites, concernant le produit ou la technologie auxquels il se rapporte. Par ailleurs, il ne contient ni ne représente aucun engagement, de quelque type que ce soit, de la part d'Oracle ou de Fujitsu Limited, ou des sociétés affiliées de l'une ou l'autre entité.

Ce document, ainsi que les produits et technologies qu'il décrit, peuvent inclure des droits de propriété intellectuelle de parties tierces protégés par copyright et/ou cédés sous licence par des fournisseurs à Oracle et/ou ses sociétés affiliées et Fujitsu Limited, y compris des logiciels et des technologies relatives aux polices de caractères.

Conformément aux conditions de la licence GPL ou LGPL, une copie du code source régi par la licence GPL ou LGPL, selon le cas, est disponible sur demande par l'utilisateur final. Veuillez contacter Oracle et/ou ses sociétés affiliées ou Fujitsu Limited.

Cette distribution peut comprendre des composants développés par des parties tierces.

Des parties de ce produit peuvent être dérivées des systèmes Berkeley BSD, distribués sous licence par l'Université de Californie. UNIX est une marque déposée aux États-Unis et dans d'autres pays, distribuée exclusivement sous licence par X/Open Company, Ltd.

Oracle et Java sont des marques déposées d'Oracle Corporation et/ou de ses sociétés affiliées. Fujitsu et le logo Fujitsu sont des marques déposées de Fujitsu Limited.

Toutes les marques SPARC sont utilisées sous licence et sont des marques déposées de SPARC International, Inc., aux États-Unis et dans d'autres pays. Les produits portant la marque SPARC reposent sur des architectures développées par Oracle et/ou ses sociétés affiliées. SPARC64 est une marque de SPARC International, Inc., utilisée sous licence par Fujitsu Microelectronics, Inc. et Fujitsu Limited. Tout autre nom mentionné peut correspondre à des marques appartenant à d'autres propriétaires.

United States Government Rights - Commercial use. U.S. Government users are subject to the standard government user license agreements of Oracle and/or its affiliates and Fujitsu Limited and the applicable provisions of the FAR and its supplements.

Avis de non-responsabilité : les seules garanties octroyées par Oracle et Fujitsu Limited et/ou toute société affiliée de l'une ou l'autre entité en rapport avec ce document ou tout produit ou toute technologie décrits dans les présentes correspondent aux garanties expressément stipulées dans le contrat de licence régissant le produit ou la technologie fournis. SAUF MENTION CONTRAIRE EXPRESSÉMENT STIPULÉE DANS CE CONTRAT, ORACLE OU FUJITSU LIMITED ET LES SOCIÉTÉS AFFILIÉES À L'UNE OU L'AUTRE ENTITÉ REJETTENT TOUTE REPRÉSENTATION OU TOUTE GARANTIE, QUELLE QU'EN SOIT LA NATURE (EXPRESSE OU IMPLICITE) CONCERNANT CE PRODUIT, CETTE TECHNOLOGIE OU CE DOCUMENT, LESQUELS SONT FOURNIS EN L'ÉTAT. EN OUTRE, TOUTES LES CONDITIONS, REPRÉSENTATIONS ET GARANTIES EXPRESSES OU TACITES, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE À LA QUALITÉ MARCHANDE, À L'APTITUDE À UNE UTILISATION PARTICULIÈRE OU À L'ABSENCE DE CONTREFAÇON, SONT EXCLUES, DANS LA MESURE AUTORISÉE PAR LA LOI APPLICABLE. Sauf mention contraire expressément stipulée dans ce contrat, dans la mesure autorisée par la loi applicable, en aucun cas Oracle ou Fujitsu Limited et/ou l'une ou l'autre de leurs sociétés affiliées ne sauraient être tenues responsables envers une quelconque partie tierce, sous quelque théorie juridique que ce soit, de tout manque à gagner ou de perte de profit, de problèmes d'utilisation ou de perte de données, ou d'interruptions d'activités, ou de tout dommage indirect, spécial, secondaire ou consécutif, même si ces entités ont été préalablement informées d'une telle éventualité.

LA DOCUMENTATION EST FOURNIE « EN L'ÉTAT » ET TOUTE AUTRE CONDITION, DÉCLARATION ET GARANTIE, EXPRESSE OU TACITE, EST FORMELLEMENT EXCLUE, DANS LA MESURE AUTORISÉE PAR LA LOI EN VIGUEUR, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE À LA QUALITÉ MARCHANDE, À L'APTITUDE À UNE UTILISATION PARTICULIÈRE OU À L'ABSENCE DE CONTREFAÇON.

Contents

Preface ix

1. Installation Overview 1-1

1.1 Installation Workflow 1-1

2. Preparing to Install the Server 2-1

2.1 Safety Precautions 2-1

2.2 Before Installing the Server 2-2

2.2.1 Facility Power 2-2

2.2.1.1 Facility Power Requirements and Characteristics 2-4

2.2.1.2 Grounding 2-7

2.2.2 Cable Connections 2-8

2.2.3 Checking the Installation Location 2-8

2.3 Tools and Equipment 2-9

3. Installing the Server 3-1

3.1 Checking Components 3-1

3.2 Connecting Input Power Cords 3-2

3.2.1 Connecting a UPS Unit 3-3

3.2.2 Verifying the Power Input Connections Before Applying Power 3-4

- 3.3 Connecting the Administration Console 3-5
 - 3.3.1 Connecting the Console 3-7
 - 3.3.2 Initializing the XSCF Unit 3-9
- 3.4 Powering On the Server 3-10
 - 3.4.1 Verifying the Configuration 3-11
 - 3.4.2 Checking the Dual-Power Feed 3-15
- 3.5 Connecting Additional Peripheral Devices 3-15

- 4. Connecting the Domains to the Network 4-1**
 - 4.1 Overview of Network Configuration 4-1
 - 4.2 Connecting to the Network 4-1
 - 4.3 Verifying the Network Connection 4-2
 - 4.4 Verifying Operation by Running Oracle VTS Software 4-2

- A. System Views A-1**
 - A.1 SPARC Enterprise M4000 Server Views A-1
 - A.2 SPARC Enterprise M5000 Server Views A-5
 - A.3 Operator Panel Overview A-9

- B. Fault Isolation B-1**
 - B.1 Corrective Actions to Common Problems B-1
 - B.2 Using the Diagnostic Commands B-2
 - B.2.1 Using the `showhardconf` Command B-2
 - B.2.2 Using the `showlogs` Command B-5
 - B.2.3 Using the `showstatus` Command B-6
 - B.2.4 Using the `fmddump` Command B-6
 - B.2.4.1 `fmddump -v` Command B-6
 - B.2.4.2 `fmddump -e` Command B-7
 - B.2.5 Using the `fmadm faulty` Command B-7
 - B.2.5.1 `fmadm config` Command B-8

| | | |
|---------|--|------|
| B.2.6 | Using the <code>fmstat</code> Command | B-8 |
| B.3 | Traditional Oracle Solaris Diagnostic Commands | B-9 |
| B.3.1 | Using the <code>iostat</code> Command | B-9 |
| B.3.1.1 | Options | B-9 |
| B.3.2 | Using the <code>prtdiag</code> Command | B-11 |
| B.3.2.1 | Options | B-11 |
| B.3.3 | Using the <code>prtconf</code> Command | B-14 |
| B.3.3.1 | Options | B-14 |
| B.3.4 | Using the <code>netstat</code> Command | B-16 |
| B.3.4.1 | Options | B-16 |
| B.3.5 | Using the <code>ping</code> Command | B-17 |
| B.3.5.1 | Options | B-17 |
| B.3.6 | Using the <code>ps</code> Command | B-18 |
| B.3.6.1 | Options | B-18 |
| B.3.7 | Using the <code>prstat</code> Command | B-19 |
| B.3.7.1 | Options | B-20 |

Preface

This guide describes how to install and set up the SPARC Enterprise M4000/M5000 servers from Oracle and Fujitsu. This document is intended for authorized service providers. References herein to the M4000 server or M5000 server are references to the SPARC Enterprise M4000 or SPARC Enterprise M5000 server.

This preface includes the following sections:

- “Audience” on page ix
- “Related Documentation” on page x
- “Text Conventions” on page xi
- “Notes on Safety” on page xii
- “Syntax of the Command-Line Interface (CLI)” on page xii
- “Documentation Feedback” on page xiii

Audience

This guide is written for experienced system administrators with working knowledge of computer networks and advanced knowledge of the Oracle Solaris Operating System (Oracle Solaris OS).

Related Documentation

All documents for your server are available online at the following locations.

| Documentation | Link |
|--|---|
| Sun Oracle software-related manuals (Oracle Solaris OS, and so on) | http://www.oracle.com/documentation |
| Fujitsu documents | http://www.fujitsu.com/sparcenterprise/manual/ |
| Oracle M-series server documents | http://www.oracle.com/technetwork/documentation/sparc-mseries-servers-252709.html |

The following table lists titles of related documents.

SPARC Enterprise M4000/M5000 Servers Documents

SPARC Enterprise M4000/M5000 Servers Site Planning Guide

SPARC Enterprise Equipment Rack Mounting Guide

*SPARC Enterprise M4000/M5000 Servers Getting Started Guide**

SPARC Enterprise M4000/M5000 Servers Overview Guide

SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Important Legal and Safety Information

SPARC Enterprise M4000/M5000 Servers Safety and Compliance Manual

External I/O Expansion Unit Safety and Compliance Guide

SPARC Enterprise M4000 Server Unpacking Guide

SPARC Enterprise M5000 Server Unpacking Guide

SPARC Enterprise M4000/M5000 Servers Installation Guide

SPARC Enterprise M4000/M5000 Servers Service Manual

External I/O Expansion Unit Installation and Service Manual

SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Administration Guide

SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers XSCF User's Guide

SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers XSCF Reference Manual

SPARC Enterprise M4000/M5000/M8000/M9000 Servers Dynamic Reconfiguration (DR) User's Guide

SPARC Enterprise M4000/M5000/M8000/M9000 Servers Capacity on Demand (COD) User's Guide

SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Product Notes[†]

SPARC Enterprise M4000/M5000 Servers Product Notes

External I/O Expansion Unit Product Notes

SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Glossary

* All getting started guides are printed documents.

† For XCP version 1100 or later

Text Conventions

This manual uses the following fonts and symbols to express specific types of information.

| Fonts/symbols | Meaning | Example |
|------------------|---|--|
| AaBbCc123 | What you type, when contrasted with on-screen computer output. This font represents the example of command input in the frame. | XSCF> adduser jsmith |
| AaBbCc123 | The names of commands, files, and directories; on-screen computer output. This font represents the example of command input in the frame. | XSCF> showuser -P User Name: jsmith Privileges: useradm auditadm |
| <i>Italic</i> | Indicates the name of a reference manual | See the <i>SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers XSCF User's Guide</i> . |
| " " | Indicates names of chapters, sections, items, buttons, or menus | See Chapter 2, "System Features." |

Notes on Safety

Read the following documents thoroughly before using or handling any SPARC Enterprise M4000/M5000 server:

- *SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Important Legal and Safety Information*
- *SPARC Enterprise M4000/M5000 Servers Safety and Compliance Guide*

Syntax of the Command-Line Interface (CLI)

The command syntax is as follows:

- A variable that requires input of a value must be put in *Italics*.
- An optional element must be enclosed in [].
- A group of options for an optional keyword must be enclosed in [] and delimited by |.

Documentation Feedback

If you have any comments or requests regarding this document, go to the following websites:

- For Oracle users:

<http://www.oracle.com/goto/docfeedback>

Include the title and part number of your document with your feedback.

SPARC Enterprise M4000/M5000 Servers Installation Guide, E26845-01

- For Fujitsu users:

http://www.fujitsu.com/global/contact/computing/sparce_index.html


Installation Overview

This chapter provides the process for installing the servers.

1.1 Installation Workflow

Installing a server requires the steps in [FIGURE 1-1](#).

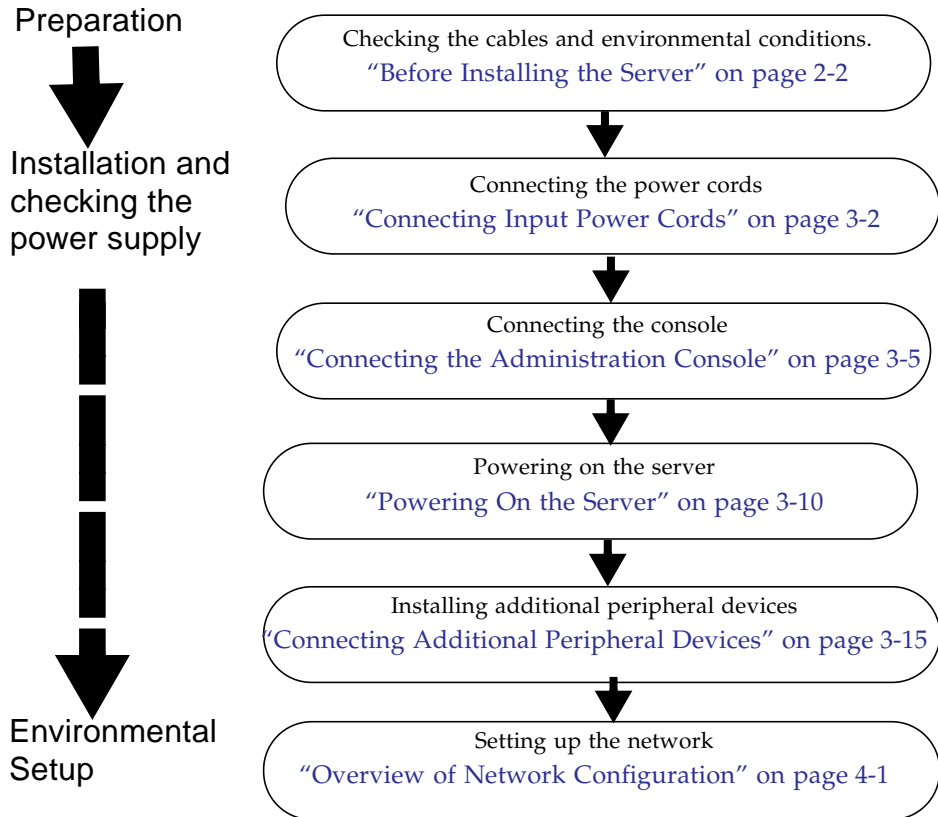FIGURE 1-1 Workflow Required for Installation



Preparing to Install the Server

This chapter describes the items you are required to check, the environmental requirements for installation, installation areas, and other related matters. It contains the following sections:

- Section 2.1, “Safety Precautions” on page 2-1
- Section 2.2, “Before Installing the Server” on page 2-2
- Section 2.3, “Tools and Equipment” on page 2-9

2.1 Safety Precautions

To protect both yourself and the equipment, observe the following precautions when possible:

- Observe the precautions, warnings, and notes on handling shown on the server.
- Use an electrostatic discharge (ESD) jack or wrist or foot strap when possible.
- Do not block any ventilation holes.
- Do not install the server at a location exposed to direct sunlight or near a device that may become hot.
- Do not install the server at a location that has a lot of dust or that is exposed to corrosive gases or air with a high salt concentration.
- Do not install the server at a location exposed to frequent vibrations. Install the system on a flat and level surface.
- Use grounding wires of class 3 or higher. Sharing any grounding wire will lead to a malfunction.
- Do not place cables under the equipment or have cables stretched tight. Do not disconnect a power cord to the server while its power is on.
- Do not place anything on the server or perform any work directly above it.

- Be careful not to allow the ambient temperature to rise sharply in winter. Such a sudden temperature change would cause condensation to form inside the product. Allow for a sufficient warm-up period prior to operation.
- Do not install the server near a copy machine, air conditioner, welding machine, or any other loud equipment.
- Do not install the server near any equipment generating lots of electronic noise.
- Do not install the system on the same circuits as devices such as equipment elevators which can cause voltage sags when they are started up.
- Take measures to prevent static electricity from being generated at the location.
- Confirm that the supply voltage and frequency match the electrical ratings indicated on the server.
- Do not insert anything into any opening in the server. The server contains high-voltage parts. If a metal object or another conductor were inserted into an opening in the equipment, it could cause a short circuit that could cause fire, electric shock, or equipment damage.
- For details on maintenance of the server, contact a certified service engineer.

2.2 Before Installing the Server

Before installing the server, you must know the system configuration and obtain all the prerequisite information for system installation. For instructions, refer to the *SPARC Enterprise M4000/M5000 Servers Site Planning Guide* and the guide that came with the rack.

2.2.1 Facility Power

To prevent catastrophic failures the facility power design must ensure that adequate redundant power is provided to the system. Electrical work and installations must comply with applicable local, state, or national electrical codes.

Note – The following power numbers are maximums and are based on fully configured systems. Actual numbers might vary according to your system configuration.

TABLE 2-1 Electrical Specifications for the SPARC Enterprise M4000 Server

| Parameter | | Value |
|-----------------------|-------------------------|--|
| Number of power cords | | 2 (1 power cord per power supply unit) |
| Redundancy | | 1 + 1 redundant. Second power supply is redundant at 200 VAC |
| Input current | Voltage range | 100–127 VAC 200–240 VAC |
| | Current, maximum | 24.0A at 100–127 VAC (12A per cord) 12.0A at 200–240 VAC (12A per cord) |
| | Current frequency range | 50–60 Hz |
| Power draw (maximum) | | 1,692 W (2 power cords) |
| Volt-ampere | | 1,763 VA |
| Heat | | 5,774 BTUs/hr (6,091 kJ/hr) |
| Power factor | | 0.98 |

TABLE 2-2 Electrical Specifications for the SPARC Enterprise M5000 Server

| Parameter | | Value |
|-----------------------|-------------------------|---|
| Number of power cords | | 4 (1 power cord per power supply unit) |
| Redundancy | | 2 + 2 redundant. Second and fourth power supplies are redundant at 200 VAC |
| Input current | Voltage range | 100–127 VAC 200–240 VAC |
| | Current, maximum | 48A at 100–127 VAC (12A per cord) 24A at 200–240 VAC (12A per cord 2+2 redundancy) |
| | Current frequency range | 50–60 Hz |
| Power draw (maximum) | | 3,270 W (4 power cords) |
| Volt-ampere | | 3,406 VA |
| Heat | | 11,160 BTUs/hr (11,772 kJ/hr) |
| Power factor | | 0.98 |

2.2.1.1 Facility Power Requirements and Characteristics

For proper redundancy your facility should have two independent power sources: Either circuit breakers connected to separate power company utility feeds or UPS (uninterruptible power system). For power redundancy the power cords should not be connected to the same facility power source.

If the computer equipment is subjected to repeated power interruptions and fluctuations, it is susceptible to a higher component failure rate than it would be with a stable power source. There are two basic configurations:

- Power Cords With Redundant PSU Connection (FIGURE 2-1 and FIGURE 2-2)
- Power Cords With Dual-power Feed Connection (FIGURE 2-3 and FIGURE 2-4)

Note – If more than one power cord of this server is connected directly to the same facility power source distribution panel, connect the power cords to outlets independently using one cable per power feed.



Caution – Ensure that the circuit breaker is off when installing or removing AC power cords in order to avoid damage to the PSU or system.

FIGURE 2-1 SPARC Enterprise M4000 Server With Redundant PSU Connection


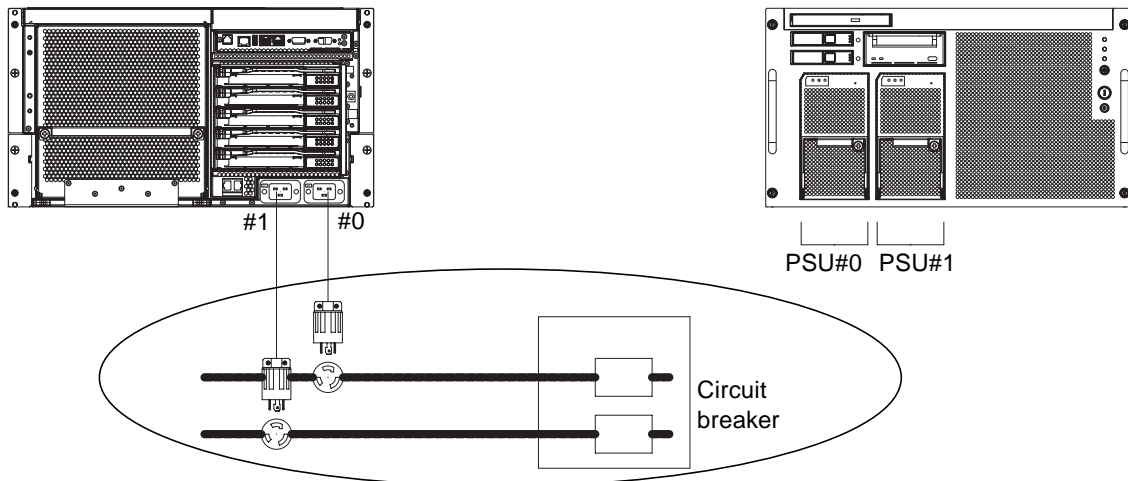


FIGURE 2-2 SPARC Enterprise M5000 Server With Redundant PSU Connection

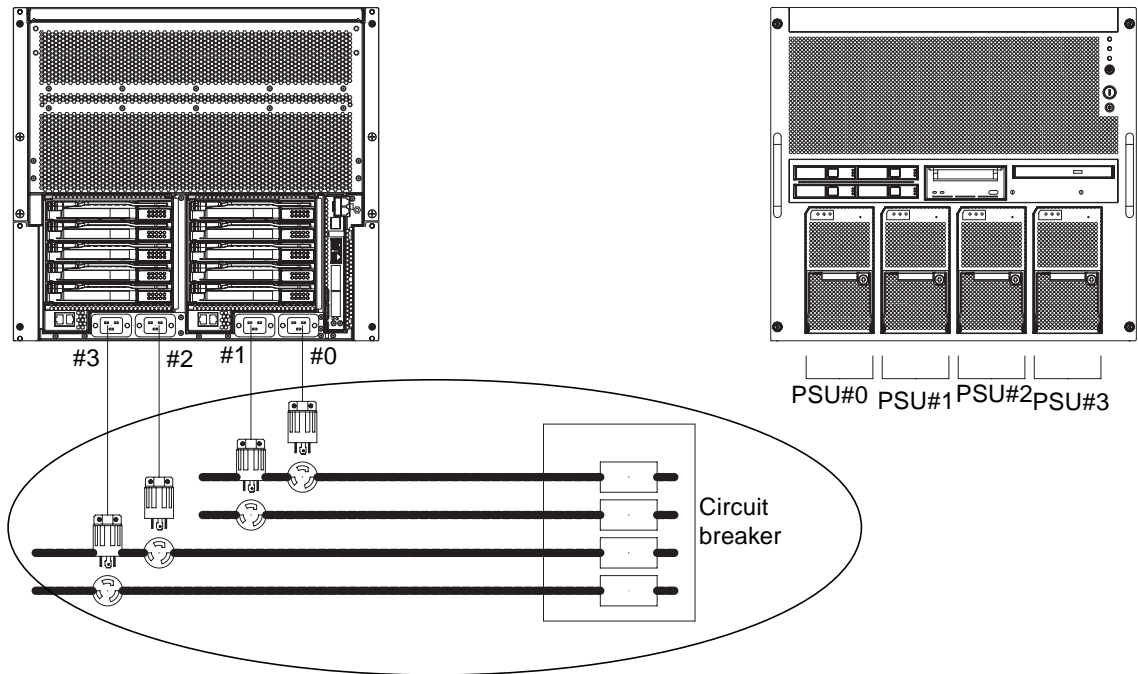

For a dual-power feed connection, connect the individual power cords separately to each AC power supply system.

FIGURE 2-3 SPARC Enterprise M4000 Server With Dual-power Feed Connection


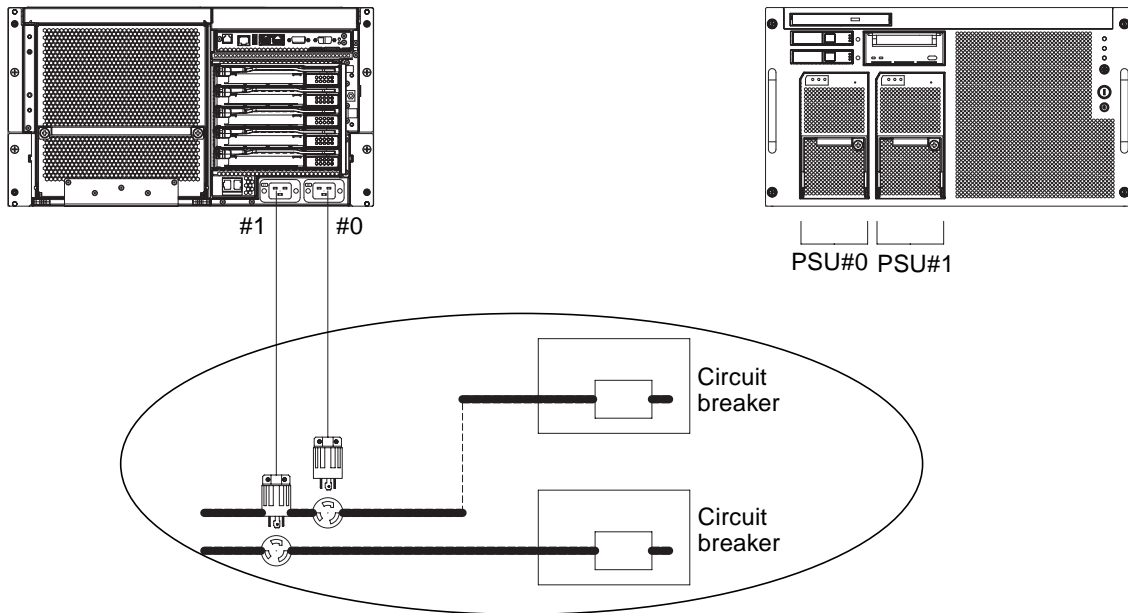


FIGURE 2-4 SPARC Enterprise M5000 Server With Dual-power Feed Connection

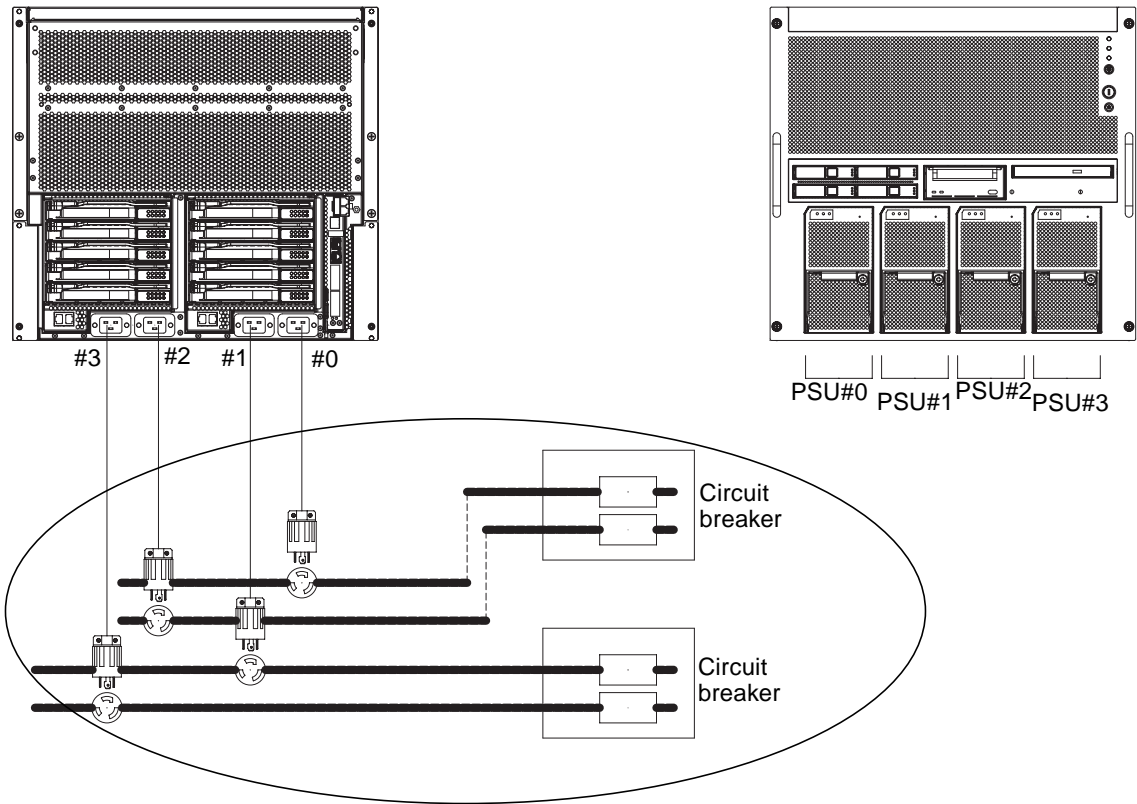

2.2.1.2 Grounding

The system is shipped with grounding-type (three-wire) power cords. Always connect the cords into grounded power outlets. Contact your facilities manager or a qualified electrician to determine what type of power is supplied to your building. No additional earth grounding is necessary but it may be added if desired.

2.2.2 Cable Connections

TABLE 2-3 lists the power cords for the servers.

TABLE 2-3 Power Cords

| System | Location | Power Cord Type |
|---|-------------------|--|
| SPARC Enterprise M4000 Server Connector | Americas, Taiwan | NEMA L5-15 125V 15A |
| | Korea, Japan | NEMA L6-20 250V 20A |
| | Rest of the world | IEC60309 16A 250V, 3PIN with IEC 60320 C20 |
| SPARC Enterprise M5000 Server Connector | Americas, Taiwan | NEMA L5-15 125V 15A |
| | Korea, Japan | NEMA L6-20 250V 20A |
| | Rest of the world | IEC60309 16A 250V, 3PIN with IEC 60320 C20 |

Note – For servers that have the B-type plug, confirm that a 20A overcurrent protection device is available outside the server. If one is not available, prepare an external 20A overcurrent protection that can be achieved by means of no-fuse breakers (NFBs) or fuses. The B-type plug refers to plugs other than grounding-type ones with two parallel blades, such as the NEMA L6-30, L6-20, L6-15, and L5-15.

Refer to the *SPARC Enterprise M4000/M5000 Servers Site Planning Guide* for electronic specifications of the midrange servers.

2.2.3 Checking the Installation Location

When installing the server, consider not only the device sizes but also the sizes of the required service areas (maintenance areas). For details, refer to the *SPARC Enterprise M4000/M5000 Servers Site Planning Guide* and the manual that came with the rack.

The site electrician should verify the proper electrical hookups.

2.3 Tools and Equipment

The following sections list the tools that are required to install the servers.

The following tools are required to install the servers:

- Screwdriver, Phillips No. 2
- Antistatic wrist strap
- Antistatic mat
- Ethernet cable of category 5 or higher
- Console (one of the following)
 - ASCII terminal
 - Workstation
 - Terminal server (or patch panel connected to a terminal server)
 - Personal computer
- XSCF Unit configuration information (IP Address, subnet mask, default gateway, and so on.)
- Domain configuration information (IP Address, subnet mask, default gateway, and so on.)

Installing the Server

This chapter describes how to install the server. It contains the following sections:

- Section 3.1, “Checking Components” on page 3-1
- Section 3.2, “Connecting Input Power Cords” on page 3-2
- Section 3.3, “Connecting the Administration Console” on page 3-5
- Section 3.4, “Powering On the Server” on page 3-10
- Section 3.5, “Connecting Additional Peripheral Devices” on page 3-15

Note – Do not install any additional PCI cards or peripherals until the server has been installed and booted successfully.



Caution – When raising the unit, do not grab the handles on the front. The handles on the front are only to be used for pushing in or pulling out the unit in the rack. They are not designed to bear the weight of the unit.



Caution – Extend only one server out of the equipment rack at a time to prevent unbalancing the rack. The stabilizer (if applicable) must be deployed whenever a server is extended out of the rack.

3.1 Checking Components

This section explains how to check server components.

1. **Check the components against the packing list that came with the server.**

2. Check for a model name and input format on the shipping list.

If any of the items on the packing list are missing, incorrect, or damaged, contact your sales representative.

3.2 Connecting Input Power Cords

The servers are shipped with grounding-type (three-wire) power cords. Always connect the cords into grounded power outlets.



Caution – The server is designed to work with power systems having a grounded neutral conductor. Do not connect the equipment into any other type of power system. Contact your facilities manager or a qualified electrician to determine what type of power is supplied to your building.

1. Arrange the layout of all cables outside the system and secure the cables in place to prevent them from being damaged. Refer to “[Facility Power Requirements and Characteristics](#)” on page 2-4 for diagrams showing cable connections.

Note – It is the installer’s responsibility to ensure that the facility power source has sufficient electrical power and redundancy to handle the required installation.

2. Verify that the input power breaker is off.

3. Connect the power cords to the input power source.

For redundancy in case of power source failure PSU0 and PSU2 should be powered from AC GRID A and PSU1 and PSU3 should be powered from AC GRID B.

Note – Use 200V when connecting cords for redundancy, 100V is not supported.

4. Make certain the power cords are tightly fastened.

Note – The power cords and infiniband cables should hang loosely in a service loop behind the server or the cable management arm may not be able to fully retract.


3.2.1 Connecting a UPS Unit

An uninterruptible power supply (UPS) unit is used to provide a stable supply of power to the system in the event of a power failure or an extensive power interruption. A UPS with an UPC interface can be connected to the UPC ports on the XSCFU unit (XSCFU) (FIGURE 3-2) so that emergency shutdown processing can be executed.

When using a single power feed, connect the UPC cable to UPC#0. When using a dual-power feed, connect the UPC cables to UPC#0 and UPC#1 (FIGURE 3-1).

Note – UPC#1 cannot be used when using single power feed. Refer to the *SPARC Enterprise M4000/M5000 Servers Service Manual* for the interface specifications of the UPC port.

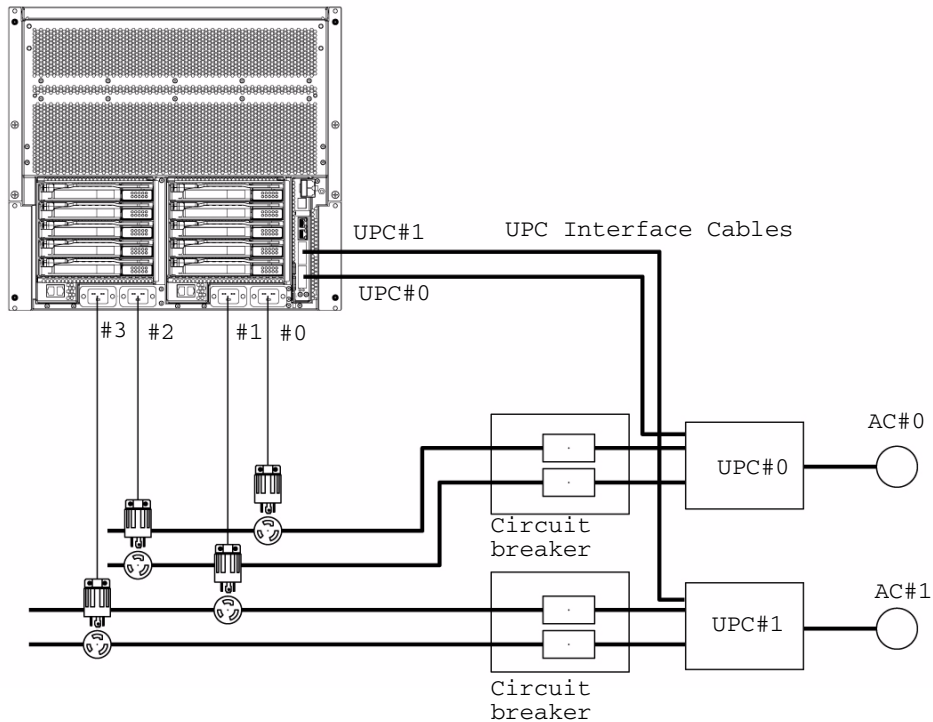FIGURE 3-1 SPARC Enterprise M5000 Server Dual-power Feed UPC Connections



3.2.2 Verifying the Power Input Connections Before Applying Power

- Have the site electrician verify that the input power source fulfills the power requirements.

Refer to the *SPARC Enterprise M4000/M5000 Servers Site Planning Guide* for input power requirements.

Note – Both ends of the power cords should have been connected prior to shipment (for servers preinstalled in an equipment rack) or when the server was mounted in the equipment cabinet. If the power cords were not connected previously, connect them before applying power to the power cords.

3.3 Connecting the Administration Console

The serial port on the XSCF Unit is a RJ-45 interface port used to monitor the boot process and to modify the default settings. The port is monitored and configured using an administrative console connected to the serial port by a serial cable.

You can monitor and configure the XSCF Unit using any one of the following devices as the administrative console:


- ASCII terminal
- Workstation
- Terminal server (or patch panel connected to a terminal server)
- Personal computer

Note – It is possible to connect to the LAN ports using Telnet or ssh access. The LAN ports have class-B private address values but they will not send out a packet by themselves until configured.

Note – The modular connector (RCI connector) is not for connection to TNV circuits. See item 1 in [FIGURE 3-2](#).

[FIGURE 3-2](#) shows the locations of the ports on the XSCF Unit.

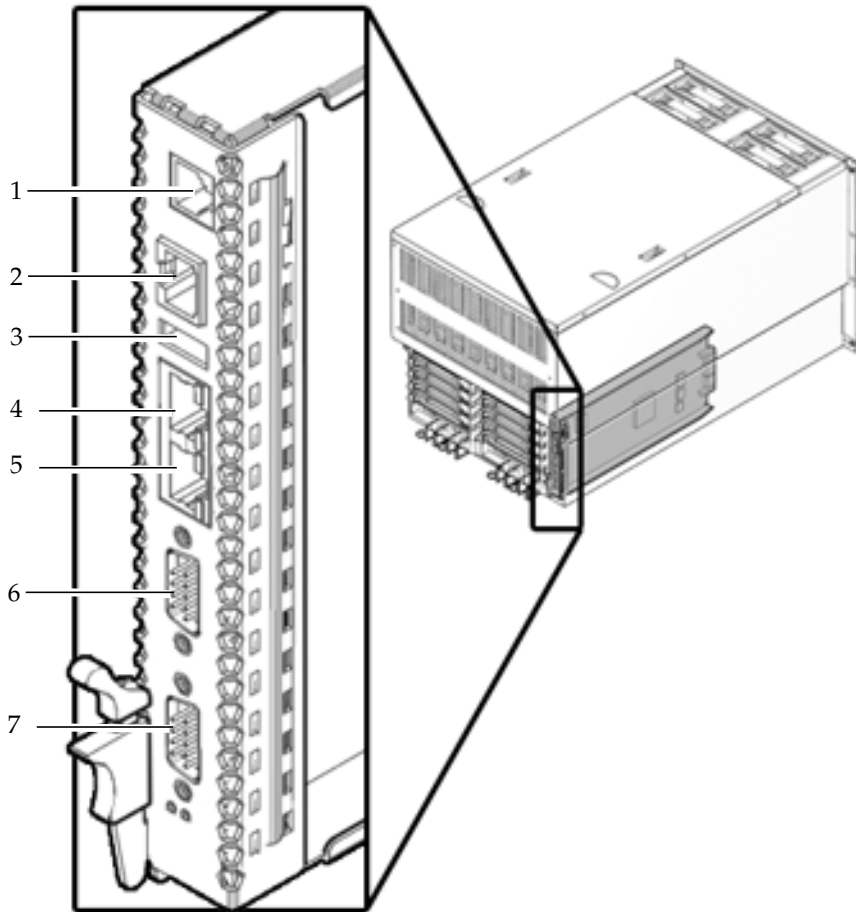FIGURE 3-2 Ports on XSCF Unit (SPARC Enterprise M5000 Server Shown)



| Location Number | Component |
|-----------------|--------------------|
| 1 | RCI Port |
| 2 | Serial Port |
| 3 | USB port |
| 4 | LAN 1 (Ethernet#1) |

| Location Number | Component |
|-----------------|--------------------|
| 5 | LAN 0 (Ethernet#0) |
| 6 | UPC#1 |
| 7 | UPC#0 |

See [Section A.1, “SPARC Enterprise M4000 Server Views”](#) on page A-1 for the location of the XSCF Unit on the SPARC Enterprise M4000 server.

3.3.1 Connecting the Console

This section explains how to physically connect and configure the console.

1. Connect the administrative console to the serial port using the serial cable that shipped with the server.

2. Configure the settings on the administrative console.


The console should have the following settings:

- Baud rate: 9600 bps
- Data length: 8 bit
- Parity: None
- Stop: 1 bit
- Flow control: None
- Delay: Except for 0

3. Set the mode switch on the operator panel to the Service position.

The Service position is indicated by an icon that looks like a wrench, the Locked position is indicated by an icon that looks like a lock ([FIGURE 3-3](#)).

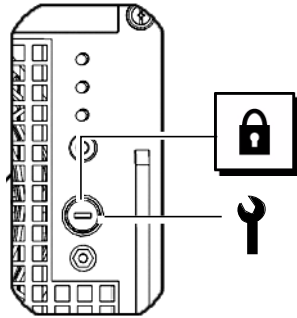FIGURE 3-3 Operator Panel Mode Switch



For more details on the operator panel see [Section A.3, “Operator Panel Overview”](#) on page A-9.

4. Turn on the input power.

Note – Wait at least 30 seconds before turning on the system power that you turned off, by pulling out the power cord or using the circuit breakers on the distribution panel.

Refer to the manual that shipped with the input power source for instructions.

5. Watch the administration console for error messages as the XSCF Unit powers on.

See [Appendix B, Fault Isolation](#) for fault information.

6. Confirm that the XSCF STANDBY LED (green) on the operator panel is lit.

7. When the login prompt appears, enter default for the login name:

```
login: default
```

Note – Step 8 must be performed within a minute of Step 7 or the login certification will time out.

8. Set the mode switch on the operator panel to the Locked position.

9. Press the RETURN key.

Wait five seconds before continuing to Step 10.

10. Set the mode switch on the operator panel to the Service position.

11. Press the RETURN key.

Note – If Step 10 is not performed within 1 minute the login certification will expire.

12. Confirm that the XSCF Shell prompt is displayed on the administration console.

```
XSCF>
```

3.3.2 Initializing the XSCF Unit

To use full XSCF functionality, various settings need to be set.

1. Set the required settings.

See section “Setting up XSCF” in the *SPARC Enterprise M/3000/4000/M5000/M8000/M9000 Servers XSCF User’s Guide* for details on how to set these settings.

The following settings are required:

- Registration of an XSCF user account and password and user privileges (`adduser`, `password`, `setprivileges`)
- User account of a field engineer (FE) (for maintenance)
- Date and time settings (`setdate`, `settimezone`)
- Confirmation of XSCF host public key (`showssh`)
- SSH/telnet settings (`setssh`, `settelnet`)
- Network interface, routing, and DNS-related settings (`setnetwork`, `setroute`, `setnameserver`, etc.)

Note – Reset the XSCF with the `applynetwork` and `rebootxscf` commands.

- Domain to Service Processor Communications Protocol (DSCP) configuration (`setdscp`)
- Altitude setting (`setaltitude`)

Note – `setaltitude` must be followed by a `rebootxscf` to apply the altitude setting

- Dual power feed option setting (`setdualpowerfeed`)

Note – `setdualpowerfeed` requires a complete chassis power cycle (all power cords removed) to apply any changes. Make certain to allow 30 seconds before plugging the power cords back into the chassis.

To perform XSCF initial settings, use the XSCF default user account. Until user accounts for user environment is registered, log in with a default user account and default password. The privileges of the default user are `useradm` and `platadm`.

2. Log in to the XSCF Shell using a user account and password set during Step 1.

See the *SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers XSCF User's Guide* for details on how to log in to the user account.

3.4 Powering On the Server

This section explains how to power on the server the first time.

1. Set the mode switch on the operator panel to the Service position.

2. From the XSCF Shell, type the console command.

```
XSCF> console -d domain_ID
```

Replace *domain_ID* with the number of a specific domain you want to access.

This command switches the prompt from the XSCF console to the domain console.

3. Confirm that the XSCF STANDBY LED (green) on the operator panel is lit.

4. Push the power switch on the operator panel to power on the server.

The server starts and begins a self-diagnosis.

Watch the initial system administration console for error messages during the boot process. See [Appendix B, Fault Isolation](#) for fault information.

5. Confirm that "ok" is displayed on the domain console.

6. **Confirm that the POWER LED (green) on the operator panel is lit.**
7. **Check the POWER LED on each component.**

If the POWER LEDs are not lit see [Appendix B](#) for installation troubleshooting information.
8. **Press and hold the Enter key, and press the “#.” (shift-3 and period) keys.**

These key combinations switch you from the domain console to the XSCF console.
9. **Execute `fmddump` or `showlogs` with the error option from the XSCF Shell and confirm that no errors are found.**

See the [Section B.2.4, “Using the `fmddump` Command”](#) on page B-6 and [Section B.2.2, “Using the `showlogs` Command”](#) on page B-5 for details.
10. **Connect the system control network to the XSCF Unit LAN port using an Ethernet cable.**

The system control network is one or more administrative consoles used to monitor the network. This connection will replace the temporary connection made between the administration console and the serial port on the XSCF Unit. Both XSCF Unit LAN ports must be used to ensure redundancy in the system control network.

Note – The XSCF Ethernet port is IEEE 802.3i and IEEE 802.3u compliant. This requires auto-negotiation for the port into which it terminates.

3.4.1 Verifying the Configuration

Verify the hardware configuration by following the procedure below on a console connected to the system control network.

1. **Log in to the server and access the XSCF Shell.**

Refer to the *SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers XSCF User’s Guide* for details.

2. Type the `showhardconf` command with the `-u` option from the XSCF Shell.

```
XSCF> showhardconf -u
SPARC Enterprise M5000; Memory_Size:64 GB;
+-----+-----+
|          FRU          | Quantity |
+-----+-----+
| MBU_B                |         1 |
|   CPUM                |         4 |
|     Freq:2.530 GHz;   |        ( 8) |
|   MEMB                |         8 |
|     MEM                |        64 |
|     Type:1A; Size:1 GB; |        ( 64) |
|   DDC_A                |         4 |
|   DDC_B                |         2 |
| IOU                   |         2 |
|   DDC_A                |         2 |
|   DDCR                 |         2 |
|     DDC_B              |         2 |
| XSCFU                 |         1 |
| OPNL                  |         1 |
| PSU                   |         4 |
| FANBP_C               |         1 |
|   FAN_A                |         4 |
+-----+-----+
```

See the [Section B.2.1, “Using the showhardconf Command”](#) on page B-2 for details.

3. Use the console command to go to the `ok` prompt.

```
XSCF> console -d domain_ID
```

Replace `domain_ID` with the number of a specific domain you want to access.

This command switches the prompt from the XSCF console to the domain console.

4. From the **ok** prompt, use the **probe-scsi-all** command to confirm that the storage devices are installed.

```
ok probe-scsi-all
/pci@0,600000/pci@0/pci@8/pci@0/scsi@1

MPT Version 1.05, Firmware Version 1.07.00.00

Target 0
Unit 0   Disk      SEAGATE ST973401LSUN72G 0556   143374738 Blocks,
73 GB
      SASAddress 5000c5000092beb9   PhyNum 0
Target 1
Unit 0   Disk      SEAGATE ST973401LSUN72G 0556   143374738 Blocks,
73 GB
      SASAddress 5000c500002eeaf9   PhyNum 1
Target 3
Unit 0   Removable Read Only device   TSSTcorpCD/DVDW TS-L532USR01
      SATA device   PhyNum 3
```

5. Use the **show-devs** command to confirm that the PCI devices are installed.

```
ok show-devs
/pci@41,700000
/pci@40,600000
/pci@48,4000
/cmp@480,0
/pseudo-mc@240,200
/nvram
/pseudo-console
/virtual-memory
/memory@m0
/aliases
/options
/openprom
/chosen
/packages
/pci@40,600000/pci@0
/pci@40,600000/pci@0/pci@9
/pci@40,600000/pci@0/pci@8
/pci@40,600000/pci@0/pci@8/pci@0,1
/pci@40,600000/pci@0/pci@8/pci@0
/pci@40,600000/pci@0/pci@8/pci@0,1/ethernet@1
/pci@40,600000/pci@0/pci@8/pci@0/network@2,1
/pci@40,600000/pci@0/pci@8/pci@0/network@2
```

The show-devs command command output continued..

```
/pci@40,600000/pci@0/pci@8/pci@0/scsi@1
/pci@40,600000/pci@0/pci@8/pci@0/scsi@1/disk
/pci@40,600000/pci@0/pci@8/pci@0/scsi@1/tape
/pci@48,4000/ebus@1
/pci@48,4000/ebus@1/panel@14,280030
/pci@48,4000/ebus@1/scfc@14,200000
/pci@48,4000/ebus@1/serial@14,400000
/pci@48,4000/ebus@1/flashprom@10,0
/cmp@480,0/core@1
/cmp@480,0/core@0
/cmp@480,0/core@1/cpu@1
/cmp@480,0/core@1/cpu@0
/cmp@480,0/core@0/cpu@1
/cmp@480,0/core@0/cpu@0
/openprom/client-services
/packages/obp-tftp
/packages/terminal-emulator
/packages/disk-label
/packages/deblocker
/packages/SUNW,builtin-drivers
ok
```

- 6. Compare the configuration shown by showhardconf -u, probe-scsi-all, and show-devs with the shipping list.**

If the configuration is incorrect contact your sales representative.

- 7. Boot the Oracle Solaris operating system (Oracle Solaris OS) and configure the domains.**

Refer to the Oracle Solaris software documentation for details.

3.4.2 Checking the Dual-Power Feed

If the dual-power feed option is used, follow the procedure below to confirm that the system can operate even if one power feed is stopped.

Note – Dual-Power Feed mode cannot be used with 100V power.

1. **Confirm that the system is powered on by checking the output of the `showdomainstatus -a` command from the XSCF Shell.**
2. **Switch off all main line switches of AC GRID A.**
3. **Confirm that the POWER LED on the operator panel is on.**
4. **At the XSCF Shell, verify power failure with the `showlogs event` command.**
5. **Switch on all the main line switches of AC GRID A (switched off in [Step 2](#)).**
6. **At the XSCF Shell, verify power recovery with the `showlogs event` command.**
7. **Check that the AC-LED and DC-LED are lit on PSU#0 (M4000 server)/ PSU#0/PSU#2 (M5000 server).**
8. **From the XSCF Shell, confirm a Power Status is On by executing the `showhardconf` command.**
9. **Switch off all main line switches of AC GRID B.**
10. **Confirm that the POWER LED on the operator panel is on.**
11. **At the XSCF Shell, verify power failure with the `showlogs event` command.**
12. **Switch on all the main line switches of AC GRID B (switched off in [Step 9](#)).**
13. **At the XSCF Shell, verify power recovery with the `showlogs event` command.**

3.5 Connecting Additional Peripheral Devices

When you add additional storage devices, mount the heaviest subassemblies at the lowest available opening to minimize the danger of a top-heavy server.

Refer to the manual that came with the peripheral device for additional instructions.

- Set the mode switch on the operator panel to the Locked position and give the key to the system administrator.

Connecting the Domains to the Network

This chapter discusses how to establish a network for the servers. It contains the following sections:

- Section 4.1, “Overview of Network Configuration” on page 4-1
- Section 4.2, “Connecting to the Network” on page 4-1
- Section 4.3, “Verifying the Network Connection” on page 4-2
- Section 4.4, “Verifying Operation by Running Oracle VTS Software” on page 4-2

4.1 Overview of Network Configuration

By this point in the installation the server is up and running. The domains still need to be connected to the network.

4.2 Connecting to the Network

The hubs, switches, and cables used to connect the networks must be supplied by the user.

Note – Connecting the I/O units to the user’s LAN allows the domains to access the network. If you want the domains to be isolated from the network, skip this step.

- **Connect the network to the domains using an Ethernet cable.**

You can connect to either the Gigabit Ethernet (GbE) port on the I/O unit or on an Ethernet card installed in the I/O unit.

4.3 Verifying the Network Connection

1. **Check the LAN link lamp on the I/O Unit or PCI slot that is connected to the network for activity.**
2. **Use a system on the network to navigate to one of the domains on the server.**

Refer to the Oracle Solaris software documentation for information on accessing a server over the network.

4.4 Verifying Operation by Running Oracle VTS Software

Start the server from each domain, configure the server for the network, and run Oracle VTS Software. The Oracle VTS software is a diagnostic tool for verifying hardware operations and checking the device connection status.

Refer to the Oracle Solaris software documentation for information on starting the system from each domain and configuring the domains for the network.

Refer to the Oracle VTS user's guide for information on installing and use of the Oracle VTS software.

System Views


Appendix A provides views of the systems. This appendix has the following sections:

- [Section A.1, “SPARC Enterprise M4000 Server Views” on page A-1](#)
- [Section A.2, “SPARC Enterprise M5000 Server Views” on page A-5](#)
- [Section A.3, “Operator Panel Overview” on page A-9](#)

A.1 SPARC Enterprise M4000 Server Views

[FIGURE A-1](#) shows the SPARC Enterprise M4000 server

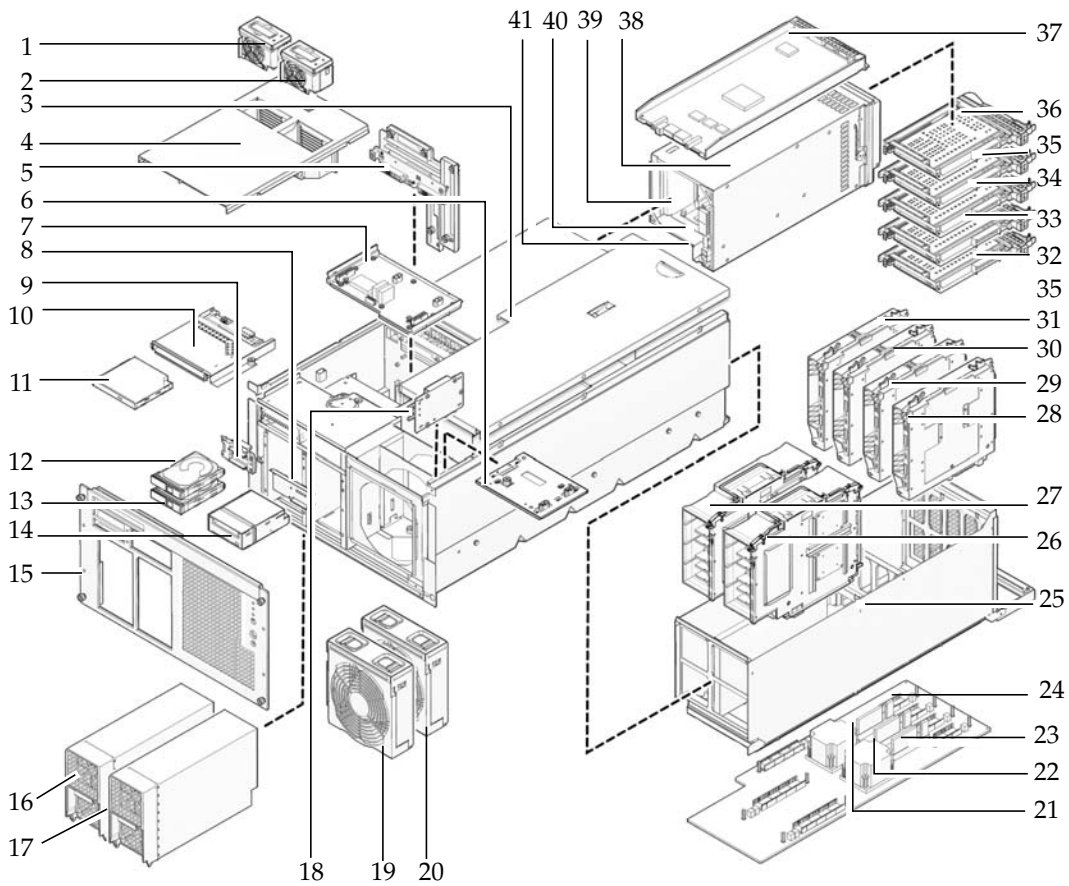FIGURE A-1 SPARC Enterprise M4000 Server Component Locations



| Location Number | Component |
|------------------------|--|
| 1 | 60-mm fan (FAN_B#0) |
| 2 | 60-mm fan (FAN_B#1) |
| 3 | Top cover |
| 4 | Fan cover |
| 5 | Backplane Unit (BPU_A - includes IOBP, Power distribution board) |
| 6 | 172-mm fan backplane (FANBP_A) |
| 7 | 60-mm fan backplane (FANBP_B) |
| 8 | Tape drive backplane (TAPEBP) |
| 9 | Hard disk drive backplane (HDDBP#0) |
| 10 | CD-RW/DVD-RW backplane (DVDBP_A) |
| 11 | CD-RW/DVD-RW drive unit (DVDU) |
| 12 | Hard disk drive (HDD#1) |
| 13 | Hard disk drive (HDD#0) |
| 14 | Tape drive unit (TAPEU)* |
| 15 | Faceplate |
| 16 | Power supply unit (PSU#0) |
| 17 | Power supply unit (PSU#1) |
| 18 | Operator panel (OPNL) |
| 19 | 172-mm fan module (FAN_A#0) |
| 20 | 172-mm fan module (FAN_A#1) |
| 21 | DC-DC Converter (DDC_B#0) |
| 22 | DC-DC Converter (DDC_A#0) |
| 23 | DC-DC Converter (DDC_A#1) |
| 24 | Motherboard unit (MBU_A) |
| 25 | Motherboard carriage |
| 26 | CPU module (CPUM#1) |
| 27 | CPU module (CPUM#0) |
| 28 | Memory board (MEMB#3) |
| 29 | Memory board (MEMB#2) |


| Location Number | Component |
|------------------------|---|
| 30 | Memory board (MEMB#1) |
| 31 | Memory board (MEMB#0) |
| 32 | PCI slot (IOU#0 PCI#0) |
| 33 | PCI slot (IOU#0 PCI#1) |
| 34 | PCI slot (IOU#0 PCI#2) |
| 35 | PCI slot (IOU#0 PCI#3) |
| 36 | PCI slot (IOU#0 PCI#4) |
| 37 | eXtended System Control facility unit (XSCFU) |
| 38 | I/O Unit (IOU#0) |
| 39 | DC-DC Converter Riser (DDCR IOU#0 Not shown) |
| 40 | DC-DC Converter (DDC_B on DDCR on IOU#0) |
| 41 | DC-DC Converter (DDC_A IOU#0 Not shown) |

* Contact your sales representative for tape drive unit options on M4000/M5000 servers.

A.2 SPARC Enterprise M5000 Server Views

FIGURE A-2 shows the SPARC Enterprise M5000 server.

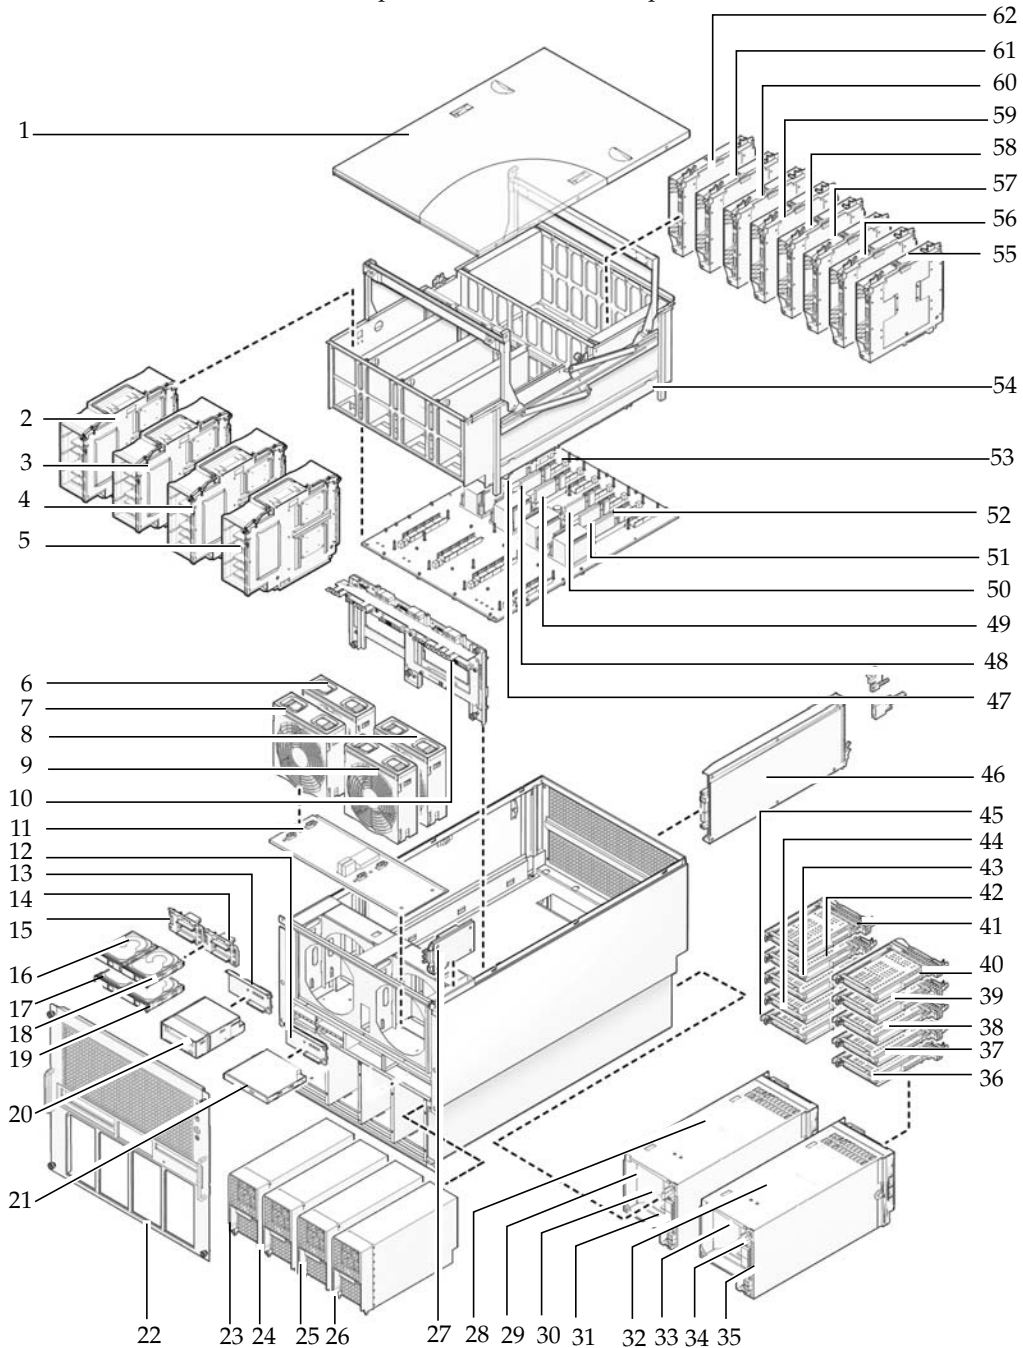FIGURE A-2 SPARC Enterprise M5000 Server Component Locations



| Location Number | Component |
|------------------------|---|
| 1 | Top cover |
| 2 | CPU module (CPUM#0) |
| 3 | CPU module (CPUM#1) |
| 4 | CPU module (CPUM#2) |
| 5 | CPU module (CPUM#3) |
| 6 | 172-mm fan (FAN_A#1) |
| 7 | 172-mm fan (FAN_A#0) |
| 8 | 172-mm fan (FAN_A#3) |
| 9 | 172-mm fan (FAN_A#2) |
| 10 | Backplane unit (BPU_B - includes IOBP, Power distribution board, bus bar) |
| 11 | 172-mm fan backplane (FANBP_C) |
| 12 | CD-RW/DVD-RW backplane (DVDBP_B) |
| 13 | Tape drive backplane (TAPEBP) |
| 14 | Hard disk drive backplane (HDDBP#1 IOU#1) |
| 15 | Hard disk drive backplane (HDDBP#0 IOU#0) |
| 16 | Hard disk drive (HDD#1 IOU#0) |
| 17 | Hard disk drive (HDD#0 IOU#0) |
| 18 | Hard disk drive (HDD#3 IOU#1) |
| 19 | Hard disk drive (HDD#2 IOU#1) |
| 20 | Tape drive unit (TAPEU)* |
| 21 | CD-RW/DVD-RW drive unit(DVDU) |
| 22 | Faceplate |
| 23 | Power supply unit (PSU#0) |
| 24 | Power supply unit (PSU#1) |
| 25 | Power supply unit (PSU#2) |
| 26 | Power supply unit (PSU#3) |
| 27 | Operator panel (OPNL) |
| 28 | I/O unit (IOU#0) |

| Location Number | Component |
|------------------------|---|
| 29 | DC-DC Converter Riser (DDCR IOU#0 Not shown) |
| 30 | DC-DC Converter (DDC_B on DDCR on IOU#0) |
| 31 | DC-DC Converter (DDC_A IOU#0 Not shown) |
| 32 | I/O Unit (IOU#1) |
| 33 | DC-DC Converter Riser (DDCR IOU#1 Not shown) |
| 34 | DC-DC Converter (DDC_B on DDCR on IOU#1) |
| 35 | DC-DC Converter (DDC_A IOU#1 Not shown) |
| 36 | PCI slot (PCI#0 IOU#1) |
| 37 | PCI slot (PCI#1 IOU#1) |
| 38 | PCI slot (PCI#2 IOU#1) |
| 39 | PCI slot (PCI#3 IOU#1) |
| 40 | PCI slot (PCI#4 IOU#1) |
| 41 | PCI slot (PCI#4 IOU#0) |
| 42 | PCI slot (PCI#3 IOU#0) |
| 43 | PCI slot (PCI#2 IOU#0) |
| 44 | PCI slot (PCI#1 IOU#0) |
| 45 | PCI slot (PCI#0 IOU#0) |
| 46 | eXtended System Control facility unit (XSCFU) |
| 47 | DC-DC Converter (DDC_A#0) |
| 48 | DC-DC Converter (DDC_A#1) |
| 49 | DC-DC Converter (DDC_A#2) |
| 50 | DC-DC Converter (DDC_A#3) |
| 51 | DC-DC Converter (DDC_B#0) |
| 52 | DC-DC Converter (DDC_B#1) |
| 53 | Motherboard unit (MBU_B) |
| 54 | Motherboard carriage |
| 55 | Memory board (MEMB#7) |
| 56 | Memory board (MEMB#6) |
| 57 | Memory board (MEMB#5) |
| 58 | Memory board (MEMB#4) |

| Location Number | Component |
|-----------------|-----------------------|
| 59 | Memory Board (MEMB#3) |
| 60 | Memory board (MEMB#2) |
| 61 | Memory board (MEMB#1) |
| 62 | Memory board (MEMB#0) |

* Contact your sales representative for tape drive unit options on M4000/M5000 servers.

A.3 Operator Panel Overview

When no network connection is available the operator panel is used to start or stop the system. The operator panel displays three LED status indicators, a power switch, and a security keyswitch. The panel is located on the front of the system, in the upper right.


When the system is running the Power and XSCF Ready, LEDs (green) should be lit and the Check LED (amber) should not be lit. If the Check LED is lit, search the system logs to determine what is wrong.

The three LED status indicators on the operator panel provide the following:

- General system status
- System problem alerts
- Location of the system fault

FIGURE A-3 shows the SPARC Enterprise M4000 server operator panel.

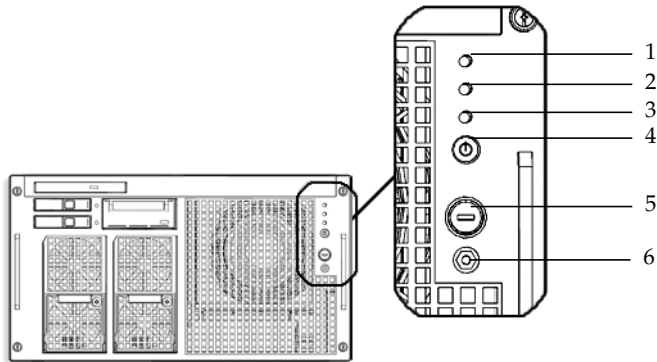
FIGURE A-3 SPARC Enterprise M4000 Server Operator Panel



| Location Number | Component |
|-----------------|--------------------------|
| 1 | POWER LED |
| 2 | XSCF STANDBY LED |
| 3 | CHECK LED |
| 4 | Power switch |
| 5 | Mode switch (keyswitch) |
| 6 | Antistatic ground socket |

FIGURE A-4 shows the SPARC Enterprise M5000 server operator panel.



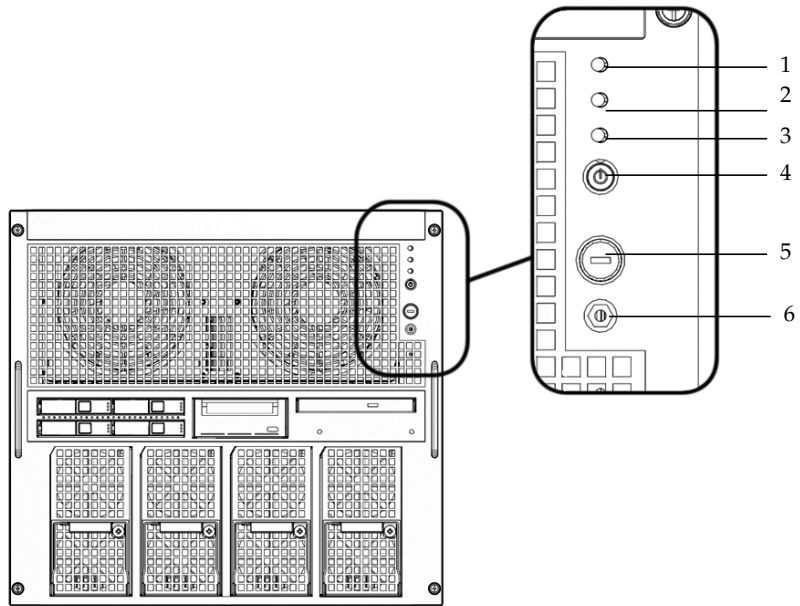



FIGURE A-4 SPARC Enterprise M5000 Server Operator Panel



| Location Number | Component |
|-----------------|--------------------------|
| 1 | POWER LED |
| 2 | XSCF STANDBY LED |
| 3 | CHECK LED |
| 4 | Power switch |
| 5 | Mode switch (keyswitch) |
| 6 | Antistatic ground socket |

During startup, the firmware toggles the front panel LEDs on and off to verify that each one is working correctly. After that, the front panel LEDs operate as described in [TABLE A-1](#).

TABLE A-1 Operator Panel LEDs and Switches

| Icon | Name | Color | Description |
|---|----------------------------|-------|--|
|  | POWER LED | Green | Indicates the server power status. <ul style="list-style-type: none"> • On: Server has power. • Off: Server is without power. • Blinking: The power-off sequence is in progress. |
|  | XSCF STANDBY LED | Green | Indicates the readiness of the XSCF. <ul style="list-style-type: none"> • On: XSCF unit is functioning normally. • Off: XSCF unit is stopped. • Blinking: Under system initialization after NFB on, or under system power-on process. |
|  | CHECK LED | Amber | Indicates that server detected a fault. <ul style="list-style-type: none"> • On: Error detected that disables the startup. • Off: Normal, or the breaker is off (power failure). • Blinking: Indicates the position of fault. |
|  | Power switch | | Switch to direct server power on/power off. |
|  | Mode switch (keyswitch) | | The Locked setting: <ul style="list-style-type: none"> • Normal key position. Power on is available with the Power switch, but power off is not. • Disables the Power switch to prevent unauthorized users from powering the server on or off. • The Locked position is the recommended setting for normal day-to-day operations. |
|  | | | The Service setting: <ul style="list-style-type: none"> • Service should be provided at this position. • Power on and off is available with Power switch. • The key cannot be pulled out at this position. |

The following table provides the meanings of the mode switch.

TABLE A-2 Meanings of the Mode Switch

| Function | Mode Switch | |
|--------------------------------------|--|----------------|
| State Definition | Locked | Service |
| Inhibition of Break Signal Reception | Enabled. Reception of the break signal can be enabled or disabled for each domain using <code>setdomainmode</code> . | Disabled |
| Power On/Off by power switch | Only power-on is enabled | Enabled |

Fault Isolation

This chapter describes basic fault isolation information related to installation of the SPARC Enterprise M4000/M5000 servers from Oracle and Fujitsu. This appendix has the following sections:

- Section B.1, “Corrective Actions to Common Problems” on page B-1
- Section B.2, “Using the Diagnostic Commands” on page B-2
- Section B.3, “Traditional Oracle Solaris Diagnostic Commands” on page B-9

B.1 Corrective Actions to Common Problems

This section provides information on the more common installation problems and their solutions.

TABLE B-1 Common Installation Problems

| Problem | Solution |
|--|---|
| No power to system | <ul style="list-style-type: none"> • Check to ensure that the input power source is on and that the power connectors are secure. • Check that the power cords are tightly fastened to both the system power supply units and to the input power source. • If a powered equipment rack is being use, check to ensure it is turned on. |
| bootdisk command results in “can’t locate boot device” | <ul style="list-style-type: none"> • Check to see that the PCI/PCI-X card in slot 0 is properly seated. • Move the PCI/PCI-X card in slot 0 to another slot if possible. |

- Refer to the “Before Using Solaris 10” and “Checklists for Installation and Bug Information” in the *Solaris 10 Release and Installation Collection*.

- Refer to the *SPARC Enterprise M4000/M5000 Servers Service Manual* for LED status.

TABLE B-2 Types of Troubleshooting Methods

| Troubleshooting Method | Description |
|----------------------------|--|
| Check LEDs | The system LEDs (on the operator panel) indicate any system or hardware error detected during initial diagnosis or system operation. Additional LEDs are provided on the XSCF Unit, power supply unit, fan unit, and other units so that you can always locate faulty components and identify specific errors. |
| Check log files | System messages are often displayed on the system console. These messages can alert you to system problems, such as a device that is about to fail. |
| Check using the XSCF Shell | You can use the XSCF Shell to find details of an error state, the device status history, and other status information. |

B.2 Using the Diagnostic Commands

The following commands are detailed in this section.

- Section B.2.1, “Using the `showhardconf` Command” on page B-2
- Section B.2.2, “Using the `showlogs` Command” on page B-5
- Section B.2.3, “Using the `showstatus` Command” on page B-6
- Section B.2.4, “Using the `fmddump` Command” on page B-6
- Section B.2.5, “Using the `fmadm faulty` Command” on page B-7
- Section B.2.6, “Using the `fmstat` Command” on page B-8

B.2.1 Using the `showhardconf` Command

The `showhardconf` command displays information about each FRU. The following information is displayed:

- Current configuration and status
- Number of installed FRUs
- Domain information
- IOBOX information
- Name properties of PCI cards

An example of the showhardconf output.

```
XSCF> showhardconf
SPARC Enterprise M5000;
+ Serial:BCF07500B6; Operator_Panel_Switch:Locked;
+ Power_Supply_System:Dual; SCF-ID:XSCF#0;
+ System_Power:On; System_Phase:Cabinet Power On;
Domain#0 Domain_Status:Initialization Phase;
Domain#1 Domain_Status:Initialization Phase;

MBU_B Status:Normal; Ver:0201h; Serial:BC07490823 ;
+ FRU-Part-Number:CF00541-0478 05 /541-0478-05 ;
+ Memory_Size:64 GB;
CPUM#0-CHIP#0 Status:Normal; Ver:0501h; Serial:PP0723016Q ;
+ FRU-Part-Number:CA06761-D204 A0 /LGA-JUPP-01 ;
+ Freq:2.530 GHz; Type:32;
+ Core:4; Strand:2;
:
CPUM#3-CHIP#1 Status:Normal; Ver:0501h; Serial:PP074804E9 ;
+ FRU-Part-Number:CA06761-D204 A0 /LGA-JUPP-01 ;
+ Freq:2.530 GHz; Type:32;
+ Core:4; Strand:2;
MEMB#0 Status:Normal; Ver:0101h; Serial:BF09061G0E ;
+ FRU-Part-Number:CF00541-0545 06 /541-0545-06 ;
MEM#0A Status:Normal;
+ Code:c100000000000005372T128000HR3.7A 356d-0d016912;
+ Type:1A; Size:1 GB;
:
MEM#3B Status:Normal;
+ Code:c100000000000004572T128000HR3.7A 252b-04123424;
+ Type:1A; Size:1 GB;
:
MEMB#7 Status:Normal; Ver:0101h; Serial:BF09061GBA ;
+ FRU-Part-Number:CF00541-0545 06 /541-0545-06 ;
MEM#0A Status:Normal;
+ Code:2cfffffffffffffffff0818HTF12872Y-53EB3 0300-d504600c;
+ Type:1A; Size:1 GB;
:
MEM#3B Status:Normal;
+ Code:7f7ffe00000000004aEBE10RD4AGFA-5C-E 3020-2229c19c;
+ Type:1A; Size:1 GB;
```

showhardconf output continued.

```
DDC_A#0 Status:Normal;
  DDC_A#1 Status:Normal;
  DDC_A#2 Status:Normal;
  DDC_A#3 Status:Normal;
  DDC_B#0 Status:Normal;
  DDC_B#1 Status:Normal;
  IOU#0 Status:Normal; Ver:0101h; Serial:BF07486TEU ;
    + FRU-Part-Number:CF00541-2240 02 /541-2240-02 ;
    + Type 1;
    DDC_A#0 Status:Normal;
    DDCR Status:Normal;
      DDC_B#0 Status:Normal;
  IOU#1 Status:Normal; Ver:0101h; Serial:BF073226HP ;
    + FRU-Part-Number:CF00541-4361 01 /541-4361-01 ;
    + Type 1;
    DDC_A#0 Status:Normal;
    DDCR Status:Normal;
      DDC_B#0 Status:Normal;
  XSCFU Status:Normal,Active; Ver:0101h; Serial:BF07435D98 ;
    + FRU-Part-Number:CF00541-0481 04 /541-0481-04 ;
  OPNL Status:Normal; Ver:0101h; Serial:BF0747690D ;
    + FRU-Part-Number:CF00541-0850 06 /541-0850-06 ;
  PSU#0 Status:Normal; Serial:0017527-0738063762;
    + FRU-Part-Number:CF00300-1898 0350 /300-1898-03-50;
    + Power_Status:Off; AC:200 V;
  PSU#3 Status:Normal; Serial:0017527-0738063767;
    + FRU-Part-Number:CF00300-1898 0350 /300-1898-03-50;
    + Power_Status:Input fail; AC: - ;
  FANBP_C Status:Normal; Ver:0501h; Serial:FF2#24 ;
    + FRU-Part-Number:CF00541-3099 01 /541-3099-01 ;
    FAN_A#0 Status:Normal;
    FAN_A#1 Status:Normal;
    FAN_A#2 Status:Normal;
    FAN_A#3 Status:Normal;
```

Refer to the showhardconf man page for more information.

B.2.2 Using the showlogs Command

The `showlogs` command displays the contents of a specified log in order of timestamp starting with the oldest date. The `showlogs` command displays the following logs:

- error log
- power log
- event log
- temperature and humidity record
- monitoring message log
- console message log
- panic message log
- IPL message log

An example of the `showlogs` output.

```
XSCF> showlogs error
Date: Oct 03 13:53:05 UTC 2006      Code: 40000000-faffc201-011d000100000000
  Status: Information                Occurred: Oct 03 13:53:04.742 UTC 2006
  FRU: ,/XSCFU
  Msg: XSCF process down detected
Date: Oct 03 13:53:05 UTC 2006      Code: 40000000-faffc201-011d000100000000
  Status: Information                Occurred: Oct 03 13:53:05.880 UTC 2006
  FRU: ,/XSCFU
  Msg: XSCF process down detected
Date: Oct 03 14:36:58 UTC 2006      Code: 40000000-faffc201-011d000100000000
  Status: Information                Occurred: Oct 03 14:36:57.777 UTC 2006
  FRU: ,/XSCFU
  Msg: XSCF process down detected
Date: Oct 03 17:23:11 UTC 2006      Code: 80002000-ccff0000-0104340100000000
  Status: Alarm                      Occurred: Oct 03 17:23:10.868 UTC 2006
  FRU: /FAN_A#0
  Msg: Abnormal FAN rotation speed. Insufficient rotation
XSCF>
```

B.2.3 Using the showstatus Command

The showstatus displays the information concerning the server's degraded FRUs. An asterisk (*) which indicates that the unit has been degraded is displayed along with any of the following states:

- Normal
- Faulted
- Degraded
- Deconfigured
- Maintenance

An example of the showstatus output.

```
XSCF> showstatus
      FANBP_C Status:Normal;
*      FAN_A#0 Status:Faulted;
XSCF>
```

B.2.4 Using the fmdump Command

The fmdump command can be used to display the contents of any log files associated with the Oracle Solaris fault manager.

This example assumes there is only one fault.

```
# fmdump
TIME UUID SUNW-MSG-ID
Nov 02 10:04:15.4911 0ee65618-2218-4997-c0dc-b5c410ed8ec2 SUN4-8000-0Y
```

B.2.4.1 fmdump -V Command

You can obtain more detail by using the -V option, as shown in the following example.

```
# fmdump -V -u 0ee65618-2218-4997-c0dc-b5c410ed8ec2
TIME                UUID                SUNW-MSG-ID
Nov 02 10:04:15.4911 0ee65618-2218-4997-c0dc-b5c410ed8ec2 SUN4-8000-0Y
100% fault.io.fire.asic
FRU: hc://product-id=SUNW,A70/motherboard=0
rsrc: hc:///motherboard=0/hostbridge=0/pciexrc=0
```


At least three lines of new output are delivered to the user with the `-v` option:

- The first line is a summary of information you have seen before in the console message but includes the timestamp, the UUID, and the Message-ID.
- The second line is a declaration of the certainty of the diagnosis. In this case you are 100 percent sure the failure is in the asic described. If the diagnosis might involve multiple components you might see two lines here with 50 percent in each (for example)
- The 'FRU' line declares the part which needs to be replaced to return the server to a fully operational state.
- The 'rsrc' line describes which component was taken out of service as a result of this fault.

B.2.4.2 `fmddump -e` Command

To get information of the errors which caused this failure you can use the `-e` option, as shown in the following example.

```
# fmddump -e
TIME                CLASS
Nov 02 10:04:14.3008 ereport.io.fire.jbc.mb_per
```

B.2.5 Using the `fmadm faulty` Command

The `fmadm faulty` command can be used by administrators and service personnel to view and modify system configuration parameters that are maintained by the Oracle Solaris Fault Manager. The `fmadm faulty` command is primarily used to determine the status of a component involved in a fault, as shown in the following example.

```
# fmadm faulty
STATERESOURCE / UUID
-----
degraded dev:///pci@1e,600000
0ee65618-2218-4997-c0dc-b5c410ed8ec2
```

The PCI device is degraded and is associated with the same UUID as seen in the preceding example. You might also see "faulted" states.

B.2.5.1 fmadm config Command

The `fmadm config` command output shows the version numbers of the diagnosis engines in use by your server, as well as their current state. You can check these versions against information on the My Oracle Support website to determine if you are running the latest diagnostic engines.

An example of the `fmadm` output.

```
XSCF> fmadm config
MODULE                VERSION STATUS DESCRIPTION
eft                   1.16  active eft diagnosis engine
event-transport       2.0   active Event Transport Module
faultevent-post       1.0   active Gate Reaction Agent for errhandd
fmd-self-diagnosis    1.0   active Fault Manager Self-Diagnosis
iox_agent             1.0   active IO Box Recovery Agent
reagent               1.1   active Reissue Agent
sysevent-transport    1.0   active SysEvent Transport Agent
syslog-msgs           1.0   active Syslog Messaging Agent
XSCF>
```

B.2.6 Using the fmstat Command

The `fmstat` command can report statistics associated with the Oracle Solaris fault manager. The `fmstat` command shows information about DE performance. In the example below, the `eft` DE (also seen in the console output) has received an event which it accepted. A case is “opened” for that event and a diagnosis is performed to “solve” the cause for the failure.

An example of the `fmstat` output.

```
XSCF> fmstat
module      ev_recv ev_acpt wait  svc_t  %w  %b  open solve  memsz  bufisz
eft         0       0  0.0   0.0   0  0   0    0    3.3M  0
event-transport  0       0  0.0   0.0   0  0   0    0    6.4K  0
faultevent-post  2       0  0.0   8.9   0  0   0    0     0    0
fmd-self-diagnosis 24      24  0.0  352.1  0  0   1    0    24b   0
iox_agent   0       0  0.0   0.0   0  0   0    0     0    0
reagent     0       0  0.0   0.0   0  0   0    0     0    0
sysevent-transport  0       0  0.0  8700.4  0  0   0    0     0    0
syslog-msgs 0       0  0.0   0.0   0  0   0    0    97b   0
XSCF>
```

B.3 Traditional Oracle Solaris Diagnostic Commands

These superuser commands can help you determine if you have issues in your server, in the network, or within another server that you are networking with.

The following commands are detailed in this section.

- Section B.3.1, “Using the `iostat` Command” on page B-9
- Section B.3.2, “Using the `prtdiag` Command” on page B-11
- Section B.3.3, “Using the `prtconf` Command” on page B-14
- Section B.3.4, “Using the `netstat` Command” on page B-16
- Section B.3.5, “Using the `ping` Command” on page B-17
- Section B.3.6, “Using the `ps` Command” on page B-18
- Section B.3.7, “Using the `prstat` Command” on page B-19

Most of these commands are located in the `/usr/bin` or `/usr/sbin` directories.

B.3.1 Using the `iostat` Command

The `iostat` command iteratively reports terminal, drive, and tape I/O activity, as well as CPU utilization.

B.3.1.1 Options

TABLE B-3 describes options for the `iostat` command and how those options can help troubleshoot the server.

TABLE B-3 Options for `iostat`

| Option | Description | How It Can Help |
|-----------------|--|--|
| No option | Reports status of local I/O devices. | Provides a quick three-line output of device status. |
| <code>-c</code> | Reports the percentage of time the system has spent in user mode, in system mode, waiting for I/O, and idling. | Provides a quick report of CPU status. |

TABLE B-3 Options for `iostat` (*Continued*)

| Option | Description | How It Can Help |
|--------|---|---|
| -e | Displays device error summary statistics. The total errors, hard errors, soft errors, and transport errors are displayed. | Provides a short table with accumulated errors. Identifies suspect I/O devices. |
| -E | Displays all device error statistics. | Provides information about devices: manufacturer, model number, serial number, size, and errors. |
| -n | Displays names in descriptive format. | Descriptive format helps identify devices. |
| -x | For each drive, reports extended drive statistics. The output is in tabular form. | Provides rate information, similar to the -e option, . This helps identify poor performance of internal devices and other I/O devices across the network. |

The following example shows output for one `iostat` command.

```
# iostat -En
c0t0d0          Soft Errors: 0 Hard Errors: 0 Transport Errors: 0
Vendor: SEAGATE Product: ST973401LSUN72G Revision: 0556 Serial
No: 0521104T9D
Size: 73.40GB <73400057856 bytes>
Media Error: 0 Device Not Ready: 0 No Device: 0 Recoverable: 0
Illegal Request: 0 Predictive Failure Analysis: 0
c0t1d0          Soft Errors: 0 Hard Errors: 0 Transport Errors: 0
Vendor: SEAGATE Product: ST973401LSUN72G Revision: 0556 Serial
No: 0521104V3V
Size: 73.40GB <73400057856 bytes>
Media Error: 0 Device Not Ready: 0 No Device: 0 Recoverable: 0
Illegal Request: 0 Predictive Failure Analysis: 0
#
```

B.3.2 Using the prtdiag Command

The `prtdiag` command displays configuration and diagnostic information. The diagnostic information identifies any failed component.

The `prtdiag` command is located in the `/usr/platform/platform-name/sbin/` directory.

Note – The `prtdiag` command might indicate a slot number different than that identified elsewhere in this document. This is normal.

B.3.2.1 Options

TABLE B-4 describes options for the `prtdiag` command and how those options can help troubleshooting.

TABLE B-4 Options for `prtdiag`

| Option | Description | How It Can Help |
|-----------|---|--|
| No option | Lists components. | Identifies CPU timing and PCI cards installed. |
| -v | Verbose mode. Displays the time of the most recent AC power failure and the most recent hardware fatal error information. | Provides the same information as no option. Additionally lists fan status, temperatures, ASIC, and PROM revisions. |

The following example shows output for the prtdiag command in verbose mode.

```
# prtdiag -v
System Configuration:  xxxx Server
System clock frequency: 1012 MHz
Memory size: 262144 Megabytes
===== CPUs =====
```

| LSB | CPU Chip | CPU ID | Run MHz | L2\$ MB | CPU Impl. | CPU Mask |
|-----|----------|--------------------------------|---------|---------|-----------|----------|
| 00 | 0 | 0, 1, 2, 3, 4, 5, 6, 7 | 2660 | 11.0 | 7 | 192 |
| 00 | 1 | 8, 9, 10, 11, 12, 13, 14, 15 | 2660 | 11.0 | 7 | 192 |
| 00 | 2 | 16, 17, 18, 19, 20, 21, 22, 23 | 2660 | 11.0 | 7 | 192 |
| 00 | 3 | 24, 25, 26, 27, 28, 29, 30, 31 | 2660 | 11.0 | 7 | 192 |
| 01 | 0 | 32, 33, 34, 35, 36, 37, 38, 39 | 2660 | 11.0 | 7 | 192 |
| 01 | 1 | 40, 41, 42, 43, 44, 45, 46, 47 | 2660 | 11.0 | 7 | 192 |
| 01 | 2 | 48, 49, 50, 51, 52, 53, 54, 55 | 2660 | 11.0 | 7 | 192 |
| 01 | 3 | 56, 57, 58, 59, 60, 61, 62, 63 | 2660 | 11.0 | 7 | 192 |

```
===== Memory Configuration =====
```

| LSB | Memory Group | Available Size | Memory Status | DIMM Size | # of DIMMs | Mirror Mode | Interleave Factor |
|-----|--------------|----------------|---------------|-----------|------------|-------------|-------------------|
| 00 | A | 65536MB | okay | 4096MB | 16 | no | 8-way |
| 00 | B | 65536MB | okay | 4096MB | 16 | no | 8-way |
| 01 | A | 65536MB | okay | 4096MB | 16 | no | 8-way |
| 01 | B | 65536MB | okay | 4096MB | 16 | no | 8-way |

```
===== IO Devices =====
```

| IO LSB | Type | LPID | RvID, DvID, VnID | BDF | Lane/ Frq State | Act, Max | Name |
|--------|------|------|-----------------------------------|---------|-----------------|----------|-----------------------|
| 00 | PCIe | 0 | bc, 8532, 10b5 | 2, 0, 0 | okay 8, | 8 | pci-pciex10b5,8532 |
| NA | | | /pci@0,600000/pci@0 | | | | |
| 00 | PCIe | 0 | bc, 8532, 10b5 | 3, 8, 0 | okay 8, | 8 | pci-pciex10b5,8532 |
| NA | | | /pci@0,600000/pci@0/pci@8 | | | | |
| 00 | PCIe | 0 | bc, 8532, 10b5 | 3, 9, 0 | okay 1, | 8 | pci-pciex10b5,8532 |
| NA | | | /pci@0,600000/pci@0/pci@9 | | | | |
| 00 | PCIx | 0 | 8, 125, 1033 | 4, 0, 0 | okay 100, | 133 | pci-pciexclass,060400 |
| NA | | | /pci@0,600000/pci@0/pci@8/pci@0 | | | | |
| 00 | PCIx | 0 | 8, 125, 1033 | 4, 0, 1 | okay --, | 133 | pci-pciexclass,060400 |
| NA | | | /pci@0,600000/pci@0/pci@8/pci@0,1 | | | | |

prtdiag -v output continued.

| IO | | | | | Lane/Frq | |
|-----------------------------------|--|------------------|------|-------|----------|-----------------------|
| LSB Type | LPID | RvID, DvID, VnID | BDF | State | Act, Max | Name |
| Model | Logical Path | | | | | |
| 00 PCIx 0 | 2, 50, 1000 | 5, 1, 0 | okay | --, | 133 | scsi-pci1000,50 |
| LSI,1064 | /pci@0,600000/pci@0/pci@8/pci@0/scsi@1 | | | | | |
| 00 PCIx 0 | 10, 1648, 14e4 | 5, 2, 0 | okay | --, | 133 | network-pci14e4,1648 |
| NA | /pci@0,600000/pci@0/pci@8/pci@0/network@2 | | | | | |
| 00 PCIx 0 | 10, 1648, 14e4 | 5, 2, 1 | okay | --, | 133 | network-pci14e4,1648 |
| NA | /pci@0,600000/pci@0/pci@8/pci@0/network@2,1 | | | | | |
| 01 PCIe 16 | bc, 8532, 10b5 | 2, 0, 0 | okay | 8, | 8 | pci-pciex10b5,8532 |
| NA | /pci@10,600000/pci@0 | | | | | |
| 01 PCIe 16 | bc, 8532, 10b5 | 3, 8, 0 | okay | 8, | 8 | pci-pciex10b5,8532 |
| NA | /pci@10,600000/pci@0/pci@8 | | | | | |
| 01 PCIe 16 | bc, 8532, 10b5 | 3, 9, 0 | okay | 1, | 8 | pci-pciex10b5,8532 |
| NA | /pci@10,600000/pci@0/pci@9 | | | | | |
| 01 PCIx 16 | 8, 125, 1033 | 4, 0, 0 | okay | 100, | 133 | pci-pciexclass,060400 |
| NA | /pci@10,600000/pci@0/pci@8/pci@0 | | | | | |
| 01 PCIx 16 | 8, 125, 1033 | 4, 0, 1 | okay | --, | 133 | pci-pciexclass,060400 |
| NA | /pci@10,600000/pci@0/pci@8/pci@0,1 | | | | | |
| 01 PCIx 16 | 2, 50, 1000 | 5, 1, 0 | okay | --, | 133 | scsi-pci1000,50 |
| LSI,1064 | /pci@10,600000/pci@0/pci@8/pci@0/scsi@1 | | | | | |
| 01 PCIx 16 | 10, 1648, 14e4 | 5, 2, 0 | okay | --, | 133 | network-pci14e4,1648 |
| NA | /pci@10,600000/pci@0/pci@8/pci@0/network@2 | | | | | |
| 01 PCIx 16 | 10, 1648, 14e4 | 5, 2, 1 | okay | --, | 133 | network-pci14e4,1648 |
| NA | /pci@10,600000/pci@0/pci@8/pci@0/network@2,1 | | | | | |
| ===== Hardware Revisions ===== | | | | | | |
| System PROM revisions: | | | | | | |
| ----- | | | | | | |
| OBP 4.24.13 2010/02/08 13:17 | | | | | | |
| ===== Environmental Status ===== | | | | | | |
| Mode switch is in LOCK mode | | | | | | |
| ===== System Processor Mode ===== | | | | | | |
| SPARC64-VII mode | | | | | | |

B.3.3 Using the `prtconf` Command

Similar to the `show-devs` command run at the `ok` prompt, the `prtconf` command displays the devices that are configured.

The `prtconf` command identifies hardware that is recognized by the Oracle Solaris OS. If hardware is not suspected of being bad yet software applications are having trouble with the hardware, the `prtconf` command can indicate if the Oracle Solaris software recognizes the hardware, and if a driver for the hardware is loaded.

B.3.3.1 Options

[TABLE B-5](#) describes options for the `prtconf` command and how those options can help troubleshooting.

TABLE B-5 Options for `prtconf`

| Option | Description | How It Can Help |
|-----------|--|---|
| No option | Displays the device tree of devices recognized by the OS. | If a hardware device is recognized, then it is probably functioning properly. If the message “(driver not attached)” is displayed for the device or for a sub-device, then the driver for the device is corrupt or missing. |
| -D | Similar to the output of no option, however the device driver is listed. | Lists the driver needed or used by the OS to enable the device. |
| -p | Similar to the output of no option, yet is abbreviated. | Reports a brief list of the devices. |
| -V | Displays the version and date of the OpenBoot PROM firmware. | Provides a quick check of firmware version. |

The following example shows output for the `prtconf` command.

```
# prtconf
System Configuration:  xxxx
Memory size: 1024 Megabytes
System Peripherals (Software Nodes):

SUNW,Sun SPARC
  packages (driver not attached)
    SUNW,builtin-drivers (driver not attached)
    deblocker (driver not attached)
    disk-label (driver not attached)
    terminal-emulator (driver not attached)
    dropins (driver not attached)
    kbd-translator (driver not attached)
    obp-tftp (driver not attached)
    SUNW,i2c-ram-device (driver not attached)
    SUNW,fru-device (driver not attached)
    SUNW,asr (driver not attached)
    ufs-file-system (driver not attached)
  chosen (driver not attached)
  openprom (driver not attached)
    client-services (driver not attached)
  options, instance #0
  aliases (driver not attached)
. . .
```

B.3.4 Using the netstat Command

The `netstat` command displays the network status.

B.3.4.1 Options

TABLE B-6 describes options for the `netstat` command and how those options can help troubleshooting.

TABLE B-6 Options for `netstat`

| Option | Description | How It Can Help |
|--------------------------|---|---|
| <code>-i</code> | Displays the interface state, including packets in/out, error in/out, collisions, and queue. | Provides a quick overview of the network status. |
| <code>-i interval</code> | Providing a trailing number with the <code>-i</code> option repeats the <code>netstat</code> command every <i>interval</i> seconds. | Identifies intermittent or long duration network events. By piping <code>netstat</code> output to a file, overnight activity can be viewed all at once. |
| <code>-p</code> | Displays the media table. | Provides MAC address for hosts on the subnet. |
| <code>-r</code> | Displays the routing table. | Provides routing information. |
| <code>-n</code> | Replaces host names with IP addresses. | Used when an address is more useful than a host name. |

The following example shows output for the `netstat -p` command.

```
# netstat -p
Net to Media Table: IPv4
Device    IP Address          Mask                Flags              Phys Addr
-----
bge0     san-ff1-14-a       255.255.255.255    o                  00:14:4f:3a:93:61
bge0     san-ff2-40-a       255.255.255.255    o                  00:14:4f:3a:93:85
sppp0    224.0.0.22         255.255.255.255
bge0     san-ff2-42-a       255.255.255.255    o                  00:14:4f:3a:93:af
bge0     san09-lab-r01-66   255.255.255.255    o                  00:e0:52:ec:1a:00
sppp0    192.168.1.1        255.255.255.255
bge0     san-ff2-9-b        255.255.255.255    o                  00:03:ba:dc:af:2a
bge0     bizzaro            255.255.255.255    o                  00:03:ba:11:b3:c1
bge0     san-ff2-9-a        255.255.255.255    o                  00:03:ba:dc:af:29
bge0     racerx-b           255.255.255.255    o                  00:0b:5d:dc:08:b0
bge0     224.0.0.0          240.0.0.0          SM                 01:00:5e:00:00:00
#
```

B.3.5 Using the ping Command

The `ping` command sends ICMP ECHO_REQUEST packets to network hosts. Depending on how the `ping` command is configured, the output displayed can identify troublesome network links or nodes. The destination host is specified in the variable *hostname*.

B.3.5.1 Options

TABLE B-7 describes options for the `ping` command and how those options can help troubleshooting.

TABLE B-7 Options for ping

| Option | Description | How It Can Help |
|---------------------------|--|--|
| <i>hostname</i> | The probe packet is sent to <i>hostname</i> and returned. | Verifies that a host is active on the network. |
| <code>-g hostname</code> | Forces the probe packet to route through a specified gateway. | By identifying different routes to the target host, those individual routes can be tested for quality. |
| <code>-i interface</code> | Designates which interface to send and receive the probe packet through. | Enables a simple check of secondary network interfaces. |
| <code>-n</code> | Replaces host names with IP addresses. | Used when an address is more beneficial than a host name. |
| <code>-s</code> | Pings continuously in one-second intervals. Ctrl-C aborts. Upon abort, statistics are displayed. | Helps identify intermittent or long-duration network events. By piping <code>ping</code> output to a file, activity overnight can later be viewed at once. |
| <code>-svR</code> | Displays the route the probe packet followed in one-second intervals. | Indicates probe packet route and number of hops. Comparing multiple routes can identify bottlenecks. |

The following example shows output for the `ping -s` command.

```
# ping -s san-ff2-17-a
PING san-ff2-17-a: 56 data bytes
64 bytes from san-ff2-17-a (10.1.67.31): icmp_seq=0. time=0.427 ms
64 bytes from san-ff2-17-a (10.1.67.31): icmp_seq=1. time=0.194 ms
^C
----san-ff2-17-a PING Statistics----
2 packets transmitted, 2 packets received, 0% packet loss
round-trip (ms)  min/avg/max/stddev = 0.172/0.256/0.427/0.102
#
```

B.3.6 Using the `ps` Command

The `ps` command lists the status of processes. Using options and rearranging the command output can assist in determining the resource allocation.

B.3.6.1 Options

[TABLE B-8](#) describes options for the `ps` command and how those options can help troubleshooting.

TABLE B-8 Options for `ps`

| Option | Description | How It Can Help |
|------------------------|--|---|
| <code>-e</code> | Displays information for every process. | Identifies the process ID and the executable. |
| <code>-f</code> | Generates a full listing. | Provides the following process information: user ID, parent process ID, time when executed, and the path to the executable. |
| <code>-o option</code> | Enables configurable output. The <code>pid</code> , <code>pcpu</code> , <code>pmem</code> , and <code>comm</code> options display process ID, percent CPU consumption, percent memory consumption, and the responsible executable, respectively. | Provides only most important information. Knowing the percentage of resource consumption helps identify processes that are affecting performance and might be hung. |

The following example shows output for one `ps` command.

```
# ps
      PID TTY          TIME CMD
101042 pts/3        0:00 ps
101025 pts/3        0:00 sh
#
```

Note – When using `sort` with the `-r` option, the column headings are printed so that the value in the first column is equal to zero.

B.3.7 Using the `prstat` Command

The `prstat` utility iteratively examines all active processes and reports statistics based on the selected output mode and sort order. The `prstat` command provides output similar to the `ps` command.

B.3.7.1 Options

TABLE B-9 describes options for the `prstat` command and how those options can help troubleshooting.

TABLE B-9 Options for `prstat`

| Option | Description | How It Can Help |
|------------------------|---|---|
| No option | Displays a sorted list of the top processes that are consuming the most CPU resources. List is limited to the height of the terminal window and the total number of processes. Output is automatically updated every five seconds. Ctrl-C aborts. | Output identifies process ID, user ID, memory used, state, CPU consumption, and command name. |
| <code>-n number</code> | Limits output to number of lines. | Limits amount of data displayed and identifies primary resource consumers. |
| <code>-s key</code> | Permits sorting list by key parameter. | Useful keys are <code>cpu</code> (default), <code>time</code> , and <code>size</code> . |
| <code>-v</code> | Verbose mode. | Displays additional parameters. |

The following example shows output for the `prstat` command.

```
# prstat -n 5 -s size
  PID USERNAME  SIZE  RSS STATE  PRI NICE   TIME  CPU PROCESS/NLWP
100463 root         66M   61M sleep   59   0   0:01:03 0.0% fmd/19
100006 root         11M  9392K sleep   59   0   0:00:09 0.0% svc.configd/16
100004 root         10M  8832K sleep   59   0   0:00:04 0.0% svc.startd/14
100061 root        9440K 6624K sleep   59   0   0:00:01 0.0% snmpd/1
100132 root        8616K 5368K sleep   59   0   0:00:04 0.0% nscd/35
Total: 52 processes, 188 lwps, load averages: 0.00, 0.00, 0.00
#
```