

Basic CLI Command Reference

Oracle Integrated Lights Out Manager (ILOM) 3.0

TABLE 1 System Information and Management – CLI Commands

Task	CLI Command
Show system information	<code>show /SYS product_name product_part_number product_serial_number product_manufacturer</code>
Show Oracle ILOM version	<code>version</code>
Show x86 BIOS version	<code>show /SYS/MB/BIOS fru-version</code>
Show SPARC host equivalent	<code>show /HOST sysfw_version</code>
Show network settings	<code>show /SP/network ipaddress ipnetmask ipgateway</code>
Show SP MAC address	<code>show /SP/network macaddress</code>
Show x86 host MAC address	<code>show /SYS/MB/NET0 fru_serial_number</code>
Show SPARC host MAC address	<code>show /HOST macaddress</code>
Turn on the Locator LED	<code>set /SYS/LOCATE value=Fast_Blink</code>
Turn off the Locator LED	<code>set /SYS/LOCATE value=Off</code>

TABLE 2 Host and System Control – CLI Commands

Task	CLI Command
Power on the server	<code>start /SYS</code>
Power off the server	<code>stop [-force] /SYS</code>
Power cycle the server	<code>reset /SYS</code>
Redirect host console stream to Oracle ILOM	<code>start /HOST/console</code>
Force PXE boot on next boot (x86 only)	<code>set /HOST boot_device=pxe</code>
Force boot to CDROM or DVD on the next boot (x86 only)	<code>set /HOST boot_device=cdrom</code>
Enable additional x86 diagnostics on next boot	<code>set /HOST/diag state=enabled</code>
Enable SPARC diagnostic state (default value)	<code>set /SYS keyswitch_state=diag</code>

TABLE 3 Oracle ILOM Initial Setup – CLI Commands

Task	CLI Command
Show network configuration	<code>show /SP/network/</code>
Configure static IPv4 address	<code>set /SP/network pendingipdiscovery=static pendingipaddress=<i>address</i> pendingipnetmask=<i>netmask</i> pendingipgateway=<i>address</i> commitpending=true</code>
Configure static IPv6 address	<code>set /SP/network/ipv6 state=enabled pending_static_ipaddress=<i>ipv6address</i> set /SP/network commitpending=true</code>
Configure Oracle ILOM to use DHCP	<code>set /SP/network pendingipdiscovery=dynamic commitpending=true</code>
Set the Oracle ILOM host name	<code>set /SP hostname=<i>hostname</i></code>
Set the system identifier	<code>set /SP system_identifier=<i>identifier</i></code>
Create user account with all privileges	<code>create /SP/users/<i>newusername</i> role=aucro [password=<i>password</i>]</code>
Create user account with operator privileges	<code>create /SP/users/<i>newusername</i> role=cro [password=<i>password</i>]</code>
Create read-only user account	<code>create /SP/users/<i>newusername</i> role=o [password=<i>password</i>]</code>
Delete user account	<code>delete /SP/users/<i>username</i></code>

TABLE 3 Oracle ILOM Initial Setup – CLI Commands (Continued)

Task	CLI Command
Override DNS servers retrieved from DHCP	set /SP/clients/dns auto_dns=disabled nameserver=nameserver1,nameserver2 searchpath=searchpath1,searchpath2
Set the Oracle ILOM date and time	set /SP/clock datetime=MMDDhhmmYYYY.ss
Configure an NTP server	set /SP/clients/ntp/server/1 address=address set /SP/clock usntpserver=enabled
Change the external serial port speed	set /SP/serial/external pendingspeed=9600 19200 38400 57600 115200 commitpending=true

TABLE 4 System Monitoring and Status – CLI Commands

Task	CLI Command
Show the Oracle ILOM Event Log	show /SP/logs/event/list
Configure an SNMP trap destination	set /SP/alertmgmt/rules/1 type=snmptrap snmp_version=1 destination=ipaddress destination_port=port community_or_username=community
Check the service indicator	show /SYS/SERVICE value
List all hardware faults	show -level all -output table /SP/faultmgmt
List all temperature sensor readings	show -level all -output table /SYS type==Temperature value
Show actual system power consumption	show /SP/VPS value

TABLE 5 System Inventory – CLI Commands

Task	CLI Command
List all DIMMs	show -level all -output table /SYS type==DIMM
List all CPUs	show -level all -output table /SYS type=='Host Processor'
List all power supplies	show -level all -output table /SYS type=='Power Supply' fru_name==*
List all hard disks	show -l all /SYS type=='Hard Disk'

TABLE 6 Oracle ILOM Maintenance – CLI Commands

Task	CLI Command
Update Oracle ILOM firmware	load -source URI /SP/firmware
Reset Oracle ILOM SP	reset /SP

TABLE 7 Oracle ILOM Configuration Management – CLI Commands

Task	CLI Command
Reset Oracle ILOM configuration to factory defaults	set /SP reset_to_defaults=all
Backup Oracle ILOM configuration to a file	dump -destination URI /SP/config
Restore Oracle ILOM configuration from a file	load -source URI /SP/config

Copyright © 2011, Oracle and/or its affiliates. All rights reserved.
 Copyright © 2011, Oracle et/ou ses affiliés. Tous droits réservés.



Part No.: E25241-01
 August 2011