



# **Agile Product Lifecycle Management**

## **Administrator Guide**

v9.2.2.4

Part No. E11924-04

December 2008

# Copyright and Trademarks

*Copyright © 1995, 2008, Oracle and/or its affiliates. All rights reserved.*

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this software or related documentation is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

## U.S. GOVERNMENT RIGHTS

Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle USA, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy and other measures to ensure the safe use of this software. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software in dangerous applications.

Oracle is a registered trademark of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.

This software and documentation may provide access to or information on content, products and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third party content, products and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third party content, products or services.

## CONTENTS

---

Copyright and Trademarks .....	ii
<b>Introduction .....</b>	<b>1</b>
Welcome to Agile PLM Administrator .....	1
Documentation for the Agile PLM Administrator .....	1
Agile Product Lifecycle Management .....	1
Administrative Capabilities .....	2
Administrator Nodes .....	3
Admin Nodes in Java Client .....	3
Example Nodes .....	6
Admin Nodes in Web Client .....	6
Guidelines for Implementing Agile PLM .....	7
What's New in Administrator .....	8
New Features in Administrator for Agile PLM 9.2.2.4 .....	8
New Features in Administrator for Agile PLM 9.2.2.2 .....	10
New Features in Administrator for Agile PLM 9.2.2.1 .....	11
New Features in Administrator for Agile PLM 9.2.2 .....	11
<b>Administrator Basics .....</b>	<b>13</b>
Overview .....	13
Logging in to Agile Clients as an Administrator .....	13
Creating New Administrator Users .....	14
Filtering Data .....	16
Administrator Reports .....	16
Dates and Times in Agile PLM .....	18
...at the Server Level .....	18
...at the Client Level .....	18
Example .....	18
Administrator Utilities in Java Client .....	19
Sending Email to Users .....	19
Global Replace .....	19
Object History .....	21
Administrator Import and Export .....	23

Process Extensions Library .....	25
<b>Administrator Utilities in Web Client .....</b>	<b>26</b>
Report Template.....	26
Managing the Clustered Environment .....	28
Visual Themes.....	34
<b>Agile PLM Variables .....</b>	<b>36</b>
Default Value Variables .....	36
Privilege Mask Criteria Variables.....	37
Workflow Assignment and Status Type Variables.....	38
Routing Manager Variables .....	39
<b>Multiple Language Support .....</b>	<b>39</b>
Administrator Data that is Supported for Multi-Language Capability.....	40
Administrator Data that is Not Supported for Multi-Language Capability .....	42
Configuring a System for Multi-Languages .....	42
<b>Classes .....</b>	<b>45</b>
Configuring Business Objects with Agile PLM Classes .....	45
Agile PLM Class Structure .....	46
Routable and Non-Routable Objects.....	46
Installed Agile PLM Classes, Base Classes, and Subclasses.....	47
Disabling Object Types.....	51
Viewing Agile PLM Classes.....	51
Customizing Lifecycle Phases.....	51
Modifying a Lifecycle Phase .....	52
Adding a Lifecycle Phase .....	52
Removing a Lifecycle Phase .....	53
Configuring Subclasses.....	53
Before You Begin .....	54
Viewing Subclass Properties .....	54
Changing the AutoNumber Source Property .....	55
Preventing Manual Number Assignment .....	55
Changing a Subclass Name or Description.....	56
Changing the Site-Specific BOM Property .....	56
Creating a New Subclass .....	57
Deleting a Subclass.....	57
Configuring Tabs .....	58
About Page Two Tabs .....	58
About Page Three Tabs .....	59
Showing, Hiding, or Renaming a Tab.....	59
Modifying the Format of Tabs.....	59

Modifying Attribute Order on a Form Tab .....	60
Modifying Attribute Order on a Table Tab .....	61
Designing a Page Two or Page Three Tab .....	61
Guidelines for Designing Page Two and Page Three Tabs .....	62
<b>About Attributes, Flex Fields, and Read-Through Fields .....</b>	<b>65</b>
User-Defined Flex Fields .....	66
Read-Through Fields .....	68
<b>Defining Attributes .....</b>	<b>70</b>
Recognizing Attribute Types .....	71
Defining Attribute Properties .....	72
<b>Configuring Attributes .....</b>	<b>77</b>
Display Width Attribute .....	77
Modifying Attributes .....	77
Matching the Properties of Attributes Common to Several Tabs .....	78
Setting Default Values .....	78
Showing or Hiding an Attribute on a Tab .....	79
Editing a Field Label or Table Column Name .....	79
<b>Using Custom Icons for Subclasses or Company Logo .....</b>	<b>80</b>
Replacing the Agile Logo .....	80
<b>Quick Access to Objects and Files .....</b>	<b>81</b>
Agile-Generated Quick Access Object URLs .....	81
Formats for User-Generated Smart Object URLs .....	82
Using Quick Access Object URLs .....	83
<b>Character Sets, Lists, and Process Extensions .....</b>	<b>85</b>
<b>Character Sets .....</b>	<b>85</b>
Creating a Character Set .....	86
Modifying a Character Set .....	86
<b>Lists .....</b>	<b>87</b>
Enhancements to Lists (Rel. 9.2.2.4) .....	87
Routing Manager Lists .....	87
More Kinds of Lists .....	89
Configuring Lists .....	91
Creating Cascading Lists .....	94
<b>Process Extensions .....</b>	<b>94</b>
Using the Process Extension Library .....	95
Assigning Process Extensions to Classes .....	97

Assigning Process Extensions to Workflow Statuses.....	98
<b>Autonumbers.....</b>	<b>99</b>
How Autonumbers Are Used.....	99
Modifying an Autonumber Source .....	99
About Autonumber Sources .....	100
Configuring Autonumber Sources .....	102
Changing an Autonumber's Prefix or Suffix.....	103
Changing Where an Autonumber Source Is Used .....	103
Custom Autonumbers.....	104
Timeout .....	104
Creating a New Autonumber Source .....	104
Before You Begin .....	104
Deleting an Autonumber Source .....	105
<b>Criteria .....</b>	<b>107</b>
About Reusable Criteria .....	107
Exploring Reusable Criteria.....	108
Viewing a Reusable Criteria .....	108
Criteria Windows and Tabs .....	109
Creating a New Criteria .....	109
Modifying an Existing Reusable Criteria .....	111
Using Affected Items Tab Fields in Reusable Criteria.....	111
How Changes Are Matched When Reusable Criteria Specify Affected Items Tab Fields.....	111
Difference Between "Item" and "Part" in Affected Items Names.....	112
More about Affected Items: Adding Approvers and Observers .....	112
Using \$CURRENTREV and \$LATESTREV in Criteria for Items .....	113
About TitleBlock.Rev .....	113
Rules for Using the \$CURRENTREV Variable.....	113
Rules for Using the \$LATESTREV Variable.....	115
Item Relationship Creation Using \$CURRENTREV and \$LATESTREV Criteria .....	116
<b>Workflows .....</b>	<b>117</b>
How Workflows Automate the Change Control Process.....	117
Modifying a Workflow .....	118
Workflow Basics .....	118
Routing Managers .....	118
Other Workflow Basics .....	119
Keep It Simple! .....	120
Default Status-Based Workflows.....	121
Status Types Defined .....	121

<b>Creating New Workflows with Save As .....</b>	<b>123</b>
<b>General Workflow Properties .....</b>	<b>124</b>
General Information Tab .....	124
Workflow Criteria Matching Type.....	125
Status Criteria Matching Type .....	126
<b>Creating and Using Custom Workflows .....</b>	<b>127</b>
Before You Begin .....	128
Guidelines for Creating Workflows .....	129
Creating a New Workflow .....	130
When a New Workflow is Enabled .....	132
Routing to a User Group.....	132
<b>Status Properties Defined .....</b>	<b>133</b>
If No Criteria Apply At Exit, Notify.....	133
Manual Valid Next Status .....	134
AutoPromote .....	134
If AutoPromote Fails, Notify.....	135
Ad Hoc Approvers/Observers.....	136
If Rejected, Set Status To .....	136
If Rejected, Notify .....	137
Reminder Period.....	137
Review Escalation Period.....	137
Comment Required for Actions .....	139
<b>Criteria-Specific Properties Defined .....</b>	<b>139</b>
Approvers and Observers.....	139
Criteria Usage.....	139
Default Change Analyst / Component Engineer .....	140
Notify Upon Entry .....	140
Pass Release Audit .....	141
Exit Required Fields .....	143
<b>Workflow Functionality Testing.....</b>	<b>144</b>
Areas of Workflow Validation.....	144
Quick Tips on Testing.....	145
<b>Migrating Workflows to Production.....</b>	<b>145</b>
Quick Tip on Migrating Workflows .....	145
Workflow Migration Process .....	145
<b>Changing Active Workflows.....</b>	<b>146</b>

Modifying Properties in an Enabled Workflow .....	146
Disabling, Changing, and Reactivating Workflows .....	147
<b>Users and User Groups .....</b>	<b>149</b>
<b>Users .....</b>	<b>149</b>
Adding New Users .....	150
About Usernames .....	151
About Passwords .....	152
LDAP as a Node in Administrator .....	153
Modifying User Properties .....	153
User Properties Defined .....	155
Deleting and Undeleting Users .....	160
<b>Account Policy .....</b>	<b>160</b>
Before You Begin .....	160
Configuring the Account Policy .....	161
<b>User Groups .....</b>	<b>162</b>
Creating a New User Group .....	163
User Group Properties .....	164
Modifying a User Group .....	165
Deleting a User Group .....	166
Undeleting a User Group .....	167
Assigning Escalation Persons to User Groups .....	167
Adding User Groups as Approvers of a Change .....	168
Setting Up User Groups as Partners .....	169
<b>Supplier Groups .....</b>	<b>170</b>
<b>User Monitor .....</b>	<b>171</b>
Refreshing the User Monitor Window .....	172
Terminating a User Session .....	172
<b>Roles .....</b>	<b>173</b>
<b>About Roles .....</b>	<b>173</b>
Roles as Groupings of Privilege Masks .....	175
<b>Viewing Roles .....</b>	<b>176</b>
Viewing the Roles Window .....	176
Viewing a Role .....	177
<b>Guidelines for Working with Roles .....</b>	<b>177</b>
<b>Default Agile PLM Roles .....</b>	<b>178</b>
Example Roles .....	182
Restricted Roles .....	183
Role-based Enhancements in Rel. 9.2.2.4 .....	183
<b>Securing and Maintaining Roles and Privilege Masks .....</b>	<b>184</b>



Recommended Security and Maintenance Plan .....	184
Database Backup Procedures.....	185
<b>Working with Roles.....</b>	<b>186</b>
Modifying a Role.....	186
Building and Testing Attributes, Read/Modify Privileges, and Roles.....	188
Creating a New Role .....	188
Using the Example Roles .....	191
Deleting a Role.....	192
<b>Privileges and Privilege Masks.....</b>	<b>193</b>
About Privileges and Privilege Masks .....	193
Viewing the Privileges Window .....	193
Tasks Performed from the Privileges Window.....	194
Agile PLM Privileges .....	195
Further Discussion of Specific Privileges .....	200
AppliedTo Capability .....	200
Administrator Privilege and the AppliedTo Capability.....	201
Specialized Administrator Privilege Masks.....	202
Dashboard Management.....	203
Project Summary Page Configuration .....	204
Discovery and Read Privileges .....	204
Discovery Privilege.....	204
Relationships among Discovery and Read Privileges.....	206
Field-Level Read Privilege.....	206
Enforce Field-Level Read Privilege .....	207
Modify Privilege .....	209
Some 'Modify' Basics and Rules .....	209
Controlling the Ability to Modify Items at Introductory Revision with \$CURRENTREV .....	210
Other Privileges in Detail.....	213
Add Approver/Observer and Remove Approver/Observer .....	213
Attachment Redlines for Self: Disabled in Rel.9.2.2.2.....	213
Attachment Redlines for Others: Disabled in Rel.9.2.2.2 .....	214
Change Status.....	214
Export.....	215
Full Search Display .....	215
Grant .....	215
Override.....	215

Purge Folder Version Privilege.....	216
Transfer Authority for Self.....	217
Transfer Authority for Others.....	217
Site Change Order Save As Limitations.....	217
Subscribe .....	218
<b>Privilege Mask Components.....</b>	<b>218</b>
All Privilege Masks have a Privilege, Object Type, and Criteria.....	218
Privilege Mask Component 1: Privileges.....	220
Privilege Mask Component 2: Object Type.....	220
Privilege Mask Component 3: Criteria.....	222
Privilege Mask Component 4: Attributes .....	222
<b>Viewing Privilege Masks.....</b>	<b>223</b>
Viewing Privilege Mask Properties.....	224
Using Privilege Mask Criteria Variables .....	225
Combining Options in Criteria and AppliedTo Attributes.....	226
<b>Modifying Privilege Masks.....</b>	<b>227</b>
Modifying Privilege Mask Criteria .....	228
Modifying the AppliedTo Property .....	228
Applying Create User Criteria.....	229
<b>Enabling a Privilege Mask.....</b>	<b>230</b>
<b>Creating New Privilege Masks .....</b>	<b>230</b>
Before You Begin .....	230
Creating a New Privilege Mask from Scratch.....	231
Copying a Privilege Mask Using Save As .....	232
<b>General System Settings.....</b>	<b>233</b>
<b>SmartRules.....</b>	<b>233</b>
Modifying SmartRules Settings .....	233
SmartRules Defined .....	234
<b>Viewer and Files.....</b>	<b>244</b>
Options for Purging and Retaining Files.....	245
Printing Banners and Watermarks.....	249
<b>Notifications.....</b>	<b>252</b>
Editing a Notification.....	253
Entering Subject and Body Text.....	253
<b>Full Text Search .....</b>	<b>254</b>
Full Text Search Limitations .....	254
Full Text Search Properties.....	255
Indexing Attachment Files .....	256
<b>My Assignments .....</b>	<b>257</b>

<b>Unit of Measure (UOM)</b> .....	<b>258</b>
Creating Categories of Measure and Units of Measure .....	258
<b>Company Profile</b> .....	<b>259</b>
<b>Currency Exchange Rates</b> .....	<b>259</b>
<b>Dashboard Management</b> .....	<b>260</b>
View Dashboard Tabs .....	261
Adding Dashboard Tabs .....	261
Deleting Dashboard Tabs .....	261
Adding Tables to Optional Tabs .....	261
Adding Charts to Optional Tabs .....	262
Adding Custom (URL) Process Extensions for Optional Tables .....	264
Reordering Table Rows in a Tab .....	265
Displaying Optional Tabs .....	265
<b>General Server Settings</b> .....	<b>267</b>
<b>Locations</b> .....	<b>267</b>
Configuring Web Client Notification .....	267
Configuring Java Client Notification .....	268
Specifying the Location of Agile Portals .....	268
<b>File Management in Agile PLM</b> .....	<b>269</b>
Agile File Management Server .....	269
Distributed File Management .....	269
File Management Security .....	270
Configuring a File Manager .....	272
Setting the Preferred File Manager for a User .....	275
Purging Older Versions of Files .....	276
<b>Database</b> .....	<b>276</b>
<b>LDAP</b> .....	<b>278</b>
Configuring BEA WebLogic Server for LDAP with Agile PLM .....	278
Creating Users in an LDAP Directory .....	280
Enhanced LDAP .....	280
Synchronizing LDAP and Agile PLM .....	281
LDAP-controlled User Properties .....	281
Agile LDAP Configuration .....	282
<b>Preferences</b> .....	<b>284</b>
Details of some Preferences .....	289
<b>Licenses</b> .....	<b>291</b>

General Info Tab .....	291
Modules Tab.....	292
Task Monitor.....	293
Task Configuration .....	294
<b>Configuring Product Collaboration .....</b>	<b>297</b>
Reference Designator Preferences.....	297
Reference Designators Allow Range Expand Collapse .....	298
Reference Designator Range Indicator .....	298
Reference Designators with Leading Zeros .....	299
Multi-segmented Reference Designators .....	299
Revising Item Descriptions.....	300
Setting up the Change Order Object .....	301
Setting up the Appropriate Modify Privilege Masks for each Method .....	301
Notes on Configuring Product Collaboration Object Tabs .....	305
Notes on Configuring Agile PLM Settings that Affect Product Collaboration .....	305
Configuring Sites – Distributed Manufacturing.....	306
<b>Administering Attachments .....</b>	<b>309</b>
Evaluating Your Company's Needs with Attachments or Designs.....	309
Administrator Settings Related to Attachments.....	309
File Management in Agile PLM.....	310
SmartRules.....	310
Preferences .....	311
Assign Roles and Privileges.....	314
Attachment Privileges.....	315
Markup Subclass.....	318
Redline Markup Default Roles and Privileges .....	319
Document Management Enhancements in Rel. 9.2.2.4 .....	321
Version Browser .....	321
Limit Attachment Size.....	321
Identify Checkin User .....	322
URLs can be up to 255 characters.....	322
Generating Attachment Quick Access URLs .....	322
Agile-Generated Attachment Quick Access URLs .....	322
User-Generated Attachment Quick Access Smart URL Formats.....	323
Accessing Attachment Files using Quick Access URLs.....	326
<b>Administering Designs .....</b>	<b>327</b>
Evaluating Your Company's Needs with Designs .....	327
Purpose of Design Data Model .....	327

Benefits of Designing Structures using the Designs Class.....	328
<b>Designs Class Overview .....</b>	<b>328</b>
Version Browser .....	329
<b>Designs Class Tabs .....</b>	<b>329</b>
Title Block Tab.....	329
Files Tab.....	330
Structures Tab.....	331
Routing Slip Tab.....	331
Where Used Tab .....	331
<b>Administrator Settings Related to Designs.....</b>	<b>331</b>
Display Structure Tables SmartRule .....	331
Design-specific Role & Privilege.....	332
<b>Configuring Product Cost Management .....</b>	<b>333</b>
Product Cost Management Configuration Checklist .....	333
Ship To Location.....	334
Product Cost Management Roles .....	335
RFQ Terms and Conditions.....	335
Configuring the RFQ Terms and Conditions Node.....	336
Setting and Storing the RFQ Terms & Conditions Content .....	336
Making the Attribute visible in Sourcing Project class .....	337
Making the Attribute Visible in Requests for Quote class.....	337
Bid Decision attribute in RFQ Responses .....	337
Adding criteria to Modify My Sourcing Project privilege .....	338
Adding Criteria to Read RFQs Privilege in Sourcing Project Manager Role .....	338
Adding Criteria to Read Privilege .....	338
<b>Configuring Product Cost Management Classes .....</b>	<b>339</b>
Disabling Flex Fields .....	339
Tips for Configuring Flex Fields.....	340
Pulling Data from Item Master Flex Fields into Sourcing Projects.....	340
Pushing Price Flex Fields from Sourcing Projects into the Item Master.....	346
Price Adders .....	347
Pushing Response Flex Fields from Project-Analysis into Published Prices & Quote Histories .....	349
<b>Configuring BOM Filters .....</b>	<b>353</b>
Setting up Names of BOM Filters.....	354

<b>Configuring Product Portfolio Management .....</b>	<b>357</b>
PPM-specific Privileges.....	357
Create from Template Privilege.....	357
Microsoft Project Privilege.....	357
Update All Timesheets Privilege.....	358
Adding Program Contents in Modify Privilege.....	358
Enabling Assign Action in User Groups .....	359
Configuring Project Summary Display.....	359
Configuring Timesheet Display .....	360
Status Nodes .....	360
Changing the Status Names the End User Sees .....	360
Modifying Status Node Settings .....	361
Schedule Status .....	361
Cost Status.....	363
Quality Status .....	364
Resource Status.....	364
Automatic Installation from PPM SmartRule .....	364
Default Roles Assigned Automatically to Agile PPM Users .....	365
How the Lists of Available Agile PPM Roles are Determined.....	366
UI Configuration Data .....	366
Accessing Gantt Charts.....	368
Modify Privilege Mask Applied To Properties that Control Specific User Actions.....	368
Notes about Privileges for Gantt Chart and Microsoft Project .....	372
Delete Object Privileges for Gantt Chart and Microsoft Project.....	373
Setting Up Restricted Delete Privileges .....	373
Settings Required for Menu Command: Actions > Change to Canceled.....	374
Variances Displayed in the General Info Tab Summary Table .....	374
Object Classes for Deliverables .....	376
Enabling the Calculate Attributes .....	377
Support for Microsoft Project Integration.....	378
Transferring Microsoft Project Work Values to Agile PPM as Days Effort.....	379
Using Custom Agile PPM Subclasses in Microsoft Project 2002 and 2003.....	379
Microsoft Project/Agile PPM Integration: MSPSyncMapping.properties File .....	380
<b>Configuring Agile Content Service .....</b>	<b>383</b>
About Agile Content Service .....	383
How Agile Content Service Works .....	383
Setting Up Agile Content Service.....	384
Workflows for Transfer Orders .....	386
Default ATOs Workflow .....	386

Default CTOs Workflow .....	386
<b>Tracking Published Data .....</b>	<b>387</b>
<b>Setting and Editing Destinations .....</b>	<b>387</b>
Agile Destinations.....	387
FTP Destinations.....	389
File Destinations.....	390
HTTP and HTTPS Destinations.....	391
JMS Destinations.....	393
Editing Destinations.....	395
Resetting Destinations .....	396
Deleting Destinations .....	396
<b>Setting and Editing Events .....</b>	<b>397</b>
Scheduled Events.....	397
Workflow Events.....	398
Editing Events .....	398
Deleting Events .....	399
<b>Setting and Editing Filters .....</b>	<b>399</b>
Editing Filters.....	402
Deleting Filters.....	403
<b>Setting and Editing Subscribers .....</b>	<b>403</b>
Validating Subscribers.....	405
Enabling and Disabling Subscribers.....	405
Deleting Subscribers .....	405
<b>Setting and Editing Package Services .....</b>	<b>406</b>
Editing Package Services.....	407
<b>Setting and Editing Response Services .....</b>	<b>408</b>
Editing Response Services.....	409
Deleting Response Services .....	409
<b>Responses and Process Extensions.....</b>	<b>410</b>
<b>Settings Required for Agile-To-Agile Publishing .....</b>	<b>410</b>
Verifying Agile-to-Agile Publishing.....	413
<b>Security Considerations .....</b>	<b>415</b>
Content Transfer Order Originator Field.....	415
Using Agile PLM Roles to Define Destination-Specific Content in Automated Transfer Orders .....	416
<b>Configuring Product Governance &amp; Compliance.....</b>	<b>417</b>
Configuring Agile PG&C .....	417

Added to Agile PG&C Rel. 9.2.2.4.....	418
Added to Agile PG&C Rel. 9.2.2.2.....	419
Added to PG&C in PLM Release 9.2.2.1.....	419
Added to PG&C in PLM Release 9.2.2.....	419
<b>Checklists for Configuring the PG&amp;C Solution .....</b>	<b>420</b>
PG&C "infrastructure" .....	420
PG&C-specific Nodes.....	420
PG&C-specific Classes .....	420
PG&C Users and Workflow .....	421
Suppliers .....	422
<b>Declarations Classes in Brief .....</b>	<b>422</b>
<b>Integrated Components for PG&amp;C .....</b>	<b>423</b>
ComplianceRollup.log in Log.xml File .....	423
Ensure that the Microsoft Excel-based Client has been properly Installed .....	424
Configure Process Extensions for PG&C.....	425
Configuring the Substances and Weights Rollups in Excel Integration.....	426
<b>Administrator Nodes for PG&amp;C-specific Settings .....</b>	<b>427</b>
Setting Unit Of Measure (UOM) .....	427
Setting Your Signoff Message.....	427
Scheduling Compliance Rollups.....	427
Setting Compliance Rollup Rules.....	428
Mass Disclosure – Full, Partial, and No Disclosure – and Unreported Substances .....	430
Renaming Compliance States .....	430
Supplier Declaration Process Extensions.....	431
Specification Mapping .....	432
<b>Configuring the PG&amp;C Classes .....</b>	<b>433</b>
Overall Compliance / Summary Compliance in PG&C Business Objects.....	434
Items and Manufacturer Parts: Substances and Weights Rollups and the Child Level Attribute .....	434
Specifications: Adding Exemptions .....	435
Declarations: Length of Declaration Name.....	435
Items: Need Compliance Check Attribute Removed .....	435
Parts and Part Groups: Elapsed Time since Last Rollup Attribute Added.....	435
Items and Manufacturer Parts: Inactivating and Re-activating Compositions .....	435
Parts and Part Groups: Composition Type.....	436
Items and Mfr. Parts: Importing Compositions and Substances.....	437
Parts and Part Groups: Mapping Feature.....	437
Part Groups: Configuring Part Families.....	439
<b>Defining PG&amp;C Users – Roles and Privileges in PG&amp;C.....</b>	<b>440</b>
Adding Users to Compliance Manager Lists and Compliance Searches .....	441
Supplier Read Items Privilege .....	441



Using the Declarations Workflow in RFIs .....	442
Deploying Custom Workflows in PG&C.....	442
Declaration Notifications.....	443
<b>Configuring Single Sign-On.....</b>	<b>445</b>
Overview of Single Sign-On in PLM.....	445
Configuring and Deploying SSO with Windows NTLM .....	446
SSO NTLM Authentication .....	446
Configure SSO for Windows NTLM.....	447
Deploy NTLM.....	448
<b>Changes to PG&amp;C Objects, Roles, and Privileges in an Upgraded Database .....</b>	<b>451</b>
Upgrading PG&C Business Objects, Roles, and Privilege Masks .....	451
Attributes to be Added to PG&C Classes (Rel. 9.2.2.4).....	451
Upgrading PG&C (Rel. 9.2.2).....	452
Compliance Migration Task and Mass Tolerance Percentage.....	452
Attributes to be Added to PG&C Business Objects (Rel. 9.2.2).....	454
Substances > General Info tab.....	454
Default Read / Modify Privileges .....	455
Upgrading PG&C (Rel. 9.2.1.3).....	456
Attributes to be Added to PG&C Business Objects (Rel. 9.2.1).....	456
Declarations – Cover Page.....	456
Privilege Masks to be Added to Compliance Manager Role (Rel. 9.2) .....	457
Attributes to be Added to Read Privilege Masks, by Base Class (Rel. 9.2).....	457
Substances.....	458
Attributes to be Added to Modify Privilege Masks, by Base Class (Rel. 9.2).....	464
Modify Declarations.....	464

# Preface

The Agile PLM documentation set includes Adobe® Acrobat PDF files. The [Oracle Technology Network \(OTN\) Web site](http://www.oracle.com/technology/documentation/agile.html) <http://www.oracle.com/technology/documentation/agile.html> contains the latest versions of the Agile PLM PDF files. You can view or download these manuals from the Web site, or you can ask your Agile administrator if there is an Agile PLM Documentation folder available on your network from which you can access the Agile PLM documentation (PDF) files.

---

**Note** To read the PDF files, you must use the free Adobe Acrobat Reader version 7.0 or later. This program can be downloaded from the [Adobe Web site](http://www.adobe.com) <http://www.adobe.com>.

---

The [Oracle Technology Network \(OTN\) Web site](http://www.oracle.com/technology/documentation/agile.html) <http://www.oracle.com/technology/documentation/agile.html> can be accessed through Help > Manuals in both Agile Web Client and Agile Java Client. If you need additional assistance or information, please contact [support](http://www.oracle.com/agile/support.html) <http://www.oracle.com/agile/support.html> (<http://www.oracle.com/agile/support.html>) for assistance.

---

**Note** Before calling Agile Support about a problem with an Agile PLM manual, please have the full part number, which is located on the title page.

---

## TTY Access to Oracle Support Services

Oracle provides dedicated Text Telephone (TTY) access to Oracle Support Services within the United States of America 24 hours a day, 7 days a week. For TTY support, call 800.446.2398. Outside the United States, call +1.407.458.2479.

## Readme

Any last-minute information about Agile PLM can be found in the Readme file on the [Oracle Technology Network \(OTN\) Web site](http://www.oracle.com/technology/documentation/agile.html) <http://www.oracle.com/technology/documentation/agile.html>

## Agile Training Aids

Go to the [Oracle University Web page](http://www.oracle.com/education/chooser/selectcountry_new.html) [http://www.oracle.com/education/chooser/selectcountry\\_new.html](http://www.oracle.com/education/chooser/selectcountry_new.html) for more information on Agile Training offerings.

## Accessibility of Code Examples in Documentation

Screen readers may not always correctly read the code examples in this document. The conventions for writing code require that closing braces should appear on an otherwise empty line; however, some screen readers may not always read a line of text that consists solely of a bracket or brace.

## Accessibility of Links to External Web Sites in Documentation

This documentation may contain links to Web sites of other companies or organizations that Oracle does not own or control. Oracle neither evaluates nor makes any representations regarding the accessibility of these Web sites.



## Introduction

**This chapter includes the following:**

---

▪ Welcome to Agile PLM Administrator .....	1
▪ Agile Product Lifecycle Management .....	1
▪ Administrative Capabilities.....	2
▪ Administrator Nodes .....	3
▪ Guidelines for Implementing Agile PLM.....	7
▪ What's New in Administrator .....	8

## Welcome to Agile PLM Administrator

Welcome to the Oracle|*Agile PLM Administrator Guide* for Oracle|Agile PLM (hereafter Agile PLM or Agile). This manual is a complete resource for setting up users and business objects in the Agile PLM system.

## Documentation for the Agile PLM Administrator

The Agile PLM documentation set is found at this Web site:

<http://www.oracle.com/technology/documentation/agile.html>.

Agile PLM administrators use Java Client to set up and manage the system. Therefore, before reading *Agile PLM Administrator Guide*, you might read *Getting Started with Agile PLM* Chapter 2, “Navigating in Agile Java Client.” Some administration tasks can be done using Web Client, for example, creating users. Someone assigned to “user administrator” tasks can refer to *Getting Started with Agile PLM* Chapter 3, “Navigating in Agile Web Client.”

*Getting Started with Agile PLM* is also useful to Agile administrator to become familiar with:

- The user interfaces and operation of Agile PLM clients;
- Terminology and concepts used in Agile PLM solutions;
- General features such as searches, workflows, reports, and attachments (that is, file management).

---

**Note** All Agile PLM documentation is available to you when you choose Help > Manuals in Java Client.

---

## Agile Product Lifecycle Management

The Agile Product Lifecycle Management (PLM) suite provides the following product solutions:

- Agile Product Collaboration (PC) — management and collaboration of product record information

throughout the product lifecycle, across internal organizations and the extended supply chain. Accessed through Java and Web Clients.

- Agile Product Portfolio Management (PPM) — integration of program and product information, streamlining business processes across the product lifecycle and across a portfolio of programs. Accessed through Web Client only.
- Agile Product Quality Management (PQM) — integration of customer, product, quality, and regulatory information with a closed-loop corrective action system. (Formerly Product Service & Improvement.) Accessed through Java and Web Clients.
- Agile Product Cost Management (PCM) — management of product costs across the product lifecycle and synchronization of product cost data and processes. Accessed through Web Client only. Configured in Java Client.
- Agile Product Governance & Compliance (PG&C) — management and tracking all the substances and materials contained by any item or manufacturer part, allowing companies to meet substance restrictions and reporting requirements, design recyclable products, minimize compliance costs, and eliminate noncompliance on future products. Accessed through Web Client only.

To understand how each of the Agile PLM solutions work, you may need to read other manuals in the Agile PLM documentation set. There are separate manuals for each product solution listed above.

## Administrative Capabilities

The administrative features in Agile's Java Client help you configure and adapt Agile PLM to fit the way you already do business. Administrator nodes let you manage users and tailor aspects of Agile PLM to meet your company's requirements.

- Users, user groups, roles and privileges are all “reusable objects,” enabling you to easily manage user accounts, such as in the following tasks:
  - Add and remove users, or set users as inactive
  - Assign users to user groups, which consolidates previous use of departments and groups
  - Assign users to roles, and customize roles for individual users
  - Enable users to grant temporary privilege access to specified objects for other users
- Create one or more user administrators to assist in managing user accounts
- Establish a systemwide account policy for password aging, length, rules, lockout, and uniqueness
- Configure systemwide business rules that govern how the Agile PLM system responds to certain user actions
- Configure and assign AutoNumber sources
- Create workflows to route changes, each with their own set of statuses and settings, and each status with its own set of approvers, observers, and required fields
- Create subclasses of existing Agile PLM classes to create new types of objects

- Create tabs with new fields—including numeric fields and money fields—for Agile PLM classes and subclasses
- Generate reports of Agile PLM users, objects, and administrative data.

## Administrator Nodes

This manual provides information about administrative capabilities of Agile PLM clients. It is designed to be used as a reference in your everyday work. It generally follows the organization of the nodes under the Admin tab in Java Client. Most of this manual documents Administrator nodes in Java Client. Administration functions that are available only in Web Client are detailed in [Administrator Utilities in Web Client](#) (on page 26).

### Admin Nodes in Java Client

The following table lists Agile PLM Administrator nodes found in Java Client. Your company may not have purchased all the business solutions contained in Agile PLM. In that case, some nodes are not visible.

Node	Description
<b>Data Settings</b>	
Classes	Define and manage business objects and their attributes, flex fields, and other properties
Character Sets	Configure lists of valid characters that are used to manage the text attributes
Lists	Manage lists that are used across multiple classes; also contains dynamic lists of objects such as users and items
Process Extensions	Extends the functionality of the Agile PLM system by defining custom actions to create user-driven and workflow-triggered custom actions, custom tools accessible through Agile PLM clients, custom autonumbering, and custom reports.
Autonumbers	Configure the number sources used in the automatic numbering of objects in Agile PLM
Criteria	Define criteria objects that are used in search conditions, privilege masks, and workflow settings
<b>Workflow Settings</b>	
Workflows	Configure, modify, and create workflows to track the progress of changes in your change control process
<b>User Settings</b>	
Account Policy	Set up systemwide rules for password age, length, and uniqueness

Node	Description
Users	Add new Agile PLM users to the system and modify properties for existing users, such as passwords, usernames, role and user group assignments, and more
User Groups	Define user groups and assign users to them
Supplier Groups	Select suppliers during the RFQ process; the administrator sets up global supplier groups that can be leveraged by users with appropriate roles
Roles	Define default and custom roles that control which actions groups and individual users can perform in Agile PLM
Privileges	Define privileges and privilege masks, which are assembled into user roles
User Monitor	View which users are presently logged in and terminate user sessions
Deleted Users	If needed, undelete a deleted user; the list of deleted users is maintained to provide a complete audit trail
Deleted User Groups	If needed, undelete a deleted user group; the list of deleted user groups is maintained to provide a complete audit trail
<b>System Settings</b>	
SmartRules	Manage the rules that make your change control process consistent
Viewers and Files	Define preferences for files attached to Agile PLM objects, and define viewer settings and banners and watermarks for redlines and attachments
Notifications	Customize templates for notification addressing and content
Full Text Search	Manage the indexing of attachment files
My Assignments	Configures what your users see when they click the My Assignments tab in Web Client's home page
UOM	Manage the units of measure
Company Profile	Stores useful information about the company
Currency Exchange Rates	Manage the Currency Exchange Rates table for in-system currency conversion
Dashboard Management	Enable or disable and rename the tabs of the Dashboard
<b>Product Cost Management — PCM nodes are documented in Chapter 16, "Product Cost Management Settings"</b>	
Ship-to Locations	Data that is factored in defining prices in RFQs
RFQ Terms and Conditions	Limit suppliers' access to an RFQ until they electronically agree to RFQ terms and conditions
<b>Product Portfolio Management — PPM nodes are documented in Chapter 17, "Product Portfolio Management Settings"</b>	



Node	Description
Status Nodes: Cost, Quality, Resource, Schedule	Reports whether a project's targets in the areas of cost, quality, resources, and schedule are currently being met, currently not being met, or are seriously off target
Default Role	Specifies which roles are assigned automatically to users when a task is delegated to them or when a Microsoft Project, along with its users and roles, is published to Agile PLM.
UI Configuration Data	Configures the pop-up windows on the Program Summary page and Content tab.
<b>Agile Content Service — ACS nodes are documented in Chapter 18, “Agile Content Service Settings”</b>	
Subscribers	Create profiles specifying all details of transfer orders
Destinations	Define where the output files of transfer orders will be sent
Events	Define when transfer orders are to be triggered
Filters	Define what content is included in a transfer order
Package Services	Configure the target Agile PLM system for Web services to facilitate Agile-to-Agile communication; these filters are also used for the Agile PLM Export wizard.
Response Services	An acknowledgment from the remote recipient of data
<b>Product Governance and Compliance — PG&amp;C nodes are documented in Chapter 19, “Product Governance &amp; Compliance Settings.”</b>	
Signoff Message	Define message that the information supplier must agree to and sign off when submitting the declaration back to the buyer/customer
Compliance Rollup Scheduling	Define how often the system runs a scheduled rollup, and start time
Compliance Rollup Rule Setting	Control elements of suppliers' responses on declarations as they potentially impact the results of compliance rollups
Supplier Declaration Process Extensions	Set which process extensions are visible in each type of declaration request that your information suppliers receive. <b>Note:</b> process extensions themselves are not defined in this node folder.
<b>Server Settings</b>	
Locations	Define Agile Application Server, File Manager, and Portal locations
Database	Set systemwide preferences for the database
LDAP	Configure a Lightweight Directory Access Protocol system and dedicated LDAP server to create user accounts
Preferences	Set systemwide preferences for your Agile PLM system
Licenses	Server licenses pertain to products; user licenses pertain to individual users of Java and Web Clients
Task Monitor	Manage and track the progress of certain scheduled tasks

Node	Description
Task Configuration	Manage various scheduled activities such as reports and full text search indexing
Example Nodes	
Example Roles	Read-only copies of all default roles
Example Privileges	Read-only copies of all default privileges
Example Criteria	Read-only copies of all default criteria

## Example Nodes

Example nodes are read-only nodes that provide a backup of default Agile PLM roles, privilege masks, and reusable criteria. The examples cannot be enabled, but they can be used to restore default functionality to the system. For example, if you modified one of the default roles and find that it's not functioning properly, then you can restore the original role by saving the example.

### To save an example node as an active node:

1. Under Examples, double-click Example Roles, Example Privileges, or Example Criteria.
2. Use the filter bar to display the example you want to save.
3. Double-click an example to open it.
4. Click the Save As button. The Save As dialog box opens.
5. Type the new name, and Click OK.

### To export an example node:

1. Under Examples, double-click Example Roles, Example Privileges, or Example Criteria.
2. Use the filter bar to display the example you want to export.
3. Select an example and click the Export button.
4. Type the name of the file, and click Save.

---

Note	You can import the exported file into another Agile PLM system. When you import the example, it becomes an active role, privilege mask, or reusable criteria. For more information about importing administrative data, see <a href="#">Administrator Import</a> (on page 25).
------	--

---

## Admin Nodes in Web Client

The following table lists Agile PLM Administrator nodes found in Web Client. Your company may not have purchased all the business solutions contained in Agile PLM. In that case, some nodes are not visible.

Providing a user has been assigned the Administrator or User Administrator privileges, you or

assisting “user administrators” can perform limited administrator actions in Web Client.

Click Tools > Administration to see the following “folders” and nodes:

Node	Description
User Management – the Users nodes are discussed in <a href="#">Users and User Groups</a> on page 149	
Users	Add new Agile PLM users to the system and modify properties for existing users, such as passwords, usernames, role and user group assignments, and more
User Groups	Define user groups and assign users to them
Supplier Groups	Select suppliers during the RFQ process; the administrator sets up global supplier groups that can be leveraged by users with appropriate roles
Deleted Users	If needed, undelete a deleted user; the list of deleted users is maintained to provide a complete audit trail
Deleted User Groups	If needed, undelete a deleted user group; the list of deleted user groups is maintained to provide a complete audit trail
Web Client Configuration	
Dashboard Management	Configure the PLM Dashboard – see <a href="#">Dashboard Management</a> (on page 203)
Project Summary Configuration	Configure Summary page layout and widgets – see <a href="#">Project Summary Page Configuration</a> (on page 204)
Visual Themes	Configure the display of the Web Client user interface for all users, including the definition of colors, font style and size – see <a href="#">Visual Themes</a> (on page 34)
Template Management	
Report Template - Create and manage report templates – see <a href="#">Report Template</a> (on page 26)	
Server Settings	
Cluster – see <a href="#">Cluster</a> (on page 28)	
Troubleshooting	
Cache Health Monitor	Ensure that all changes to Administrator data is properly replicated across the cluster – see <a href="#">Cache Health Monitor</a> (on page 29)
Logging Configuration	View and configure the loggers within Application – see <a href="#">Logging Configuration</a> on page 33

## Guidelines for Implementing Agile PLM

If you are setting up a new Agile PLM system, you may configure PLM by following the sequence of Administrator nodes in the previous tables. You won't necessarily set up *everything* in each node in this order, and it is useful to become familiar with all the nodes in Administrator before beginning to

configure your company's business objects, users, and systemwide settings.

The “tree” of node folders and nodes is only a suggested starting point, not a comprehensive or certified sequence. Should you begin to configure Agile PLM for your company and find that the process is more extensive than first understood, please contact Oracle Consulting – Agile Practice or your Oracle | Agile sales representative.

Depending on –

- how many Agile solutions to configure (there are several “solution-specific” nodes under System Settings, but configuring the solutions for users is a process that goes beyond the settings),
- how many Agile Users to be created, including their Roles and Privileges, and
- how complex your company's manufacturing processes are (reflected in such nodes as Classes, AutoNumbers, Workflows, Locations),

it can take one to several weeks to configure Agile PLM to be production-ready. Thorough testing before going live with Agile PLM is also strongly recommended.

**Important** You can enlist Oracle Consulting – Agile Practice to install and set up Agile PLM for your company.

## What's New in Administrator

### New Features in Administrator for Agile PLM 9.2.2.4

There are a significant number of new features and enhancements to PLM Administration in Release 9.2.2.4, both in Java Client and Web Client, as follows:

#### Java Client Administrator

- Licenses – the Licenses configuration now lets you turn off non-licensed classes and other metadata (see [Licenses](#) on page 291). Another notable change in Oracle | Agile PLM licensing is the removal of Agile's "Server Licenses". An Oracle "license key" was obtained (at <http://licensecodes.oracle.com/agile.html#PLM>) and was input at install time.

**Important** Before considering use of the Sites license, please read the information in [Configuring Sites - Distributed Manufacturing](#) on page 306.

- Designs class for CAD design structures – a new class in the File Folders base class is Designs class, with a new Structure tab. This manual documents the administrator's part in configuring the Designs class in [Administering Designs](#) on page 327. Note that Designs are documented for the end-user in *Getting Started with Agile PLM*.
  - new Role for the designs/model structures solution: Design Engineer
  - new SmartRule for the designs/model structures solution: Display Structure Tables
- LDAP GUI – the XML configuration for LDAP has been enhanced by a GUI (see [LDAP Configuration](#) on page 282)
- Single Sign-On capability – you can integrate aspects of your PLM system with Single Sign-On (SSO) capability. With SSO configured and deployed for your PLM system, a user that has

signed in to the system once (for instance, through the corporate portal) is not prompted again by a "login" dialog (see Appendix A, [Single Sign-On and PLM 9.2.2.4](#) on page 445)

- Role-based security enhancements:
  - User Administrator enhancements – a new User Administrator privilege makes it easier to assign role-specific granularity to your assistant administrators (often called "User Admins"; the improvements are detailed in [Creating New Administrator Users](#) on page 14 and [User Administrator Enhancement](#) on page 183 and [Options for Assisting and User Administrators](#) (on page 202))
  - "Save Import Preference Setting" is a new Choice in the Administrator-specific AppliedTo property, which enables you or an assistant administrator to set default preferences in the PLM Import utility (see [Save Import Preference Setting](#) on page 203)
  - "Manage Report Template" is another new Choice in AppliedTo, enabling an assignee to work with report templates in BI Publisher (see [Manage Report Template](#) on page 26)
  - Advanced/Parametric Search Security issues for supplier users (see [Advanced Search Security](#) on page 183)
  - Restrict access to objects created by user based on security (see [Read and Discover Objects I Created Role](#) on page 183)
- Criteria enhancements – the following variables are enabled for privilege mask criteria: \$USER, \$APPROVER, \$OBSERVER, and \$USERGROUP (see [Privilege Mask Criteria Variables](#) on page 37)
- List usability enhancements – the ability to choose a branch value of a cascade list, and the ability to set a multi-value default for a multi-list attribute (see [List Enhancements](#) on page 87)
- Document Management enhancements:
  - Version Browser action – introduced with the Designs class, File Folders also now have this useful "monitor" of information about file-folder structures; see [Version Browser](#) on page 321.
  - Limit attachment size – added "Upload File Size Limit" property to Viewers & Files node (see [Viewer & Files](#) on page 244 and [Limit Attachment Size](#) on page 321)
  - Identify Checkin user on File Folders and Attachment tabs (see [Identify Checkin User](#) on page 322)
  - Valid characters for File Description (see [URL Characters](#) on page 322)
  - Markup Promotion (see [Markup Promotion](#) on page 319)
- Systemwide Preferences – added Enable BI Publisher for Reports (see Web Client Administration below)
- Some Admin settings (mostly on Items Page One and Page Two) are updated or improved:
  - Page One and Page Two fields on Items can now be consistently defined as read-through fields on Items > BOM table, Items > Where Used table, and associated Changes > Affected Items table (see [Read-Through Fields Made Consistent in Items and Changes](#) on page 68)
  - More Item Title Block fields can now be disabled, including Part Category, Size, Product Line(s), Rev Incorp Date, and Rev Release Date
  - The number of multi-list fields on Items Page Two is increased from 3 to 15.
  - All Page One multi-text fields in Changes and QCRs base classes can use 4,000 characters.

## Web Client Administration

- BI Publisher framework for Report – New reporting tool based on XML technology that addresses several customer requirements (see [Report Template](#) on page 26)
- Logging Configuration node added to "Troubleshooting" folder in Web Client Administration (see [Logging Configuration](#) on page 33)
- The User Administrator enhancements (listed under Role-based security enhancements in "Java Client Administrator" above) impact user administrators working in Web Client, but, as with all Roles, the enhancements are put into effect by the administrator working in Java Client.

## New Features in Administrator for Agile PLM 9.2.2.2

- Enhancements to \$CURRENTREV and \$LATESTREV variables in Criteria (see "Criteria" chapter in this manual).
- New systemwide Preferences: Retain Local Files, Display URLs as Hyperlinks, Add User's Default Site to New Items, Signoff User Dual Identification Type (see Preferences in "Server Settings" chapter).
  - Signoff User Dual Identification Type permits the enforcement of a corporate policy of multiple user identification on workflow- and other signoffs.
- New SmartRule: Allow Deletion of Attachments provides assistance in soft-deleting the (unreferenced) file folder when an attachment is removed from a business object.
- New Privilege: Purge Folder Version: user with this privilege can select Purge Folder Version from the Actions menu if the selected version is not checked out, does not have Attachment redlines, and is not 0.
- In LDAP, both static groups and dynamic groups can be synchronized with Agile user groups.
- Visual Themes in Web Client Administration has been enhanced (see "Admin Basics" chapter).
- Cluster node in Web Client Administration is restored (see "Admin Basics" chapter).
- Next Number field in the Autonumber screen displays the next AutoNumber value that will be assigned to the object.
- File Type attribute enabled for criteria: administrator can define a criteria based on the File Type attribute from attachments in order to control access.
- Release Audit now checks Multiple Items Per Manuf(acter) Part SmartRule.
- Additional fields on Problem Service Reports Affected Items table: PSR Affected Items tab did not include Date fields. PSR Affected Items fields are now similar to parallel QCR fields.
- Agile Content Service (ACS) now supports PQM and Supplier objects.
- Site Make/Buy Attribute is editable: an Item's Sites tab Make/Buy attribute is modifiable (subject to user privilege) even if the item has been released for that site. Validation of Site preferences Site AML Allowed and AML Required on Buy is done when the item is released or when a Release Audit is carried out.
- History Tab records all Export actions.

## New Features in Administrator for Agile PLM 9.2.2.1

- BOM Multi-Level Recursion SmartRule sets whether BOM recursion is allowed, and validates this on change orders.
- Specification Mapping node in PG&C lets you map each specification and a PageTwo field -- in Parts, Documents, or Manufacturer Parts -- that allows users to see the Result Compliance for a specification on the PageTwo of the part.
- Bulk Specification Removal, while not controlled by a setting in Administrator, permits users to remove a specification at all levels of a BOM (assembly, subassembly, or item with associated manufacturer parts, with some restrictions; this is documented in *PG&C User Guide* in "Specifications" chapter.

## New Features in Administrator for Agile PLM 9.2.2

This list is limited to 9.2.2 additions and enhancements to Agile PLM that are controlled by settings in Administrator (Java Client > Admin tab). Enhancements for the PLM user will be found in the user guides for solutions in Rel. 9.2.2.

- A new node called My Assignments is under System Settings, and is documented on [My Assignments](#) (on page 257).
- Also under System Settings on the "Admin" tree, Dashboard Management node has been removed from Product Portfolio Management folder. Dashboard management now may be used across all PLM solutions, not only within the PPM solution (see [Dashboard Management](#) on page 203). Dashboard setup by the administrator includes these components:
  - Access, use, or modify Microsoft Project with new "Microsoft Project" privilege
  - Define Dashboard process extension
  - Add, configure, and display optional tabs to the Dashboard
  - Add, configure, and display tables to Dashboard tabs
  - Configure Dashboard chart views and table views
  - Dashboard data model
  - Configure Dashboard personal tables
- New privileges: Create From Template, Microsoft Project, and Dashboard Tab View are used to enhance the Program Manager and Program Administrator roles in the PPM solution.
- Product Portfolio Management enhancements are introduced in [Configuring Product Portfolio Management](#) (on page 357).
- Product Governance & Compliance enhancements are introduced in [Configuring Product Governance & Compliance](#) (on page 417).
- Compliance Migration Task added for PG&C upgrade customers, see [Task Configuration](#) (on page 294).





# Administrator Basics

**This chapter includes the following:**

▪ Overview.....	13
▪ Logging in to Agile Clients as an Administrator .....	13
▪ Creating New Administrator Users .....	14
▪ Filtering Data .....	16
▪ Administrator Reports.....	16
▪ Dates and Times in Agile PLM .....	18
▪ Administrator Utilities in Java Client .....	19
▪ Administrator Utilities in Web Client.....	26
▪ Agile PLM Variables .....	36
▪ Multiple Language Support.....	39

## Overview

This chapter collects information for the Agile administrator that is either basic or pertains to capabilities that are not found or specified by the node on the Administrator user interface.

The primary client for administering Agile PLM is Agile's Java Client. Users, user groups, and supplier groups can also be managed from Agile's Web Client.

To use Java Client, you must install it on your computer first. Java Client uses Java WebStart technology to download the software and keep it updated. For information about installing Java Client, see the *Agile PLM Installation Guide* for your application server and any specific instructions in the Readme for your company's purchased Service Pack.

Web Client is a Web-based application. You can use your browser to run Web Client.

To see administrative features in Agile PLM clients, users must be assigned the Administrator privilege mask. The "admin" user account is preconfigured to see all Administrator nodes and settings. You can use the admin account to create new users and assign the Administrator role to them. For more information, see [Creating New Administrator Users](#) (on page 14).

**Important** Please examine the information in [Administrator Privilege and the AppliedTo Capability](#) (on page 201). It provides information about the AppliedTo property that is a crucial part of all Administrator-related privilege masks. You do not need to grasp everything described on that page at this point, but it is crucial to know about the AppliedTo property.

## Logging in to Agile Clients as an Administrator

For security reasons, you can change the password for the admin account to something only you would know. For more information, see [Changing a User's Password](#) (on page 153).

**To start Agile Java Client and log in as an administrator:**

1. Double-click the Agile 9 icon on your desktop, or Choose Start | Agile 9. The Login dialog box appears.
2. Enter the username *admin* (or *administrator*) and the password *agile*. The username is not case-sensitive, but the password is.
3. Click OK. The login process is complete. The Java Client window opens, as shown in the following figure, usually with the Search tab displayed in the navigation pane.

---

Note	If you use a proxy server that does not allow ORMI connection to be proxied, you will be unable to launch Java Client. You must change the settings in Java Web Start: on JWS' File menu > Preferences > General tab > Proxy section > select None.
------	---

---

4. Click the Admin tab in the navigation pane (on the left) to display the administrative nodes.  
A user who has not been assigned the Administrator privilege mask (or role) will not see the Admin tab, only the Search and Analytics and Reports tabs will be visible. Note that the Search and Analytics and Reports tabs in Java Client are documented in the chapter "Navigating in Java Client" in *Getting Started with Agile PLM*.

**To start Agile Web Client and log in as an administrator:**


1. Start your browser.
2. Click the Agile Web Client bookmark, if one exists, or type the URL, for example,  
<http://webserver.domainname.com/Agile/PLMServlet>

---

Note	Make sure you enter the full domain name for your web server. The Web Client URL is case-sensitive.
------	---

---

The Login page appears.

3. Enter the username *admin* and the password *agile*. The username is not case-sensitive, but the password is.
4. Click the Log In button. If you make a mistake, click Clear and retype your username and password.  
The login process is complete.
5. The first time you log in, the User Profile page appears. Enter the requested information. When you have finished, click Save.
6. After you complete this information, the Agile Web Client opens.
7. Open the administrative functions of Web Client by choosing the Tools button  in the menu bar and selecting Administration. The Administrator Home page opens.

## Creating New Administrator Users

Agile PLM uses Roles and Privileges to assign access to PLM solutions and other capabilities. The "Agile administrator" generally has access to the entire PLM system; there can be multiple "administrators" with such broad access.

In addition, multiple users can be given tailored privileges that enable them to administer a subset or portions of the Agile PLM system. These "lesser PLM administrators" are often referred to categorically as "user administrators," but other names are perfectly useful, such as assistant administrator, roles administrator, or workflows administrator.

---

**Note** In this section, as well as in most of this manual, we are addressing users who have the Administrator or User Administrator role. These are powerful, system-impacting roles. They should not be confused with some other solution-specific roles in PLM that contain the word "Administrator," for example, Discussion Administrator or Program Administrator. See the organization of roles in Default Agile PLM Roles.

---

Whether or not your company requires more than one Agile PLM administrator, it is recommended that you assign at least one user as "backup PLM administrator" in case you are not available.


This section describes how to assign Administrator privileges to a new user using Java Client or Web Client. For more detailed information about how to create Agile PLM users and set user properties, see [Users](#) on page 149.

**Important** The AppliedTo property (found in the Administrator-related privilege masks, among others) is important to understand, as it controls what nodes an administrator user sees in the Java Client > Admin tree. The following "Admin-specific" privilege masks make significant use of the AppliedTo property: "Administrator", "Admin Access for User Admin", and "User Administrator". See [Administrator Privilege and the AppliedTo Capability](#) (on page 201) and [Options for Building Administrator Assistants](#) on page 202).

#### **To create a new Administrator user in Java Client:**

1. Start Java Client and log in as "admin".
2. Under User Settings, double-click Users. The Users window appears.
3. Click the New button. The Create User dialog box opens.
4. Type the UserID, First Name, Last Name, Email, and Password. Repeat the password in the Retype Login Password field.
5. Click OK. The setup window for the new user appears.
6. Click the Role(s) list, choose the Administrator role, and Click OK.
7. Fill out other user properties as needed, and then click Save.

#### **To create a new Administrator user in Web Client:**

1. In a browser, go to the Web Client URL and log in as "admin".
2. Click Tools > Administration > Users. The Users page appears.
3. Click Create. The Create User wizard opens.
4. Type the Username and Login Password. Repeat the password in the Retype Login Password field.
5. Then enter values for First Name, Last Name, and Email.
6. To continue the user creation click the Continue Creation in Wizard check box and then click Continue.
7. The Enter General Information page appears.
8. Under the Profile heading open the Role(s) list by clicking the  button to the right of the field.

9. Choose the Administrator role and Click OK.
10. Fill out other user properties as needed, and then click Finish.

## Filtering Data

 
You can use a filter bar (sometimes called “table search”) to search for objects in the following nodes: Lists, Criteria, Users, Roles, Privileges, and Commodities, as well as the Admin History window (available from the Admin tab toolbar).



### To use the filter bar in Java Client:

1. In the filter bar's Filter By drop-down list, select a value.  
The Filter By list depends on the type of object being filtered. For example, if you are searching for users, you can select First Name, Last Name, User ID, Business Phone, or Email.
2. Select an operator from the Match If drop-down list, such as Contains, Starts With, or Show All.
3. Type the value you want to search for in the text box.
4. Click Apply.

The Users node is the only administrative node that uses the filter bar in Web Client.



### To use the filter bar in Web Client:

1. Choose Tools > Administration > Users. The Users page appears.
2. In the filter bar's Filter By drop-down list, select a value.  
You can select First Name, Last Name, User ID, Business Phone, or Email.
3. Select an operator from the Match If drop-down list, such as Contains, Starts With, or Show All.
4. Type the value you want to search for in the text box.
5. Click Go.

## Administrator Reports

You can generate Administrator reports to show the current settings for the Administrator nodes. These reports are available in the navigation pane's Analytics and Reports tab > Standard Reports folder > Administrator Reports subfolder. These reports are especially useful when you are planning to reconfigure an Agile PLM component.

The following table lists Agile PLM administrator reports.

Report	Description
Agile Classes report	Lists current and default attribute settings for all Agile PLM classes; this is a valuable tool for Agile systems engineers when performing upgrades to the Agile PLM system
Criteria Library Configuration report	Lists existing reusable criteria and where they are used
Login Failure report	Captures failed attempts for system login and workflow signoff, and the reason for each failure.
Preferences Configuration report	Lists the current attribute and property settings of the <b>Preferences</b> and <b>Viewer and Files</b> nodes.
Privilege Mask Detail report	Lists each privilege mask by name and description, whether or not it is enabled, roles where it is used; provides Object Type, Applied To, and Criteria values
Roles and Privilege Summary report	Lists each role by name, description, and whether or not the role is enabled; lists users assigned to each role; lists the name and description of privilege masks in each role
SmartRules Configuration report	Lists the current setting of each SmartRule
Subclass in Use report	Lists all subclasses and where they are used: global searches, reusable criteria, workflows, privileges, and roles
User Group Configuration report	Lists all user groups, users assigned, and pertinent user properties for each user; also includes a second table that indicates each group's escalation person and criteria for escalation
User Share Lists for Granted ACL report	Lists the objects and associated roles to which users have been granted access
User Subscriptions Lists report	Lists the class attributes and actions about which users have subscribed to receive notifications
User Usage report	For each active user, lists usage over a period of time, from the start date you select to the present; includes number of logins and total online login time in minutes
Users Configuration report	Lists all users and their properties, except passwords
Workflows Configuration report	Lists all existing workflows and the properties (status properties, criteria-specific properties) of each workflow's status list

You can save these reports for before-and-after comparisons when making changes to your database. For example, if you are going to be upgrading your Agile PLM system, you might want to first generate an updated Agile Classes report to keep a record of your current Classes configuration. Then compare it with one generated afterward.

**To generate Administrator reports:**

1. Select the Reports tab and expand the Administrator Reports node folder.
2. Double-click the report you want. Agile Web Client opens to the specific report page, for instance, the Administrator Report: User Usage Report page.
3. Click Execute. The Specify Parameters dialog box opens. The User Usage report requires a From and To time range and the users you are requesting information about.
4. When you have populated the fields, click Finish. A message appears: “Server is generating the report. Please wait.”
5. Select the encoding type—the default encoding type is Unicode (UTF-8). If you need to use a different encoding type, select it in the drop-down list. When you are ready, click Continue.
6. Follow the directions in the Save As dialog boxes to save the file to disk and choose a location to save it.
7. Modify the filename to include the report date and time. For example, User\_usage072604\_3PM.csv.
8. When the download is complete, click Close in the dialog box.

## Dates and Times in Agile PLM

### ...at the Server Level

The format of dates and times for object-related events (recorded by the Agile Application Server, or AAS) conforms to international standards.

The standard date format is Year [4 digits] / Month / Day, or yyyy/MM/dd.

The standard time format is Hour [converted to the 24-hour clock in GMT] : Minute : Second, or hh:mm:ss.

### ...at the Client Level

However, the format of dates and times in Agile PLM clients depends primarily on the user profile settings for Preferred Time Format, Preferred Date Format, and Time Zone. See [User Properties Defined](#) (on page 155) for details. The settings that the user specifies do not affect how the dates are stored.

### Example

Agile PLM records object-related events based on when they occur at the AAS. However, in History tabs of objects, you see the local client time that an event occurred—that is, the time matches that recorded by Agile PLM clients.

For example, Jerry creates an Agile object at 5:00 PM in San Jose, California. The server that the object is created on is in San Jose, so the server records the object’s creation time as 5:00 PM. Jerry’s Time Zone user preference is set to “New York (EST)”. This means that on his machine, the History tab of this object will indicate that it was created at 8:00 PM, the time it was in New York.

---

**Note** The administrator sets Time Zone for all users, but users can change this setting. Users should set their time zone correctly, otherwise “History” in business objects will report misleading times.

---

## Administrator Utilities in Java Client


You can perform many administrator actions in Java Client by clicking buttons on the Admin tab toolbar.

---


**Note** New nodes have been added to Web Client's Administrator functions that are not found in Java Client's Administrator functions. The new nodes are Dashboard Configuration, Project Summary Configuration, and Cache Health Monitor, which are described (or referenced) in [Administrator Utilities in Web Client](#) (on page 26).

---

## Sending Email to Users


Use the Email To Users button  to email a message to all active (enabled) users, all logged-in users, or to specific users that you select.

When you click the Email To Users button, the Email to Users window appears. You can send email to the following groups of recipients:

- All active users – Email all enabled users a message that they will receive the next time they log in to Agile PLM. For example, you may want to inform all enabled users that a new class or subclass or workflow is now available for their use.
- All logged-in users – Email all logged-in users a message that you want them to receive immediately. For example, you may want to inform all logged-in users that the Agile PLM system will be down in 10 minutes.
- Other users – Email a message to selected users. After you select the radio button, open the address book by clicking , from which you choose the users for your message.

Enter the message in the Content field, and then click Send. There is no “draft” capability; this utility is meant for more “on-the-fly” communications than you might write in an email application.

## Global Replace


The Global Replace button  lets you replace one user with another in workflows, escalations, and transfer authority assignments. You can use this capability in a variety of situations, for instance, when an employee leaves the company or moves to another assignment. Global Replace can accomplish the following:


- Replace a user as an approver, observer, or routing manager in a single workflow or all existing workflows; however, this does not replace the user in the actual changes he is currently working on, which must be done manually.
- Change the designated escalation person for single or multiple users and user groups.
- Change the transfer authority person for single or multiple users and user groups. You can replace To users but not From users.

The “users” in the From and Replace With drop-down lists include all existing user groups. See [Users and User Groups](#) on page 149.

## Global Replace Properties

To define or change the settings in the Global Replace window:

1. Click the Global Replace button  in the Admin tab toolbar. The Global Replace window appears.

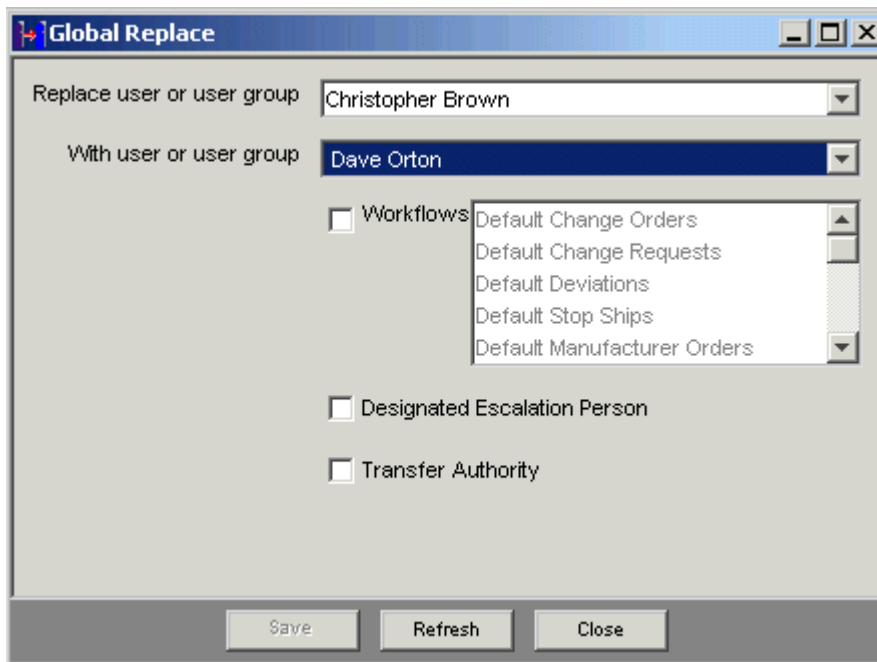

You can specify the following values in the Global Replace window:

Property	Description
Replace user or user group	The “Replace” person is the user or user group you are replacing. Select a user or user group from the drop-down list.
With user or user group	The “With” person is the user or user group who will replace the “From” person. Select a user or user group from the drop-down list.
Workflows	Select a specific workflow from the drop-down list. You can use Ctrl-shift or Shift-click to select all the workflows if you want to change every instance of the “Replace” person to the same “With” person in all workflows. With the checkbox selected, the “Replace” person is replaced with the “With” person in approver, observer, and change analyst (routing manager) capacities in the designated workflow.
Designated Escalation Person	Replaces the “Replace” person with the “With” person as the designated escalation person. (See <a href="#">Designated Escalation Person</a> (on page 138).)



Property	Description
Transfer Authority	Replaces the “Replace” person with the “With” person as the person who has the authority to approve or reject the “Replace” person’s changes. (See <a href="#">Transfer Authority for Self</a> (on page 217).)

If you have selected more than one workflow in the Workflows field, when you click Save you see this confirmation message: “Are you sure you want to replace <Replace person> with <With person> for all Workflows?”

If the “Replace” person is a routing manager, and the “With” person is not, a warning appears. If you answer the prompt with Yes (to continue), when the “Replace” person is used in any default routing manager property (for example, Default Change Analyst), this function will be filled by a non-routing manager. If that is an unwanted result, you should instead answer the prompt with No and select a more appropriate “With” person.

For more information about routing managers, see [Routing Managers](#) (on page 118).

## Object History

The Agile PLM system tracks several kinds of “history,” some available only to the administrator and some available to all users. These topics are considered in the following sections:

- Object History and Administrative Object History – the object history shows only the history of that object, which includes all actions performed by users and administrator users; those actions that involved an administrator also are listed in the Administrator History window.
- Administrator History – records administrative actions on all objects in Agile PLM. Administrator History also records history of deleted objects and settings.
- History of Deleted Objects – when an object is deleted, its history is preserved. This type of history is also accessed in Administrator History.
- Previous Administrator Histories – displays object history that took place in previous releases of Agile PLM. This kind of history is in Previous Administrator Histories.

### Object History and Administrative Object History

Every object in Agile PLM has a History tab, on which all individual actions performed are recorded, for example, Create, Modify, and Delete. Different data is recorded on the History tab depending on the object type. The history of actions performed by an Agile PLM administrator appears also in Administrator History (see [Administrator History](#) (on page 22)).

All objects have a record of the information listed in the following table on their History tabs. Many kinds of Agile objects have additional fields on their History tab.

Property	Description
Action	The action that was performed, for example, create, modify, delete.
User	The user who performed the action.
Local Client Time	The date and time the action was performed.
Details	Details of the object, property, or action after the modification.

When a modification is made to an administrative object on a node that records the assignment or reference of one object to another object, history is logged on the object that “owns” the reference or assignment. See the table below. For example, if you assign a role (object) to a user (object), the user object owns the referenced role object, and the History tab of the user object is updated.

Owner (history logged on this object)		Reference or assignment object
Role	owns	Privilege
Privilege	owns	Criteria
Subclass	owns	AutoNumber
Workflow criteria nodes (matching criteria, exit criteria)	own	Criteria
User	owns	Role

## Administrator History

When a modification is made to an administrative object, the action is recorded and displayed in the Administrator History window. Administrator History also records history of deleted objects and settings.

---

**Note** Administrator History does not include User history or User Group history.

---

The following table describes the fields in the Administrator History window. These fields are similar to the history table fields for Agile PLM administrative objects.

Field	Description
Action	The action that was performed, for example, create, modify, delete.
Object	The name of the object on which the action was performed, for example, the name of a workflow, privilege mask, or criteria.
Username	The user who performed the action. The username is an active link; click it to open the user's tabbed page.
Local Client Time	The date and time the action was performed.
Details	Details of the object, property, or action after the modification.


### ***Purging Administrator History***

The Administrator History can be cleared or purged.

**Caution** The familiar “Delete” button implies different behavior in this context. You cannot delete selected lines from the Administrator History window; this works as a true “purge” capability. Purge also removes the records in the Previous Administrator History window.

To purge Administrator History:

**On the Admin tab toolbar, click the Admin History button .**

1. On the Administrator History window toolbar, click the Purge button .
2. You are prompted with three options to answer the question, Would you like to export the existing history?
  - a. If Yes, purge all history records with an export file: If you click Yes, all records in Administrator History are purged, and an export file is created with all the data. This is a recommended course if your company was ever audited and these archives are required.
  - b. If No, purge all history records without an export file: If you click No, all records in Administrator History are purged, and an export file is not created.
  - c. If Cancel, cancel purge action: If you click Cancel, the operation is not executed.
3. If you click Yes or No, all records in Administrator History are instantly purged. They cannot be retrieved.

## History of Deleted Objects


When an object or setting is deleted, the history of the object or setting is maintained in Administrator History. However, the data is no longer maintained on the object or setting History tab.

For example, if you delete an object, such as a workflow, its history entries, including the delete action, are maintained in Administrator History. However, there is no longer a History tab for the workflow object (the object does not exist anymore), so there is no individual object history for that workflow.

If you remove one object from another—for instance, removing a privilege from a role—the removal of the privilege is recorded in Admin History with reference to the role.

## Previous Administrator Histories

If you have upgraded from a previous version of Agile Product Collaboration (Version 8.5 or earlier),

the Previous Admin Histories button  (on the toolbar of the Administrator History window) contains the Administrator history information that was stored in the database before the upgrade. This information is displayed in the Previous Administrator History window so you can refer to it if you need information about database modifications made by the administrator before the upgrade took place.

## Administrator Import and Export

In several nodes of Administrator, exporting and importing functions are available.

- Data Settings
  - Criteria
- Workflow Settings
  - Workflows
- User Settings
  - Roles

- Privileges

You can export Agile PLM-object definition data to a file. You can import an Agile PLM-object definition data file to create a new object. Example objects (such as example roles) cannot be imported or exported.

---

**Note** On the Tools menu of Agile PLM clients, Import and Export utilities can be used to import and export product data, not Agile PLM system metadata. The Import and Export utilities are documented *in the Agile PLM Import and Export Guide*.

---

**Important** When you import Administrator data from a test system to a production system, verify the imported data as completely as is possible immediately.

## Encoding Types

When you import or export workflow data, you must select the encoding type. The following table lists available encoding types.

Value	Note
Western European (ISO )	ISO-8859-1
Japanese ( Shift JIS )	SJIS
Traditional Chinese ( Big 5 )	BIG5
Japanese ( EUC )	EUC-JP
Simplified Chinese ( GB2312 )	GB2312
Unicode (UTF-8 )	UTF8

## Administrator Export

The Administrator Export function exports the necessary data to create the object. Not all properties are exported. For example, exporting a privilege mask does not export the Where Used information. You can examine the exported text file to determine which properties are exported for each type of object.

### To export Administrator data:

1. Open the node you want to work with: Workflows, Criteria, Roles, or Privileges.
2. Select the objects you want to export. You can export one object, or all objects in the table; the Workflows, Criteria, and Privileges windows have an Export All button.

---

**Note** In windows with a filter bar (see [Filtering Data](#) on page 16), to display all the objects in the node, Select Show All in the Match If drop-down list, and click Apply.

---

3. Click the Export button  in the window toolbar.

For *workflow exports only*, the Encoding Type dialog box opens. See the table above. The encoding type generally used is Western European (ISO). If you need to use a different

encoding type, select it in the drop-down list, and Click OK.

---

**Note** You must specify the same encoding type when you import the file later.

---

4. Follow normal Save As procedures to give the file a name and select a location to save it to disk. Modify the filename to make it easy to identify. You might include the object exported, the date, and the encoding type. For example, ChangeOrderWorkflow072602\_ISO.txt.
5. When you are ready, click Save. Verify the data in the file you exported.

## Administrator Import

You can import an exported text file to create an object in the Agile PLM system.

You cannot create two objects with the same name. For example, you cannot import an object data file for a workflow named ABC if there is already a workflow named ABC in your Agile PLM system. You have the option of overriding the existing named object; in that case, the imported object replaces the existing object in the Agile PLM system.


Note that some properties—for example, user assignments—are not exported. When you import the object data text file, you will create a new object without those properties (for example, with no user assignments).

---

**Note** Before you import it, open the text file you want to import to verify which object properties were exported.


---

### To import Administrator data:


1. Open the node you want to work with: Workflows, Criteria, Roles, or Privileges.
2. Click the Import button  in the window toolbar. The Import File dialog opens.

For workflow imports only, the Import File dialog includes an Encoding Type field. Make sure the encoding type matches the exported file of workflow(s).

**Caution** You must select the same encoding type you used when you exported the object. Import results are not reliable if you do not use the same encoding type.

3. Next to the Files to be Imported field, click the Browse button  to locate and select the file you want to import. Click Open.
4. Click OK. The import operation takes place. Verify the data in the imported file.

## Process Extensions Library

Use Tools > Process Extensions or the Process Extensions button  to access the Process Extensions Library. If there are no process extensions deployed on your Agile PLM system, then that item is unavailable on the Tools menu and “Empty” appears below the button when you click it.

For details about configuring process extensions, see [Process Extensions](#) (on page 94). For information on how to develop process extensions for your Agile PLM system, see the *Agile SDK Developer Guide*.

## Administrator Utilities in Web Client

Agile Web Client has an Administrator page (click Tools > Administration), with some nodes that replicate the behavior of same- or similarly-named nodes in Java Client, and some nodes that are unique utilities.

See [Admin Nodes in Web Client](#) (on page 6) for the complete list of nodes and references to their documentation.

This section documents utilities for the Agile administrator that are unique to Web Client. The following utilities are documented below:

- Web Client Configuration
  - Themes – see [Visual Themes](#) (on page 34)
- Template Management
  - Report Template – see [Report Template](#) (on page 26)
- Server Settings
  - Cluster – see [Cluster](#) (on page 28)
- Troubleshooting
  - Cache Health Monitor – see [Cache Health Monitor](#) (on page 29)
  - Logging Configuration – see [Logging Configuration](#) (on page 33)

## Report Template

Oracle | Agile PLM Release 9.2.2.4 introduces integration of existing Standard Reports and Custom Reports with Oracle BI Publisher. The Reporting capability has been enhanced by the ability to use the BI Publisher Template Builder to publish Reports.

Further information and documentation about the BI Publisher version 5.6.2 tool is located at the following web site: <http://xdo.us.oracle.com/?tab=doc> (<http://xdo.us.oracle.com/?tab=doc>).

Documentation for the end-user is found in the chapter on Reports in *Getting Started with Agile PLM*.

This section details how the administrator prepares the layout template for the end-user reports that are available through the BI Publisher interface.

---

Note	The next major release of PLM will only have BI Publisher framework.
------	--

---

## Manage Report Template (AppliedTo Choice)

"Manage Report Templates" is a new Choice in the Administrator-specific AppliedTo property (found in Administrator and Admin Access for User Admin privilege masks). This setting (when moved to Selected) enables you or an assistant administrator to upload templates for reports in the PLM Report Template utility (Web Client > Tools > Administration > Template Management > Report Template) that

users will see when they use the report template.

## Dynamic and Static Templates

There are two template modes in 9.2.2.4 of a Static Template or a Dynamic Template.

### Static Template

The only two reports that support Static Template and generate files in RTF are the BOM Explosion Report and the Manufacturer BOM Report. This is accessed when the user selects both “Use BI Publisher” and “Use Template For Layout” options. The Static Template is the only mode that supports XML format.

### Dynamic Template

All custom reports and most of the standard reports use the Dynamic Template to define and generate reports in multiple output formats such as PDF, HTML, Excel, and Word.

## Creating Report Templates

The administrator can define layouts by creating RTF templates in addition to the out-of-box layout already provided.

In Java Client, select Admin > Server Settings > Preferences. Enable BI Publisher for Reports has two values of Yes or No. When preference is set to No, reports are generated using existing reporting layout. When preference is set to Yes, reports can be generated in multiple output formats using BI Publisher. For information on the new system Preference Enable BI Publisher for Reports see [Preferences](#) (on page 284).

---

Note	If the file server is down, templates will not generate reports as they are stored in the file server.
------	--

---

In Web Client, navigate to Tools > Administration > Template Management > Report Template. Click Create and the Create Report Template window will appear. Choose a name and enter a description for the template. Browse to the location of your template RTF files. Then click OK and your template is added to the list of options for templates. You can Get the template file and now modify it. You have the option to use Microsoft Office (Word) or Adobe Acrobat to design the layout of the report. There is also the option to use BI Publisher's Template Builder plug-in for Microsoft Word to employ drag-and-drop designing.

## Reports Unsupported by BI Publisher

The following reports are not supported with the BI Publisher framework template:

- Change Package Report
- Change Metrics
- Change Backlog
- Change Cycle Time
- Quality Metrics
- Quality Backlog

- Quality Cycle Time
- Failure Trend
- RFQ Export
- IP Transfer
- Program Actual vs Budgeted Cost Report
- Baseline Comparison Report
- Portfolio Cost Report
- Resource Pool Consumption Report
- All PCM Reports

---

Note      In 9224, BI Publisher does not support Websphere.

---

## Managing the Clustered Environment

If your deployment of Agile PLM requires the use of clustered servers, you can use the Cluster node to add and remove servers to the cluster, and the Cache Health Monitor to synchronize the data in the cluster. If your company is not licensed for clustered servers, you will not see the Cluster or Cache Health Monitor nodes in the Administration menu.

An Agile Solutions Consultant can provide you with more in-depth information about deploying and maintaining clustered servers. Please see the *Agile PLM Readme* document for other cautions about synchronizing data.

### Cluster

The Cluster node is used to manage servers in the clustered environment. In the task to add servers to the cluster, note that step 4 applies to OAS and step 5 applies to BEA WebLogic.

#### To add a server or multiple servers to the clustered environment:

1. Start one of the managed servers in cluster.
2. In Web Client (as Administrator user) > Tools > Administration > Server Settings > Cluster node, under General Info tab:
  - Change Server Discovery Method from Static to Dynamic.
  - Type Multicast IP with "239" and add final three parts of one the cluster's managed servers, so there is no IP conflict; for example, if the IP address of the managed server is 10.0.7.25, Multicast IP is set to 239.0.7.25.
  - Change Data Replication Method from JMS to Custom.
3. Under Servers tab, use the Add procedure to add a server or multiple servers, one by one, to the cluster.
  - Enter a server Name for the managed server and set Replication URL to rmi://<host>/ClusterService. For example, if the managed server is running on a machine named PLM.agile.agilesoft.com, you can set Name to "PLM" and set Replication URL to "rmi://PLM.agile.agilesoft.com/ClusterService".



- Leave the other fields empty.
4. If your cluster is running on Oracle Application Server (if you are working on WebLogic cluster, please go to step 5), add system property agile.server.name for OC4J compoment (category start-parameters) in \$ORA\_HOME/opmn/conf/opmn.xml:

```
<data id="java-options" value="-Xrs -server
-Djava.security.policy=$ORACLE_HOME/j2ee/home/config/java2.policy
-Djava.awt.headless=true
-Dagile.server.name=<Name of the server that you added in step 3>
```

As a complete example, let there be two OAS managed servers:

oascluster1.agile.agilesoft.com and oascluster2.agile.agilesoft.com. From step 3, add the following two servers: Server 1 is given the Name oascluster1 and the Replication URL is set to rmi://oascluster1.agile.agilesoft.com/ClusterService; Server 2 is given the Name oascluster2 and the Replication URL rmi://oascluster2.agile.agilesoft.com/ClusterService. Then modify opmn.xml on oascluster1 by adding system property agile.server.name=oascluster1, and modify opmn.xml on oascluster2 by adding system property agile.server.name=oascluster2.

5. Follow this step if you are working on a BEA WebLogic cluster. Add system property agile.server.name into agileDomain/bin/startAgile.cmd, below is a sample format:
 

```
-Djava.awt.headless=true -Dagile.server.name=<Name of the server that you added in step 3> %DEBUG_OPTS% weblogic.Server
```

As a complete example, let there be two WebLogic managed servers:

wlscluster1.agile.agilesoft.com and wlscluster2.agile.agilesoft.com. From step 3, add the following two servers: Server 1 is given the Name wlscluster1 and Replication URL is set to rmi://wlscluster1.agile.agilesoft.com/ClusterService; Server 2 is given the Name wlscluster2 and the Replication URL is set to rmi://wlscluster2.agile.agilesoft.com/ClusterService. Then modify startAgile.cmd on wlscluster1 by adding system property agile.server.name=wlscluster1, and modify startAgile.cmd on wlscluster2 by adding system property agile.server.name=wlscluster2.

6. Restart all managed servers, including the server you started in step 1.

If there is a firewall set up on the managed servers, open the following TCP ports: 1099 for RMI binding, 9002 for RMI data communication.

#### **To remove a server from the clustered environment:**

1. In Web Client (as Administrator user) > Tools > Administration > Server Settings > Cluster node, under Servers tab, use the Remove procedure to select and remove a managed server.

## **Cache Health Monitor**

Agile PLM 9.x caches in memory all data related to application configuration in each and every clustered server. This is called the "Admin Cache." Any change to the Admin Cache data – on any server in the cluster – triggers a message to be delivered to all the cluster servers, to update the Cache for the data item that changed. Agile PLM uses Java Messaging Service (JMS) to broadcast this message.

It has been found that some changes are not propagated across all servers in the cluster. This happens randomly, that is, the occurrence of non-propagation is not possible to predict. Once it occurs, the solution is to restart all the servers in the cluster. An additional solution to this issue is the utility called Cache Health Monitor.

---

Note	Cache Health Monitor utility is designed as a backup system. The current method of using the JMS server remains as the primary data synchronization mechanism.
------	--

---

The main features of the Cache Health Monitor utility are:

1. Lists all modified Administrator nodes and the current synchronization state;
2. Commences the synchronization manually or automatically (see [Automatic Synchronization using Java Client Administrator](#) (on page 31));
3. Turns logging of cache synchronization operations on or off;
4. Views the log file containing cache synchronization operation messages;
5. Purges old entries.

### ***How the Cache Health Monitor Works***

All Administrator (configuration-related) changes are entered to a new database table. At the server startup time, Cache Health Monitor logs the server time as "last update time" (LUT) and monitors all changes made from LUT onwards. If a manual or automatic triggering is initiated, all changes made from the LUT are synchronized (if not already synchronized) and the LUT is updated to the current time.

To access the servers in the cluster, the administrator must log in to each application server directly, using the application server name and port. For example, suppose there is a cluster with three servers:

- app1.abc.com
- app2.abc.com
- app3.abc.com

To monitor and synchronize manually, the administrator would log in to each server using these URLs:

- <http://app1.abc.com:7777/Agile/PLMServlet>
- <http://app2.abc.com:7777/Agile/PLMServlet>
- <http://app3.abc.com:7777/Agile/PLMServlet>

The default Oracle Application HTTP port-"7777"-is shown in the examples; you are advised to change this as appropriate.

### ***Buttons on Cache Health Monitor Page***

The specific application server name is listed on the Cache Health Monitor page. This helps identify the server that the user is connected to, especially when the user may want to have one browser session for each server in the cluster.

The buttons on the Cache Health Monitor page activate specific events as follows:

**Synchronize** – Synchronizes the data on that particular application server; use when one or more objects are reported as "Not synchronized" in the Status column. After the Synchronize button is clicked, synchronization is triggered and the status changes to "Synchronized."

Refresh – Refreshes the data on that page.

Purge – Purges old entries in the CACHE\_SYNC\_LOG table in database; the time interval to select entries to purge is configured thorough the property cache. syncvent.obsoletetime (in minutes) in the file agile\_home/agileDomain /config/agile.properties. The default value is 144000 minutes, or 100 days. Changing this property requires server restart.

Purge removes all entries in the table that are older than the Purge value. In above case, all entries older than 144000 minutes will be remove.

Turn Log on / Turn Log off – Enables or disables logging, works as a toggle switch.

View Log – Displays current synchronization log; this log contains information about synchronization process, objects that have been synchronized and failures, if any.

### ***Automatic Synchronization using Java Client Administrator***

To configure automatic cache synchronization, you must enable a new background task called “Admin Cache Synchronization Task.” This task is configured in Java Client > Admin > Server Settings > Task Configuration; it is documented in [Task Configuration](#) (on page 294, on page 294).

When you double-click a task in the Task Configuration page, the Task Configuration General Info window for that task appears. Admin Cache Synchronization Task has the following properties, including the defaults specific to Cache Health Monitor.

Property	Description
Name	Name of the task being configured.
Task Interval	Periodic time interval in minutes after which the server updates the status of the task. Default is 5, meaning all enabled tasks in the node run every 5 minutes.
Task Delay Time	How many minutes the event is delayed before it starts to run. Default = 0.
Task Lookback Window	How far back in minutes the task manager is to look to retrieve the events that can be run now. Default = 0.
Task Max Event Number	How many events can be running at the same time on one server. Default = 1.
Task Restart Upon Failure	Indicates whether the event should be restarted after it failed. Yes or No. Default = No.
Task Load Across Server	Indicates whether the event can be executed at the same time in different servers of a cluster. Yes or No. Default = No.
Task Disabled	Indicates whether the task is disabled (Yes) or enabled (No). Note that you may want to set this property to Yes while you are configuring and testing it; when you are ready to enable the task, you must re-set this property to No. Default = No.

If you do not make frequent changes in Administrator, or if Admin changes are updated on a specific or scheduled time, manual synchronization of the cluster will likely meet your needs. If, however, you frequently change settings in Administrator, and these are entered at many intervals throughout the day, this automatic Admin Cache Synchronization Task is a more structured backup should synchronization fail. In the event of synchronization failure, use Cache Health Monitor (either manual or automatic) until you are able to restart the cluster's servers.

### ***Logging and Debugging Errors***

To provide a mechanism to track the events related to Admin Cache synchronization, logging can be enabled to log all debugging messages. When logging is turned off, only errors and synchronization issues seen by the Cache Health Monitor are logged.

When an Administrator object or a business object is modified on any server in the cluster, a JMS server receives the event details and is triggered to broadcast the message to the other servers.

---

Note	While the Cache Health Monitor monitors and synchronizes Administrator objects exclusively (for example, Changes Base Class or Change Orders Class), the logging mechanism logs events related both to Administrator objects and to user-modified business objects (for example, a modified change order). This is helpful for tracking the propagation of changes to business objects across the servers.
------	--

---

The following two messages (each message starts with a time stamp) will be recorded in the log file (when log is turned on).

```
2006-09-20 18:14:08,881 HttpRequestHandler-3096409 <Messenger:DEBUG> Sending
message <class:com.agile.pc.cmserver.event.CMBatchEvent, content:Batch events:

event class: com.agile.pc.cmserver.event.CMObjectEvent, content: object: class: 10000
subclass:10141 id:6010147 version:1 action: 4

event class: com.agile.pc.cmserver.event.CMFTSSyncEvent, content: FTS sync object: class:
10000 subclass:10141 id:6010147 version:0

event class: com.agile.pc.cmserver.event.CMObjectEvent, content: object: class: 10000
subclass:10141 id:6010147 version:1 action: 1

> to <topic:sync_topic> with property <name=APP_SRV_ID, value=6010141>

2006-09-20 18:14:10,222 HttpRequestHandler-3096409 <Messenger:DEBUG> Message was
delivered to JMS topic:sync_topic
```

The first message captures the details of the object modified; the second message indicates that JMS server received the message. JMS then propagates this message and the following three messages are recorded on all servers other than the originating server.

```
2006-09-20 18:14:27,257 ApplicationServerThread-2 <SyncMDBean:DEBUG> Received
message from JMS server.

2006-09-20 18:14:27,257 ApplicationServerThread-2 <SyncMDBean:DEBUG> Message was
sent by server with ID: 6010141, current server id is: 6010121

2006-09-20 18:14:27,257 ApplicationServerThread-2 <SyncMDBean:DEBUG> Process event:
class name --> com.agile.pc.cmserver.event.CMBatchEvent, type --> 1, content --> Batch
events:

event class: com.agile.pc.cmserver.event.CMObjectEvent, content: object: class: 10000
subclass:10141 id:6010147 version:1 action: 4

event class: com.agile.pc.cmserver.event.CMFTSSyncEvent, content: FTS sync object: class:
10000 subclass:10141 id:6010147 version:0

event class: com.agile.pc.cmserver.event.CMObjectEvent, content: object: class: 10000
subclass:10141 id:6010147 version:1 action: 1
```

Using the above log messages, any unsynchronized data could be traced out.

When manual / automatic (background thread) triggering occurs, even with logging turned off, the following messages are displayed for all Administrator nodes being synchronized.

### **Manual Triggering:**

2006-09-20 13:17:39,512 HttpRequestHandler-394365 <ADictionary:INFO> Admin cache sync > invalidate node: admin objid: 7000 class id: -1 version: -1

### **Automatic Triggering:**

2006-09-20 13:17:39,512 ApplicationServerThread-149 <ADictionary:INFO> Admin cache sync > invalidate node: admin objid: 7000 class id: -1 version: -1

Note that the difference in the two messages is the source of triggering, in the manual case since we are sending a HTTP request the source is displayed as HttpRequestHandler, in the second case, the source is application itself (background thread) therefore the source is displayed as ApplicationServerThread.

Logging is configured through the log.xml file in agile\_home/agileDomain/config directory.

The following element configures the log for Cache Synchronization.

```
<appender name="CacheSyncLog" class="org.apache.log4j.RollingFile
Appender">
    <param name="File" value="${agile.log.dir}/cachesync.log" />
    <param name="Append" value="true" />
    <param name="MaxFileSize" value="1MB" />
    <param name="MaxBackupIndex" value="10" />
    <layout class="org.apache.log4j.PatternLayout">
        <param name="ConversionPattern" value="%d\t\t\t\t\t;
%c{1}:%p>\t\t\t\t\t\n" />
    </layout>
</appender>
```

Parameter	Description
File	Name and path of the log file
Append	Append or overwrite to existing file at server startup
MaxFileSize	Maximum file size after the current file is archived and new file is created
MaxBackupIndex	Maximum number of files that would be archived

## **Logging Configuration**

### **– For use by Oracle | Agile Support ONLY! –**

The Logging Configuration monitor has been added to permit Oracle | Agile Support to perform quick changes to the logging configuration without stopping and restarting your company's Agile Application Server (AAS).

**Important** You should never change the logging configuration without first receiving a recommendation from Oracle | Agile Support.

**Events in a possible scenario:**

6. When you, the PLM customer, encounter a problem and call Oracle | Agile Support, you provide a URL for Web Client access to your PLM system. This "window" to your system permits data gathering.
7. If the Support person can identify the problem and a quick remedy, he will enter the logging change, attempt to reproduce the problem, and turn off Logging Configuration. The monitor enables resetting your "Log4J logging level" dynamically without stopping and restarting your system's AAS.
  - Use the Quick Search field at the bottom of the page. The debugging information appears in a console window.
  - After collecting the debugging information, Support can exit the Logging Configuration page without altering the PLM system being examined.
  - Click the Refresh button to update the view of logging data at any time.
  - In the Level column, modify the configuration by selecting from the drop-down list for appropriate classes.
  - Click the Update Logger button to commit the configuration change without stopping the system's AAS.
8. If Support does not find a remedy or workaround, the problem can be escalated to Oracle | Agile Development.
  - "Agile Development" may ask Support to request that the customer turn on certain logs, based on which area of PLM the problem is originating from.
  - The customer can turn on logs without restarting AAS, the information can be retrieved by Support, and the logs can be turned off without restarting AAS.
9. When "Agile Development" has debugged the problem, Support can:
  - return to the customer's system to put the change into effect; or,
  - communicate the proposed fix to the customer.

---

Note	Because the Logging Configuration utility is intended for use by Oracle   Agile personnel in troubleshooting a customer's system, and is not intended for "self-treatment" of any problem, the various configuration scripts and Level menu choices are not documented herein.
------	--

---

## Visual Themes

You can use the settings of the Visual Themes node to configure the display of the Web Client user interface, including the definition of colors and font size. This allows the configuration of Web Client to be consistent with other deployed applications or with corporate colors.

### Selecting Styles

The Visual Themes node lets the administrator define a visual "look," or style, for all Web Client end-users. Styles are defined and modified by choosing Tools > Administration > Visual Themes; the Modify Styles page appears.

On the Modify Styles page, the Style Theme list box lists all *currently* available themes. The themes with an asterisk (\*) are the out-of-box themes, or System Styles, which cannot be modified or deleted. New themes can be developed using Save As.

You can select a visual style theme from the drop-down list and begin modifying it with one of the following action icons:

- Click Edit to modify the selected style theme. The Customize Styles page appears. For more details, see Modifying Styles. Note that you cannot modify the System Styles, denoted by the "\*" in the name.
- Click Delete to delete the selected style theme. Note that you cannot delete the System Styles, denoted by the "\*" in the name.
- Click Save As to save the selected style theme. You are prompted to give it a new name. This is the way you can "modify" a default System Style, or create a new a style theme from one that you have previously modified. For more details, see Modifying Styles.

Once you have modified a style theme, you can use these buttons for further actions:

- Click Preview to preview the selected or modified style theme. This displays the Web Client interface in the selected style theme on your machine only. (All other users still see the user interface in the current style theme.)
- Assuming you are satisfied with what you see in the preview, you can click Apply Globally to set the selected style theme to become the current style theme. This changes the display for all users: this happens for a given user as soon as their screen is refreshed, or, of course, when a user next logs in to Web Client.
- If you wish to make further modifications to the style theme you are modifying, click Edit. To cancel the preview of the selected style theme, click Cancel. You are returned to the Administration page.

## Modifying Styles

You can modify color themes and font sizes that users see in Web Client as follows. Remember that System Styles, denoted with "\*" in the name, cannot be modified, even though you can enter changes and use the Preview button to see those results; please see Step 2 below.

### To modify a style theme:

1. In Web Client, click Tools > Administration > Visual Themes. The Modify Styles page appears.
2. As long as a style theme does not contain an "\*" in its name, you can select the theme you want to modify and click Edit. The Customize Styles page appears, listing the style properties.  
  
For the default System Styles, select the theme you want to modify and click Save As. The Save As New Style dialog appears, enter the new style name, and click Save. Now the new name is selected in the Style Theme field, and you can simply click Edit and begin modifying this style theme.
3. On the Customize Styles page, there is a list of Style Properties, which are described below. To change the color for a Style Property, click the Color Picker (drop-down) button and select a color. When you click on a color hue, its HTML color code appears in the Value field; you can click another hue for that property, or continue down the list of Style Properties. (The selected hues appear in the Sample column only after you click Save.)

Note that the Info Section Text Size property changes point size of type, not a hue (see

Description).

4. When you want to preview your selections, click **Save**. Then you can click the **Preview** button, as detailed in the previous topic.

If you don't want to keep the new style in the **Style Theme** list, you can simply **Delete** it.

The following table lists the **Style Properties** with descriptions of what each property modifies in the **Web Client** interface.

Property	Description
Top Pane Background Color	Background color of the main toolbar
Frame Border Color	Color of the frame at the top and bottom panes
Left Pane Controller Background Color	Background color of controls in the left pane
Left Pane Background Color	Background color of the left pane. This also controls the background color of the Login page.
Active Tab Background Color	Background color of the selected tab
Active Tab Text Color	Text color for the selected tab
Info Section Background Color	Background color for all information areas and error messages
Info Section Text Color	Text color for information areas
Info Section Text Size	Text size for all information areas and error messages
Label Text Color	Text color for all form labels and actions
Data Text Color	Text color for data in forms and tables
Heading Text Color	Text color for heading type attributes
Heading Background Color	Background for heading type attributes

## Agile PLM Variables

This section lists Agile PLM variables you can use when you configure the system.

### Default Value Variables

The following variables are used for setting default values for attribute properties.

Variable	Description
\$TODAY (must be uppercase)	The current date  \$TODAY is not supported in Text type attributes. If you set \$TODAY as the default value for a Text type attribute, the time is displayed in GMT.



Variable	Description
\$NOW (must be uppercase)	The current date and time  \$NOW is not supported in Text type attributes. If you set \$NOW as the default value for a Text type attribute, the time is displayed in GMT.
\$LATESTREV (uppercase)	Defines whether or not the latest revision of an item has been released or not.  The only values possible are \$LATESTREV = Is Introductory \$LATESTREV = Is Released.  For more information, see <a href="#">Using \$CURRENTREV and \$LATESTREV</a> on page 113.
\$CURRENTREV (uppercase)	The current revision of the object.  For more information about \$CURRENTREV, see next topic and <a href="#">Using \$CURRENTREV and \$LATESTREV</a> on page 113, and <a href="#">Controlling the Ability to Modify Items at Introductory Revision with \$CURRENTREV</a> (on page 210).

## \$CURRENTREV Criteria Logic

Agile has a special variable that can be used in Criteria against items, \$CURRENTREV, that allows administrators to build in privilege control based on the displayed revision. With a criteria written using \$CURRENTREV, Agile evaluates the currently selected revision in Web Client or Java Client to evaluate the match. That is, when a user has selected a revision in the Revision drop-down list, the \$CURRENTREV criteria is evaluated against that displayed revision.

This functionality is discussed in [Controlling the Ability to Modify Items at Introductory Revision with \\$CURRENTREV](#) (on page 210).

## Privilege Mask Criteria Variables

You may select the following variables when establishing privilege mask criteria.

Variable	Description
\$AFFECTEDITEMTYPE	Inserts the type (subclass) of object that is listed in the <b>Affected Items</b> tab or field.
\$ATTRIBUTENAME	Inserts the name of the attribute that is selected in the <b>Attribute Watermark</b> field (see <a href="#">Banner and Watermark Properties</a> on page 251).
\$APPROVER	Inserts the name(s) of the approver(s) of the workflow
\$CHECKOUTUSER	The user who checked out the object.
\$CREATEUSER	The user who created the object.
\$CURRENTREV	The current revision of an object you have selected from the rev list, or the revision of an object you are currently viewing. (See previous topic.)

Variable	Description
\$DEFAULTSITE	Specifies if an item's manufacturing site contains the user's default site.
\$LATEST	<p>The latest revision of an object; more specifically, the latest released revision for a released item, or the latest pending revision for an unreleased item (with pending changes). \$LATEST is meaningful only in the Read and Modify privileges.</p> <p>\$LATEST goes on the right side of the equation. Valid use is:</p> <p>\$CURRENTREV (equal, not equal) \$LATEST.</p> <p>More information about \$LATEST is in <a href="#">Item Relationship Creation Using \$CURRENTREV and \$LATEST Criteria</a> (on page 116).</p>
\$LATESTFILEVERSION	The latest file folder version.
\$MAINORG	Supplier users can read and discover all users in the buyer organization as well as in their own organization (which, alone, is handled by \$USERORG variable). Supplier users are prevented from reading and discovering users from other supplier organizations.
\$OBSERVER	Inserts the name(s) of the observer(s) of the workflow
\$USER	Inserts the name(s) of PLM users. A criteria such as "\$USER Equal to \$APPROVER" can be used with certain privileges, for example, Modify.
\$USERGROUP	Inserts the name(s) of PLM user groups, based on a given user's User Group property being populated with a value, that is, a Group name. So, If a field is tied to the Admin list for User Groups, criteria can match a user to a user group; this criteria can be used with Read and Discover privileges to grant object access and control to a group or team.
\$USERORG	Used to create criteria based on the relationship between an attribute (organization or supplier) that specifies an organization, and the organization of the logged-in user.
\$USERSITE	Used to create criteria based on the relationship between an attribute (site) and sites assigned to the logged-in user.

## Workflow Assignment and Status Type Variables

You may select the following variables when establishing workflow assignment:

Variable	Description
\$APPROVER	The approver(s) of the workflow.
\$OBSERVER	The observer(s) of the workflow.
\$ORIGINATOR	The originator of the routable object.

You may select the following "status type" variables under the Criteria column when setting up workflows:

Variable	Description
\$UNASSIGNED	Unassigned status type.
\$CURRENTSTATUS	The current status type.
\$STATUSTYPE.PENDING	Pending status type.
\$STATUSTYPE.SUBMIT	Submitted status type.
\$STATUSTYPE.REVIEW	Review status type.
\$STATUSTYPE.RELEASED	Released status type.
\$STATUSTYPE.COMPLETE	Completed status type.
\$STATUSTYPE.CANCEL	Canceled status type.
\$STATUSTYPE.HOLD	Hold status type.

## Routing Manager Variables

Routing manager variables facilitate management of routable objects. These variables represent the user selected from the Change Analyst, Compliance Manager, Component Engineer, Program Manager, Quality Administrator, Quality Analyst, and Price Administrator lists.

Variable	Description	Related routable objects
\$CHANGEANALYST	User selected from the Change Analyst list	Engineering change orders (ECOs), engineering change requests (ECRs), manufacturer change orders (MCOs), deviations, stop ships
\$COMPLIANCEMANAGER	User selected from the Compliance Manager list	All declarations
\$COMPONENTENGINEER	User selected from the Component Engineer list	Manufacturer change orders (MCOs)
\$PROGRAMMANAGER	User selected from the Program Manager list	Packages
\$QUALITYADMINISTRATOR	User selected from the Quality Administrator list	Product service requests: Problem Reports & NCRs
\$QUALITYANALYST	User selected from the Quality Analyst list	Quality change requests: CAPAs & Audits
\$PRICEADMINISTRATOR	User selected from the Price Administrator list	Price change orders (PCOs)

## Multiple Language Support

Agile PLM is an internationalized application that permits companies to enter non-English label

data, and for users to see their client user interface in their preferred language. English is included with all licenses. Agile PLM is certified for Japanese, Simplified Chinese, French, German, and Traditional Chinese.

---


Note	For the Product Governance & Compliance solution, there is now a fully supported Japanese version of the Rollup in Excel template. Localized versions of the Rollup in Excel template are supported in Chinese, French, and German. Additionally, there is now a fully supported Japanese version of the JGPSSI template for creating JGPSSI Declarations.
------	--

---

Every user has a language preference (<user object> > Preferences > Format Preferences (heading only) > Language) that you will likely set during configuration of your company's business objects (which includes, of course, Agile users).

If the company has purchased a localized language as part of PLM, that language will appear in the drop-down list for the Language property.

### To set the Language preference for a user:

1. Open the user profile. (This will likely be set when you create your company's Agile users. This task instructs for an already-created user object.)
2. Click the Preferences tab.
3. Under Format Preferences, click  for the Language field.  
The drop-down list shows English and any other languages your company has licensed.
4. Select a language, and click Save. That user will see supported elements of Agile in that language.

If you change any user's Language preference, that user (if logged in) must log out and log back in to see changes in their user interface.

User can switch their own Language preference (again, non-English languages that the company has a license for). In Java Client, the user clicks View/Edit Current User in the main toolbar and follows the previous instructions.

In Web Client, the user's path to the Language setting is Settings > User Profile > Preferences > Edit > Language (under Format Preferences).

## Administrator Data that is Supported for Multi-Language Capability

We use the term "multi-language capability" to refer both to those "Administrator-editable" objects that can hold different licensed languages inputs separately, and those non-editable objects that can be displayed in different languages according to any end-user's Language preference setting.

The following list includes those Administrator nodes whose objects are supported by the multi-language capability. If the node is listed as supported, it does not matter whether the object is created by the administrator or by a user. (As always, the ability for users to create an object in Agile is defined by their roles and privileges.) Names and Descriptions of these objects are supported for multi-languages unless otherwise noted.

### Administrator Nodes

Administrator-editable items can hold names in any licensed language. The administrator can

configure these items into a different language for users by setting the Language user preference. For instance, Company A has a localized version of Agile PLM with the license for Japanese (and, by default, an English license). The administrator creates a list; he can name the list differently for English users and Japanese users. Users with language preference set to Japanese will see the list named in Japanese as the administrator configured.

Multi-language support is provided for the following kinds of objects:

***Data Settings***

- Classes
- Character sets
- Lists
- Process extensions
- Autonumbers
- Criteria

***Workflow Settings***

- Workflows

***User Settings***

- Roles
- Privileges

***System Settings***

- Notifications (Name, Description, Subject, Body)
- Full Text Search is supported for attachment files in Japanese, Traditional Chinese, Simplified Chinese, German, and French localized versions
- Product Portfolio Management:
  - Schedule Status
  - Cost Status
  - Quality Status
  - Resource Status
  - Dashboard Management
  - Default Role
- Agile Content Service:
  - Subscribers
  - Destinations
  - Events
  - Filters
  - Package services
  - Response services
- Product Governance & Compliance:

- Signoff Message

## Predefined System Objects

Objects that are predefined in Agile—that is, are not editable in Administrator, for example, an Example Role—are fully supported by multi-language capability. For instance, a user whose Language preference is English who logs in will see the “Example–Administrator” role in English; when the same user logs in with the Language preference set to Japanese, he will see a translation of “Example–Administrator” as configured by the Japanese user administrator.

## Administrator Data that is Not Supported for Multi-Language Capability

While most types of Administrator data are supported for multi-language capability, the following types of Admin data are not supported for multi-languages, but only in localized user interfaces.

### User Settings

- Users
- User Groups
- Supplier Groups

### System Settings

- Viewers & Files
- Company Profiles
- PCM Ship-To Location

### *Any values/strings input by user*

### *Attribute names with "01", "02", "03", etc appended*

As an example, let's say Company B has a localized version of Agile PLM with the license for Simplified Chinese (as well as the English license). The administrator, who has a language preference of English, creates a user group and names it UserGroup\_1. Then, another Agile administrator for Company B, whose language preference is set to Simplified Chinese, changes the name of UserGroup\_1 into a Chinese name with Chinese characters. Now the name of the user group appears to *everyone* as the Chinese name in Chinese characters, even those users whose language preference is English.

---

Note	Full Text Search is supported for attachment files in Japanese, Traditional Chinese, Simplified Chinese, German, and French localized versions.
------	---

---

## Configuring a System for Multi-Languages

When you set up fields in any language, you have to be logged in with your own Language preference set to that language. If you make changes in Japanese with your Language preference set to Japanese, and then you want to make changes in English, you must change your Language preference to English, log out, log back in, and proceed. Or you can log out and log back in as a different administrator user whose Language preference is English.

To give a picture of how the Language setting for individuals is handled by the multi-language

capability in Agile, let Jim and Jan be two users:

- Case 1: Company C has English version of Agile only. Everyone in Company C sees Agile user interface and business objects in English; no user can change their Language user preference to another language.
- Case 2: Company D has localized version of Agile with the license for Japanese (and, by default, an English license). You have configured the company so all users' Language preference is Japanese. Jim sets his Language user preference to English. After logging back in, Jim now sees his user interface and the objects he creates in English. Jan is a typical user whose Language preference has remained Japanese: the objects that Jim created appear to Jan in Japanese.
- Case 3: Company E has localized version of Agile, with the license for Simplified Chinese. The administrator has configured the users at the Hong Kong office so their Language user preference is Chinese. Other people in Company E working outside Hong Kong still keep English as their language preference. Now the administrator creates a subclass of the Parts class, and names it "Modules". Objects from this subclass appear to everyone in Company E with the name Modules, no matter which Language is set in the user preference.

Later on, the administrator decides that the Modules subclass should be renamed in Chinese for the Hong Kong users. He sets his own Language preference to Simplified Chinese, and renames the Modules subclass as a translated name in Chinese characters. Now the Modules subclass name appears in Chinese characters to all Hong Kong users with Language user preference set to Chinese. But the English users still see the subclass name Modules in English.

- Case 4: Company F has localized version of Agile, with the license for Simplified Chinese. The administrator has configured the users at the Hong Kong office so their Language user preference is Chinese. Everyone there inputs information (for instance, in creating objects) in Chinese. When a user in Hong Kong creates a business object, it appears in Chinese to everyone in Company F, no matter which Language they have set in the user preference.

If you create a new subclass, its name can enter the system in localized (translated) form; however, if you rename the newly created subclass, or any subclass, it is renamed in the same language you are logged in with (Language user preference).

For Java Client to show non-English characters (in the user interface and user-entered text), it must be running on an operating system that supports a particular language. If it is not, some anomalies can appear, for example, "blank squares" instead of proper non-English characters. This is often the case for double-byte character sets such as Japanese and Chinese.

For instance, Jan is using a machine with a Japanese OS. She enters Japanese text into an ECO's Description field. Then Jim launches Java Client on an English OS machine; when he views this ECO, Japanese text that was entered into the Description field may appear corrupted (having "blank squares"): the English OS may not support Japanese characters (Windows English version requires installing the Asian Language Pack in order to support Japanese characters).





# Classes

**This chapter includes the following:**

---

▪ Configuring Business Objects with Agile PLM Classes .....	45
▪ Agile PLM Class Structure .....	46
▪ Viewing Agile PLM Classes .....	51
▪ Customizing Lifecycle Phases .....	51
▪ Configuring Subclasses .....	53
▪ Configuring Tabs .....	58
▪ Modifying the Format of Tabs .....	59
▪ About Attributes, Flex Fields, and Read-Through Fields .....	65
▪ Defining Attributes .....	70
▪ Configuring Attributes .....	77
▪ Using Custom Icons for Subclasses or Company Logo .....	80
▪ Quick Access to Objects and Files .....	81

This chapter describes the predefined business classes delivered with Agile PLM, and how to create subclasses, assign autonumber sources, and tailor the arrangement of tabbed windows and formatted fields for your product data.

## Configuring Business Objects with Agile PLM Classes

The Classes node provides a framework for classifying objects in Agile PLM. Everything that Agile PLM users create are objects. As administrator, you can define new types of business objects, or modify the default classes and subclasses.

---

**Note**      The default classes that are available in Agile PLM depend on which licenses your company purchased. Unavailable classes appear in red type on the Classes page.

---

Each class represents a kind of action (business process) or kind of entity (business object). Every class has at least one default subclass. Every object created in Agile PLM is an instance of a subclass.

Before you start configuring Agile PLM, you should consider what types of business objects are required by your company. You can then tailor Agile PLM to your requirements. For example, you might want to create several new subclasses in the Parts class to organize the kinds of parts that your company manufactures or purchases.


The Agile PLM object framework is ready to use out-of-box, or you can tailor it as follows:

- Create additional subclasses
- Modify classes and subclasses as needed
- Create new attributes for classes (Page2) and subclasses (Page3) as needed

- Modify the properties of attributes
- Display or hide attributes or tabs
- Reorder table columns or fields

## Agile PLM Class Structure

Agile PLM classes have the following three levels:

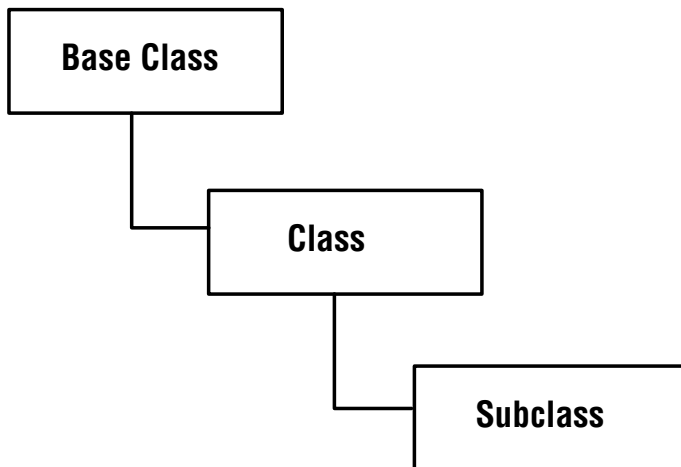

- **Base Class** — The highest level object. Base class is the parent object of classes. You cannot create or delete base classes, but you can rename them. Examples of provided base classes are Users, Items, and Changes.
- **Class** — The primary level of organization in Agile PLM. Also called *main class*. Inherits the general properties and process extensions of its base class. Classes are the organizing framework for the creation of subclasses. You cannot create or delete classes, but you can rename or disable them. Examples of provided classes are Parts, Change Orders, and Change Requests classes.
- **Subclass** — Inherits all properties and attributes of its parent class. Subclasses arrange the information and data that describes a specific business object in Agile PLM. You can rename subclasses. You can also create a subclass in any class except Users, Automated Transfer Orders, Requests For Quote, RFQ Responses, and Standard Reports. You can delete or disable any subclass except those descended from Items, Changes, and File Folders base classes. Examples of provided subclasses are User, Part, Document, ECO, and ECR.

**Caution** Before renaming any classes, particularly the base classes, make sure you become familiar with the default classes provided with Agile PLM. Class names must be unique.

## Routable and Non-Routable Objects

Each class represents a specific process or kind of entity:

- **Routable objects** are created from classes that represent *processes*, such as a change in the change control process, or a transfer order, or a product service request. These objects can be

routed to Agile PLM users for approval or other input via workflows (see [Workflows](#) (on page 117)).

- Non-routable objects are created from classes that represent *entities* or things, such as parts, sites, RFQs, users, prices, or reports. These objects can be “flagged” for progress via lifecycle phases (see [Customizing Lifecycle Phases](#) (on page 51)). Note, however, that non-routable objects—especially parts and documents—can be changed by the process of information-gathering via workflows, which are created through such routable objects as change orders or change requests.

---

**Note** The File Folders class has a default, non-editable workflow with a single Review status and no other statuses. This provides file folder objects with a Routing Slip tab, which allows approvers to sign off and comment on a file folder. However, file folder objects also have lifecycle phases and are considered non-routable.

---

## Installed Agile PLM Classes, Base Classes, and Subclasses

Your company may be licensed to a subset of the list of object types in Classes node. The following two tables list all the possible installed object types in Agile PLM, grouped by the routable and non-routable distinction.

Base class	Class	Subclass	Description
Routable objects: the means to direct or recommend changes to non-routable objects; these classes have a default workflow for changes to seek approval from other users; objects from these classes can be changed without approval.			
Changes	Change Orders	ECO	Directives to change an item; can advance the revision (“rev”) of an item
	Change Requests	ECR	Requests for a change to an item
	Deviations	Deviation	Directives to temporarily substitute one item for another
	Manufacturer Orders	MCO	Changes to AML data, such as information about manufacturers or manufacturer part numbers
	Price Change Orders	PCO	Directives to change a published price; can advance the revision of a published price
	Site Change Orders	SCO	Changes to BOM and AML information for a specific site
	Stop Ships	Stop Ship	Directives to stop shipping/using an item
Declarations	Substance Declarations	Substance Declaration	Seeks compliance information for each substance within the specification

Base class	Class	Subclass	Description
	Part Declarations	Part Declaration	Seeks part-level compliance information and other composition header-level information (manufacturing parameters)
	JGPSSI Declarations	JGPSSI Declaration	Seeks compliance information (weights) according to the JGP standard.
	Homogeneous Material Declarations	Homogeneous Material Declaration	Seeks complete breakdown of parts on the Bill Of Substances and compliance information at the homogeneous material level
	Supplier Declarations of Conformance	Supplier Declaration of Conformance	Seeks compliance with specifications from customers and government agencies
	IPC 1752-1 Declarations	IPC 1752-1 Declaration	A Joint Industry Guide (JIG) material composition declaration for electronic products
	IPC 1752-2 Declarations	IPC 1752-2 Declaration	A homogeneous material composition declaration for electronic products
Packages	packages	Package	Packages of data to share with partners
Product Service Requests	Problem Reports	Problem Report	Quality incidents with items or products
	Non-Conformance Reports	NCR	Quality conformance issues with items or products
Programs	Activities	Program; Phase; Task	Components of project planning in Product Portfolio Management; activities are time-based objects to which resources can be assigned
	Gates	Gate	Project management milestones in Product Portfolio Management; gates identify cross-PLM deliverables of the product development process to enable executive reviews of programs
Quality Change Requests	Corrective and Preventive Actions	CAPA	Requests for corrective actions and preventive actions
	Audits	Audit	Proactive reviews of business processes
Transfer Orders	Automated Transfer Orders	ATO	Transfer or publication of a product record that is automatically triggered by a workflow

Base class	Class	Subclass	Description
	Content Transfer Orders	CTO	Transfer or publication of a product record that is manually triggered

Base class	Class	Subclass	Description
<b>Non-Routable Objects:</b> objects in these classes are not routed to Agile PLM users with workflows; objects from some of these classes, however, are changed by a user submitting a workflow (from routable classes) for approval from other users.			
Customers	customers	Customer	Clients of the company
Discussions	discussions	Discussion	Informal, threaded dialogue
File Folders	File folders	File Folder Markup	Objects that include files or URLs; this class includes all file folder objects except historical report file folders
	Designs	Design	Objects that permit building design structures in the CAD environment
Items	Documents	Document	Specifications, blueprints, manufacturing data, and so forth
	Parts	Part	Parts manufactured within the company, or provided by manufacturers or suppliers and given internal part numbers
Manufacturers	manufacturers	Manufacturer	Qualified manufacturers
Manufacturer Parts	Manufacturer parts	Manufacturer Part	Parts provided by manufacturers
Part Groups	Part groups	Commodity Part Family	Containers of other parts (items or manufacturer parts) that share the such properties as mass or composition information.  this object was named "Commodities" in previous releases of Agile PLM.
Prices	Quote Histories	Quote History	Organizes bid prices from RFQ responses; cannot be revised by a PCO (see grouping of Changes in preceding table)
	Published Prices	Published Price; Contract	Organizes prices of the company's products; can be revised by a PCO (see grouping of Changes in preceding table)

Base class	Class	Subclass	Description
<b>Reports</b>	Standard Reports	Administrator Report; Standard Report	The out-of-box reports for administrators (Administrator Reports) and users (Standard Reports include Products, Sourcing, Quality, Process, Personal, and Global reports)
	Custom Reports	Custom Report	Reports created and used within company
	External Reports	External Report	Reports created outside Agile PLM
<b>Requests For Quote</b>	Requests for quote	RFQ	Requests for quote, which are assembled from sourcing projects and sent to suppliers for formal bids
<b>RFQ Responses</b>	RFQ responses	RFQ Response	Bids, that is, responses from suppliers to your company's RFQs
<b>Sites</b>	sites	Site	Manufacturing locations within the company, or closely partnered with the company
<b>Sourcing Projects</b>	Sourcing projects	Sourcing Project	Work preparatory to creating RFQs and capability for analysis across multiple RFQs
<b>Specifications</b>	specifications	Specification	Lists of banned substances (or substances of concern) and their threshold values
<b>Substances</b>	substances	Substance	A single chemical element used in composition of items, manufacturer parts, and part families
	Materials	Material	A compound chemical, a substance consisting of multiple substances
	Subparts	Subpart	A subunit of a component, used to get to the homogeneous material level to collect compliance information
	Substance Groups	Substance Group	A group of multiple substances, with a base substance that is what legislation is interested in, for example, "Lead and Lead Compounds"
<b>Suppliers</b>	suppliers	Broker; Distributor; Component Mfr.; Contract Mfr.; Mfr. Representative	Qualified suppliers of manufacturer parts; used by PCM (which uses the out-of-box subclasses) and PG&C solutions
<b>Users</b>	users	User	Individuals using the Agile PLM system

Base class	Class	Subclass	Description
User Groups	User groups	User Group	Groups of people using the Agile PLM system, e.g., departments, teams, site-specific groups

## Disabling Object Types

When a base class is disabled, the child classes and subclasses are automatically disabled. When a class is disabled, the child subclasses are disabled. When a base class, class, or subclass is disabled, it is “grayed out” in the user interface for Java Client or Web Client. Examples of where the disabled class would be unavailable are the Create menu and search options. Existing searches and criteria are not deleted or modified if a class is disabled; existing objects of disabled object types remain in the Agile PLM database.

The following base classes cannot be disabled, nor can their child classes or out-of-box subclasses:

- Items
- Changes
- Users
- File Folders

## Viewing Agile PLM Classes

**To view an Agile PLM class or subclass:**

1. On the Admin tab, under Data Settings, double-click Classes. The Classes window appears.
2. Double-click the class or subclass you want to view.
3. Now click the User Interface Tabs tab. double-click any row to bring up that tab’s information:

The General Information tab displays the name and description of the UI tab and whether it is visible.

Once you have opened one tab, a drop-down list allows you to switch to any of the other tabs for that object.

## Customizing Lifecycle Phases

Lifecycle phases describe the valid phases for classes whose objects are non-routable, that is, they do not follow workflows. Items, sites, manufacturers, manufacturer parts, prices, sourcing projects, RFQs, RFQ responses, suppliers, customers, prices, commodities, specifications, substances, and file folders all have lifecycle phases.

Lifecycle phases at the base class level are inherited by classes and subclasses. The lifecycle stamp is automatically created for you using the name and color you specified for each lifecycle phase.

## Modifying a Lifecycle Phase

You can modify lifecycle phases for the following base classes:

- Commodities
- Customers
- File Folders
- Items
- Manufacturer Parts
- Manufacturers
- Prices
- Specifications
- Substances
- Suppliers

---

Note	You cannot delete or rename the Preliminary lifecycle phase for items. Objects in the Sites, Sourcing Projects, Requests for Quote, and RFQ Responses classes have read-only lifecycle phases that cannot be renamed or deleted.
------	--

---

### To modify a lifecycle phase **settings**:

1. Select the base class you want to work with, and select the Lifecycle Phases tab. The Lifecycle Phases window appears.
2. Double-click the lifecycle phase you want to modify.
3. In any editable field, enter a new value or select from the drop-down list.
4. When you have finished, click Save.

## Adding a Lifecycle Phase

You can add lifecycle phases to base classes, classes, or subclasses.

### To add a lifecycle phase:

1. Select the class you want to work with, and select the Lifecycle Phases tab. The Lifecycle Phases window appears.
2. Click the New button. The Define Lifecycle Phase dialog box appears.
3. Enter a name and description for the lifecycle phase. The name can be up to 29 characters.
4. In the Enable field, select Yes or No from the drop-down list.
5. For items, there is an additional field, AddLifecyclePhaseOnBomRule. Select Allow, Disallow, or Warning (the default).

If you select Disallow, users will be prevented from adding items currently in this lifecycle phase to an item's BOM table.



- 
6. When you are done, Click OK.

---

**Note** To select a different color for the lifecycle phase, modify it on the appropriate lifecycle phase's tab.

---

## Removing a Lifecycle Phase

You can remove a lifecycle phase only from the level in which it was created. When you remove a lifecycle phase from a class, it is also removed from all subclasses that inherit from the class. For example, if you create a new lifecycle phase in the Items base class, you can open the Items base class later to remove it. The lifecycle phase is also removed from the Parts and Documents classes, and the Part and Document subclasses.

### To remove a lifecycle phase:

1. Select the class you want to work with, and select the Lifecycle Phases tab. The Lifecycle Phases window appears.
2. Select the lifecycle phase you want to delete.
3. Click the Delete button.
4. Click OK in the confirmation message to delete the lifecycle phase.

The lifecycle phase is deleted and is no longer available as a selection in Agile PLM.

If you delete a lifecycle phase that has already been used to release an item in Agile PLM, it still indicates that phase, but users cannot assign that phase in the future.

---

**Note** You cannot delete the Preliminary lifecycle phase for items.

---

## Configuring Subclasses

When users create an object in Agile PLM, they first specify its subclass, such as ECO, Part, Capacitor, and so on. These subclasses are created and defined in the Classes node. The defined Agile PLM classes are each equipped with at least one subclass. You can create more subclasses in any class. For example, the Parts class can have subclasses called Capacitors, Resistors, Diodes, and so on.

You can decide to use just the default subclasses, define new subclasses, or rename subclasses.

You can delete a subclass as long as it has not been used to create any of these objects from the administrative nodes:

- Search criteria
- An object in Java Client or Web Client
- A privilege mask

---

**Note** You cannot create new subclasses for the following classes:

---

- Users class
- Automated Transfer Orders class

- Requests For Quote class
- RFQ Responses class
- Standard Reports class

**Important** Setting up new subclasses in Agile PLM requires a lot of planning. If you set up new subclasses without an overall plan, you may find in a few weeks that you want to “start over,” only now new subclasses are in use and will not be easy to remove from the system. It is better to become proficient with Agile PLM objects using the out-of-box classes and subclasses while you develop an overall plan that covers your company’s needs.

## Before You Begin

Consider the following details before creating a new subclass:

- For which Agile PLM class will you create a subclass?
- What name will you give the new subclass? Remember that a subclass name must be unique, and cannot be used more than once in the same Agile PLM system.
- Do you need to track product data specific to this subclass? If so, you may also want to set up a Page Three tab for this subclass.
- If you plan to create a Page Three for the new subclass, you will need to adjust some users’ roles and privileges to allow Page Three modification.

For new subclasses that have autonumbering, you should consider the following:

- Will you permit users to assign numbers manually for the new subclass?
- Will you be creating new autonumber sources for the subclass, or will you use existing autonumber sources?
- If you plan to use existing autonumber sources, which ones?

## Viewing Subclass Properties

You can see how a subclass is configured by viewing its properties. For example, to see what number sources are assigned to a Change Orders subclass, you can view the subclass properties in Administrator.

### To view the properties of a subclass:

1. Under Data Settings, double-click Classes. The Classes window appears.
2. Double-click the name of the subclass you want to view.

The properties of the subclass are listed on the General Info tab.


## Changing the AutoNumber Source Property

Subclasses that can be autonumbered have an AutoNumber Source property. Since subclasses in the Manufacturers, Manufacturer Parts, and Sites classes do not use autonumbering, they do not have an AutoNumber Source property.

The Agile PLM administrator can change the AutoNumber Source property for a subclass to do the following:

- Require automatic number assignment for the subclass, so that manual number assignment is prevented.
- Assign one or more different autonumber sources for the subclass.
- Remove autonumber source assignments from the subclass.

### To change the autonumber sources used for a subclass:

1. Under Data Settings, double-click Classes. The Classes window appears.
2. Double-click the name of the subclass you want. The subclass properties window appears.
3. Next to the AutoNumber Source field, click . The List Chooser dialog box appears.
4. To move a number source from the Choices list to the Selected list, select it, and click the right arrow. You can also move the number source by double-clicking it.

You can select more than one number source.

5. Click OK to close the dialog box.
6. If you want to create a new autonumber—more customized than those offered by the automatic sequencing of autonumbers—click the New AutoNumber button and follow the dialog box. For more information, see [Creating a New Autonumber Source](#) (on page 104).
7. If you want to prevent users from entering an object number manually, select No in the Autonumber Required drop-down list. For more information, see the next section.
8. Select Yes or No in the AutoGenerate drop-down list.
9. Click Save.

## Preventing Manual Number Assignment

If you decide to require autonumbering for a specific subclass, you can prevent users from entering numbers manually. You can require autonumbering for any subclass that can be autonumbered.

---

Note	Several Agile PLM subclasses, such as Manufacturer and User, do not allow autonumbering.
------	--

---

### To prevent manual number assignment for a specific subclass:

1. Under Data Settings, double-click Classes. The Classes window appears.
2. Double-click the name of the subclass you want. The subclass properties window appears.
3. In the Autonumber Required drop-down list, select Yes.
4. Click Save.

## Changing a Subclass Name or Description

You can change the name of any subclass. If you change the name of a subclass that has already been used to create objects in Agile PLM clients, the subclass name for the existing objects is changed to reflect the new name. You can also enter a different description for the subclass; a description is optional.

**Caution** Although all characters are supported within Agile PLM, and should not create issues within Agile's clients, it is recommended that you avoid using the following characters when renaming or creating subclasses, due to issues that could potentially arise in integrations or custom applications written on the SDK.

, comma    . period (dot)    : colon    ; semicolon    = equal sign

### To change the name of a subclass:

1. Under Data Settings, double-click Classes. The Classes window appears.
2. Double-click the name of the subclass you want. The subclass properties window appears.
3. Enter a new name and description in the Name and Description fields.
4. Click Save.

The subclass name is changed for all objects in the subclass. The new name appears as a selection in the Type drop-down list in the New Object dialog box in Java Client, and the new name appears as a selection in the Subclass drop-down list in the Create wizard in Web Client.

## Changing the Site-Specific BOM Property

On the subclass properties window, there is a property called Site-Specific BOM. The value for the property is either Allow or Disallow.

- Allow – The subclass may be added to a site-specific portion of a BOM.
- Disallow – The subclass may not be added to a site-specific portion of a BOM.

This property determines whether a Parts or Documents subclass may be part of a site-specific BOM.

For example, let the Manufacturing Item subclass have the Site-Specific BOM property set to Allow, and subclass Part have it set to Disallow. A user at the Singapore site can add any manufacturing item to the site-specific section of the BOM for Singapore, but not add a part to the site-specific section of the BOM for Singapore. A Global user can add either a manufacturing item or a part to the Global section of the BOM.

The default value for all newly created Parts and Documents subclasses is Allow.


### To change the Site-Specific BOM property of a subclass:

1. Under Data Settings, double-click Classes. The Classes window appears.
2. Double-click the name of the subclass you want. The subclass properties window appears.
3. In the Site-Specific BOM field, select Allow or Disallow. Click Save.

## Creating a New Subclass

This is the procedure for creating a new subclass. Please review the points in [Before You Begin](#) (on page 54). Remember you can keep a subclass disabled while you run some tests before releasing it to your users.

### To create a new subclass:

1. Under Data Settings, double-click Classes. The Classes window appears.
2. Click the New Subclass button. The New Subclass dialog box appears.
3. Select a class from the drop-down list.
4. Fill in the Name and Description fields, and select Yes or No in the Enabled list. You must use a unique subclass name.
5. Next to the AutoNumber Source field, click . The selection dialog box appears.
6. To move a number source from the Choices list to the Selected list, select it, and click the right arrow. You can also move the number source by double-clicking it.  
You can select more than one number source.
7. Click OK to close the dialog box.
8. If you want to create a new autonumber—more customized than those offered by the automatic sequencing of autonumbers—click the New AutoNumber button and follow the dialog box. (This task is detailed in [Creating a New Autonumber Source](#) (on page 104).)
9. If you want to prevent users from entering an object number manually, select No in the Autonumber Required drop-down list. (For more information, see [Preventing Manual Number Assignment](#) (on page 55).)
10. Select Yes or No in the AutoGenerate drop-down list.
11. If you selected the Parts or Documents class in step 3 above, set Site-specific BOM to Allow or Disallow. (For more information, see [Changing the Site-Specific BOM Property](#) on page 56.)
12. When you have specified all the settings, click OK.

The new subclass appears under the class name on the Classes window.

---

Note	Number sources are created and configured in the AutoNumbers node. For instructions, see About Autonumber Sources.
------	--

---

## Deleting a Subclass

You can delete any subclass that has not been used to create a saved search, an object, or a reusable criteria.

### To delete a subclass:

1. Under Data Settings, double-click Classes. The Classes window appears.
2. Double-click the subclass you want to delete. The subclass properties window appears.
3. Click the Delete button.
4. In the confirmation dialog box, click OK.

The subclass no longer appears under the class name on the Classes window.

---

Note	If you attempt to delete a subclass that has already been used to create a search, an object, or a reusable criteria, an error message states that the object is already in use.
------	--

---

You can also delete a subclass by displaying it, then choose Delete from the Actions menu.

## Configuring Tabs

When users open an object in Agile PLM clients, they see a tabbed page, or window of tabs. From the Classes node, you can enable (make visible) or disable (hide) most object tabs. You can also rename any object tab. You configure optional Page Two and Page Three tabs by enabling the tabs to make them visible.

Although you can hide most object tabs, you cannot disable or hide the following tabs:

- The first tab of any object, specifically:
  - Cover Page tab of any change, package, PSR, QCR, transfer order, or program
  - General Info tab of any manufacturer, manufacturer part, user, user group, site, customer, discussion, price, or report
  - Title Block of any item or file folder
- Affected Items tab of any change and the Affected Prices tab of PCOs
- Action Items tab of discussions
- Selected Content tab and Where Sent tab of any transfer order—in fact, no tab of ATOs can be disabled or hidden
- Files tab of file folders (not historical report file folders)
- Response List tab of RFQs and RFQ responses
- Replies tab of discussions
- Team tab and Workflows tab of programs

If you want to configure the attributes that appear on a tab, you must go to the setup window for that tab. See [Defining Attributes](#) (on page 70).

## About Page Two Tabs

If you need to document additional information for change orders, for example, you can enable an extra tab called a Page Two tab by default. This tab then appears next to the Cover Page tab for all subclasses in the Change Orders class. You can use the default name Page Two for this tab, or you can give it a more specific name.

---

Note	In Web Client, Page Two attributes are displayed on the Cover Page tab, under the heading Page Two (any custom tab name is not displayed). The user can scroll down to see the additional “Page Two” information.
------	---

---

## About Page Three Tabs

If you need to record additional information that is specific to a subclass, you can enable an extra tab called a Page Three tab by default. For example, you can set up a Page Three tab for the subclass Capacitors and create a field called Insulation (or multiple fields as needed), where users record information about insulation for each capacitor object created. You can use the default name Page Three, or you can give the tab a more specific name.

---

**Note** In Web Client, Page Three attributes are displayed on the Cover Page tab, below the Page Two attributes, under the heading Page Three (any custom tab name is not displayed). The user can scroll down to see the additional “Page Three” information.

---

## Showing, Hiding, or Renaming a Tab

You can customize the Agile PLM client user interface by showing, hiding, or renaming the tabs in classes.

---

**Note** If you hide the BOM tab or the Manufacturers tab, the buttons under the Redline BOM and the Redline Manufacturer tabs are disabled.

---

The name and visibility of any tab depends on the settings at the *subclass* level. For example, in the Change Orders class, if you set Page Two tab to Name = P2, Visible = No, and in ECO subclass, if you set Page Two tab to Name = P2 of ECO, Visible = Yes, then in Java Client or Web Client, the Page Two tab will be visible and appear as P2 of ECO.

### To show, hide, or rename a tab:

1. In the Classes window, locate the tab you want and double-click it to display the setup window for that tab.

For example, click Change Orders Class, display the User Interface Tabs tab, then double-click Workflow to display the setup window for the change order Workflow tab.

2. If you want, on the General Information setup tab, enter a new name for the tab.

The tab, with its new name, appears in Java Client. In Web Client, the tab data appears on the first object tab, for example, the Cover Page tab.

---

**Note** When you change the name of Page Three tabs for Content Transfer Order (CTO) subclasses, the modified Page Three tab name does not appear in the Content Service filters. The name Page Three always appears in the filters.

---

3. In the Visible drop-down list, select Yes to make the tab visible in Agile PLM clients.
4. When you have finished your modifications, click Save.

---

**Note** If you hide a Page Two or Page Three tab, any attributes configured for the tab are still visible as search selections in Java Client or Web Client unless you also hide them. See [Removing a Page Two or Page Three Tab](#) (on page 65).

---

## Modifying the Format of Tabs


Each object tab uses one of two different formats to display data in Agile PLM clients:

- Form format — Attributes appear on the tab in rows and columns, according to the attribute order, lowest number first, left to right, then top to bottom. Each attribute field is labeled. Web Client has two columns. In Java Client, the number of columns varies depending on the size of the object window.
- Table format — Attributes appear on the tab in a table. The attribute names appear as column headings in the table.

You can modify the order in which object attributes appear on object tabs in both forms and tables.

## Modifying Attribute Order on a Form Tab

In Web Client, on a form type tab, the attributes appear in one column. You can determine the order in which they appear. Starting with the lowest numbered attribute, the attributes appear from top to bottom. MultiText attributes span the width of the tab. Header attributes, which appear on Page Two and Page Three tabs only, also span the width of the tab. The following figure shows an example of how attributes appear on a form tab in Web Client.

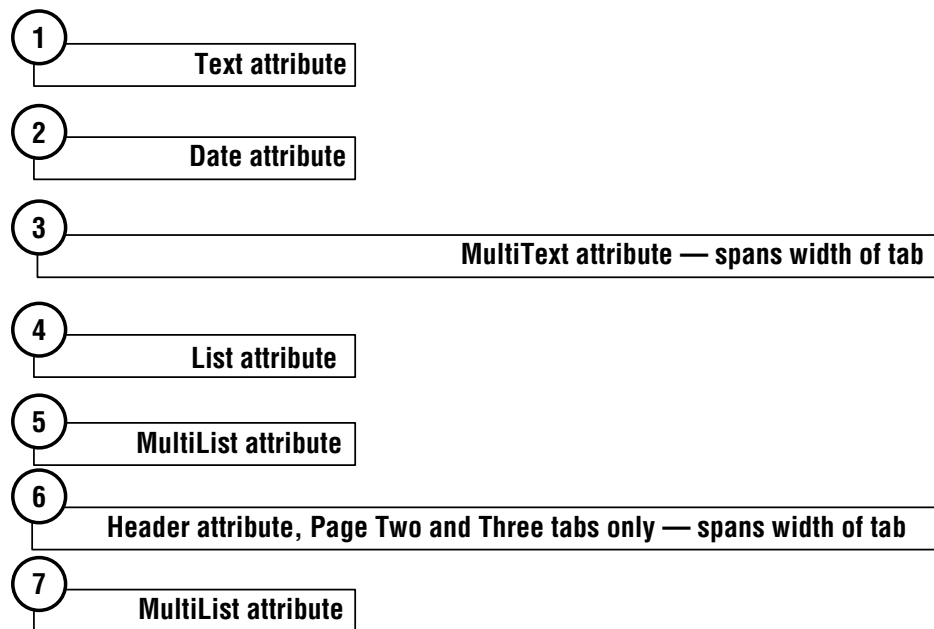

In Java Client, attributes appear on the tab in rows and columns, according to the attribute order, lowest number first, left to right, then top to bottom. The number of columns changes as the user resizes the object window. No matter how many columns are in an object window, the attributes are always displayed by attribute order. Header attributes (Page Two and Page Three) span the width of the object window.

### To modify the order of attributes on a form tab:

1. On the User Interface Tabs tab of the setup window for the class, locate the tab you want, and double-click it to display the setup window for that tab.



For example, double-click Change Orders, then double-click Cover Page to display the setup window for the change order Cover Page tab.

2. Click the Attributes tab.
3. Click the Order visible attributes button. The Define Attribute Order dialog box appears. All the object tab attributes with Visible property set to Yes appear in the list of attributes.
4. Click an attribute name to highlight it.
5. Click the up arrow to move the highlighted attribute up one position in the list. Click the down arrow to move the highlighted attribute down one position in the list.
6. Continue highlighting attributes and moving them up or down in the list until they are in the order you want.
7. When you are finished, click Save.

The attributes appear on the Attributes setup tab in the order you specified.

To verify that the order was changed, open an object in Java Client or Web Client where the tab appears. Click the tab to view the form or table and confirm the change.

## Modifying Attribute Order on a Table Tab

In both Web and Java Clients, on a table-type tab, the attributes appear in a table; the attribute names are table headings for each column. You modify the order of attributes on a table tab the same way you do on a form tab.

## Designing a Page Two or Page Three Tab

You can create extra tabs for Java Client. When enabled, these tabs are always displayed behind the first or second tab, and are named *Page Two* or *Page Three* by default. *You can change these tab names to something more specific if necessary.*

---

Note	<i>In Web Client, Page Two and Page Three information is displayed below the Cover Page information on the Cover Page tab. Users scroll down to see this information.</i>
------	---

---

While *Page Two* tabs record supplemental information for an entire class of objects, such as the *Change Orders* class, *Page Three* tabs record information specific to individual subclasses, such as *ECOs* or *Capacitors*.

The *Page Two* tab's built-in Create User feature is described next.

### About the Page Two Create User Attribute

Each *Page Two* tab has a Create User attribute that allows users with a Create privilege, but not a Read privilege, to create an object. Users with their name in the Create User list can then also open and read any pending or preliminary objects they've created.

To activate the Create User feature for a class of objects, such as *Change Orders*, you must first make the Create User attribute visible on the *Page Two* tab for that class. Then the attribute can be used both to display the name of the Create User on the tab, and to create criteria in the Criteria node.

For example, if you set the subclass criteria for a read privilege to Create User Equal To \$USER, then the privilege mask will be enabled when the current user is also the user who created the

object. For more information about Create User criteria, see [Applying Create User Criteria](#) (on page 229).

## Guidelines for Designing Page Two and Page Three Tabs

There are two stages for designing a Page Two or Page Three tab. This section outlines the process for these two stages, and then gives you detailed instructions for each step in the process. Also, see [Before You Begin](#) (on page 104).

The following is a summary of the two stages in designing a Page Two or Page Three tab.

### Stage I: Preparing Page Two or Page Three Attributes

1. Make the tab visible and name the tab.
2. Make the attributes visible, and name them.
3. Assign length properties to text attributes.
4. Assign other attribute properties, such as drop-down lists or defaults.

### Stage II: Setting Up the Tab

Set the attribute order.

The following sections provide detailed instructions for creating a Page Two or Page Three tab.

### Stage I: Preparing Page Two or Page Three Attributes

The first stage in designing a Page Two or Page Three tab is to

- Make the tab visible and name the tab. This work is done from the Page Two or Page Three General Information setup tab. For instructions, see [Showing, Hiding, or Renaming a Tab](#) (on page 59).
- Select the attributes that you want to appear on the tab, make them visible, and give them names that describe the fields and their use. This work is done from Page Two or Page Three Attributes setup tab.

---

Note	Attribute names are the criteria for Java Client or Web Client searches. By making attribute names both specific and unique, you increase the efficiency of Agile PLM client searches. If you modify the name of an attribute once a system is in production, you may affect existing searches.
------	---

---

## Before You Begin

Consider the following details before designing a new tab.

- Do you want to create an extra tab for an entire Agile PLM class (Page Two), or a tab that's specific to a particular subclass (Page Three)?  
If you are creating a Page Three tab, remember that you also need to create privilege masks that enable users to modify attributes for the specific subclass.
- Do you plan to use Agile ChangeCAST to transfer information to an ERP system? If so, the information must be on a Page Two tab. Page Three data cannot be transferred using ChangeCAST.
- What do you want to name the tab?
- Which attributes will appear on the tab?
- What are the properties for each attribute, including name, drop-down list values, default values, the format for text fields, and so on. See [Defining Attribute Properties](#) (on page 72).
- Where will each field be placed (located under a heading) on the tab in Web Client?
- What are the length requirements (in characters) for each text field?
- What will the tab order be, that is, the sequence in which fields are activated when a user presses the Tab key? (This is determined by the attribute order.)

For more information about attributes, see [Recognizing Attribute Types](#) (on page 71).

### To make the tab visible, and configure the attributes you want to use:

1. Make the tab visible and name the tab. For instructions, see [Showing, Hiding, or Renaming a Tab](#) (on page 59).
2. Locate the attributes you want, and double-click them to open the setup window.  
For detailed instructions, see [Modifying Attributes](#) (on page 77). For Page Two tab attributes, double-click the class, for example, Change Orders. For Page Three tab attributes, double-click the subclass, for example, ECO.
3. Enter a new name for each attribute.
4. Make the attributes visible; select Yes in the Visible drop-down list.
5. Set the appropriate properties for each attribute type (see [Defining Attribute Properties](#) (on page 72)).
  - For List and MultiList attributes, define the list selections (see [Configuring Lists](#) (on page 91)).
  - For Text and MultiText attributes, set the MaxLength and Include Characters properties.
  - For Numeric attributes, set the MinValue, MaxValue, and Scale properties.
  - For Heading attributes, enter a heading Name (note: headings are used in Web Client only).
  - For Date attributes, set the Default Value date using the calendar utility.
  - For Money attributes, set the Default Value.

6. If appropriate, set a default value for each attribute. (See [Setting Default Values](#) (on page 78).)
7. When you are finished configuring the attributes, click Save.

Once you have completely defined the attributes for your Page Two or Page Three tab on the Attributes tab, you define the attribute order to set up the physical appearance of the tab.

## Stage II: Setting Up the Tab

After selecting the attributes that will appear on the Page Two or Page Three tab and establishing their properties, you need to arrange the fields on the tab. You do this by using the Order visible attributes button on the Attributes setup tab.

---

**Note** For detailed information about setting attribute order, see [Modifying Attribute Order on a Form Tab](#) (on page 60).

---

### To set up the order the attributes appear on the tab:

1. Click the Order visible attributes button. The Define Attribute Order dialog box appears.
2. Click an attribute name to highlight it.
3. Click the up arrow to move the highlighted attribute up one position in the list. Click the down arrow to move the highlighted attribute down one position in the list.
4. Continue highlighting attributes and moving them up or down in the list until they are in the order you want.
5. When you are finished, click Save.

### Field Tab Order

The *tab order* refers to the sequence in which the fields in an Agile PLM client Page Two or Page Three tab is activated when a user presses the Tab key.

The field tab order is determined by the attribute order, as described above.

## Using Heading Attributes

Java Client displays actual tabs for Page Two and Page Three tabs. However, Web Client displays the Page Two and Page Three information on the first object tab (for example, Cover Page, Title Block, or General Info tab). When viewing an object with Page Two and Page Three information, the user scrolls down to see that information. For example, the Page Two information is displayed below the Cover Page information. The Page Three information is displayed below the Page Two information.


To make the additional information on the first tab easier to understand in Web Client, each Page Two and Page Three tab has 10 Heading attributes. Make Heading attributes visible and give them a meaningful name. Then, position them on the attribute order list so they describe the group of attributes that follow them.

For example, a Page Two attribute order list might be set as follows:

Attribute order list	Type of attribute
Page Two	Heading01
Create User	CreateUser

Attribute order list	Type of attribute
Date Created	Date01
Component Properties	Heading02
Resistance	Text01
Material	List01
Notes	Multitext10

The attributes appear in Web Client, following the Cover Page information, in the format shown in the figure below. In Java Client, the Page Two and Page Three attributes (including Heading attributes) are displayed on the Page Two and Page Three tabs.

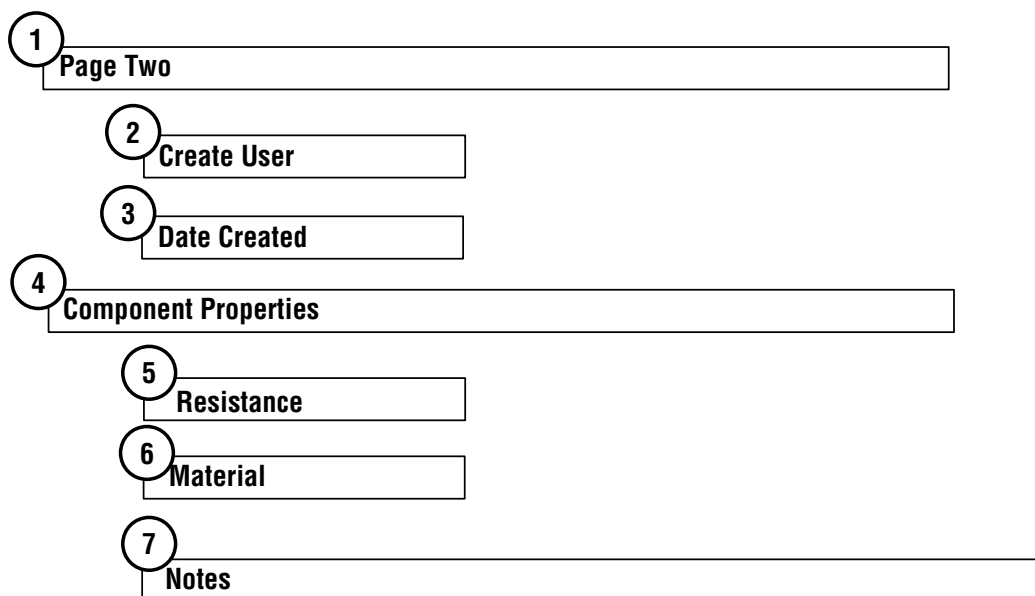

## Removing a Page Two or Page Three Tab

You may effectively remove a Page Two or Page Three tab from Java Client or Web Client by changing its Visible property to No. You must make this change in the Tabs node as well as in each of the Page Two attributes that were defined for the tab. If you do not change an attribute's Visible property to No, it continues to appear in Java Client or Web Client Search folders.

## About Attributes, Flex Fields, and Read-Through Fields

If you have been reading this chapter sequentially, the term “attributes” is already familiar. Before going into the detailed discussion of [Defining Attributes](#) (on page 70), this section introduces two special kinds of attributes: user-defined flex fields and read-through attributes.

When users open an object in Agile PLM clients, they see a tabbed window with fields. These fields are called attributes. From the Classes node, you define how these attributes appear for each Agile PLM class.

The individual fields that you define for each Agile PLM class appear on the tabs for all subclasses within that class. For example, the part categories that you define for the Parts class become the part categories for its subclasses, such as Capacitors, Resistors, and Diodes. In addition, if you enable an extra tab called a Page Two tab for an Agile PLM class, the tab and its attributes also appear for each subclass within the class.

Each subclass also has its own setup window for the Page Three tab where you can define the fields that are specific to the subclass, and will appear only on the Page Three tab for that subclass.

## User-Defined Flex Fields

Since attributes in Agile PLM classes are flexible in terms of renaming and customizing, they are often called “flex fields.” You can create an infinite number of attributes in any class or subclass. These are called “user-defined flex fields.” They are distinct from the predefined flex fields installed with Agile PLM.

User-defined flex fields can be created only on Page Two and Page Three tabs. As such, any user-defined flex field is specific to a class (Page Two) or to a subclass (Page Three).

---

Note	User-defined flex fields are specific to a class and therefore require class-specific privileges. Base class privileges (such as Read Items or Modify Preliminary Items) don't apply to class attributes. The subject of roles and privileges in Agile PLM is broad (see Chapters 9 and 10), but you may want to refer to a small tutorial, <a href="#">Building and Testing Attributes, Read/Modify Privileges, and Roles</a> (on page 188).
------	---

---

### To create a user-defined flex field in a class:

1. Under Data Settings, double-click Classes. The Classes window appears.
2. As an example, double-click the Change Orders class, and then click the User Interface Tabs tab.
3. Double-click Page Two, and then click the Attributes: Page Two tab.
4. Click the New icon. The New Attribute dialog appears.
5. Type in a name for the new attribute. Also select an attribute type from the drop-down list. Click OK.

---

Note	An attribute name cannot contain a colon ( : ), a semicolon ( ; ), or an equal sign ( = ).
------	--

---

6. The new attribute object appears. This user-defined flex field will be present in all objects created in the Change Orders class, for this example.

You may now fill in the various supporting fields, such as Description, Visible, Default Value, Required, and Available for Subscribe.

### To create a user-defined flex field in a subclass:

1. Under Data Settings, double-click Classes. The Classes window appears.
2. As an example, double-click the ECO subclass, and then click the User Interface Tabs tab.

3. Double-click Page Three, and then click the Attributes: Page Three tab.
4. Click the New icon. The New Attribute dialog appears.
5. Type in a name for the new attribute. Also select an attribute type from the drop-down list. Click OK.

---

Note	An attribute name cannot contain a colon ( : ), a semicolon ( ; ), or an equal sign ( = ).
------	--

---

6. The new attribute object appears. This user-defined flex field will be present in all objects created in the ECO subclass, for this example.

You may now fill in the various supporting fields, such as Description, Visible, Default Value, Required, and Available for Subscribe.

## Where User-Defined Flex Fields can be Used

User-defined flex fields are more limited than predefined flex fields. They are supported in the following places of Agile PLM.

- Where user-defined flex fields are fully supported:
  - Advanced Search
    - User-defined flex fields can be used as a query condition
    - ... can be used in display/output of search results
    - ... can be used as an attribute for sorting of search results
  - Roles and Privileges
    - User-defined flex fields can be used as an AppliedTo attribute in Read privilege
    - ... can be used as an AppliedTo attribute in Modify privilege
  - Workflow
    - User-defined flex fields can be used in entry required fields
    - ... can be used in exit required fields
  - Subscription
    - User-defined flex fields can be made available for subscription when this field changes or is updated
  - Out-of-box Standard Reports
    - For reports where user can optionally select Page Two attributes to display in report results, user-defined flex fields can also be selected.
  - Custom Reports
    - User-defined flex fields can be used as a query condition in building a custom report
    - ... can be used in display/output of report results
    - ... can be used as an attribute for sorting and grouping of report results
  - Agile Integration Service
    - User-defined flex fields can be used as part of AIS
  - Agile Content Service
    - User-defined flex fields can be used as part of CTO.
  - Export
    - User-defined flex fields can be exported into supported output formats

## Where user-defined flex fields are partially supported:

- ChangeCAST
  - User-defined flex fields are supported for Page Two, but does not support Page Three
- SDK
  - User-defined flex fields supports Set (update) the property and Get (retrieve) the property, but does not support Create.

## Where User-Defined Flex Fields cannot be Used

User-defined flex fields are not supported in the following places within the Agile system:

- Criteria
  - User-defined flex fields cannot be used as a value in defining Criteria
- DataLoad
  - User-defined flex fields cannot be loaded via DataLoad
- Notification
  - User-defined flex fields cannot be used as a data tag that can be sent in subject or body of the notification
- ACS
  - User-defined flex fields cannot be used for ATO, since they are autogenerated and modification is not allowed in class settings

## Read-Through Fields

Some fields on some tabs are able to display pertinent information about a related object. These fields are referred to as “read-through” fields. The data that is displayed in a read-through field is a read-only copy of attribute data from a different object that is related to the currently viewed object. If a tab has read-through fields, you can enable or disable them as needed.

Some tabs with read-through fields are not editable (for example, the item object Changes tab). However, a few editable tabs include both types of attributes: editable and read-through (for example, the item object Manufacturers tab). Read-through fields cannot be edited on the tab because they are read-only copies. However, if the original attribute is modified, the read-only copy in a read-through field will reflect those modifications.

In Administrator, on the <Tab Name>:Attributes tab of the setup window of object tabs that include both editable fields and read-through fields, read-through fields include the name of the related object in their names. For example, on the item object Manufacturers tab, attributes with names that begin with “Mfr” or “Mfr. Part” are read-through fields from the Manufacturer and Manufacturer Parts objects, for example, Mfr. Name and Mfr. Part Notes.

## Read-Through Fields Made Consistent in Items and Changes

PLM Release 9.2.2.4 remedies an inconsistency by making it possible for the administrator to consistently define Page One and Page Two fields as read-through fields, as follows:

- All Item P1 / P2 fields can be defined as read-through fields on the Item > BOM table (excluding Page Two heading fields)



- All Item P1 / P2 fields can be defined as read-through fields on the Item > Where Used table (excluding Page Two heading fields)
- Most Item P1 / P2 fields can be defined as read-through fields on the associated Change > Affected Items table (excluding Page Two heading fields and these special handling of Rev-related fields: REV.COMPLIANCY\_CALC\_DATE [only on ECO and MCO], REV.COMPLIANCY [already on ECO and MCO], and REV. INCORP\_DATE [ECO only for the future revision, MCO for the revision it applies to]).
- This enhancement does *not* include any new (user-generated) P2 multilist fields.

## Read-Through Fields on the BOM and Manufacturers Tabs

The Item BOM tab and the Item Manufacturers tab include both editable fields and read-through fields.

Editable fields on an item's BOM tab describe the relationship between it and the items on its BOM, for example, Quantity, Find Number, Reference Designators. Read-through fields on the BOM tab allow you to display additional information about the items listed on the BOM tab, for example, Page Two data of the BOM items.

Editable fields on an item's Manufacturers tab define the relationship between it and its manufacturer parts, for example, Preferred Status and Reference Notes. Read-through fields on the Manufacturers tab allow you to display additional information about the Manufacturer (for example, the manufacturer's address), or the Manufacturer Part (for example, Page Two data of the Manufacturer Parts).

**Important** Like all read-through fields, the read-through fields on the BOM tab and the Manufacturers tab cannot be edited on those tables. Because these read-through fields cannot be edited on the BOM tab and Manufacturers tab, they also cannot be redlined from the Redline BOM tab or the Redline Manufacturers tab.

For your reference, the item object BOM tab and item object Manufacturers tab attributes which can be edited and, therefore, redlined are listed in the table below.

---

<b>Note</b>	A user's assigned roles and privileges also determine which specific fields he can edit or redline.
-------------	---

---

Item object BOM table fields which can be edited or redlined	Item object Manufacturers table fields which can be edited or redlined
BOM Date01 – BOM Date05 BOM Description BOM List01 – BOM List05 BOM MultiText30, BOM MultiText31 BOM Notes BOM Numeric01 – BOM Numeric05 BOM Text01 – BOM Text05 Find Num Item Number Qty Ref Des	AML Split (%) Mfr. Name Mfr. Part Number Mfr. Tab Date01 – Mfr. Tab Date05 Mfr. Tab List01 – Mfr. Tab List05 Mfr. Tab MultiList01 – Mfr. Tab MultiList03 Mfr. Tab MultiText30, Mfr. Tab MultiText31 Mfr. Tab Numeric01 – Mfr. Tab Numeric05 Mfr. Tab Text01 – Mfr. Tab Text05 Preferred Status Reference Notes

## Defining Attributes

Attributes are the fields that appear on Agile PLM client tabs. You can define these attributes by configuring their properties.

Each object tab has its own setup window. To display the tab setup window you want, use the guidelines in the following table.

Type of attribute or property	Setup activity	Do this
Subclass properties	Define properties, for example, for Name, Description, Number Source, AutoNumber Required, Site-specific BOM, and so forth	In the <b>Classes</b> window: <ul style="list-style-type: none"><li>Double-click a subclass name.</li><li>Set properties on <b>General Information</b> tab.</li></ul>
Subclass-specific attribute (Page Three tab only)	Define attributes for: <b>Page Three</b>	In the <b>Classes</b> window: <ul style="list-style-type: none"><li>Double-click a subclass name.</li><li>Choose <b>User Interface Tabs &gt; Page Three</b> tab.</li></ul>

Type of attribute or property	Setup activity	Do this
Class-specific attribute (all tabs except <b>Page Three</b> )	Define attributes for: Cover Page Title Block General Information Page Two Affected Items Workflow Relationships Attachments History Changes BOM Manufacturers Where Used Sites Escalations Selected Objects Where Sent	In the <b>Classes</b> window: <ul style="list-style-type: none"> <li>▫ Double-click a class name.</li> <li>▫ Click <b>User Interface Tabs</b>.</li> <li>▫ Double-click the tab you want to configure.</li> </ul>

**For example, to define attributes for the Affected Items tab of the Change Orders class:**

7. Under Data Settings, double-click **Classes**. The **Classes** window appears.
8. Double-click **Change Orders Class**.
9. Click the **User Interface Tabs** tab.
10. Double-click **Affected Items**. The **Affected Items** tabbed setup window appears.

## Recognizing Attribute Types

An attribute's type indicates how it is used in Agile PLM. For example, a **Text** attribute is used for entering text into a field on a **Java Client** or **Web Client** tab. The types of attributes used in Agile PLM are listed in the table below.

Type	What to Enter in the Field
<b>Date</b>	Enter date and time, or select date and time from a pop-up calendar.
<b>List</b>	Select one item from a list. Select one item from a cascading list.
<b>MultiList</b>	Select one or more items from a multiple-selection list. The list can be a cascading list. <b>Note:</b> There is now no limit to the number of list entries in a multi-list field; in previous service packs, multi-lists could only save and populate 31 list entries. Also, Rel. 9.2.2.4 increases the number of possible multi-list fields on Items <b>P2</b> to 15.
<b>Text</b>	Enter a single line of text; the allowable length varies, but generally it is up to 50 characters.

Type	What to Enter in the Field
MultiText	Enter a block of text (up to 4,000 characters) that wraps across multiple lines.  Note: Rel. 9.2.2.4 removes any inconsistent limit to this figure (for example, in <b>Page One</b> of Changes and QCRs base classes).
Numeric	Enter a numeric value.
Money	Enter a monetary amount.
Heading	Displays a heading above a group of attributes. Allows the user to identify a group of associated attributes on these tabs. Heading attributes are available on <b>Page Two</b> and <b>Page Three</b> . They are also available on the General Information and Preferences tabs of User classes.
Icon	Read-only attribute type. Used to display icons in tables (for example, BOM table, search results table) that indicate, for example, the object type, that the object has attachments, that the object has a manufacturer, or that the object has a pending change.
The Agile PLM administrator can set default values (such as the current date, or current user) to automatically appear in a field when new objects are created. See <a href="#">Setting Default Values</a> (on page 78).	

## Defining Attribute Properties

The following table lists the attribute properties, the settings available for these properties, and how the settings are applied in Agile PLM. It also indicates the attribute types each property can be applied to.

Note	The “Required” property (found near the end of this table) is important to understand, as it provides a visual cue for users to attend to that attribute when creating a business object in that class or subclass. Also, there is a corner case involving required fields detailed in <a href="#">An Exception Involving Required Fields in Object Modification</a> (on page 76).
Note	Please note that a field that is “required to fulfill creation” of an object, this idea is not the same thing as “required fields” that are found in Agile Workflows.

Property	Attribute type	Setting	Application in Agile PLM
Name	All	Supplied by administrator	<p>The name of the field as you want it to be displayed for users, limited to 40 characters.</p> <p>Although all characters are supported within Agile PLM, and should not create issues within Agile's clients, it is recommended that you avoid using the following characters when renaming or creating attributes, due to issues that could potentially arise in integrations or custom applications written on the SDK.</p> <p>, comma . period (dot) : colon ; semicolon = equal sign</p>
*Type	All	N/A	<p><i>Not configurable by the Agile PLM administrator.</i></p> <p>Indicates the type of attribute: date, list, multilist, text, multitext, numeric, image, or heading.</p>
Visible	All	Yes	Makes the attribute visible in Agile PLM clients. Users will see this attribute when they create objects in this class or subclass.
		No	<p>Keeps the attribute hidden in Agile PLM clients. Users will not see this attribute when they create objects in this class or subclass.</p> <p>Note that as of PLM 9.2.2.4, all Item <b>Title Block</b> fields can be disabled, remedying an earlier inconsistency.</p>
List	List MultiList	Supplied by administrator	<p>Selections to appear in the drop-down list for users to choose from. The default value must appear among the selections entered here.</p> <p>For list attributes whose selections are defined elsewhere, this property reads <b>(List)</b> and the property is not editable on the attribute setup window. For example, the Lifecycle Phase attribute selections are those that are defined on the <b>Lifecycle Phases</b> node.</p> <p>List entries are limited to 255 characters each.</p>
Default Value	All	Supplied by administrator	<p>The default value to display when a new object is created. For lists and multilists, the default value must be one of the values in the selection list (see <a href="#">Setting Default Values for Lists</a> (on page 93)). For some fields, you can use a default variable.</p> <p>For MultiText attributes, the administrator is constrained to 510 characters of default text, despite the <b>Max (System) Length</b> value of 4,000. Web and Java client users are not constrained in this field in business objects.</p>

Property	Attribute type	Setting	Application in Agile PLM
Enable for Search Criteria	All	Generally "No" but can be set to Yes by administrator	Permits (Yes) or prevents (No) the attribute from being added as a criteria for a Parametric search. (Parametric searches are documented in <i>Getting Started with Agile PLM</i> .)
MaxLength	Text MultiText	Supplied by administrator	<p>Sets the maximum number of bytes that can be entered in the field (spaces = 1 byte; carriage returns = 2 bytes). Valid settings range from 0 to the maximum allowed for that attribute (see the attribute's <b>Max (System) Length</b> property).</p> <p>Generally speaking, 1 character = 1 byte; however, some Agile installations are localized with Chinese or Japanese characters that can use 2 or 3 bytes per character. This must be factored in when setting the value of this property in relation to <b>Max (System) Length</b> value.</p> <p>Because many attributes appear in many areas of Agile PLM, and the <b>MaxLength</b> can be set independently for specific attributes, issues can develop if there is too much range of <b>MaxLengths</b> for similar attributes. For example, a part number may appear on the Title Block of the part, the BOM of (same or other) parts, and the Affected Items of changes. It is best to set the <b>MaxLengths</b> of such similar attributes to a standard value.</p> <p>When setting <b>MaxLengths</b>, consider field length limitations of other applications used by your company to which Agile PLM data is exported.</p>
*Max (System) Length	Text MultiText	N/A	<p><i>Not configurable by the Agile PLM administrator.</i></p> <p>Designates the maximum length of the data field in bytes, and represents the maximum number of bytes allowed in the field by Agile PLM clients. An attribute's <b>Max (System) Length</b> value cannot be exceeded by its <b>MaxLength</b> value.</p>
Include Characters	Text Multitext	Select from list	This setting determines whether spaces are allowed in the field and which types of alphabetic and numeric characters are allowed. Select from the list of character sets defined on your Agile PLM system. For more information, see <a href="#">Character Sets</a> (on page 85).
Min Value	Numeric	Supplied by administrator	The minimum value for the numeric field.
Max Value	Numeric	Supplied by administrator	The maximum value for the numeric field; must be greater than or equal to zero (0).

Property	Attribute type	Setting	Application in Agile PLM
* Order	All	N/A	This number indicates the order in which the attribute field appears on the table or form. It is an Agile system-generated number greater than 0. The Agile system generates this number when you use the <b>Order visible attributes</b> button to arrange the attributes.
Site-Specific Field		Select from list	<p>Common = this attribute inherits its value from the global value.</p> <p>Site-Specific = the value of this attribute is independent from the global value.</p> <p>This property does not apply to all attributes. If it does not apply, it is set to N/A and it is not editable.</p> <p>This property is not editable for all attributes where it does apply. In those cases, the property has a default value of either Common or Site-Specific and it cannot be edited.</p> <p>For examples, view the attribute setup for the <b>Affected Items</b> tab of the Change Orders class.</p>
Height	MultiText	Supplied by administrator	Determines the number of lines in the text area that are displayed when in edit mode. (In Web Client, the text area displays 4 lines.)
Scale	Numeric Money	Supplied by administrator	The number of digits after the decimal point in a numeric field. This setting must be greater than or equal to zero (0).
*Attribute	All	N/A	<p><i>Not configurable by the Agile PLM administrator.</i></p> <p>Lists the database attribute name for the selected node. Since the Name property gives the attribute name as it will appear to the Agile PLM user, the Attribute and Name properties are often different.</p>
*Base ID	All	N/A	<i>Not configurable by the Agile administrator.</i> Lists the original system ID for the attribute before it was modified in any way.
Required	All	Yes	<p>The field appears to the user in <b>bold font</b>, which is a visual cue that the field should be populated. If an attribute that has Required set to Yes is not populated during the Create Wizard (in Web Client), or it is emptied during an Edit and the user tries to Save (in both clients), the user will be prompted to fill the field, and the procedure will not complete.</p> <p>You can set Heading attributes to be Required. (There was a issue in <b>Classes &gt; User Interface Tabs &gt; Page Two &gt; Attributes:Page Two &gt; Heading01</b> attribute that the field Required was missing.)</p> <p>See <a href="#">An Exception Involving Required Fields in</a></p>

Property	Attribute type	Setting	Application in Agile PLM
			<a href="#">Object Modification</a> (on page 76).
		No	The field does not appear to the user in <b>bold font</b> , and it does not stop the Wizard or Edit/Save process if it is not populated.
Available for Subscribe	All	Yes/No	Determines whether or not this attribute can be subscribed to by a user (who has sufficient privileges). Subscription is documented in <i>Getting Started with Agile PLM</i> , Chapter 5, Working with Objects.
Display Width	All	Often 100, can be refined as needed; unit is pixels, see description	<p>Display Width can be set for every field on every tab in every object. The unit of the Display Width attribute is pixels. Use the approximation of 7.5 pixels per character to enter the value for that field. For example, if you wanted the field to have room for 10 characters, the value of Display Width is 75.</p> <p>The systemwide preference Maximum Attribute Display Width sets an overall maximum value (also in pixels), and this Display Width sets a field-specific default, but Web Client users can always resize columns in their user interface.</p>
*The Agile PLM administrator cannot change these properties.			
The file type of an attached file is determined by the characters following the last period in a file name. Therefore, users should not use filenames ending with a period (.).			

## An Exception Involving Required Fields in Object Modification

If you modify a business object and you select a different subclass as part of the modification, you receive this warning: "You are changing the subclass of the object. Do you want to continue using the same object name or number?" This warning does not warn you of another risk, that the object's original subclass and the subclass to which the object is being assigned may have differing required fields. A field that is set to be required in the "new" subclass may not be required in the "original" subclass, but the system does not check for "new" required fields, nor does it warn you of this possible discrepancy.



## Image Attributes

To include an image attribute on a table, set its Visible property to Yes. The image attribute's Name property identifies which type of icon the image attribute displays. The name does not appear to the end user; you do not need to modify it.

To determine in which table column the image will appear, see [Modifying Attribute Order on a Form Tab](#) (on page 60).

## Configuring Attributes

A property may be configurable for one attribute and not for another. For example, you cannot edit the Name property of the lifecycle phase attribute on the Title Block tab, but you can edit the Name property of the item lifecycle phase on the BOM tab.

As the Agile PLM administrator, you can easily change a configurable property. For example, if you decide the maximum allowable length for the change order number should be 15 characters instead of 30 characters, you can change the MaxLength property setting on the Change Orders Cover Page tab.

---

Note	Because many attributes appear in many areas of Agile PLM, and the MaxLength can be set independently for specific attributes, issues can develop if there is too much range of MaxLengths for similar attributes. For example, a part number may appear on the Title Block of the part, the BOM of (same or other) parts, and the Affected Items of changes. It is best to set the MaxLengths of such similar attributes to a standard value.
------	--

---

## Display Width Attribute



Display Width is a new attribute that can be set for every field on every tab in every object. The unit of the Display Width attribute is pixels. Use the approximation of 7.5 pixels per character to enter the value for that field. For example, if you wanted the field to have room for 10 characters, the value of Display Width is 75.

The systemwide preference Maximum Attribute Display Width sets an overall maximum value (also in pixels), and this Display Width sets a field-specific default, but Web Client users can always resize columns in their user interface.

## Modifying Attributes

### To modify an attribute property:

1. Under Data Settings, double-click Classes. The Classes window appears.
2. To modify any class tab attribute, double-click the class name.
  - a. For example, to modify the Affected Items tab attributes for change orders, double-click Change Orders, and then select the User Interface Tabs tab. All the Change Orders class tabs are listed.
  - b. Click Affected Items. The Classes Tab setup window appears.
  - c. Select the Attributes:Affected Items tab. All the fields for that tab are listed.
3. To modify a Page Three tab attribute for a specific subclass, double-click the name of the

- subclass listed under the class name.
- a. For example, double-click ECO under Change Orders class, then select the User Interface Tabs tab. All the ECO subclass class tabs are listed.
  - b. Double-click Page Three. The Class Tabs setup window appears.
  - c. Select the Attributes:Page Three tab. All the fields for that tab are listed.
4. Double-click the attributes you want to modify.
  5. Modify the attribute properties. Depending on the type of property, use one of the following methods:
    - Enter text.
    - Select a value from a list.
    - Click  to open a dialog box.
    - For date attribute default values, click  to select a specific date, or use a variable. See [Default Value Variables](#) (on page 36).
  6. When you have finished your modifications, click Save.

## Matching the Properties of Attributes Common to Several Tabs

When the same attribute appears on several tabs, you must establish the same properties for it everywhere it appears.

For example, an item's Number attribute appears on the item's Title Block (that is, its "Page One" tab), the item's BOM tab (Item Number attribute), and the Affected Items tab of any associated changes (Item Number attribute). You must establish identical properties for this attribute in all three locations.

For example, in an item's Title Block.Number field, if you set its Include Characters property to All, you should also set the item's BOM.Item Number.Include Characters property to All, and set [associated change].Affected Items.Item Number .Include Characters property to All. If you do not, when you try to add an affected item, for example, Agile PLM clients prevent you from adding the affected item, and return an error message.

Setting proper attributes allows Page Two and Page Three data to be copied properly when using SaveAs to create a new object (for instance, a project number field on Pg2 of both ECOs and MCOs), and allows you to display information from an item's Pg2 on its BOM table or an associated change's Affected Items tab (for instance, a Unit of Measure field).

Regarding the SaveAs method of object creation: if a subclass has Required fields set up (by the administrator) and the user does a SaveAs but there is a type violation in the source object on one of the required fields, SaveAs will complete with the value still copied over to the source. Previously in this case, the user would encounter an error during SaveAs saying that a violation occurred on certain attributes, and SaveAs cannot be completed.

## Setting Default Values

You can set default values to appear for attributes.

**To change a default value setting:**

1. Locate the attribute you want, and double-click it to open the setup window.  
(For detailed instructions, see [Modifying Attributes](#) (on page 77).)
2. In the DefaultValue field, enter the default value you want. Depending on the type of attribute, enter a variable (see [Default Value Variables](#) (on page 36)), enter text, select from a drop-down list, or select a date.
3. When you have finished your modifications, click Save.

The new default value appears in the Agile PLM client field when a new object is created.

## Showing or Hiding an Attribute on a Tab

Many attributes can be either hidden or displayed on a tab. For example, you can either show or hide the fields on the Pending Changes tab, and the attributes on the Page Two tab are hidden until you need to use them.

**To show or hide an attribute on a tab:**

1. Locate the attribute you want and double-click it.  
(For detailed instructions, see [Modifying Attributes](#) (on page 77).)
2. In the Visible field for the attribute, select Yes to make the attribute visible. To hide the attribute, select No.
3. When you have finished your modifications, click Save.

The attribute is now either visible or hidden on the tab. To view the modifications, open the object in Java Client or Web Client where the attribute appears.

## Editing a Field Label or Table Column Name

You can change the field label or the heading of a table column by editing the attribute's Name property.

For example, attributes on the Title Block tab of Parts class objects are displayed as labeled fields. You can modify the labels that appear by editing the attributes' Name properties. Fields on the Affected Items tab of Change Orders class objects are displayed in a table; the table column heading, or field, is the attribute name. You can modify the table column heading by editing the attribute's Name property.

---

Note	The Lifecycle Phase attribute name on the Parts and Documents class Title Block tabs cannot be edited.
------	--

---

**To edit a field label or a column name in a table:**

1. Locate the attribute you want and double-click it.  
(For detailed instructions, see [Modifying Attributes](#) (on page 77).)
2. In the Name field, highlight the text you want to delete and enter a new name.
3. When you finished all the attribute modifications, click Save.

To verify that the name was changed, open an object in Java Client or Web Client where the table appears. Click the tab to view the field or table and confirm the modification.

## Using Custom Icons for Subclasses or Company Logo

Each of the predefined subclasses provided with Agile PLM has a default icon associated with it. The subclass icons appear (in Java Client and Web Client) to visually differentiate the various types of objects. You can replace some or all of these icons at any time.

### To replace the default subclass icon with a custom icon:

1. Open the subclass and, on the General Information tab, enter a filename in the Icon property for that subclass.

For Documents and Parts subclasses, there is an additional property called Icon for Assembly. This is the icon image that is used when the object represents an assembly.

For both the Icon and Icon for Assembly properties, fill in only the graphic filename (including extension), for example, electrical.gif.

2. You must place the custom graphic in two locations on the proxy server, one for Web Client and one for Java Client. The system finds the graphic depending on the client being used.
  - Web Client – `<webserver_root>\PLMContent\images`
  - Java Client – `<webserver_root>\JavaClient\lib\images\custom.jar`

---

**Note** For Java Client, custom icons must be added to the custom.jar file. For instructions on how to update a JAR file, refer to Sun's documentation on the JAR utility. An online tutorial on the JAR utility is available at <http://java.sun.com/docs/books/tutorial/jar/>. You can also use many Zip-compatible utilities, such as WinZip, to update a JAR file.

---

## Replacing the Agile Logo

If you want your company's logo (or any other co-branding image) to appear in place of Agile's logo, or to alter its height or width, the easiest way is to alter the file web.xml.

### To replace the default company logo with a custom logo:

1. Log in to server side.
2. Find web.xml in Oracle home directory.
3. The bullet-items below give some samples of changing specific parameters:

- These lines of code in web.xml allow you to enter the filename of your custom logo file:

```
<context-param>
  <param-name>cobranding.image</param-name>
  <param-value>logo.gif</param-value>
</context-param>
```

Change the filename (including extension) where "logo.gif" appears.

- These lines of code in web.xml allow you to change the height of the logo:

```
<context-param>
  <param-name>cobranding.image.height</param-name>
  <param-value>25</param-value>
</context-param>
```

Change the parameter value "25" to another value.

- These lines of code in web.xml allow you to change the width of the logo:

```
<context-param>
  <param-name>cobranding.image.width</param-name>
  <param-value>114</param-value>
</context-param>
```

Change the parameter value "114" to another value.

- These lines of code allow you to change the title of the Oracle|Agile window or page:

```
<context-param>
  <param-name>application.window.title</param-name>
  <param-value>Product Lifecycle Solution</param-value>
</context-param>
```

Change the parameter value "Product Lifecycle Solution" to another value.

- The next few lines of code in web.xml allow you to update the tooltip by changing the text:

```
<context-param>
  <param-name>cobranding.image.alttext</param-name>
  <param-value>Oracle|Agile</param-value>
</context-param>
```

Insert the new text where "Oracle|Agile" appears in the example.

4. Restart Application server
5. Log in to Web Client to verify or evaluate your change(s).

## Quick Access to Objects and Files

You can generate quick access URLs that provide direct pointers to either Agile objects or to Agile attachment files.

These quick access URLs can be pasted into other applications or files such as spreadsheet files, word processing files, a company Intranet web page or WIKI page, or into an email.

For information about quick access to Agile objects using quick access URLs, see:

- [Agile-Generated Quick Access Object URLs](#) (on page 81)
- [Formats for User-Generated Smart Object URLs](#) (on page 82)
- [Using Quick Access Object URLs](#) (on page 83)

For information about quick access to attachment files using attachment quick access URLs, see:

- [Generating Attachment Quick Access URLs](#) (on page 322)

## Agile-Generated Quick Access Object URLs

From Web Client, you can generate Agile PLM object quick access URLs from the Web Client Actions menu.

**To generate an Agile PLM object quick access URL:**

1. Login to Agile PLM Web Client and open the desired object.

2. In the Actions menu, choose Copy URL to Clipboard.
3. The URL is copied to your clip board. You can then paste it into another application or file, such as a word processing file, a spreadsheet file, or an email.

## Formats for User-Generated Smart Object URLs

The Agile Smart Object URL feature is designed to enable effective collaboration through email, spreadsheets, documents, WIKIs, and so forth. Users or automated tools can generate smart readable URLs that point to a specific object in Agile. By using the following format, a user does not need to log into Agile to generate the object URL. Automated tools can also use this format to generate object URLs.

Smart Object URLs can be used for objects available from Web Client.

### Smart Object URL Format

URLs for pointing to Agile objects use the following format:

<http://server:port/VirtualPath/object/ObjectType/ObjectName>

The following table defines the Smart Object URL parameters:

Parameter	Description
<a href="http://server:port/&lt;VirtualPath&gt;/object/&lt;ObjectType&gt;/&lt;ObjectName&gt;">http://server:port/&lt;VirtualPath&gt;/object/&lt;ObjectType&gt;/&lt;ObjectName&gt;</a>	
server port VirtualPath	Server, port, and VirtualPath identify the Agile PLM instance.
object	The text "object" indicates to Agile that the URL is an object URL.
ObjectType	ObjectType refers to the subclass (type) of object, for example, ECO, Part, Manufacturer, File Folder, Program, Activity, or Discussion.
ObjectName	<p>ObjectName refers to the unique identifier for the object. Depending on the object class, the unique identifier is either an object number or a name.</p> <p><b>Note</b> Manufacturer Parts are a special class of objects that are uniquely identified by two parameters: a Manufacturer Name and a Manufacturer Part Number. Therefore, a URL referring to a specific Manufacturer Part uses the following format:</p> <p><a href="http://server:port/VirtualPath/object/ObjectType/MfrName/MfrPartNumber">http://server:port/VirtualPath/object/ObjectType/MfrName/MfrPartNumber</a></p>

Agile PLM identifies and handles special tags (such as %20) added to URLs to handle special characters (such as spaces and other special characters such as asterisk "\*") in an object's unique identifier. For example, the URL

<http://server:port/VirtualPath/object/Manufacturer/Philips%20Semiconductor>

resolves to the manufacturer "Philips Semiconductor".

## **Using Quick Access Object URLs**

When a user clicks a Quick Access Object URL, the user actions are the same whether the URL is an Agile-generated quick access URL or a user-generated Smart Object URL:

1. The user clicks the URL and the Agile PLM login screen is displayed in a browser window.
2. The user enters her login information.
3. Upon successful login, Agile PLM searches for the object specified in the link.

(If the object is not found, Agile PLM displays an error and returns to the user's Home page.)

When the object is found, Agile PLM verifies that the user has the appropriate privileges to read the object and displays the object's first tab, for example, the Title Page.





## Character Sets, Lists, and Process Extensions

**This chapter includes the following:**

▪ Character Sets.....	85
▪ Lists .....	87
▪ Process Extensions .....	94

This chapter provides information about to customize and configure character sets, lists, and process extensions.

### Character Sets

The Character Sets node lets you view and create sets of valid characters in Agile PLM.

Character sets are lists of valid characters that are used to manage the Include Characters property of Text and MultiText attributes. You can create and delete character sets. Any language supported by Agile PLM can be supported by character sets.

The following table lists character sets provided with Agile PLM. They are all enabled by default and cannot be modified.

Name	Description
All	All valid characters
Alpha All	Upper- and lowercase alphabet only
Alpha All & Space	Same as Alpha All plus space character
Alpha Lower Case	Lowercase alphabet only
Alpha Lower Case & Space	Same as Alpha Lower Case plus space character
Alpha Upper Case	Uppercase alphabet only
Alpha Upper Case & Space	Same as Alpha Upper Case plus space character
AlphaNumeric All	Upper- and lowercase alphabet and numbers
AlphaNumeric All& Space	Same as AlphaNumeric All plus space character
AlphaNumeric Lower Case	Lowercase alphabet and numbers
AlphaNumeric Lower Case & Space	Same as AlphaNumeric Lower Case plus space character
AlphaNumeric Upper Case	Uppercase alphabet and numbers
AlphaNumeric Upper Case & Space	Same as AlphaNumeric Upper Case plus space character

Name	Description
Numeric	Numbers only
Numeric & Space	Numbers only plus space character

## Creating a Character Set

You can create a character set that is tailored to your company's requirements. Each character set is limited to 100 characters.

**Caution** Although all characters are supported within Agile PLM, and should not create issues within Agile's clients, it is recommended that you avoid using the following characters when naming or renaming objects (for instance, subclasses or attributes), due to issues that could potentially arise in integrations or custom applications written on the SDK.

, comma . period (dot)

Previously, Agile experienced issues with certain Unicode characters, specifically katakana characters, as they were not valid XML name characters. Agile PLM has addressed these issues within aXML.

Regarding the "slash" character (/), the SDK makes use of certain characters within its query language, but the recommended practice is to refer to classes and fields by ID, rather than by name. For easy access to folders (e.g., search folders), the SDK allows indication of folders like this: "folder/folder/folder/object" — thus, slashes in folder names could cause issues; however, you can use the escape sequence (with "\").

### To create a new character set:

1. Under Data Settings, double-click Character Sets. The Character Sets window appears.
2. Click the New button. The Define Character Set dialog box appears.
3. In the Name and Description fields, type a unique name and a description, respectively.
4. In the Enabled list, select Yes.
5. In the Valid Character Set field, enter up to 100 characters to include in the set. Duplicate characters are not allowed.
6. To add special characters, click the Special Character button and select space (^s), new line/carriage return (^p), or caret (^^).
7. When you have finished, Click OK.

---

**Note** Custom character sets can affect the performance of your system if very large character sets are defined and many attributes use them.

---

## Modifying a Character Set

You can modify the contents, name, and description of a character set that you have created from the Character Sets window. The default character sets provided with Agile PLM are read-only.

**To modify a character set:**

1. Under Data Settings, double-click the Character Sets node. The Character Sets window appears.
2. Double-click a character set to open it.
3. In the Name and Description fields, type a unique name and a description, respectively.
4. In the Valid Character Set field, add or remove characters.
5. When you have finished, click Save.

**To delete a character set:**

1. Under Data Settings, double-click the Character Sets node. The Character Sets window appears.
2. Select a character set.
3. Click the Delete button, and then click Yes to confirm.

---

**Note** If the character set is currently assigned to any Text or MultiText attributes in the Agile PLM system, it cannot be deleted.

**Note** Make sure you choose appropriate character sets where required. There is a potential problem when adding files or URLs from a business object to a file folder object. If the file folder's File Description attribute has a Character Set = Numeric, but the business object's File Description attribute has a Character Set = Alpha or AlphaNumeric, the latter will override the former, meaning whatever control you wanted to impose in the file folder's File Description (being numeric) will be lost, the system will save the original character set.

---

## Lists

The List node accesses the Lists table, which is a collection or library of lists. This is used to manage lists that are used across multiple classes. You can define custom lists that can be used for Page Two and Page Three list attributes. Many attributes in the Agile PLM system are configured to be lists. Attributes, properties, flex fields on tables, and cells can all be lists.

### Enhancements to Lists (Rel. 9.2.2.4)

The following enhancements to Lists have been added in PLM 9.2.2.4:

- Ability to choose a branch value of a cascading list  
Previously when using Cascading lists, users were limited to only choosing list values and not the interim nodes. Users are now able to choose both the nodes and the final list values.
- Ability to set a multi-value default for a multi-list attribute


## Routing Manager Lists

There are six lists that pertain to the routing managers of workflows: Change Analyst list, Component Engineer list, Price Administrator list, Compliance Manager list, Quality Analyst list, and Quality Administrator list. They are not editable from the Lists node. Names of users are added and removed from these lists according to what you set for a given user's Lists property (Users > <user> > General Info tab (Profile area) > Lists).

On the Lists node, the single editable property for these six lists is called Display Type. This property lets you choose whether the “routing manager” list field in routable objects appears to the originating user As Drop-down List or As Address Book format. For companies sized so only a few people are on each list, the drop-down list may be fine. Larger companies may have, for example, one or two dozen change analysts, and they will find the Address Book format useful: you can select the appropriate change analyst for a change order and all the other analysts will not receive notifications about that change order.

**Note** The default for the Display Type field is As Address Book. You may wish to change that in those lists before changes begin to be created by your users: it takes an extra step or two to select routing managers from the address book and this is not useful if there are only a few names.

## Creating Custom Lists and Adding to Lists

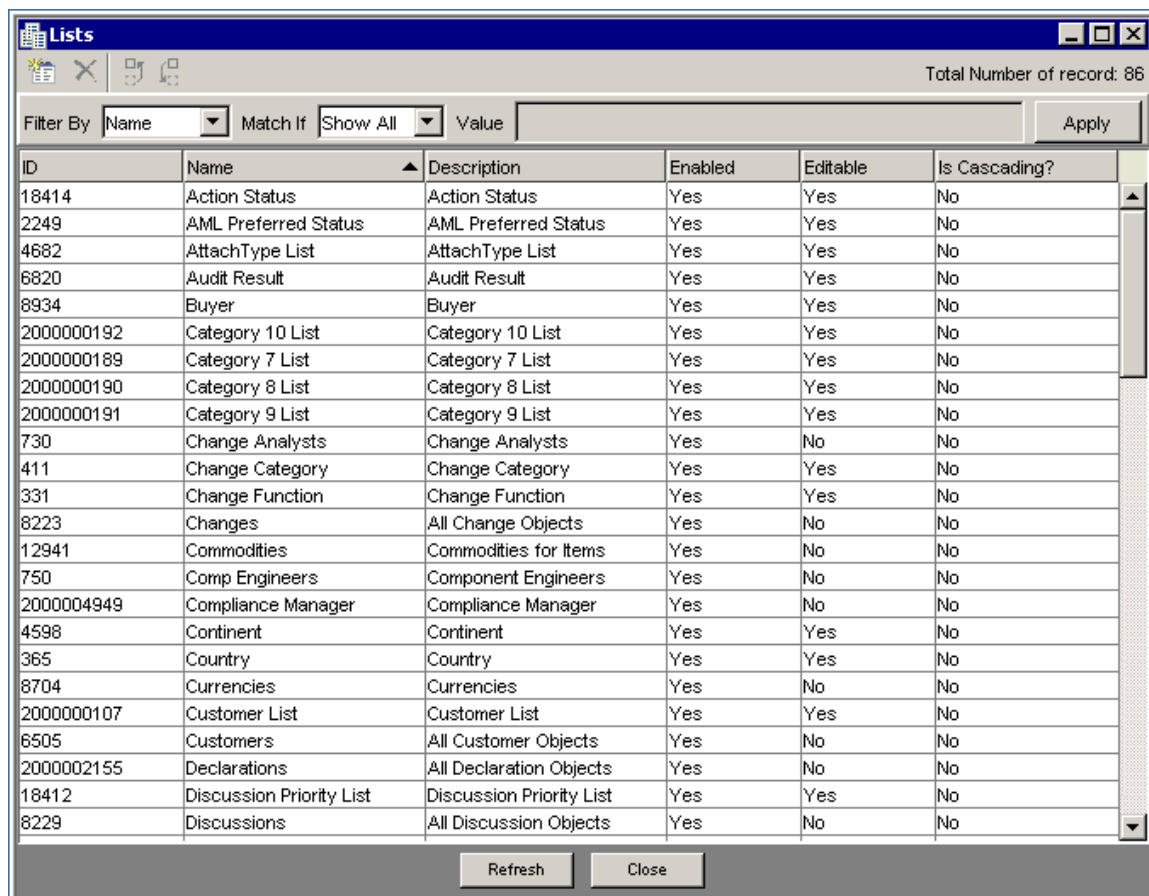

Filter By  Match If  Value

Total Number of record: 86

ID	Name	Description	Enabled	Editable	Is Cascading?
18414	Action Status	Action Status	Yes	Yes	No
2249	AML Preferred Status	AML Preferred Status	Yes	Yes	No
4682	AttachType List	AttachType List	Yes	Yes	No
6820	Audit Result	Audit Result	Yes	Yes	No
8934	Buyer	Buyer	Yes	Yes	No
2000000192	Category 10 List	Category 10 List	Yes	Yes	No
2000000189	Category 7 List	Category 7 List	Yes	Yes	No
2000000190	Category 8 List	Category 8 List	Yes	Yes	No
2000000191	Category 9 List	Category 9 List	Yes	Yes	No
730	Change Analysts	Change Analysts	Yes	No	No
411	Change Category	Change Category	Yes	Yes	No
331	Change Function	Change Function	Yes	Yes	No
8223	Changes	All Change Objects	Yes	No	No
12941	Commodities	Commodities for Items	Yes	No	No
750	Comp Engineers	Component Engineers	Yes	No	No
2000004949	Compliance Manager	Compliance Manager	Yes	No	No
4598	Continent	Continent	Yes	Yes	No
365	Country	Country	Yes	Yes	No
8704	Currencies	Currencies	Yes	No	No
2000000107	Customer List	Customer List	Yes	Yes	No
6505	Customers	All Customer Objects	Yes	No	No
2000002155	Declarations	All Declaration Objects	Yes	No	No
18412	Discussion Priority List	Discussion Priority List	Yes	Yes	No
8229	Discussions	All Discussion Objects	Yes	No	No

### To create a custom list for the list library:

1. Under Data Settings, double-click Lists. The Lists window appears.
2. Click the New button. The Create List dialog box appears.
3. Fill in the Name and Description fields. They are both limited to 255 characters.

4. Select Enabled or Disabled in the Enabled list.
5. Select Yes or No in the Cascade list.
6. Click OK. The new List:<name> window appears. The new list also appears in the list library.

---

Note	You can create a “list” without populating it with list items. To add list items to a list that you have just created and still have open, start at step 4 in the next task.
------	--

---

#### To add values to a list:

1. Under Data Settings, double-click Lists. The Lists window appears.
2. If necessary, use the filter bar to display the list you want to populate. double-click a list to open it.
3. Click the List tab. The List:<name> List window appears.
4. Click the New button. A dialog box appears.
5. Type the item name, type two colons (::), then type a description of the item. The name and description can each be up to 255 characters.

---

Note	Do not use commas when adding values to a list.
------	---

---

On separate lines, enter additional list items as needed. You can type names and descriptions of as many list items as you want, separating them with a carriage return. You can also paste list items into the dialog box from a text editor, such as Notepad.

---

Note	This dialog box is limited to 4000 bytes. The “carriage return” for each item uses 1 byte. If the average list item uses 20 bytes (including spaces and the carriage return), the list can contain approximately 200 items. Additional list items can be added by selecting New again.
------	--

---

6. After you finish typing new list items, Click OK. The list items are added to the list.  
By default, the Active property of a list item is set to Yes. If you want to make it inactive, double-click the row and choose No for the Active property.

This process of adding multiple list items at a time is called “batch add.”


## More Kinds of Lists

Given that users see Custom and Object lists, let’s further distinguish what kinds of lists users see in their work. You are familiar with the “List” (SingleList) and “MultiList” attributes from the “Classes” chapter.

- SingleList Lists
- MultiList Lists
- Cascading Lists
- Dynamic Lists


### SingleList Lists

A SingleList attribute or cell presents a list from which only one value can be selected. The following figure shows the Time Format field, a SingleList cell in Web Client.

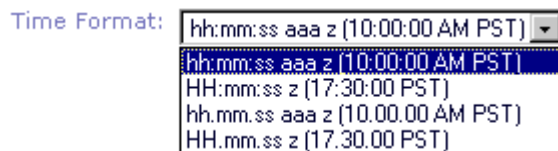


## MultiList Lists

A MultiList attribute or cell is a list from which multiple values can be selected. In Web Client, you can select values for a MultiList cell using the Multiple Value Selection window, shown in the following figure.

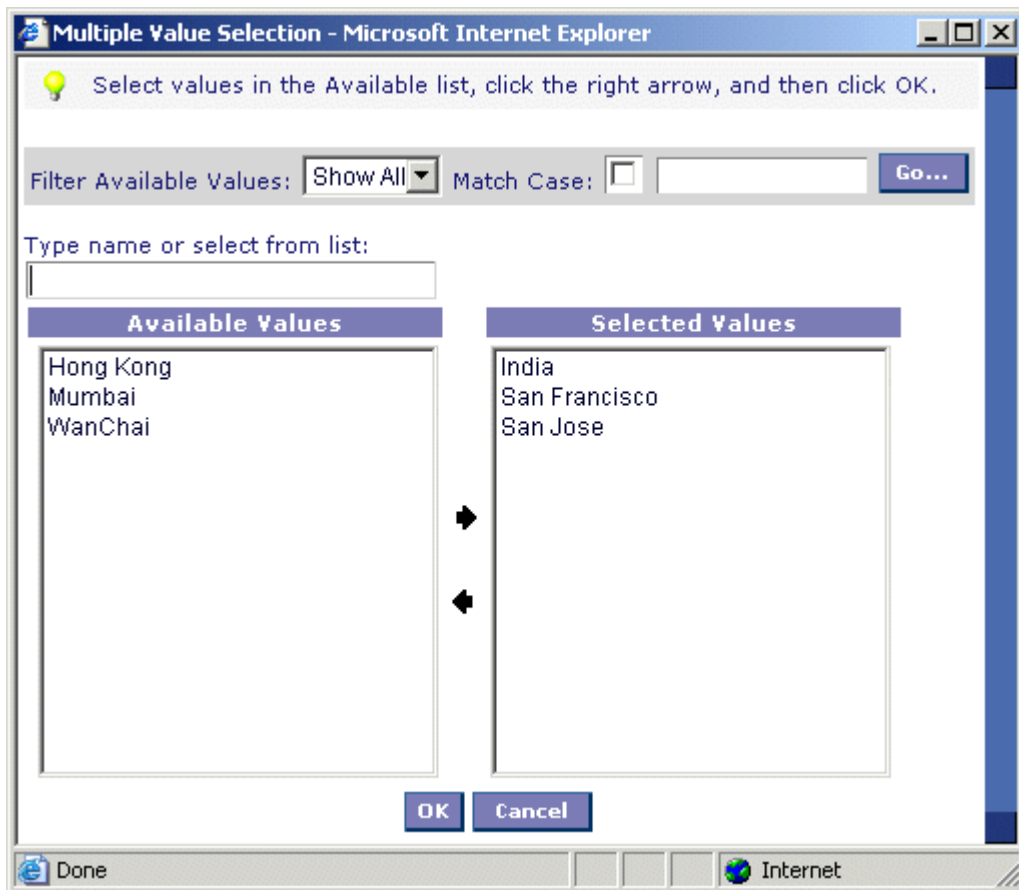

## Cascading Lists

A SingleList or MultiList attribute can be configured in Java Client to have multiple hierarchical levels. A list with multiple hierarchical levels is called a cascading list. The following figure shows setup window (in Java Client) for the Location list, a cascading list. The list has separate levels for continent, country, and city.

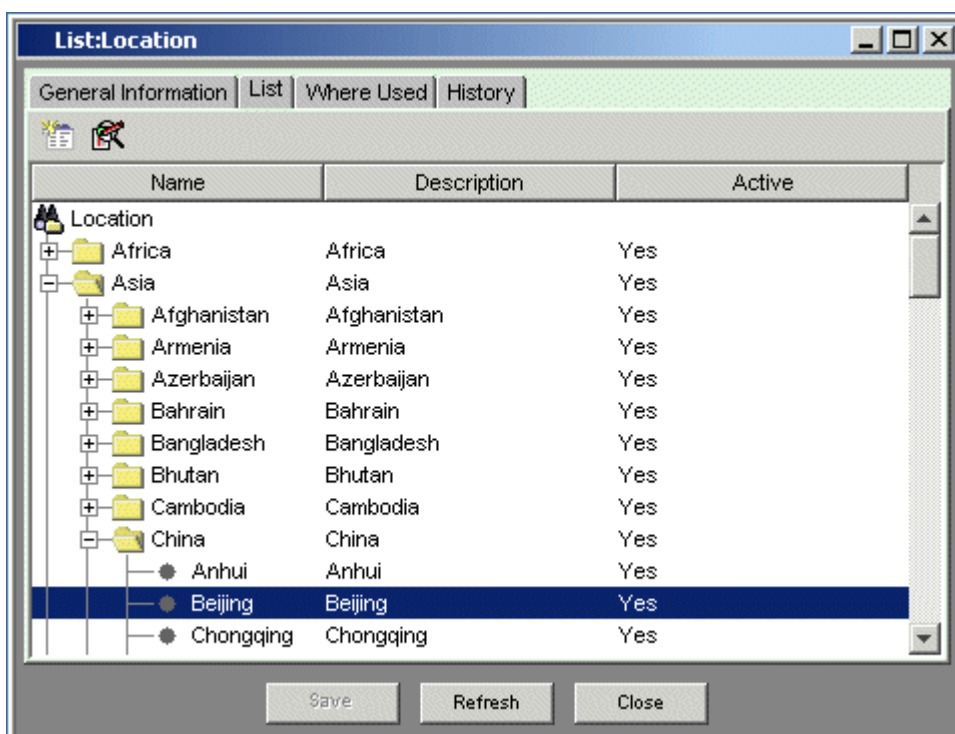

**Note** The Location list is the only cascading list that ships with Agile PLM. However, you can define your own cascading lists.

For more information about cascading lists, see [Creating Cascading Lists](#) (on page 94).

## Dynamic Lists

The Agile PLM server has both static lists and dynamic lists. Static lists are lists that contain an unchanging selection of values. Dynamic lists contain a list of values that are updated at run time. Static lists can be modified; new values can be added and current values can be made obsolete. Dynamic lists cannot be modified; consequently, the Editable property of dynamic lists is set to No.

## Configuring Lists

This section provides instructions for configuring drop-down lists in Java Client. These instructions apply to ordinary lists and cascading lists.

### To modify a list:

1. Under Data Settings, double-click Lists. The Lists window appears.
2. If necessary, use the filter bar to display the list you want to modify.
3. Double-click a list to open it.
4. On the General Information tab, edit the Name or Description fields.
5. To disable the list, change the Enabled field to No.

---

**Note** If the list is currently being used in the Agile PLM system, it cannot be disabled.

---

6. To modify the list values (that is, the list entries), click the List tab. Add, delete, or modify values as necessary.

---

**Note** If the list is currently being used in the Agile PLM system, its values cannot be deleted. However, you can deactivate a list value so that it no longer appears in Agile PLM clients.

---

7. Click Save to save your changes.

**To delete a list:**

1. Under Data Settings, double-click Lists. The Lists window appears.
2. If necessary, use the filter bar to display the list you want to delete.
3. Select a list.
4. Click the Delete button, and then click Yes to confirm.

---

**Note** If the list is currently being used in the Agile PLM system, it cannot be deleted or disabled.

---

**To modify a list value (list entry):**

1. Under Data Settings, double-click Lists. The Lists window appears.
2. If necessary, use the filter bar to display the list you want to modify.
3. Double-click a list to open it.
4. Click the List tab.
5. Double-click a list value to open it.
6. Fill in the Name and Description fields. They are both limited to 255 characters.
7. To deactivate the value, set the Active field to No.

---

**Note** By making a list value inactive, you effectively hide it from Agile PLM clients. However, users can still search for inactive values.

---

8. Click OK to save your changes.

**To delete a list value (list entry):**

1. Under Data Settings, double-click Lists. The Lists window appears.
2. If necessary, use the filter bar to display the list you want to modify.
3. Double-click a list to open it.
4. Click the List tab.
5. Select a list value.



6. Click the Delete button: you may see the Confirm Dialog with a warning (and the prompt "Do you want to continue to delete?"), click Yes to continue the delete.

You may see the Delete List Item dialog, which indicates the system's assessment that the list item (list entry) is in use, and that you must first remove all references to the list entry before trying again to delete it.

---

Note	If the list is currently being used in the Agile PLM system, its values cannot be deleted. However, you can deactivate a list value so that it no longer appears in Agile PLM clients.
------	--

---

#### To change the list used by a List or MultiList attribute:

1. Under Data Settings, double-click Classes. The Classes window appears.
2. Open the class or subclass whose attributes you want to modify.
3. Click the User Interface Tabs tab.
4. Double-click a tab to open it.
5. Click the Attributes:<Table> tab.
6. Double-click the List or MultiList attribute you want to modify.
7. For the List property, select a list. You can also click New List to create a new list.
8. Click Save to save your changes.

---

Note	If any Agile PLM objects have the attribute set to use the currently selected list, you cannot select a different list.
------	---

---

## Setting Default Values for Lists

Once you have created the list for a List attribute, you can establish its default value if necessary. For more information, see [Setting Default Values](#) (on page 78). A default value is one that is selected automatically for a field when you create a new Agile PLM object. The default value for a List attribute must be one of the values in its associated list.

## Failure Mode Lists

Failure mode is used by product service requests (PSRs) to indicate how the item failed when quality incidents are reported. The failure mode is a list of values that are specific to each item subclass. For instance, if a customer created a subclass of Items called Optics, then a Failure Mode list would be created for Optics that contains the types of defects specific to optical components. Failure mode lists have the following special characteristics:

- When you create a new subclass of the Documents or Parts classes, the list library automatically creates a new Failure Mode list for that subclass.
- If you change the subclass name after it has been created, the name of the related failure mode list is *not* updated. This list will be updated after refresh.
- The Where Used tab of failure mode lists is disabled due to the special handling of failure modes in the Agile PLM system.
- A failure mode list cannot be deleted unless its corresponding subclass has been deleted.

Because of their special characteristics, failure mode lists should not be used for other types of list attributes.

## Creating Cascading Lists

Cascading lists have multiple hierarchical levels, presenting several lists within lists.

Configuring cascading lists is very similar to configuring single-level lists. See [Configuring Lists](#) (on page 91) for more information about modifying lists. Cascading lists have the following additional restrictions:

- Once you create a cascading list, you cannot change it to an ordinary list. After the list is saved, the `Is Cascading?` property is read-only.
- Each folder within a cascading list must contain unique values. However, different folders within a cascading list can share the same values.
- Cascading list values must be added one at a time. There isn't a batch method for adding cascading list values.
- A cascading list can have any number of levels. However, in practice you should try to limit a cascading list to no more than four levels.

### To create a new cascading list:

1. Under Data Settings, double-click Lists. The Lists window appears.
2. Click the New button. The Create List dialog box appears.
3. Fill in the Name and Description fields.
4. To enable the list, make sure the Enabled list is set to Yes.
5. In the Is Cascading? list, select Yes.
6. Click OK. The new List:<name> window appears.
7. To add values to the list, click the List tab.
8. Click the New button. A dialog box appears.
9. Type in the list item name, then type a description of the list item.
10. Click Add to add the value and close the dialog box. If you wish to save the value and add other values to the same level, click Add Another.

---

Note	List values are always added to the level <i>below</i> the currently selected value in the cascading list.
------	--

---

11. To add more values, repeat steps 8 through 10.

## Process Extensions

The Process Extensions node lets you define custom actions that extend the functionality of the Agile PLM system. The custom actions you define can be used to create custom reports, user-driven and workflow-triggered custom actions, and custom tools accessible through Agile PLM clients.

A process extension is either a Java class deployed on the Agile Application Server or a link to a

URL. The URL can be a simple Web site or the location of a Web-based application.

There are five integration points for process extensions available in Agile PLM clients. You can invoke process extensions from the following areas:

- Actions menu
- Tools menu
- Workflow Status
- External reports
- Dashboard — URL process extensions that are created with Dashboard as the integration point are listed in the Dashboard Extension field, while a Dashboard table with View Type List is created. The output of the URL process extension is displayed in the Dashboard table.

---

**Note**      Technically, a custom AutoNumber source is another type of process extension because it uses the same server-side framework as custom actions. For more information about custom AutoNumber sources, see [Autonumbers](#) (on page 99).

---

What tools do you need to develop process extensions? For URL process extensions, you don't need any additional tools. You can define any number of URL process extensions in the Process Extension Library and specify where those URLs can be accessed from in the client. To create process extensions that are Java classes deployed on the Agile Application Server, you need to either purchase the Agile SDK, or work with Oracle Consulting – Agile Practice or an Agile partner to develop process extensions that suit your company.

For more information about how to use the process extensions framework to develop and deploy custom AutoNumber sources and custom actions, see the *Agile SDK Developer Guide*.

## Using the Process Extension Library

The Process Extension Library is where you define the custom actions that can be used in Agile PLM clients. When you add a custom action to the Process Extension Library, you specify how to initiate that action from the client.

Agile PLM provides two default process extensions, as shown in the following table.

Name	Description
Accept Package Response	Sends an Accept response to the Agile PLM system that submitted a Package.
Reject Package Response	Sends a Reject response to the Agile PLM system that submitted a Package.


These process extensions are used by Agile Content Service (ACS) to automatically send Accept or Reject responses during Agile-to-Agile communication. For more information, see [Configuring Agile Content Service](#) (on page 383).

There are several out-of-the-box process extensions used by Product Governance & Compliance. For more information, see [Configuring Product Governance & Compliance](#) (on page 417).

Of course, you can add any number of additional process extensions to the Process Extension

Library.

**To add a custom action to the Process Extension Library:**

1. Under Data Settings, double-click Process Extensions. The Process Extension Library window opens.
2. In the Process Extension Library window, click . The Add Process Extension dialog box appears.
3. Enter the following information:
  - Name: Enter the name of the custom action.
  - Description: Enter a brief description of the custom action.
  - Type: Select URL or Internal Custom Action.
  - Address: Specify a Web address (if Type is set to URL).
  - Internal Custom Action: Select a custom action from the list (if Type is set to Internal Custom Action). The list reflects the custom actions that have been deployed on the Agile Application Server using the process extensions framework. If no custom actions have been deployed, the list is empty.
  - Initiate From: Select one or more locations from which the custom action can be initiated. Select from the following options:
    - Actions Menu: Allows users to select the custom action from the Actions menu of a properly configured class.
    - External Report: Allows users to generate a report by accessing an external resource or URL. If the process extension is an internal custom action, the External Report option is unavailable.
    - Tools Menu: Allows users to select the custom action from the Tools menu.
    - Workflow State (status): Invokes the custom action whenever a properly configured workflow enters a particular status. If the process extension is a URL, the Workflow State option is unavailable.

If you specify that a custom action is initiated from the Actions menu or a workflow status, you can configure subclasses or workflows to use that custom action. If you specify that a URL is used to generate an external report, you can use the Agile Web Client to create the report. If you specify that an action is initiated from the Tools menu, it's available at all times in the Agile client.

  - Roles: Select one or more roles to use for the custom action. To use the roles and privileges of the current user, leave this field blank. To temporarily override roles and privileges of the current user, select one or more roles. Once the custom action is completed, the client reverts to the current user's roles and privileges.
  - TimeOut: Enter the number of seconds the client will be blocked if the custom action does not respond. If Timeout equals -1, the client will be blocked until the custom action returns a result. The default timeout is 60 seconds. URL-based process extensions do not have a timeout.
  - Enabled: Select Yes.
4. Click OK to save the process extension.


**To modify a process extension:**

1. Under Data Settings, double-click Process Extensions. The Process Extension Library window

opens.

2. Open the process extension you want to modify.
3. Change the settings, and then click OK.

#### To delete a process extension:

1. Under Data Settings, double-click Process Extensions. The Process Extension Library window opens.
2. Select the process extension you want to delete, and then click .

---

Note	Custom actions currently being used by a class, workflow, or external report cannot be deleted. If you disable a custom action, it is inactive. Removing a custom action from the Process Extension Library does not affect custom code that has been deployed on the Agile Application Server.
------	---

---

## Setting the Timeout for Process Extensions

All custom actions that you add to the Process Extension Library are asynchronous operations. Once you initiate a custom action from an Agile PLM client, it runs to completion regardless of what the Agile PLM client does. If you initiate a custom action by selecting it from the Tools menu or Actions menu, you generally want the client to be blocked until the custom action returns a result. When you add a custom action to the Process Extension Library, you can specify a timeout value. The timeout setting determines how long the client is blocked while waiting for a result.

The default timeout is 60 seconds. If the client times out, it proceeds as if no result was received from the custom action. Meanwhile, the custom action continues running until completion.

Process extensions that reference a URL do not have a timeout. When an Agile PLM client invokes a process extension that references an URL, the client is not blocked at all.

If a custom action is initiated by a workflow status change, you may not want to block the client for any length of time. In that case, you can set the timeout value to 0. However, if the custom action updates field values or moves the routable object to the next status, you may want to block the client long enough so that the user interface accurately reflects the results of the custom action. In that case, set the timeout value to an appropriate time to allow the custom action to complete.

## Assigning Process Extensions to Classes

To add custom actions to the Actions menu of an Agile PLM object (such as a part or an ECO), you configure the object's class. Each base class, class, and subclass has a Process Extensions tab. The custom actions that you assign to a class must be previously defined in the Process Extension Library.

Process extensions are inherited from classes and base classes. Consequently, if you assign a process extension to a base class, it is also assigned to classes and subclasses beneath the base class.

---

Note	Process extensions can be assigned to only one level in a class hierarchy. For example, if a process extension is assigned to the Part subclass it can't be assigned to the Item base class.
------	--



---

---

**Note**      However, in the case of Agile Portlets, using the process extension Configurator, process extensions can be assigned only to base classes, that is, Items base class, not Parts or Documents classes, nor Part or Document subclasses.

---

**To assign process extensions to a class:**

1. Under Data Settings, double-click Classes. The Classes window opens.
2. Double-click the base class, class, or subclass you want to work with.
3. Click the Process Extensions tab.
4. In the toolbar, click . The Assign Process Extension dialog box appears.
5. Select custom actions in the Choice List, and then click  to move them into the Selected List. When you are finished, click OK.
6. Click OK to save settings.

## Assigning Process Extensions to Workflow Statuses


For each workflow status except the Pending status, you can assign one or more custom actions that are initiated when the workflow enters that status. The custom actions you assign to a workflow status must be previously defined in the Process Extension Library.

---

**Note**      The Automated Transfer Orders (ATOs) class and its subclasses do not support workflow-initiated process extensions.

---

**To assign process extensions to a workflow status:**

1. Under Workflow Settings, double-click Workflows. The Workflows window opens.
2. Double-click the workflow you want to work with.
3. Click the Status tab.
4. Select a status other than Pending. The Criteria properties table for the selected status appears below the status table.
5. Double-click the selected status in the Criteria properties table.
6. In the Process Extensions list, click . A popup window appears.
7. Select custom actions in the Choices List, and then click the > button to move them into the Selected List. When you are finished, click OK.
8. Click Save to save settings.

# Autonumbers

**This chapter includes the following:**

▪ How Autonumbers Are Used .....	99
▪ About Autonumber Sources.....	100
▪ Configuring Autonumber Sources.....	102
▪ Creating a New Autonumber Source .....	104
▪ Deleting an Autonumber Source.....	105

This chapter describes how to manage the automatic numbering of Agile PLM objects.

## How Autonumbers Are Used

From the AutoNumbers node, you can configure sources for automatic numbering in Agile PLM. For example, you can change the name of an autonumber source or its subclass assignments, or expand the sequence when necessary.

You can also specify your own prefix or suffix for an autonumber source, or create new autonumber sources. You can delete an autonumber source that is no longer needed as long as it has not been used to create an object in Agile PLM clients.

When you create a new autonumber source, you can use the standard method or the custom method. The standard method is to define a sequence by specifying the prefix, suffix, character set, and number of characters allowed. The custom method is more flexible and uses the process extensions framework to define any numbering sequence.

To use process extensions to create custom autonumber sources, you need to either purchase the Agile SDK or work with Oracle Consulting – Agile Practice or an Agile partner to develop process extensions that suit your company's needs. For more information about process extensions, see the *Agile SDK Developer Guide*.

## Modifying an Autonumber Source

You can modify any number source from the AutoNumbers node.

**To modify an autonumber source:**

1. Under Data Settings, double-click AutoNumbers. The AutoNumbers window appears.
2. Double-click a row to open that source's window (for example, the AutoNumber: Deviation Number window).
3. In any editable field, enter a new value or select from the drop-down list.
4. When you have finished, click Save.

5. If you wish to revert to the original settings or start over, click Cancel. You will be prompted whether you want to cancel the new settings in the window; Click OK if you do or Cancel if you do not.

The autonumber properties are described in [Configuring Autonumber Sources](#) (on page 102).

## About Autonumber Sources

An autonumber source is a predefined, consecutive number series used for the automatic numbering of objects created in Agile PLM clients. Each object in Agile PLM is assigned a number when it is created. You can allow users to choose between assigning numbers manually or letting Agile PLM assign numbers automatically, or you can prevent manual number assignment.

The Agile PLM administrator sets up the number assignment convention for the Agile PLM system from the following two administrative nodes:

- From the Classes node, you assign specific autonumber sources to specific subclasses. See [Changing the AutoNumber Source Property](#) (on page 55).
- From the AutoNumbers node, you configure the number sources themselves, including their names, whether they have a prefix or suffix, and how many numbers are in each sequence. You can view which subclasses are assigned to a specific number source, and you can configure this arrangement. You can also create new number sources or delete number sources that are not needed.

Autonumber sources are assigned to subclasses so that Agile PLM will know which number source to use when automatically assigning numbers to objects. A separate autonumber source is provided and assigned to most subclasses with your Agile PLM installation.

---

Note	Several Agile PLM subclasses, such as Manufacturer and User, do not allow autonumbering.
------	--

---

To view the existing autonumber sources, double-click the AutoNumbers node. You can use the autonumber sources provided, or you can make any of the following changes to the configuration:

- Create new autonumber sources using the New button.
- Enable or disable an autonumber source using the Enable or Disable buttons.
- Assign multiple autonumber sources to a subclass.
- Assign multiple subclasses to an autonumber source.
- Add a prefix or suffix to an autonumber source using the Prefix or Suffix field in the setup window.
- Change the name of an autonumber source using the Name field in the setup window.
- When all numbers in an existing autonumber source have been used, expand the number series using the Next Number field in the setup window.
- Delete an autonumber source that is not needed using the Delete button.

---

Note	For information about requiring automatic numbering, see <a href="#">Preventing Manual Number Assignment</a> (on page 55).
------	--

---



If you create a new subclass, you can assign it any existing number sources for autonumbering, or create a new number source just for that subclass.

The following table lists the autonumber sources as configured at installation.

Name	Where Used	Prefix	Number of Characters
ATO Number	ATO	ATO	7
Audit Number	Audit	Audit	5
Broker Number	Broker	BROKER	5
CAPA Number	CAPA	CAPA	5
Component Manufacturer Number	Component Manufacturer	COMMR	5
Contract Manufacturer Number	Contract Manufacturer	CTMR	5
Contracts Number	Contract	CONTRACT	1
CTO Number	CTO	CTO	7
Customer Number	Customer	CUST	5
Declaration Number	Declaration	MD	5
Designs Number	Design	DESIGN	5
Deviation Number	Deviation	DEV-	6
Discussion AutoNumber	Discussion	D	5
Distributor Number	Distributor	DISTRIBUTOR	5
Document Number	Document	DOC	6
ECO Number	ECO	ECO-	6
ECR Number	ECR	ECR-	6
File Folder Number	File Folder	FOLDER	7
Gate AutoNumber	Gate	G	5
Historical Report File Folder Number	Historical Report File Folder	HFILE	5
Manufacturer Rep Number	Manufacturer Representative	MR	5
Markup Number	Markup	MARKUP	7
Mfr. Orders Number	MCO	MCO-	6
NCR Number	NCR	NCR	5
Package Number	Package	PKG	5
Part Number	Part	P	6
PCO Number	PCO	PCO	5
Phase AutoNumber	Phase	PH	5

Name	Where Used	Prefix	Number of Characters
PR Number	Problem Report	PR	5
Program AutoNumber	Program	PGM	5
Project Number	Sourcing Project	PRJ	5
Publish Price Number	Published Price	PRICE	5
Quote History Number	Quote History	QUOTE	5
RFQ Number	Request for Quote	RFQ	5
Site Change Orders Number	SCO	SCO	5
StopShip Number	Stop Ship	STOP-	6
Task AutoNumber	Task	T	5

## Configuring Autonumber Sources

Autonumber sources have modifiable properties, which are listed in the following table.

Property	Description
Name	This is the name of the autonumber source. It might simply be the same as the subclass, or it might represent a further distinction, for example, Fasteners or Fasteners-Red. You can change this name.
Description	A brief description about the autonumber source. This is an optional field.
Enabled	Whether this autonumber source is enabled (Yes) or not (No). The default is Yes.
Type	Standard or Custom. The default is Standard. Custom autonumbering is available to customers with SDK capabilities, which allow you to add a process extension that incorporates existing numbering schema. See <a href="#">Process Extensions</a> (on page 94), and the <i>Agile SDK Developer Guide</i> .
Prefix	Property of a standard autonumber. The characters that precede each number that Agile PLM automatically assigns for this autonumber source, for example, Acme000759 (Acme = prefix). You can change the prefix.
Suffix	Property of a standard autonumber. The characters that follows each number that Agile PLM automatically assigns for this autonumber source, for example, Acme000759SW5 (SW5 = suffix). You can change this suffix.
Character Set	Property of a standard autonumber. The characters that are entered in this property are used to create the autonumber. Appropriate for internal autonumber only. Character set can include only a-z, A-Z, 0-9; no special characters are supported.
Number of Characters	Property of a standard autonumber. Sets the number of characters to use or the length. So if "4" is entered, the numbering can be 0001-9999. Appropriate for internal autonumber only. Limit is 10, so this property can be populated only with 1, 2, 3, 4, 5, 6, 7, 8, 9, or 10.

Property	Description
Starting Number	Property of a standard autonumber. The first number that Agile PLM automatically assigns in the sequence. This property can be thought of as an arbitrary “next number.”
Next Number	Property of a standard autonumber. While you can manipulate the “Starting Number” value, the Next Number simply reports what the system will use for the next offered autonumber.
Custom Autonumber	This property of a <i>custom autonumber</i> is only activated (and visible) when Type is Custom. A drop-down list field that you populate with your company's customized autonumbering system. The list of custom autonumbers reflects the set of custom autonumbers deployed on the Agile Application Server.

---

**Note** For out-of-box subclasses, the defaults of AutoNumber Required = No and Autogenerate = Yes means that a number will be automatically generated when you create an object in that subclass; however, users can enter a new object number.

---

## Changing an Autonumber's Prefix or Suffix


The Prefix and Suffix properties identify the fixed string of letters or numbers that precede or follow an autonumber. For example, the autonumber prefix for parts is P, so all parts created in Agile PLM clients have numbers preceded by the prefix P, such as P00678. If the autonumber source also had a suffix of 00, number assignments would be followed with 00.

The Agile PLM administrator can change the prefix and suffix properties for an autonumber source. New objects created for subclasses that use this autonumber source have the new prefix or suffix in their autonumbers.

## Changing Where an Autonumber Source Is Used

The Where Used property shows you what subclasses use a particular autonumber source in Agile PLM. You can modify this property to permit additional subclasses to use the number source, or to prevent a subclass from using it.

**To view or change the subclasses that use a particular autonumber source:**

1. Under Data Settings, double-click AutoNumbers. The AutoNumbers window appears.
2. Double-click a row, and that source's window appears (for example, the Deviation Number window).
3. On the Where Used tab, click the Add button .

The “Add classes to where used tab” dialog box appears, showing all subclasses that exist in your Agile PLM system. The subclasses listed in the Selected List list use this number source for objects created in Agile PLM clients. The subclasses listed in the Choice List list do not use this number source.

4. To change the configuration, double-click a subclass name to move it from one list to the other.
5. To save your changes and close the dialog box, click OK.
6. When you have finished, click Save.

7. If you wish to revert to the original settings or start over, click Cancel. You are prompted whether you want to cancel new settings on the window; Click OK if you do or Cancel if you do not.

## Custom Autonumbers

Select a custom autonumber source from the list. You can create custom autonumber sources only if they have been deployed on the Agile Application Server using the process extensions framework. When you create a custom autonumber source, you select from the Custom Autonumber drop-down list. If no custom autonumber sources have been deployed, the list is empty.

## Timeout

Enter the number of seconds after which a timeout error will occur if the custom autonumber source does not respond. The default is 30 seconds.

## Creating a New Autonumber Source

You can create a new autonumber source for user-defined subclasses if required.

### Before You Begin

Consider the following details before creating a new autonumber source.

- Which subclasses will use the new autonumber source?
- What name will you give the new autonumber source?
- Will the new autonumber source require a prefix? If so, what prefix?
- Will the new autonumber source require a suffix? If so, what suffix?
- What size number sequence is required?

#### To create a new autonumber source:

1. Under Data Settings, double-click AutoNumbers. The AutoNumbers window appears.
2. Click New. The Define the AutoNumber dialog box appears.
3. Fill in the Name and Description fields, and select Yes or No in the Enabled list.

Set the value in the Enabled list to Yes if you are ready to introduce this new number source to the Agile PLM system. The default is Yes in this dialog box, but it may be prudent to set it to No until the subclass is entirely set up.

4. Select the type of new autonumber:

If you selected Standard, fill in, as your company's needs require, the Prefix, Suffix, Character Set, Number of Characters, and Starting Number fields.

To prevent duplicating a number source, see About Autonumber Sources for a list of the prefixes for autonumber sources already provided with your Agile PLM installation.

The Number of Characters setting determines how many autonumbers can be assigned. For example, if you enter 4 in the Number of Characters field, the range of numbers available for this series is from 0001 to 9999 (or a total of 9,999 numbers). Choose a value that will prevent the sequence from being exhausted in a short time.

5. If you selected Custom, fill in Custom AutoNumber and Timeout (seconds) fields.
6. Click the down arrow for the Where Used list. A dialog box appears, showing all subclasses that exist in your Agile PLM system. Since you are creating a new number source, the Selected field will be empty.
7. If you have already created the subclass that will use this number source, double-click the subclass's name in the Choices list to move it to the Selected list. If you have not created the subclass that will use this number source, this step cannot be completed; in this case, leave the Enabled field set to No.
8. To save your changes and close the dialog box, click OK.

The new name appears as a new object on the AutoNumbers window.

For information about how to prevent Agile PLM users from manually assigning numbers for this subclass, see [Preventing Manual Number Assignment](#) (on page 55).

## Deleting an Autonumber Source

The Agile PLM administrator can delete an autonumber source that is not needed, as long as it has not been used to create an object in Agile PLM clients.

---

**Note** If an autonumber source has been used to create an object, disabling it makes it unavailable for further use. See [Modifying an Autonumber Source](#) (on page 99).

---

### To delete an autonumber source:

1. Under Data Settings, double-click AutoNumbers. The AutoNumbers window appears.
2. Select the autonumber source you want to delete.
3. Click the Delete button.

If the autonumber source has already been used to create an object in Agile PLM clients, you see an error message stating that the object is already in use, and the Agile PLM system does not delete it.

If the autonumber source has not already been used to create an object in Agile PLM clients, a dialog box appears to confirm the deletion.

4. Click OK to confirm the deletion.

The autonumber source is deleted, and is no longer available for assignment to a user-defined subclass.



# Criteria

**This chapter includes the following:**

---

▪ About Reusable Criteria.....	107
▪ Exploring Reusable Criteria .....	108
▪ Creating a New Criteria .....	109
▪ Modifying an Existing Reusable Criteria .....	111
▪ Using Affected Items Tab Fields in Reusable Criteria .....	111
▪ Using \$CURRENTREV and \$LATESTREV in Criteria for Items .....	113

This chapter examines the criteria used in Agile PLM workflows, and explains how to create reusable criteria.

## About Reusable Criteria

A reusable criteria is a database query, just like an advanced search. The attributes used to create reusable criteria are similar to the attributes used to create advanced searches. They are also like filters that qualify the objects moving through a workflow process or the conditions for which the privileges masks apply.

The Criteria node is where reusable criteria are stored and maintained. From this node, you can create, delete, or modify the reusable criteria that are a fundamental building block of Agile PLM workflows and privileges. Reusable criteria are also used to define designated escalation persons and signoff transfer authority.

Reusable criteria can be assigned to multiple workflows, and to multiple statuses within a single workflow. You can define criteria that:

- Specify or distinguish combinations of approvers or observers, whether they are selected users, existing or created global groups, or even personal groups.
- Specify each of the company's product lines.
- Correspond to Agile PLM classes.
- Correspond to any other combination of attributes of Agile PLM objects—items, changes, packages, manufacturers and manufacturer parts.

Since changes to the reusable criteria for these workflows are global (that is, a refinement to a reusable criteria affects every workflow in which it appears), you can complete systemwide changes to your workflows in one step.

By specifying a list of reusable criteria for each workflow, you limit which changes can use a specific workflow. For more information about reusable criteria applied as matching criteria, see [Using Affected Items Tab Fields in Reusable Criteria](#) (on page 111).

## Exploring Reusable Criteria

### To view the available reusable criteria:

1. Under Data Settings, double-click Criteria. The Criteria window appears.
2. Filter criteria records to narrow your search. For example, filter records by Description Contains Item to find all the reusable criteria for item objects. (See [Filtering Data](#) on page 16.)

The filtered list of reusable criteria is displayed in the table. The Criteria table shows the name, description, and object type for each reusable criteria. Click a column header to sort the table by that column.

Use the buttons at the top of the window to perform various reusable criteria management tasks.

Button	Description
Delete	Deletes the selected reusable criteria. A reusable criteria cannot be deleted if it is already in use.
Import	Imports an archive file (.AGI) to create a new criteria. See <a href="#">Administrator Import and Export</a> (on page 23).
Export	Exports reusable criteria data for the selected reusable criteria. See <a href="#">Administrator Import and Export</a> (on page 23).
Export All	Exports all reusable criteria data. See <a href="#">Administrator Import and Export</a> (on page 23).
New Criteria	Create a new reusable criteria. See <a href="#">Creating a New Criteria</a> (on page 109).

## Viewing a Reusable Criteria

The reusable criteria can have any of the Agile PLM classes or subclasses as an object type. Many of the out-of-box reusable criteria have been used to define privilege masks.

### To view a specific reusable criteria:

1. Under Data Settings, double-click Criteria. The Criteria window appears.
2. Filter criteria records to narrow your search. For example, filter records by Description Contains Item to find all the reusable criteria for item objects. (See [Filtering Data](#) on page 16.)
3. In the Criteria window, click the name of the reusable criteria you want.

The tabbed window for that reusable criteria appears.

The General Information tab of the Criteria setup window has button you can use to perform the available actions described in the following table:

Action	Description
Delete	Deletes the reusable criteria if it is not in use.



Action	Description
Export	Exports the reusable criteria information. See <a href="#">Administrator Import and Export</a> (on page 23).
Save As	Allows you to copy the reusable criteria and give the copy a new name. <ul style="list-style-type: none"> <li>Click <b>Save As</b>.</li> <li>Enter a new name in the dialog box that appears.</li> <li>Click <b>OK</b>.</li> </ul>

## Criteria Windows and Tabs

When you double-click an existing reusable criteria, its properties are displayed in a tabbed window in the right pane. The General Information tab displays the name and description of the criteria, and object type that criteria applies to. You can use the Edit button to edit the name and description.

The Criteria tab lists the type—class or subclass—that the criteria is associated with and the criteria parameters. These are the conditions that define how each reusable criteria works.

---

**Note** You can edit a reusable criteria that's already being used, but its Name, Description, and Object Type fields are read-only.

---

The Where Used tab tells where reusable criteria are used in criteria-specific properties, matching criteria, privilege masks, escalations, and transfers. The History tab lists the actions that have been performed in relation to this reusable criteria.


## Creating a New Criteria

You create reusable criteria according to the needs of your workflow or privilege mask. Because reusable criteria can be widely used in Agile PLM, their purpose and function need to be clear from the start.

It is recommended that you devise a system or convention for naming reusable criteria.

**Caution** Although you can change the name of reusable criteria at any time, doing so too often may confuse users, who do *not* see a name change until they have logged out and back into the Agile PLM client.

A possible naming scheme could be:

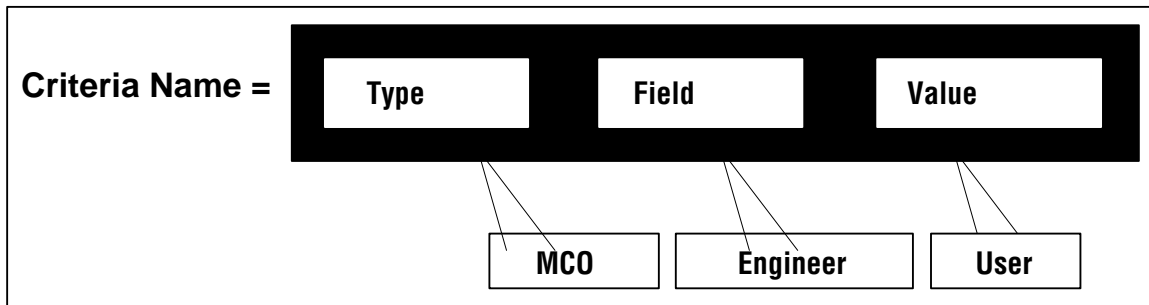

For example, a criteria name of “MCO\_Acme\_July2000” is a lot easier for your users to decipher than “MCO6.”

---

**Note** Reusable criteria created by the Agile PLM administrator appear in the Transfer Authority dialog as Global.*Criteria name*. Personal reusable criteria created by other users appear in the Transfer Authority dialog box as User.*Criteria name*.

---

**To create a new reusable criteria:**

1. Under Data Settings, double-click Criteria. The Criteria window appears.
  2. Click the New button. The Create Criteria dialog box appears.
  3. Fill in the Name and Description fields, and select the object type that your reusable criteria will apply to. This list comprises all the Agile PLM classes and subclasses.
- 
- Note** The reusable criteria name must be unique. If you specify a reusable criteria name that is already used, you get a duplicate name error message.
- 
4. If you want the criteria to be case-sensitive, select the Case Sensitive checkbox. Case-sensitive searches improve system performance and can simplify how you define reusable criteria:
    - If you enter text in the Value field, the criteria will look for text that is an exact match.
    - If you define a numerical value, checking Case Sensitive allows the Agile PLM system to make use of internal database settings to find objects more quickly.
  5. Click Add and select the Agile PLM attribute you want from the Attribute drop-down list. The values that are available change according to the Agile PLM class or subclass you selected in the previous step. Click OK in the small dialog box.
  6. Click the Match if field and specify the search operator.
  7. Click the Value field, and select a value for the field you selected from the Attribute list. Click OK in the small dialog box.
  8. If you are going to add additional conditions, click the Add button again, and then in the And/Or field, select And or Or.
  9. You can click the Insert button to add a condition above the currently highlighted row.
  10. Repeat step 5 through step 8 until your reusable criteria is complete.
  11. When the criteria is complete, Click OK.

---

**Note** Changing the criteria in the Object Type field resets the entire reusable criteria. A reusable criteria covers one entire Agile PLM class or subclass. You need to create a separate global criteria to cover a different class or subclass.

---

Click the ( ) button to place parentheses around the specified condition or conditions, which changes the order in which the search conditions are evaluated. The ( ) button functions like a formula within parentheses in an algebraic equation, following the standard algebraic order of operations. The grouped criteria within parentheses are resolved before any others.

## Modifying an Existing Reusable Criteria

You cannot modify an existing reusable criteria if it is already in use. You can, however, remove the reusable criteria from its assigned objects, modify it, and then reassign it again. Or, you can create a new reusable criteria, assign the new criteria to the objects and remove the old criteria from the objects. The Where Used tab lists all the objects where the reusable criteria is in use.

### To modify an existing reusable criteria:

1. Under Data Settings, double-click Criteria. The Criteria window appears.
2. Filter criteria records to narrow your search. For example, filter records by Description Contains Item to find all the reusable criteria for item objects. (See [Filtering Data](#) on page 16.)
3. In the Criteria window, double-click the name of the reusable criteria object you want.
4. The criteria setup window appears containing the existing information about the criteria. Modify the criteria just as when creating it.
5. When you are finished, click Save.

---

**Note** You cannot delete a reusable criteria once it has been used to create a Transfer Authority privilege, even when you delete that transfer authority. You might rename the criteria you want to delete so it is, for instance, dropped to the bottom of the list of reusable criteria.

---

## Using Affected Items Tab Fields in Reusable Criteria

There are many similarities between reusable criteria and other searches in the Agile PLM system, but there are a few important differences.

### How Changes Are Matched When Reusable Criteria Specify Affected Items Tab Fields

To select a specific routable object in Agile PLM clients, an affected items field condition must be true for all the objects on the Affected Items tab of that routable object. For example, if you specify Affected Items.Old Lifecycle Phase Equals Preliminary, then all the objects on the Affected Items tab must have the Old Lifecycle field equal to Preliminary. If you select Contains as the search operator, then every object on the Affected Items tab must contain the specified value in the specified field.

When you create a reusable criteria in Java Client, you can include criteria conditions against item fields (such as Part Category), provided the item fields are displayed on the Affected Items tab of the routable object.

---

**Note** Criteria that specify Affected Items attributes cannot be used to create privilege masks. If a criteria does not appear in a privilege mask's drop-down list, it cannot be used to define the privilege mask. See also [Revising Item Descriptions](#) (on page 300).

---

In the Create Criteria dialog box, the Attributes list contains Affected Items tab fields, including those from the Items themselves. This allows you to create reusable criteria that return changes according to fields of the Items that appear on the Affected Items tab. For this kind of query to work, the Affected Items tab field must be visible.

**For example, to find changes with Items on their Affected Items tab that have a Part Category field equal to Engineering, do the following:**

1. Under Data Settings, double-click Classes. The Classes window appears.
2. Click the class you want (for example, Change Orders).
3. In the Class setup window, click the User Interface Tabs tab.
4. Double-click Affected Items. The Class Tabs setup window appears.
5. Click the Attributes tab.
6. Find Item Category in the Name column. double-click the row to display the Attributes setup window.
7. In the Visible drop-down list, select Yes. The Visible property is now set to Yes.

## Difference Between “Item” and “Part” in Affected Items Names

It is important to understand how the system interprets the naming of affected items when you create reusable criteria, as shown in the following table:

Name (general)	Applies to...	Name (example)	Applies to...
Affected Items.Item fieldname	Parts and documents	Affected Items.Items.P2 Text20	Text20 field for both parts and documents
Affected Items.Part fieldname	Parts only	Affected Items.Part.P2 List03	List03 field for part

Most list and MultiList fields for Documents class objects cannot be used to create reusable criteria. For instance, the list fields on Page Two and Page Three tabs are not available. The two available Documentation list fields are Documentation.Product Line and Documentation.Size.

## More about Affected Items: Adding Approvers and Observers

Default change analysts (or default component engineers) may want to monitor changes assigned to them to make sure that the list of approvers and observers is complete. When workflows assign approvers and observers according to the attributes of the affected items of a routable object, you may want to add approvers that were not automatically assigned by the workflow.

For example, at Acme Inc., each product line has several projects in development at one time.

Acme uses a field on Page Two (in Agile Java Client) to identify which project or projects each item (part or document) belongs to. The Libra Product Line workflow looks at the project assigned to the affected items on an ECO to determine which default approvers and observers to assign.

Mary Green creates ECO 333 in Agile Java Client. She adds six Orion project objects to the Affected Items tab: three parts and three documents. Mary finishes preparing ECO 333 and switches it to the next status, where the change is submitted to Bob Smith, the default change analyst.

To select approvers for the Orion project, the Libra Product Line workflow examines each item on the Affected Items table to determine if the Page Two field contains Orion. If *any* the items on the Affected Items table belong to the Orion project, then the list of Orion approvers, as defined in the workflow, are automatically added to the Workflow tab when ECO 333 is submitted to Bob.

However, when some of the objects on the Affected Items table are documents, Acme requires that Orion team members in the Publications department must also sign off the change. Since not all ECOs include documents to sign off, the Libra Product Line workflow does not automatically add approvers from the Publications department to every ECO.

Bob, the change analyst, examines ECO 333 and notices that some of the affected items are documents. Bob clicks the Add Approvers button on the Workflow tab of ECO 333 and adds all the members of the Orion Publications group as approvers. Bob can add approvers to any future Review or Released status type; the ECO does not need to be in the Review or Released status type for approvers or observers to be added.

## Using \$CURRENTREV and \$LATESTREV in Criteria for Items

\$CURRENTREV and \$LATESTREV are two powerful system variables available to the administrator to construct criteria that can target specific revisions of items (parts and documents) and specific workflow statuses (for those workflows that apply to rev-based changes, that is, Change Orders, Sites Change Orders, and Manufacturer Orders).

Be aware that this functionality (enhanced in Oracle|Agile PLM Release 9.2.2.2) is quite granular and will be best understood when you have become familiar with item revisions (in Production Collaboration) and workflows. It may be helpful to request assistance from your Oracle Consulting – Agile Practice representative.

Note that these variables are also used to construct some criteria in Privilege Masks, which is another area of robust capability and granularity. Variables were introduced in Chapter 2, see [Default Value Variables](#) (on page 36); \$CURRENTREV in conjunction with the Modify privilege is detailed in [Controlling the Ability to Modify Items at Introductory Revision with \\$CURRENTREV](#) (on page 210).

### About TitleBlock.Rev

Title Block.Rev is currently not available for use in criteria conditions. Instead, use \$CURRENTREV criteria conditions to identify which revision the user has selected.

## Rules for Using the \$CURRENTREV Variable

The \$CURRENTREV variable is used to construct criteria based on the workflow status of the

change (Change Order or Manufacturing Change Order) that corresponds to a selected item revision.

The following rules govern the usage of the \$CURRENTREV variable:

- \$CURRENTREV may only be used in defining criteria against objects belonging to the Items base class (including Parts and Documents classes and their subclasses)..
- \$CURRENTREV is available as a value in the Attribute list. \$CURRENTREV itself does not evaluate to a value: the entire condition itself is evaluated as an expression.
- The Match If operator can be set to Equal To and Not Equal To.
- Value can be set to the following values.

The list of values is comprised of \$STATUSTYPE variables for all predefined Change Status Types, as well as all possible Workflow.StatusName values for all configured Workflows created for the Changes object type.

---

Note	The only Change types that are pertinent to this feature are the ones that appear in the Item's Rev drop-down list, that is, those belonging to Change Orders (ECOs), Manufacturer Change Orders (MCOs), and Site Change Orders (SCOs) classes. However, the other Change classes (Change Requests, Deviations, Stop Ships, and PCOs) do appear in this list. For expressions pertaining to \$CURRENTREV, only statuses pertaining to workflows developed for ECOs, MCOs, and SCOs should be used.
------	--

---

- The condition \$CURRENTREV Equal To \$STATUSTYPE.PENDING evaluates to True if the selected item revision corresponds to a Change whose current status type is Pending. Similar statements can be constructed for other status types as well. The supported status type variables include:

\$UNASSIGNED

\$STATUSTYPE.PENDING

\$STATUSTYPE.SUBMIT

\$STATUSTYPE.REVIEW

\$STATUSTYPE.RELEASED

\$STATUSTYPE.COMPLETE

\$STATUSTYPE.HOLD

Note that \$STATUSTYPE.CANCEL is not available, since revisions pertaining to Canceled changes do not appear in the Rev drop-down list for items, and therefore may not be selected. In any case, the expression \$CURRENTREV Equal To \$STATUSTYPE.CANCEL would always evaluate to False.

- The condition \$CURRENTREV Equal To Default Change Orders.Pending evaluates to True if the selected item revision corresponds to a change that is assigned the Default Change Orders workflow, and whose current status is Pending. Similar statements can be constructed for other workflows and statuses as well. The general format is:

<WorkflowName>.<StatusName>

Note that <WorkflowName>.CANCEL is not available.

- While the workflow status values above cover all possible statuses for a pending or released revision, special criteria values are provided for the Introductory revision because

there are no changes associated with that revision.

Based on the possible use cases, one of the following conditions would hold true when an Introductory revision of an item is selected (the term Pending change below implies a change in its pre-Released state, for example, Submitted, Review):

- `$INTRODUCTORY_NOCHANGE` – There are no Pending or Released changes against the item (the Changes tab is empty). This condition also covers the case where any past Pending changes against the item have been soft or hard deleted from the Agile system.
- `$INTRODUCTORY_PENDINGCHANGE` – The item has never been released, but there are Pending changes against the item. This condition also covers the case where the item has been released in the past, but the released changes have all been unreleased
- `$INTRODUCTORY_RELEASEDCHANGE` – The item has one or more released changes against it. It may also have one or more Pending changes against it.

Note that an expression involving any of these three values will always evaluate to False if the selected revision is not the Introductory rev.

- To support the use case where users are allowed to read, make changes to or get file attachments from only the latest released revision of an item (this is important in regulated industries (for example, medical devices) where it is important that users refer to only the latest design or spec files), another variable called `$LATEST` is introduced to the set of valid values for `$CURRENTREV` expressions. The expression `$CURRENTREV Equal To $LATEST` evaluates to True if the selected revision is the Latest Released revision for the item. This expression also evaluates to True if the selected revision is Introductory and the item does not have any Released ECOs, MCOs or SCOes against it.

The expression `$CURRENTREV Equal To $LATEST` has the exact same functionality as the obsolete expression `Title Block.Rev Equal To $LATEST`.

The modification of item Description on the Latest Released revision deserves special mention here. Previous to Agile PLM Release 9.2.2.2, when a user had privilege to modify the Latest Released revision only (`Title Block.Rev = $LATEST`) and not Pending revisions, and he modified the description of the item, he was presented with a message asking if he'd like to update the description of all the pending revisions to this updated description. If the user chooses to do so, all the pending revision descriptions are also updated irrespective of whether or not the user has privilege to update descriptions on pending revisions. This behavior will continue to be supported.

## Rules for Using the `$LATESTREV` Variable

The `$LATESTREV` variable is another Administrator attribute used to construct criteria based on the workflow status of the Change Order (ECO/MCO/SCO) corresponding to the latest released revision of an item.

The following rules govern the usage of the `$LATESTREV` variable:

- `$LATESTREV` may only be used in defining criteria against objects belonging to the Items base class, which includes Parts and Documents classes and their subclasses..
- `$LATESTREV` is available as a value in the Attribute list. `$LATESTREV` itself does not evaluate to a value. The whole condition itself is evaluated as a boolean expression.
- Unlike `$CURRENTREV`, you must specify only the Match If field in order to construct a valid expression using `$LATESTREV`. The only operators available for Match If are Is Released and Is Introductory.

- The condition \$LATESTREV Is Released evaluates to True if the selected item has been released on at least one Change of type ECO or MCO. Note that SCO is not included because an item has to be released on an ECO or MCO before it can be released on an SCO.
- The condition \$LATESTREV Is Introductory evaluates to True if the selected item does not have any released ECO or MCO against it.

## Item Relationship Creation Using \$CURRENTREV and \$LATESTREV Criteria

To create a relationship and a relationship rule between any two Agile objects requires that the user has Modify privileges for both objects applied to <object>.Relationships.Name attribute (to create a relationship) and <object>.Relationships.Rule (to create a relationship rule). See [Some 'Modify' Basics and Rules](#) (on page 209).

Modify Item privilege masks that use a \$CURRENTREV criteria condition to limit item modification also limit which items can be selected for item-to-item relationships. For example, if a user has a Modify privilege that limits his Modify Item privilege mask with the criteria condition \$CURRENTREV Equal To \$STATUSTYPE.PENDING, that user can modify only items with a change in the Pending status. The items that can be selected for item-to-item relationships are also limited to items with a change in the Pending status.

To avoid this limitation to item-to-item relationships when using \$CURRENTREV criteria conditions in Modify Item privilege masks, use the following criteria:

`$CURRENTREV Equal to $LATEST`

to create a Modify privilege mask with only one Applied To attribute, Item.Relationship.Name. That is:

`Modify Items $CURRENTREV Equal to $LATEST Applied To  
Item.Relationships.Name`

To ensure that users can create item-to-item relationships between any two items, include this Modify privilege mask in any role that includes Modify Item privilege masks.

---

Note	Relationships are not revision-specific.
------	--

---



# Workflows

**This chapter includes the following:**

▪ How Workflows Automate the Change Control Process .....	117
▪ Workflow Basics .....	118
▪ Default Status-Based Workflows .....	121
▪ Status Types Defined .....	121
▪ Creating New Workflows with Save As.....	123
▪ General Workflow Properties.....	124
▪ Creating and Using Custom Workflows.....	127
▪ Status Properties Defined.....	133
▪ Criteria-Specific Properties Defined.....	139
▪ Workflow Functionality Testing.....	144
▪ Migrating Workflows to Production .....	145
▪ Changing Active Workflows.....	146

The Workflows node stores the default workflows that Agile PLM client users select to create and send routable objects for approval. From this node, you can also define and create custom workflows.

## How Workflows Automate the Change Control Process

The Workflows node stores the default workflows that Agile PLM client users select to create and send routable objects for approval. From this node, you can also define and create custom workflows

A workflow is an organized sequence of stages involving people's decisions—their creation, modification, review, and approval or rejection of a routable object. An Agile PLM workflow is an automated sequence of statuses that a routable object follows as it goes through a company's change control process. (For a detailed description of a typical change control process, see the chapter about workflows in *Getting Started with Agile PLM*.)

Workflows automate the change control process in a variety of ways:

- The changes that are available for a particular routable object are completely configurable. When users create a routable object, they select a workflow from the list of workflows that are available for that routable object.
- When all required fields are filled in for a released routable object, and when all the approvers have signed off for a Review or Released status type, the routable object can be moved automatically—"autopromoted"—to the next status.
- Approval and rejection of the routable object occurs within defined permissions and other checks. You can preassign default approvers and observers.
- Email automatically notifies users of the creation and progress of a routable object. For example, when an approver does not respond within the specified time period, a reminder

email notification is triggered to be sent.

- If the approver does not respond within the specified period, the routable object is sent to that user's designated escalation person, who can approve or reject the routable object.
- By defining a workflow with multiple Review and Released statuses, routable objects can be sequentially routed to different lists of approvers and observers.
- A user can transfer authority to approve routable objects to another user for a specified period of time. With the appropriate privileges, a user can similarly transfer signoff authority for other users.

## Modifying a Workflow

The following sequence applies to modifying a workflow in the Workflows node.

### To modify the Workflow settings:

1. Under Workflow Settings, double-click Workflows. The Workflows window appears.
2. Double-click the workflow you want to modify, for example, Default Change Orders. The Workflow: Default Change Orders window appears. The setup tabs are:
  - General Information
  - Status: the Status table defines status properties, and the Criteria table defines criteria-specific properties.
  - History
3. With the General Information setup tab selected, in the field you want to edit, enter a new value or select from the drop-down list. The two Criteria Matching Type fields on the General Information tab should be left alone at this point.
4. When you have finished, click Save.
5. If you wish to revert to the original settings or start over, click Cancel. You will be prompted whether you want to cancel new settings on the window; click OK if you do or Cancel if you do not.

To modify this workflow's status properties or criteria-specific properties, begin by clicking the Status tab.

For information about changing workflows that are active (that is, are enabled and may have routable objects moving through them), see [Changing Active Workflows](#) (on page 146).

---

Note	Alterations to workflow statuses have implications for process extensions (see <a href="#">Process Extensions</a> (on page 94)) and transfer orders (see <a href="#">Configuring Agile Content Service</a> (on page 383)).
------	--

---

## Workflow Basics

### Routing Managers

Any object that can be routed for approval is a routable object. The user who oversees the routing and approval process is the *routing manager*. The various routing managers (see the table below)

are simply roles assigned to users by the administrator. Once a user has been assigned a role of, say, change analyst, his name appears on the Change Analyst List and can be selected manually by a Java Client or Web Client user. Routing managers evaluate and assign routable objects, and they receive email notifications pertaining to the objects to which they are assigned.

The following table lists routable objects and the corresponding default routing manager.

Routable object (with base class)	Default routing manager
Change: All changes except MCOs & PCOs: change orders (ECOs), change requests (ECRs), site change orders (SCOs), stop ships, deviations	Change analyst
Change: Manufacturer orders (MCOs)	Component engineer
Change: Price change orders (PCOs)	Price administrator
Declarations (all)	Compliance manager
Packages	Program manager
Product service requests (PSRs): problem reports and nonconformance reports (NCRs)	Quality analyst
Program: activities and gates	PE program manager
Quality change request (QCRs): corrective and preventive actions (CAPAs) and audits	Quality administrator
Transfer Order: content transfer orders (CTOs) and automated transfer orders (ATOs)	Content manager

## Other Workflow Basics

Here is some other basic information about Agile PLM workflows:

- A workflow consists of a unique name, one or more *matching criteria*, and a *status list*, or sequence of statuses. An enabled workflow is visible and usable by Agile PLM client users.
- Each workflow must be qualified by at least one matching criteria; these are broad qualifiers that determine which workflow a routable object may follow. Agile PLM tests the routable object against all the matching criteria for all the workflows and determines which workflows match the routable object.
- A workflow can contain any number of statuses. *Status names* are editable, but their underlying *status types* are not. Only one status type is required, Pending, and this must be the first status in the workflow. Three status types—Submit, Review, and Released—may be used multiple times in a workflow, with unique names for each instance. Review and Released are the most versatile status types.
- Each and every status in a workflow's status list comprises *status properties* and *criteria-specific properties*.
- Status properties define some specific actions that can be automatically triggered or manually performed—or both. Status properties determine what happens to the routable object when assigned people approve, reject, or even forget to review the routable object.
- Criteria-specific properties are defined by filters called *reusable criteria*, which are created separately and stored in the Criteria node. Each individual status may have many criteria-

specific properties. Criteria-specific properties describe specific actions that are triggered (automatically, or they can be manually performed) if the routable object meets the conditions defined in the reusable criteria while the routable object is entering or exiting a status. Criteria-specific properties apply to individual statuses, not to the workflow as a whole.

- For example, criteria-specific properties can be used to define the following actions for a specific Review status of a workflow. When a routable object enters the status, if the routable object's Product Line field contains, for example, Libra, a specific set of approvers is assigned. If the Product Line field contains Scorpio, a different set of approvers is assigned. If the Product Line field contains both Libra and Scorpio, both sets of approvers are assigned.

## Keep It Simple!

Agile PLM workflows are a robust feature that offers a great deal of choice and flexibility for your company's change control process. For best results, plan thoroughly and gather all necessary data and information.

To prepare properly, follow these three steps before you attempt to customize Agile PLM workflows:

1. Compile information for tailored workflows. You must fully understand and define your company's required change control processes. This step is crucial to successful implementation of automated workflows.

**Important** This process is not covered in this manual. Consulting services are available from Oracle Consulting – Agile Practice consultants, who can provide you with assistance in creating business process validation plans and guidance. During business process validation, you can propose workflows to simulate real scenarios and typical usage.
2. Learn about Agile PLM workflows in this chapter and elsewhere in this manual.
  - Be sure you understand the purposes and limitations of the status types. See [Status Types Defined](#) (on page 121).
  - Use default workflows at first, which you can use immediately without modification. See [Default Status-Based Workflows](#) (on page 121).
  - Create some original workflows (in your test environment—see the next step) that meet specific needs at your company. See [Creating and Using Custom Workflows](#) (on page 127).
3. Establish a testing environment and complete test procedure. Test all new workflows! For example, create a routable object and send it through your enabled workflow. In any case, verify that new workflows work correctly, and alter them as necessary. For more information, see:
  - [Workflow Functionality Testing](#) (on page 144)
  - [Migrating Workflows to Production](#) (on page 145)
  - [Changing Active Workflows](#) (on page 146)

Although you can create as many workflows as your company needs, you are encouraged to explore the capacities of the out-of-box default workflows first. Creating too many workflows too quickly could create maintenance issues later.

## Default Status-Based Workflows

Agile PLM provides the following status-based workflows:

- Default Activities
- Default ATOs
- Default Audits
- Default CAPAs
- Default Change Orders
- Default Change Requests
- Default CTOs
- Default Declarations
- Default Deviations
- Default File Folders
- Default Gates
- Default Manufacturer Orders
- Default Non-Conformance Reports
- Default Packages
- Default Price Change Orders
- Default Problem Reports
- Default Site Change Orders
- Default Stop Ships

---

Note	Default ATOs and Default File Folders are read-only workflows. They cannot be modified.
------	---

---

The default workflows can be used without modification. They ensure that all routable objects match criteria for a workflow. You can also tailor the default workflows to your requirements. If modifying the default workflows still does not meet your requirements, you can create custom workflows.

**Caution** As a best practices approach, it is recommended that you save a set of the default workflows, unmodified and disabled. You can do this easily using Save As (see [Creating New Workflows with Save As](#) (on page 123)).

## Status Types Defined

Agile PLM workflows are defined by their list of statuses, and each status is of a particular status type. Workflows are created from five basic status types—Pending, Submit, Review, Released, and Complete. Two special status types, Cancel and Hold, handle routable objects that have failed to advance and must be stored.

The status types have sequence dependencies that determine where and how often you can use them in a workflow. A clear understanding of these dependencies is essential to constructing usable workflows. The following table defines the status types and provides details about these dependencies.

A workflow can have as many statuses as needed. Submit, Review, and Released are the status types that can be used more than once, with differently named and defined statuses. When you define a workflow with multiple Review and Released statuses, routable objects can be sequentially routed to different lists of approvers and observers.

Status type	Definition
Before a workflow is selected for a routable object	
Unassigned	<b>Unassigned</b> is the default initial status name before a routable object has been matched with a workflow.
Basic Status Types (Active)	
Pending	<ul style="list-style-type: none"> <li>▫ An originator is developing the routable object.</li> <li>▫ A workflow must begin with a <b>Pending</b> status type; it is the first status in every workflow.</li> </ul>
Submit	The <b>Submit</b> status type sends the routable object to the specified routing manager, who determines whether or not to promote the routable object to the next status.
Review	The <b>Review</b> status type routes the routable object to CCB members (approvers and observers). When all approvers have signed off, and required fields have been completed, the routable object is automatically promoted to next status in the status list if AutoPromote is on, or it is manually moved by the routing manager if AutoPromote is off.
Released	<ul style="list-style-type: none"> <li>▫ When a routable object enters the <i>first Released</i> type status, the software performs a series of checks; it also creates new revisions of the affected items (ECOs) with the new BOM, incorporates redlines into a new "rev," or updates the manufacturer part information (MCOs).</li> <li>▫ Like the Review status type, the Released status type may have approvers and observers and be routed for signoff and may be autopromoted.</li> <li>▫ <i>Only the first Released status actually releases the routable object.</i> Subsequent Released status types—given distinguishing status names—provide additional review/approval cycles for the released routable object.</li> <li>▫ Returning a released routable object to any of the first three status types <i>un</i>releases the routable object—removes approvals that were gathered. A Deviation can be unreleased if it does not have affected items.</li> </ul> <p><b>Note:</b> Although Agile PLM allows you to configure Change Order workflows that allow the release of an item without specifying a value for the New Lifecycle Phase, configuration management best-practices require that a New Lifecycle Phase always be specified prior to releasing an item on an ECO or MCO. In order to make sure there is a New Lifecycle Phase, make sure it is a required field in the Workflow Criteria.</p>
Complete	<ul style="list-style-type: none"> <li>▫ If <b>Complete</b> status type is used, it must be the last <i>active</i> status in the workflow, and it may be used only once.</li> </ul>

Status type	Definition
<b>Special Status Types (Inactive)</b>	
<b>Hold</b>	<ul style="list-style-type: none"> <li>▫ The <b>Hold</b> status type provides a way to temporarily remove a routable object from the workflow and reinsert it later. It is added to the <i>end</i> of the status list as it is <i>never</i> part of the active sequence of statuses.</li> <li>▫ Hold does not unrelease a routable object.</li> <li>▫ Given appropriate privileges, the user can manually move a routable object to Hold from any other status in the workflow <i>except</i> Complete (assuming it is listed as a valid next status under the Manual Valid Next Status property). It stays there until you manually move it back into the workflow. These moves require proper Change Status privileges.</li> </ul>
<b>Cancel</b>	<ul style="list-style-type: none"> <li>▫ The <b>Cancel</b> status provides a way to remove a routable object from the workflow. <b>It is not possible to re-activate the workflow once it is moved to Cancel status.</b></li> <li>▫ Cancel unrelaxes a routable object.</li> <li>▫ Given appropriate privileges, the user can manually move a routable object to Cancel from any other status in the workflow <i>except</i> Complete (assuming it is listed as a valid next status under the Manual Valid Next Status property).</li> </ul> <p><b>Note</b> In assigning privileges to move a workflow to the Cancel status, the administrator must recognize the potential for user-error. Because a Canceled workflow can <b>not</b> be re-activated by any means, the fact that it is relatively easy to change a workflow to Cancel must be recognized and allowed for. See <a href="#">Manual Valid Next Status</a> (on page 134).</p>

You can use the default workflows without modification. It is best to work with the default workflows with no modifications until you are familiar with their uses and capabilities.

**Caution** Agile recommends using Save As to create “archive” copies of all the default workflows. This ensures that you can always return to an unaltered version if you have customized the default workflows.

## Creating New Workflows with Save As

You can create a new workflow from an existing one and give it a new name. This makes it easy to create an archive of the default workflows or to create a custom workflow that starts from the foundation of a proven default workflow.

**To create a new (or “archive”) workflow from an existing one:**

1. Under Workflow Settings, double-click Workflows. The Workflows window appears.
2. Double-click the workflow you want to base the new workflow on. That specific workflow’s window appears.
3. Click the Save As button, and enter a descriptive, unique name.

If you are creating an archive copy, use a name that will distinguish it as “off limits,” for example, “EXAMPLE Default Chg Orders.”

4. Click OK. The setup window displays the new name in the title bar.
5. Change the information as necessary, and click Save.

The new workflow is disabled (the Enabled property is No), and can remain so for archived workflows, or will be enabled when you have finished constructing a customized workflow.

---

Note	Workflows created with Save As are disabled. A common mistake after creating a custom workflow is forgetting to enable it.
------	--

---

Each Change Status privilege mask applies to one status of one specific workflow. You must create Change Status privilege masks for each status of every new workflow you create and enable, including workflows created by Save As. See [Change Status](#) (on page 214).

## General Workflow Properties

Double-clicking the Workflows node opens the Workflows window, which lists the available default workflows and any custom workflows you have created.

The window has the following buttons: New, Delete, Edit Workflow Init Settings, Import, Export, Export All, Enable, and Disable.

The Edit Workflow Init Settings button opens a dialog box with the following fields:

Field	Type	Default
Default Initial Status Name	Text	Unassigned
Status Stamp Color	List (of colors)	Blue

## General Information Tab

When you double-click a default workflow in the Workflows window, the General Information tab of the setup window opens. The tab has the Delete, SaveAs, and Export buttons. It has the following fields:

Field	Description
Name	The name of the workflow. Each workflow name must be unique
Enabled	Enables or disables the workflow. An enabled workflow is visible and usable by Agile PLM client users.
Object Type	The type of non-routable object for which the workflow applies. Available for the following: changes, CTOs, QCRs, PSRs, programs, packages. Object types are listed in <a href="#">Agile PLM Class Structure</a> (on page 46).  Object Type is read-only after the workflow is created.
Matching Criteria	Determines which routable objects can follow the workflow. Can use any reusable criteria, for example, All Change Orders.



Field	Description
<b>Workflow Criteria Matching Type</b>	Refines how the matching criteria determines which changes can follow the workflow. It defines what happens when a routable object meets one or more reusable criteria that contain information about affected items.  Choose Same, All, or Some. See <a href="#">Workflow Criteria Matching Type</a> (on page 125).
<b>Status Criteria Matching Type</b>	Determines what happens when criteria-specific properties that contain information about affected items apply to a routable object.  Choose Same, All, or Some. See <a href="#">Status Criteria Matching Type</a> (on page 126).

The workflow's name and whether or not it is enabled are defined at this level. The default workflows are already enabled. For information about what takes place when a workflow is enabled, see [Status Properties Defined](#) (on page 133). For information about modifying or fixing problems in active workflows, see [Changing Active Workflows](#) (on page 146).

## Workflow Criteria Matching Type

For each workflow, by specifying a list of reusable criteria in the Workflow Criteria Matching Type property, you limit which changes can use that workflow. Some examples of possible reusable criteria applied as matching criteria are:

- All MECOs — Finds all the changes that are MECOs (mechanical ECOs).
- Scorpio ECOs — Finds all the ECOs that include “Scorpio” in the Product Line(s) field of the routable object.
- Libra Project — Finds all the changes that have any items on the Affected Items tab that contain “Libra” in the Product Line(s) field of the item.

For example, you might create a workflow named “General Use,” and select the three reusable criteria named above (All MECOs, Scorpio ECOs, and Libra Project) as the matching criteria for that workflow.

Example 1: If an Agile PLM client user creates a change that is a mechanical ECO (MECO), it successfully matches one of the matching criteria of the General Use workflow (All MECOs). The General Use workflow will appear in the Workflow drop-down list on the Cover Page tab of the change (Java Client) or the Enter Cover Page Information page of the Create MECO wizard (Web Client).

Example 2: If the user creates a change that is an ECO that includes “Scorpio” in the Product Line(s) field of the ECO, it successfully matches one of the matching criteria of the General Use workflow (Scorpio ECOs). The General Use workflow appears in the Workflow drop-down list on the Cover Page tab of the change (Java Client) or the Enter Cover Page Information page of the Create MECO wizard (Web Client).

Example 3: If the user creates a change order and adds items to its Affected Items tab that contain “Libra” in the Product Line(s) field of the item, Agile PLM examines the Product Lines field on the Affected Items tab for every affected item. The General Use workflow will appear in the Workflow drop-down list on the Cover Page tab of the change (Java Client) or the Enter Cover Page Information page of the Create MECO wizard (Web Client) depending on the setting of the Criteria Matching Type property for the workflow:

- Same — All affected items must match the *same* affected item–based reusable criteria, in this case, Libra Project.
- All — When multiple affected item–based reusable criteria are used as matching criteria, *each* affected item must match at least one affected item–based reusable criteria; however, each affected item does not have to match the *same* reusable criteria.
- Some — One or more (but not all) affected items must match the affected item–based reusable criteria, in this case, Libra Project.

As the user adds items to the Affected Items tab and completes the fields on the tabs of the routable object, the Workflow drop-down list on the Cover Page tab may vary, depending on which matching criteria apply at the moment.

## Status Criteria Matching Type

Because reusable criteria appear on a workflow's Status tab for each discrete status, Status Criteria Matching Type applies to the groups of reusable criteria in each status. The property is applied in Agile PLM clients when a status's criteria-specific properties contain information about affected items that is pertinent to the routable object, for instance, which approvers or observers should be assigned to it.

The property values and their behavior are listed below, followed by an example.

- Same — All affected items must match the *same* affected item–based reusable criteria in a given status. If *all* the affected items don't match the same reusable criteria, the ECO does not satisfy *any* exit criteria, and the "If No Criteria Apply at Exit, Notify" property is applied.
- All — When multiple affected item–based reusable criteria are used as criteria-specific properties in a given status, *each* affected item must match at least one affected item–based reusable criteria; however, each affected item does not have to match the *same* reusable criteria. "All" ensures that every affected item has an appropriate approver.

For example, for each reusable criteria in a status that one of the affected items matches, the specified approvers are added to the Workflow tab of the ECO. If *each* of the affected items doesn't meet *at least* one of the reusable criteria, the ECO would not satisfy *any* exit criteria, and the "If No Criteria Apply at Exit, Notify" property is applied.

- Some — One or more (but not all) affected items must match at least one affected item–based reusable criteria in *each* status's criteria-specific properties. For each reusable criteria in a status that one of the affected items matches, the approvers are added together for the ECO.

The general setting (that is, on a workflow's General Information tab) for Status Criteria Matching Type is validated against *both* the reusable criteria (the group of criteria in that status's Criteria table on the Status tab) for the present status *and* the reusable criteria for the next status in the workflow.

For example, Sarah has written a change called "ECO2" with the following affected items (on the Affected Items tab of the change in Java Client):

- Affected Item 1 (AI-1): Product Line = Aries, Category = Electrical
- Affected Item 2 (AI-2): Product Line = Aries, Category = Mechanical

For ECO2's Submitted status (Submit status type), on the Criteria table on the Status tab, is a reusable criteria that specifies:

- Reusable Criteria W (RC-W): Product Line = Aries, Affected Item.Category = Electrical, Required fields = change description

Next, for ECO2's CCB status (Review status type), on the Criteria table on the Status tab, is a reusable criteria that specifies:

- Reusable Criteria X (RC-X): Product Line = Aries, Affected Item.Category = Mechanical, Approver = Paul

If Sarah wanted to move the change from Submit to CCB, ECO2's Status Criteria Matching Type (SCMT) is set to All, AI-1 (the Electrical part) now matches RC-W, but AI-2 (the Mechanical part) does not match RC-W. If Sarah put RC-X under Submit as well, AI-2 now matches a criteria for Submit; however, because Criteria Matching Type is set to All, the change still cannot move to CCB because AI-1 does not match RC-X under CCB.

If SCMT is set to Some, Sarah can advance her change in both cases because one of the affected items matches a criteria for each status (a different AI for each status in this case, first Electrical, then Mechanical).

If SCMT is set to Same, even after Sarah adds RC-X to Submit, ECO2 is not able to advance because each affected item does not match each criteria: AI-1 matched RC-W and AI-2 matched RC-X.

## Creating and Using Custom Workflows

You will probably find it is much easier to create a new workflow by saving one of the default workflows with a new name (see [Creating New Workflows with Save As](#) (on page 123)), and then modifying the status properties and criteria-specific properties to suit your purposes.

The value of creating a custom workflow from scratch is that you go through all the elements of a workflow so that you are more familiar with the entire process, including the point where you will have to troubleshoot a workflow that is not doing what it is supposed to.

When creating a custom workflow, you must specify the following things:

- Name of the workflow.
- Matching criteria — at least one for any workflow.
- Status list — including how many statuses, status names, status types.
- Status properties — defined for each status in the workflow.
- Criteria-specific properties — defined for each status in the workflow.

The next several sections describe how to create the workflow in the figure below. This customized workflow demonstrates several departures from the “one status per status type” structure of the default workflows:

- The Submit status does not immediately follow the Pending.
- There are three Review statuses. The names in the example are less important than the idea that you can have as many Reviews as you need.
- Two statuses use the Released status type—but the second one is named Manufacturing Planning, which acts like another Review. Because the Review and Released status types share many attributes—approvers, autopromotion, and so on—this permits additional Review


cycles *without* unreleasing the routable object. If a routable object enters a Review *following* a Released status type, it is *unreleased*, which means:

- The routable object must qualify again for release (through the release audit: see [Release Audit, or Audit Current Status for Conditions to Release](#) (on page 142)).
- Any revisions that were assigned to the affected items are revoked.

## Before You Begin

It is important to plan as thoroughly as possible before you create an original workflow. To get the most out of this process, you need to do *all* of the following:

- Read this manual and become familiar with workflows documentation.
- Enable and use one or more of the default Agile PLM workflows in live situations (see [Default Status-Based Workflows](#) (on page 121)).
- Compile specific information and data that define what you need an original workflow to do. This includes a sequence of statuses that differ from those in the default workflows.

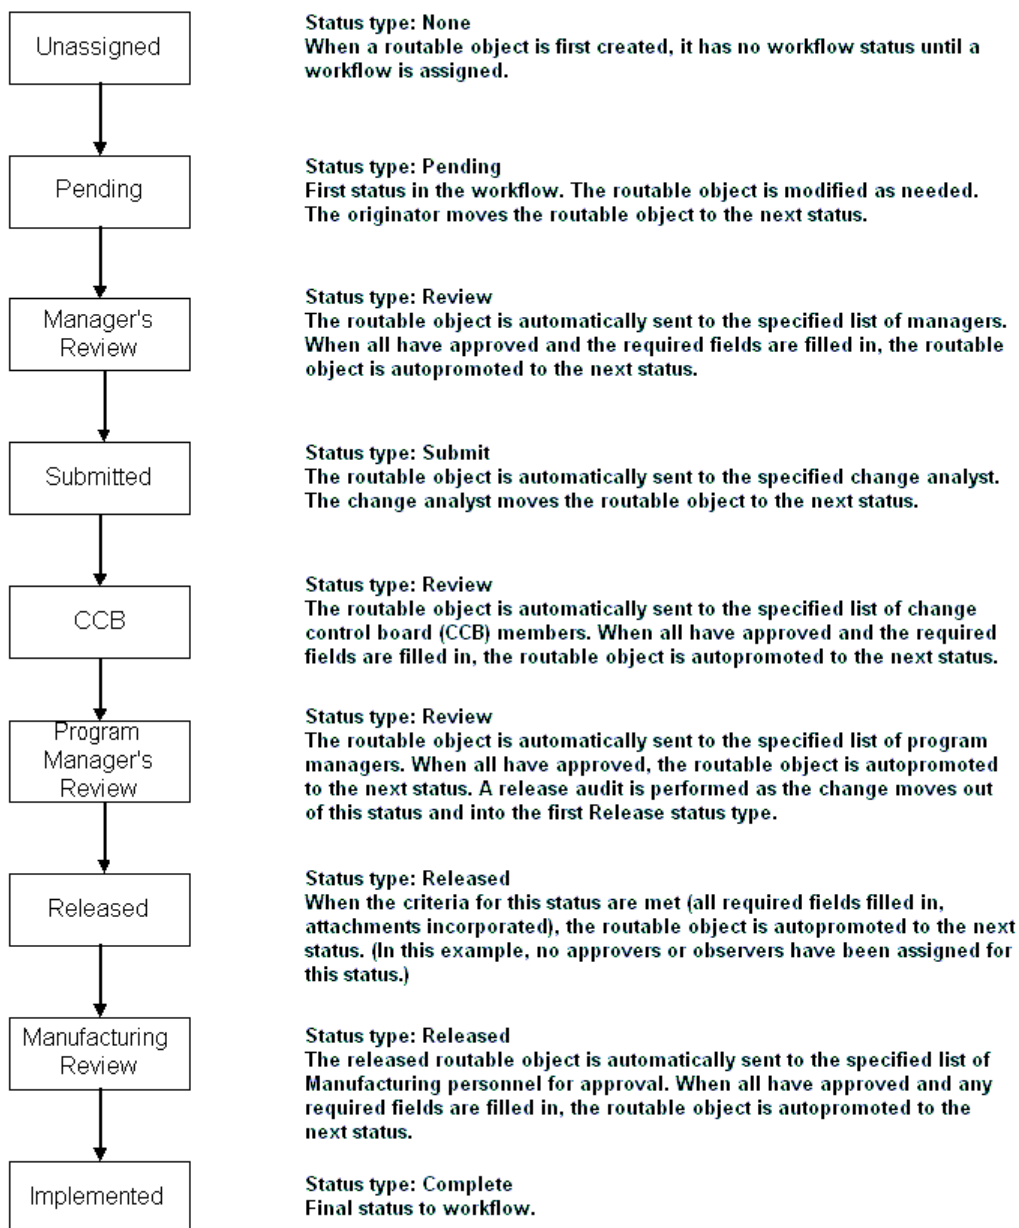

## Guidelines for Creating Workflows

The guidelines below describe the steps required to build a custom workflow. The steps are explained in detail in the following sections.

**To build a custom workflow:**

1. Define your change control process, including the kinds of routable objects you'll need to process with workflows.  
Contact your Agile representative or Agile Consulting Partner for help in defining your workflow processes.
2. Create all required reusable criteria from the Criteria node first; these are necessary to describe (for the system) the distinguishing characteristics of the workflow.  
See [Criteria](#) (on page 107).
3. Create a new workflow and give it a unique name, but don't enable it. Enabling is the final step.  
See [Creating a New Workflow](#) (on page 130)
4. Select at least one reusable criteria (defined from the Criteria node) for the matching criteria.
5. Create the Status list for the new workflow.
6. Modify the properties of each status on the Status tab, understanding that the available status properties are different for each status type.
7. Add criteria to the Criteria table on the Status tab and define the criteria-specific properties of the statuses, particularly required fields and approvers and observers.
8. Assign appropriate privileges that allow users to refine statuses in a new workflow. The privileges most pertinent to workflows are Add Approver/Observer, Remove Approver/Observer, Change Status, Override; Transfer Authority for Self, and Transfer Authority for Others.  
See [Privileges and Privilege Masks](#) (on page 193). To move a routable object through the new workflow, users must have Change Status privileges for that specific workflow; see [Change Status](#) (on page 214).
9. Set SmartRules for systemwide workflow functionality. See [General System Settings](#) (on page 233).
10. Enable the modified workflow and test it. When it is ready, notify your Agile PLM users that it is available. They will be able to use it the next time they log in to Agile PLM.

## Creating a New Workflow

To follow the procedure below, you may wish to use the workflow in Figure 7-1 as a model. In any case, it will be helpful to create a list like this table with the statuses of your new workflow defined both by name and by status type.

	Status name	Status type
	Originate	Pending
	Review-PM	Review
	Submit-CA	Submit
	Review-CCB	Review
	Review-Sr.PM	Review
	Released	Released

	Status name	Status type
	Review-Mfg.Planning	Released
	Implemented	Complete

#### To create a new workflow:

1. Under Workflow Settings, double-click Workflows. The Workflows window appears.
2. Click New. The Create Workflow dialog box opens.
3. Enter a unique name, such as Taurus ECOs.

A “best practice” may be to conceptualize a system of naming your original workflows. For some ideas about naming conventions, refer to [Creating a New Criteria](#) (on page 109) and [Naming Privilege Masks](#) on page 219.

The Enabled field on the General Information tab is not available at this point. No new workflow can be enabled until it is complete. When you have completed a new workflow, you must enable it to use it. Agile PLM client users will see the newly enabled workflow the next time they log in to Agile PLM.

4. In the Workflow Criteria Matching Type and Status Criteria Matching Type drop-down lists, allow (or select) Same.

Matching criteria are used to find which workflows may be used for each routable object. Agile PLM checks all the matching criteria for all the workflows and determines which workflows match the routable object. For example, if a reusable criteria called All Taurus ECOs is a matching criteria for a workflow, then the user can select that workflow for an ECO in the Taurus project.

The factors you need to consider to take full advantage of these three criteria properties are fairly complex. Detailed information is provided in [Using Affected Items Tab Fields in Reusable Criteria](#) (on page 111).

5. From the Object Type drop-down list, select the appropriate base class.
6. In the Matching Criteria drop-down list, scroll down and select All Change Orders.
7. Click OK. The new workflow is added to the list on the Workflows window.

To complete setting up the new workflow, you need to double-click it in the Workflows window and create statuses with defined status properties and criteria-specific properties.

#### To create statuses for a new workflow:

1. Open the workflow, click the Status tab, and click the New button just above the Status table. The Add Workflow Status dialog box appears.
2. Type an appropriate name; in our example, it is Originate.
3. In the Status Type drop-down list, select an appropriate status type, in this case Pending (the required first status for any workflow).
4. In the Status Stamp Color drop-down list, select a color for the type in the status stamp that will appear for that status in Agile PLM clients.
5. Click OK. Repeat this process for all statuses you wish the workflow to have.

If you scroll to the right in the Statuses table, you see two status properties—“If No Criteria

Apply At Exit, Notify” and “Manual Valid Next Status”—that need to be given values.

Agile recommends creating all the statuses, then filling in the status properties before considering the criteria-specific properties. However, with so many factors to consider, the most important thing is to develop your own method or systematic approach to constructing an error-free workflow.

**To designate reusable criteria for a new workflow:**

1. Open the workflow, click the Status tab, select a status (row) in the Status table, then click the New button just above the Criteria table. The Add Workflow Criteria dialog box appears.
2. The Status Name field is grayed and populated with the name of the status you have selected. Click the down arrow for the Select Criteria field, and select one or more reusable criteria for that status.
3. When you have finished, click Save.  
Repeat this process for all statuses in the new workflow.
4. When you have completed the construction of your custom workflow, and have verified that it is ready for users to apply routable objects (see [Workflow Functionality Testing](#) (on page 144)), you need to enable it. In the setup window for the workflow, select Yes in the Enabled drop-down list.

---

Note      A new workflow is disabled as you create it. A common mistake after creating a custom workflow is forgetting to enable it.

Note      To move a routable object through the new workflow, users must have Change Status privileges for that specific workflow. See [Change Status](#) (on page 214).

---

Agile PLM client users will see the new workflow when they restart their client application *after* you have enabled the workflow.

## When a New Workflow is Enabled

When a workflow is enabled, the system checks the following items:

- The first status is the status type Pending.
- If there is a status of status type Complete, then it must be the final status of the workflow (excluding special statuses Cancel and Hold).
- The workflow’s matching criteria must contain at least one reusable criteria.
- Each status in the workflow must be assigned at least one reusable criteria in the workflow’s Criteria table.
- If there are Cancel or Hold statuses, they must appear at the end of the status list. If there is a Hold status, it must be the last status on the list.

If any of these requirements are not completed, an error message appears, and the workflow is not enabled.

## Routing to a User Group

A user can assign a user group (global group, not a personal group) as an approver or observer using valid approvers and observers. The administrator or Agile Web Client user who is assigning a



user group can select whether one member or all members must sign off the routable object. You can select either *[group name - Any]* or *[group name - All]*. See [Adding User Groups as Approvers of a Change](#) (on page 168).

When *[group name - Any]* (for example, *[Manufacturing - Any]*) has been assigned as an approver or observer on a routable object, the following things are true:

- All users who are members of the user group see the routable object in their Inboxes.
- All users who are members of the user group receive the email notifications.
- Only *one* member of the user group needs to approve the routable object. When one user has approved the routable object, all users in the user group have their Inboxes updated, and the routable object is removed where appropriate.

The person who signed off the routable object is recorded on the Workflow tab as the signoff user.

When *[group name - All]* (for example, *[Manufacturing - All]*) has been assigned as an approver or observer on a routable object, the following things are true:

- All users who are members of the user group see the routable object in their Inboxes.
- All users who are members of the user group receive the email notifications.
- All the users who are members of the user group need to approve the routable object.

## Status Properties Defined

This section describes all of the Status Properties found in Agile PLM workflows. When you double-click a default workflow in the Workflows window, then click the Status tab, the status properties are found in the Status table: double-click a status in the table, the Workflow Status: [Status Name] dialog appears.

### If No Criteria Apply At Exit, Notify

Answers the question: Who should be notified if the routable object does not match its present criteria (that is, it is stuck)?

General default (in default workflows): \$CHANGEANALYST (see [Routing Manager Variables](#) (on page 39))

This property indicates who is notified by automatic email if the routable object cannot advance to the next status because does not meet the conditions defined by the criteria in the current status' criteria-specific properties. If a routable object cannot be promoted to the next status in the workflow because there are no criteria that permit the promotion, the defined people are notified by automatic email.

Use the Address Book dialog to add users, user groups, Originators, Approvers (all approvers for statuses the routable object has already gone through), and Observers (all observers for statuses the routable object has already gone through) to be notified.

---

Note	If the email notification is disabled, email will not be sent. See <a href="#">Notifications</a> (on page 252).
------	---

---

## Manual Valid Next Status

Answers the question: Besides the next status in the status list, what are other statuses the routable object could go to from the present one?

General default (in default workflows): (no general default)

For each status, use the Choices–Selected dialog to define additional valid “next statuses” that the routable object can move into from the current status. The system understands that the *next* status in the workflow’s status list is always valid, so that status is not present in the Choices list. (The current status is, of course, never a valid “next status.”) The system does *not* assume validity for Complete (since there is *no* status after a routable object arrives at Complete), Cancel or Hold (since they are never part of a workflow), so these must be specified.

**Note** In assigning privileges to move a workflow to the Cancel status, the administrator must recognize the potential for user-error. Because a Canceled workflow can **not** be re-activated by any means, the fact that it is relatively easy to change a workflow to Cancel must be recognized and allowed for.

## Save Routing Slip Content when Advancing Change

When the user manually advances a workflow to the next status, the routing slip appears to be filled in. This contains approvers, observers, “notify” users, and comments, and the user may spend several minutes completing the slip. When user clicks Route, Agile performs an automatic workflow status audit and presents the user with a dialog if a problem is found. The user is asked if he wants to continue: previously, if No was selected, the user was returned to the routable object and lost all the work; this has been fixed so the routing slip content is preserved.

## Send Workflow Status Comments and Notifications to all Previous and Current CCB Members

When sending comments from a Review or Released status in a change, the user can specify whether the comments are to be sent to only the *current* review or released status reviewers – that is, for the workflow’s current status – or if comments are to be sent to all reviewers in both current and previous Review and Released statuses. A new drop-down box (after the “Notify Reviewers for” checkbox) contains Current Status and Current and Previous Statuses for selection.

## AutoPromote

Answers the question: Will the system automatically promote the routable object to the next status?

General default (in default workflows): No

Use the AutoPromote property to permit a routable object to automatically advance to its next status. For each Review and Released status type, you can determine if the workflow can be autopromoted to the next status.

When a routable object enters a status where AutoPromote is enabled, the system immediately attempts to autopromote it; if there are no approvers and all the required fields are complete, the routable object advances to the next status. Status advance is usually more involved than that scenario: for example, Review statuses will often have one or more approvers (and all approvers at a current status must approve the routable object for it to advance), and required fields can easily block autopromotion to the next status.

Also, the Change Status Approver Rejected Change SmartRule must be set to Allow for an approver's rejection not to hold up autopromotion of the workflow.

---

Note	Autopromote checks required fields only once when the workflow <i>enters</i> a specific status. However, when the last required field is populated, the system registers this fact and the routable object does autopromote to the next status.
Note	However, Autopromote does check the workflow every time an approver either approves or rejects. If there are more approvers who have not yet approved or rejected, the status is not advanced; when the final approver approves or rejects, the Autopromote function evaluates according to the above-named SmartRule and promotes the status or not accordingly.

---

If not all approvers have approved the routable object, anyone who has the Override privilege can still manually promote it. If the routable object is rejected by an approver or other participant with appropriate permissions, the routable object goes to the status defined in If Rejected, Set Status To (see [If Rejected, Set Status To](#) (on page 136)), which is done automatically, whether the AutoPromote feature is on or off.

The AutoPromote feature needs to be set in relation to the Override privilege and the following two SmartRules:

- Change Status Approver Rejected Change
- Change Status Observer Rejected Change

**Caution** When these two SmartRules are set to Warning, and an approver or observer rejects to the routable object, the system still autopromotes the routable object and records the warning on the History tab of the routable object.

You can define required fields that, when filled in on a routable object, determine if it can be promoted to the next status (see [Entry Required Fields and Exit Required Fields](#) (see "Exit Required Fields" on page 143)). All required fields for a status must be filled in before it can be autopromoted to the next status. For example, when the last user approves the routable object and all required fields are present, the routable object immediately advances to the next status.

**Caution** Do not alter any property before the Released status in any workflows for CTOs (content transfer orders). For instance, if you set AutoPromote to Yes, the CTO output files will not be generated.

## If AutoPromote Fails, Notify

Answers the question: Who should be notified if AutoPromote fails?

General default (in default workflows): \$CHANGEANALYST (see [Routing Manager Variables](#) (on page 39))

For each Review and Released status type, the Agile PLM administrator defines who is notified by automatic email if AutoPromote fails.

When the routable object is approved by all approvers, the system attempts to autopromote the routable object. AutoPromote fails if:

- Not all the required fields are filled in
- SmartRules are not adhered to

Autopromote checks required fields only once when the workflow *enters* a specific status. However, when the last required field is populated, the system registers this fact and the routable object does autopromote to the next status.

If the autopromotion fails, this fact is captured and automatically emailed to users and groups identified in the current status's setting for If AutoPromote Fails, Notify.

## Ability to Fail Autopromote More than Once within same Change Status

This feature notifies whomever is specified in the status's If Autopromote Fails, Notify setting each time a change order fails to autopromote if new approvers were added since the last autopromote failure. Additionally, History is updated. Autopromote fails when a new approver is added but doesn't complete all workflow-required fields.

Use the Address Book dialog to add users, user groups, Originators, Approvers (all approvers for statuses the routable object has already gone through), and Observers (all observers for statuses the routable object has already gone through) to be notified.

The email regarding failure of autopromotion is sent only when there is a failure after the last approver (designated for that status) has approved the routable object. The system sends *one* email notification of failure to autopromote.

---

Note	If the email notification is disabled, email will not be sent. See <a href="#">Notifications</a> (on page 252).
------	---

---

## Ad Hoc Approvers/Observers

Answers the question: Can “ad hoc” approvers and observers be added once the routable object has entered the status?

General default (in default workflows): Yes

For each Review and Released status type, the Agile PLM administrator defines whether approvers and observers can be added as a routable object actively progresses. When this property is set to Yes, users with Add Approver and Remove Approver privileges can add or remove approvers and observers on the Workflow tab of a routable object in a Review or Released status type. They are also prompted with an Ad Hoc Approvers/Observers window during the release cycle.

---

Note	A user with the Remove Approver/Observer privilege may successfully remove an observer from one status and then not be allowed to remove approvers and observers on the next status; this indicates the Ad Hoc Approvers/Observers property for the latter status is set to No.
------	---

---

## If Rejected, Set Status To

Answers the question: Should the status be automatically changed if a user rejects the routable object? (If so, enter the appropriate status.)

General default (in default workflows): (none)

For each Review and Released status type, the Agile PLM administrator defines If Rejected, Set Status To. If the routable object is rejected by an approver or other participant with appropriate permissions (this status property does not apply to observers), the routable object goes to the status defined in this setting. This is done automatically, whether the AutoPromote feature is on or

off.

---

Note	Although it is possible to set this property so the routable object moves forward despite a rejection, Agile recommends that it be used to prevent the routable object from advancing until the reason it was rejected is examined. Note that if this status property is set to null (no setting), then when a user rejects the change, the workflow will advance to the default status, that is, the next status in the workflow.
------	--

---

## If Rejected, Notify

Answers the question: Who should be notified if the routable object is rejected?

General default (in default workflows): \$CHANGEANALYST (see [Routing Manager Variables](#) (on page 39))

For each Review and Released status type, the Agile PLM administrator defines If Rejected, Notify. This property indicates who is notified by automatic email if the routable object is rejected by an approver or observer.

Use the Address Book dialog to add users, user groups, Originators, Approvers (all approvers for statuses the routable object has already gone through), and Observers (all observers for statuses the routable object has already gone through) to be notified.

---

Note	If the email notification is disabled, email will not be sent. See <a href="#">Notifications</a> (on page 252).
------	---

---

## Reminder Period

Answers the question: How long after a routable object has been routed for approval should approvers be sent email reminders to approve or reject it (at that status)?

General default (in default workflows): 48 hours

The reminder period is a period of time defined for each Review and Released status type in all workflows. When the reminder period elapses, if an approver has not approved or rejected a routable object, a reminder email notice is sent to the approver. The routing manager receives a similar email notice, which also includes a list of the approvers who received reminder email.

If you delete an existing value or attempt to leave the field empty (null), clicking Save results in a 0 being placed by the system. A value of 0 is the same as disabling the property, and no reminder notifications will be sent.

---

Note	If the email notification is disabled, email will not be sent. See <a href="#">Notifications</a> (on page 252).
------	---

---

Each Review and Released status type has its own reminder period. The reminder period is set in hours and begins when the routable object enters each Review or Released status type. If a workflow has multiple Review or Released status types, each of these may have reminder periods of different lengths. The reminder periods for the default workflows are all 48 hours.

## Review Escalation Period

Answers the question: How long should the system wait before escalating a routable object?

General default (in default workflows): 96 hours

The review escalation period is a period of time defined for each Review and Released status type in all workflows. When the escalation period elapses, if an approver has not approved or rejected a routable object, email is sent to the approver's appropriate designated escalation person. The routing manager receives similar email, notifying her that the routable object has been escalated to the specified designated escalation person. The designated escalation person may approve or reject the routable object in the place of the original approver.

If you delete an existing value or attempt to leave the field empty (null), clicking Save results in a 0 being placed by the system. A value of 0 is the same as disabling the property, and no reminder notifications will be sent.

---

Note	If the email notification is disabled, email will not be sent. See <a href="#">Notifications</a> (on page 252).
------	---

---

Each Review and Released status type has its own review escalation period. The review escalation period is set in hours and begins when the routable object enters a Review or Released status type. If a workflow has multiple Review or Released status types, each of these may have review escalation periods of a different length. The review escalation periods for the default workflows are all 96 hours.

Escalation occurs only once per status for any sequence of user (or user group) to the designated escalation person.

### Designated Escalation Person

You can define a designated escalation person for each user from the Users base node (see [Users and User Groups](#) on page 149). This is useful for expediting the routable object when a particular user has not reviewed and signed off on the routable object. You can also set a designated escalation person for each global user group from the User Groups node.

All escalation assignments are done from the Administrator nodes. Each user or user group may have multiple designated escalation persons. (Personal groups do not have designated escalation persons.)

If the review escalation period elapses, the approver's designated escalation persons are notified by email that the approver has not responded to the routable object. Now the designated escalation persons may approve or reject the routable object in the place of the original approver. The designated escalation person's name is recorded in Agile Java Client on the Workflow tab and the History tab as the Signoff user.

---

Note	If the email notification is disabled, email will not be sent. See <a href="#">Notifications</a> (on page 252).
------	---

---

You determine whether a user's designated escalation persons can sign off a routable object at any time (= Always), or only after the escalation period has elapsed (= After Escalation). (See [User Properties Defined](#) (on page 155).) The escalation person may or may not have appropriate permission to approve or reject the routable object, but the notification still goes through. If, for example, a user's manager is his designated escalation person but is not involved with the routable object approval process, the manager would at least know the routable object had been held up, and could take appropriate action.

---

Note	If the designated escalation person is a group, only one member of the group needs to sign off the routable object. When the routable object has been signed off, the routable object no longer appears in the Inbox of the other members of the group.
------	---

---

## Comment Required for Actions

Answers the question: Should comments be required in the Review or Released statuses of this workflow?

General default (in default workflows): None.

For each Review and Released status, the Agile PLM administrator can define whether comments are required. The default “None” means that no comments are required for the workflow in that status. “Approve only” means that when an Approver approves the workflow at that status, he must enter a comment for the workflow to proceed. “Reject only” means that when an Approver rejects the workflow at that status, he must enter a comment for the workflow to proceed. “Approve and Reject Both” means that when an Approver approves or rejects the workflow at that status, he must enter a comment for the workflow to proceed.

## Criteria-Specific Properties Defined

This section describes all of the Criteria-specific Properties found in Agile PLM workflows. When you double-click a default workflow in the Workflows window, then click the Status tab, the criteria-specific properties are found in the Criteria table. First select a status (row) in the Status table, that status appears in the Criteria table; double-click the row in the Criteria table, the Workflow Criteria: [Criteria Name] dialog appears.

## Approvers and Observers

Answers the question: Who should approve or reject, and who should simply observe, the routable object in this status?

General default (in default workflows): (none)

The Agile PLM administrator defines default approvers and observers, who are selected automatically—and notified by email—when the routable object enters the Review or Released status type. The default approvers and observers are assigned to a routable object based on the attribute values and the matching criteria of the workflow when it enters the Review or Released status.

---

Note	If the email notification is disabled, email will not be sent. See <a href="#">Notifications</a> (on page 252).
------	---

---

## Criteria Usage

Answers the question: What are the criteria-specific properties for this status?

General default (in default workflows): All Change Orders for Default Change Orders workflow

Criteria are the conditions that specify how the reusable criteria work in the specific status. Each status must have at least one reusable criteria in its criteria-specific properties.

Criteria are checked when the routable object is about to exit the particular status. Criteria also



define which criteria-specific properties apply. Several criteria-specific properties could be applied to a single routable object.

Because this is a comprehensive topic, for more information about criteria, see:

- [Criteria](#) (on page 107)
- [Privilege Mask Component 3: Criteria](#) on page 222
- In *Getting Started with Agile PLM*, please see the chapter “Finding Agile Data with Searches” for information about how to use the Advanced Search wizard, which is similar to the Create Criteria wizard.

## Default Change Analyst / Component Engineer

Answers the question: Who should be the default routing manager on this routable object? (See [Routing Manager Variables](#) (on page 39).)

General default (in default workflows): Default routing managers can be chosen; for Pending status only.

You can define different default routing managers for each workflow (component engineers for MCOs, price administrator for PCOs, change analysts for the other changes, and so forth). Under the criteria-specific properties in the Pending status, you can select a different default change analyst for each criteria. If there is no default change analyst, the user can enter one. If the Change Analyst field is left blank in Agile Java Client, all change analysts are notified if \$CHANGEANALYST (or \$COMPONENTENGINEER) is set by the administrator.

Users can edit the Change Analyst field, assuming they have the proper privilege, but the system does not assign the new change analyst until the routable object moves from Pending to the next status. If the change analyst has been selected by the user, but the workflow has been set up with a default change analyst who does not match, the user is warned.

If you define more than one change analyst (that is, if the routable object matches multiple criteria for different change analysts), the user is warned when the routable object moves from Pending to the next status. He sees a dialog box with a list of change analysts and can select one for that workflow.

For information about adding approvers and observers, see [More about Affected Items: Adding Approvers and Observers](#) (on page 112).

## Notify Upon Entry

Answers the question: Who should know that the routable object entered a new status?

General default (in default workflows): (none)

The Notify Upon Entry property indicates which users are notified by email when a routable object enters each status.

Use the Address Book dialog to add users, user groups, Change Analysts, Originators, Approvers (all approvers for statuses the routable object has already gone through), and Observers (all observers for statuses the routable object has already gone through) to be notified.

---

Note	If the email notification is disabled, email will not be sent. See <a href="#">Notifications</a> (on page 252).
------	---

---



You can set whether the change analyst receives email notification that the routable object has been released. The Notify Upon Entry property is also used to set the Notify defaults for the status transition dialog boxes for manual status transitions. The user can determine who is notified (for example, originator, approvers and observers, change analyst).

---

Note	If a user does not have Field-level Read privilege for the Change Analyst field on a routable object, and the default change analyst is specified on the Notify Upon Entry list, the label No Privilege appears in the Notify field of the Change Status dialog box. No Privilege is, of course, not recognized as a valid user, and will generate an error message.
------	--

---

## Pass Release Audit

Answers the question: Should all the release audits (for example, SmartRules, required fields) be addressed before moving to the next status?

General default (in default workflows): No

User-available audits affected by Pass Release Audit: Status Audit and Release Audit

Status Audit answers: Can the routable object advance to the next status?

Release Audit answers: Do conditions (in this status) support releasing the routable object?

Agile PLM performs a complete release audit *automatically* when a routable object is promoted to its first Released status type.

At any time, an Agile PLM client user can use the Audit Status button or Audit Release button (or menu command) to initiate a status audit or release audit, respectively. These are discussed in [Two Levels of Audit](#) (on page 142).

For each Pending, Submit, or Review status, the administrator specifies whether a routable object can advance from its present status with or without an audit, as follows:

- Yes — A release audit is performed, and the routable object does not advance unless the required fields are completed and the release checks and SmartRule conditions are met (see [Release Audit, or Audit Current Status for Conditions to Release](#) (on page 142)).
- No — The routable object can advance without being audited.
- Warning — During a status audit, you are prompted to choose whether to follow it with a release audit ("OK to perform Release Audit?") or not ("Cancel Release Audit").

This prompt may result in either an Error or Warning. There is an anomaly that causes a Warning to appear when you would expect an Error: when the user does not have Override privilege, and Pass Release Audit = Warning or No, the Status Audit should give an Error (which requires user to fix conditions) instead of a Warning.

---

Note	Setting Pass Release Audit to Yes does, in effect, examine if the conditions in the present status would permit the routable object to be released, but this is not a cumulative process; that is, the audit does <i>not</i> consider the required fields of any <i>previous</i> or <i>future</i> statuses.
------	---

---

Even with the automatic release audit at the Released status, an advantage to setting up earlier audits (by setting Pass Release Audit to Yes for specific statuses) is to prevent impeding the routable object if it fails the audit at a Released type status. This can happen if the routable object has advanced past a status where a person who has pertinent information might enter it, for instance, the originator of the routable object who reviewed it at the Pending status, or a routing manager who reviewed it at the Submit status. It's better that a release audit reveal that something is missing at the status where the person who has the missing information can provide it.

For example, for ECOs, the release audit checks whether the rev number already exists. If you set Pass Release Audit to Yes at the Pending status of a routable object, this forces the originator to supply the correct rev number.

Please see the Caution about this property in [Override](#) (on page 215).

## Two Levels of Audit

There are actually two levels of audit available to the user, a status audit and a release audit, which are defined below. Every release audit includes a status audit.

The ability to audit a routable object does not require a privilege. The results of any audit can be copied to the Clipboard, pasted to a new document, and printed.

### Status Audit, or Audit Current Status for Conditions to Advance

The status audit can be thought of as “auditing the current status for proper conditions to advance.”

The status audit is performed automatically when you use the Change Status function or the workflow attempts to autopromote to the next status. You can perform a status audit at any time by using the Audit Status button or menu selections. It performs the following checks:

- Makes sure the Exit Required Fields for the current status are filled in.
- If the current status is a Review status type or a Released status type, makes sure that all approvers have approved.
- Checks the workflow settings of the Pass Release Audit property for the current status. If Pass Release Audit is set to either Yes or Warning, Agile PLM also performs a release audit.

### Release Audit, or Audit Current Status for Conditions to Release

The release audit can be thought of as “auditing the current status for proper conditions to release the routable object.”

Agile PLM performs a release audit automatically when the routable object is promoted to the first Released type status in the workflow. You can perform a release audit at any time by using the Audit Release button or menu selections.

The release audit performs the status audit for both the current status and the release status.

It performs the following additional checks:

- For ECOs, checks if the proposed new revision number on the Affected Items tab already exists.
- For ECOs, SCOs, PCOs and MCOs, checks if there are manufacturer redlines that will be lost after the routable object is released.
- For ECOs and SCOs, checks if there are BOM redlines that will be lost after the routable object is released.
- For ECOs, SCOs, PCOs and MCOs, checks if there are conflicts due to another ECO, SCO, or MCO being released first.
- For ECOs, SCOs, and MCOs, if the BOM Multi-level Recursive SmartRule is set to Disallow, checks for recursive BOM structures, that is, when a subassembly includes one of its parent

items from an upper level of the BOM tree structure on its own BOM. (A recursive BOM structure, if carried to its logical conclusion, would repeat indefinitely).

The BOM tree is evaluated from top to bottom. The Audit Release error message indicates, for each affected item with a recursive BOM, the first item found in the BOM tree whose first-level BOM table includes an item that appears at a higher level in the BOM tree, thus causing a recursive BOM structure. Although there may be multiple instances of recursive BOM structure in an affected item BOM tree, only the first found instance is displayed in the audit results.

- For ECOs, SCOs, and PCOs, depending on SmartRule settings, checks for duplicate items, duplicate find numbers and duplicate reference designators caused by a change rebase. (When there are multiple pending changes for the same item, when one change is released, the remaining pending changes are rebased on the latest released change.)
- For ECOs, SCOs, and MCOs, checks for duplication of the same manufacturer part on an item. (MultipleItemsPerManufPart is set to Warning or Disallow.)

(Duplication of the same manufacturer part on an item occurs when an item has multiple pending changes which associate the same manufacturer part to that item and one change is released. The remaining pending changes are rebased on the latest released change. The remaining pending changes now include manufacturer part redline modifications to add a manufacturer part that already exists on the released item's Manufacturers table.)

- For ECOs, SCOs, and MCOs, checks for the use of the same manufacturer part on multiple items. (MultipleItemsPerManufPart is set to Warning or Disallow.)
- (Duplication of the same manufacturer part on multiple items occurs when multiple changes add the same manufacturer part to two or more item's Manufacturers tables, either by redline addition or redline replacement. When one of the changes is released, the manufacturer part's Where Used table is rebased to refer to the newly released item. The remaining pending changes now include manufacturer part redline modifications that would allow a single manufacturer part to be used by multiple items.)
- For ECOs, SCOs, and PCOs, if the Item Release First SmartRule is set to Disallow or Warning, then the routable object is checked to see if the child components have been released.
  - Checks if any of the attachments of the routable object remain checked out.
  - For every affected item, checks if any of the attachments remain checked out.
  - Checks the Effectivity Date Order and Effectivity Gap SmartRule settings.
  - Checks if items on the Affected Items tab have any other pending routable objects.
  - For ECOs, validates the affected item's Sites tab Make/Buy setting with the site's Site AML Allowed and AML Required on Buy settings. For more information, see *Product Collaboration User Guide*.

## Exit Required Fields

Answers the question: What are the required fields on the routable object and its affected items?  
General default (in default workflows): (none)

Exit required fields are attributes or fields that must be completed for each Pending, Submit, Review, Released, and Complete status type before a routable object can exit that status.

Some required fields are uneditable, or defaults.

**Caution** Required fields are primary targets for status and release audits (see [Pass Release Audit](#) (on page 141)). In the default workflows, required fields are concentrated in the Review status type. In your custom workflows, however, you may wish to introduce required fields for other statuses. This will help users verify that specific required fields are passing the audits, which will prevent trying to pass a single audit containing many required fields at the first Released status.

Please see the Caution about this property in [Override](#) (on page 215).

When exit required fields are not filled in by the time the routable object moves from one status to another, the user sees a dialog box listing the fields that are required.

If a user does not have the privilege to modify a required field, the routable object cannot be advanced to the next status until a user with sufficient privileges modifies it.

For Criteria written against Affected Items fields, the required fields are calculated independently for each affected item, based on which Criteria were matched.

## Workflow Functionality Testing

It is strongly recommended that you thoroughly test the workflow before releasing it for general use. Depending on the size of your system, this may or may not be safely done within your users' production environment.

### Areas of Workflow Validation

This section outlines some aspects of workflows that you will want to validate, within or outside the production environment. You may find reasons to modify a workflow as you test its functionality and understand how it will support your change processes.

When testing workflow functionality, you should validate the following areas:

- Reusable criteria applied to the workflow and to each status
- Manual Valid Next Status settings for each status
- Status properties for each status
- Criteria-specific properties for each status
- Criteria Matching Type, for Matching Criteria of the workflow and for each status' criteria-specific properties
- All entry and exit required fields
- Autopromotions
- All notifications and approvals
- Reminder and escalation periods
- SmartRules
- Privileges for each role

## Quick Tips on Testing

- You must enable the workflow before it will be available in the Agile PLM clients (see [Status Properties Defined](#) (on page 133)).
- If you are testing a new workflow (not modifications to one of the default workflows), you will also need to create some basic Change Status privileges so users can move routable objects through the workflow (see [Change Status](#) (on page 214)). To move a routable object through the new workflow, users must have Change Status privileges for that specific workflow.
- Once you enable a workflow, you can make only limited changes to the its configuration (see [Modifying Properties in an Enabled Workflow](#) (on page 146)).
- To make more extensive modifications, you must disable the workflow (see [Disabling, Changing, and Reactivating Workflows](#) (on page 147)).
- Additionally, even if you disable the workflow, you may not make certain modifications if a routable object is in the workflow, including deleting or adding statuses from the status list (see [What You Cannot Modify If a Workflow Has Any Routable Objects Applied](#) (on page 147)). You can use Save As on a test workflow to create a new disabled workflow that will allow more extensive modifications.

In addition to functional testing, which determines if you have configured Agile PLM workflows correctly, it is recommended that you validate your business process and data migration systems. Consulting services are available from Oracle Consulting – Agile Practice consultants, who can provide you with guidance and assistance in creating business process and data migration validation plans. During the business process validation, you should use your proposed workflows to accomplish real scenarios and simulate typical usage. These activities will help you refine and confirm your workflow configuration and allow you to document your change processes in the context of the Agile PLM solution for future reference and training purposes.

## Migrating Workflows to Production

If you are in the first phase of an Agile PLM implementation, this section may not apply to you, because you do not yet have a separate production environment, and migration of initial Agile PLM configuration is a normal part of your production cutover process.

### Quick Tip on Migrating Workflows

#### Quick Tip on Migrating Workflows

- In the Workflows window, use Export and Export All to export workflows, and use Import to migrate workflows from a test to a production environment, greatly reducing the number of manual steps required (see [Administrator Import and Export](#) (on page 23)).

## Workflow Migration Process

Once you have validated your workflow configuration, you need to implement the workflows in your production Agile PLM system. The following steps outline the general process of migration.

1. Complete validation of workflow configuration in a test environment.
2. Run the following Administrator reports and save them to a local drive. Run additional reports as needed.
  - Agile Classes Report
  - Workflows Configuration Report
  - Criteria Library Configuration Report
  - Users Configuration Report
  - User Groups Configuration Report
  - SmartRules Configuration Report
3. Ensure that you have your workflow configuration clearly documented.

## Changing Active Workflows

You may have to change a workflow that has been enabled. Some possible situations and your options are detailed in this section.

---

Note	It is not possible to delete a workflow that has been assigned to a routable object, even if the assignment has been withdrawn and the workflow is not assigned to any other routable object. We recommend either disabling an unwanted workflow, or modifying it so that it is once again usable.
------	--

---

## Modifying Properties in an Enabled Workflow

You can modify a workflow that is enabled and visible to your Agile PLM users, either with or without a routable object moving through it. If the workflow is already in use (a routable object has been assigned the workflow), you cannot add statuses, although you can make other modifications, as described below.

**Caution** If you add a status to an enabled workflow, you *must* modify or create appropriate permissions and other Change Status privileges for each role in your Agile PLM system.

---

Note	When you attempt to add a status to an enabled workflow, the workflow's Enabled property automatically changes to No.
------	---

---

## When You Can Disable, Modify, and Re-enable a Workflow

If no routable object has been applied to a particular workflow, there is no problem with disabling it, modifying it, and re-enabling it. (To save duplicating efforts, you might email people who could be developing or close to originating a new routable object.)

## What You Can Modify If a Workflow Has Any Routable Objects Applied

You *can* alter many properties after a workflow is enabled and a routable object is actively progressing. These properties are listed in the following table. You must disable the workflow to alter settings for properties. Also, be aware that a change analyst or an approver may want to react to a progressing routable object while it is disabled.

When you disable a workflow, these two best-practice actions are recommended:

- Notify appropriate people that the workflow is going to be disabled, and
- Alter the workflow promptly, enable it, and re-notify the affected users.

Properties of workflow	Status properties of each status	Criteria-specific properties of each status
Workflow name	Ad Hoc Approvers/Observers AutoPromote If AutoPromote Fails, Notify If No Criteria Apply At Exit, Notify If Rejected, Notify If Rejected, Set Status To Manual Valid Next Status Reminder Period Review Escalation Period	Approvers Default Change Analyst/ Default Component Engineer Notify Upon Entry Observers Pass Release Audit Required Fields
Properties of statuses		
Status name		
Criteria-specific properties	You can add new criteria-specific properties to any status.	
Note: Depending on the setting being altered, routable objects already in process may or may not use the new setting if they are already in the status. For example, changing the Notify Upon Entry setting does not resend email about a routable object already in the status that is changed.		

## What You Cannot Modify If a Workflow Has Any Routable Objects Applied

Once a routable object has been originated in a default or new workflow, and that object has gone through even a single status transition, you cannot modify certain things:

- You cannot add or delete a status to that workflow.
- You cannot alter the order of the statuses in that workflow.

If these are the elements of an active workflow that you need to alter, see [Disabling, Changing, and Reactivating Workflows](#) (on page 147).

## Disabling, Changing, and Reactivating Workflows

Despite best efforts at fully defining your workflow processes and the many elements of a customized workflow, naturally the time will come when an active workflow—with multiple routable objects already applied and moving through it—simply needs to be fixed.

**Caution** All modifications to enabled workflows have the potential to cause “ripple effects” that have to be detected, evaluated, and corrected across multiple nodes in Administrator. In particular, alterations to workflow statuses have implications for transfer orders (see [Configuring Agile Content Service](#) (on page 383)) and process extensions (see [Process Extensions](#) (on page 94)).

### To fix an active workflow:

4. Move each active routable object using that workflow to the Pending status type.

---

<b>Note</b>	This step is no longer absolutely required, and may not be necessary if you are doing a small and quick modification (see <a href="#">Modifying Properties in an Enabled Workflow</a> (on page 146)). This precaution is helpful when the change may take some time and many objects and people may be affected.
-------------	--

---

5. Disable the workflow.
6. Rename the workflow, using the Save As procedure (described in [Creating New Workflows with Save As](#) (on page 123)).
7. You may now wish to rename the old workflow, especially if you decide it can still be useful but has a different purpose.
8. Modify or fix the new workflow.
9. When you are confident that the existing problem has been remedied, enable the workflow.
10. Apply the routable objects from the old to the new workflow.



# Users and User Groups

**This chapter includes the following:**

▪ Users .....	149
▪ Account Policy .....	160
▪ User Groups .....	162
▪ Supplier Groups .....	170
▪ User Monitor .....	171

This chapter explains how to define users, user groups and supplier groups, and user account policy for Agile PLM, and describes how to monitor logged in users.

## Users

From the Users node, you can give new users access to Agile PLM or modify the properties of existing users, including changing user group, role, and escalation approval settings.

The Users node lets you view and configure the following aspects of Agile PLM:

- Add new users
- Modify any user properties such as licenses, roles, sites, and passwords
- Disable or delete users

The process of adding users involves establishing the properties that govern their access to Agile PLM applications. For example, their passwords allow them to log in, and their role assignments establish their access to Agile PLM objects from point of discovery forward. It is important to consider precisely what access and permissions your users require.

**Note** PLM 9.2.2.4 introduces the possibility of integrating aspects of your PLM system with Single Sign-On (SSO) capability. With SSO configured and deployed for your PLM system, a user that has signed in to the system once (for instance, through the corporate portal) is not prompted again by a "login" dialog (see Appendix A, [Single Sign-On and PLM 9.2.2.4](#) on page 445).

**Note** A "supplier user" is a particular kind of user who is associated with a Supplier; supplier users, or "contact users" may not be created by the administrator but by a manager. You might assign the Organization Manager or Compliance Manager role to an Agile PLM user, and this person creates Suppliers and populates them with contact users who can respond to RFQs or RFIs via their (Restricted) role. For more information, see [Configuring Product Cost Management](#) (on page 333) and [Configuring Product Governance & Compliance](#) (on page 417).

This chapter covers most of the nodes under the User Settings folder. Some of the nodes are covered in other chapters:

Roles – see [Roles](#) (on page 173)

Privileges – see [Privileges and Privilege Masks](#) (on page 193)

Deleted Users – see [Deleting and Undeleting Users](#) (on page 160)

Deleted User Groups – see [Hard-Deleting a User Group](#) (on page 166)

## Adding New Users

Once you have assembled information about new users and assessed their access requirements, you can add them to the Agile PLM system.

Users created in an LDAP system must be imported to Agile PLM and synchronized in the Agile PLM database using the Refresh button. See [LDAP as a Node in Administrator](#) (on page 153).

### Before You Begin

Before creating a new Agile PLM user, make sure you answer the following questions:

- What does this user need to be able to do in Agile PLM? What default roles are required for this user?
- What should this user be prevented from doing in Agile PLM?
- Will this user need to have separate Login and Approval passwords?
- On which Agile PLM lists will the user's name appear?
- Which Agile PLM searches should the user be able to use?
- Is the user a Power User? A Power User can log in at any time and is not counted as a member of the concurrent user pool.

#### To create a new user in Java Client:

1. Under User Settings, double-click Users. The Users window appears.
2. Click the New button. The Create User dialog box opens.
3. Type the Username and Password. Repeat the password in the Retype Login Password field.

**Note** Passwords are case-sensitive. For example, if you enter the password here in all capital letters, then the user must always enter the password in all capital letters when logging in to Agile PLM.
4. If the user requires a separate approval password, uncheck Use Login Password for Approval Password, and then enter an approval password (the new user's approval password) in the Approval Password and Confirm Approval Password fields.
5. Click OK. The setup window for the new user appears.
6. Enter values for First Name, Last Name, and Email.
7. Click the Role(s) list and assign roles to the user. Remember, the user cannot do anything in Agile PLM until a role is assigned.

8. In the Profile section, enter other values as needed. These fields are not required and may be filled in later.
9. On the Preferences tab, enter values for the properties. You can accept the default values.
10. Click Save.


#### To create a new user in Web Client:

1. Click Tools > Administration > Users. The Users page appears.
2. Click Create. The Create User wizard opens.
3. Type the Username and Login Password. Repeat the password in the Retype Login Password field.

---

**Note** Passwords are case-sensitive. For example, if you enter the password here in all capital letters, then the user must always enter the password in all capital letters when logging in to Agile PLM.

---

4. If the user requires a separate approval password, uncheck Use Login Password for Approval Password, and then enter an Approval Password (the new user's approval password) and Confirm Approval Password.
5. Click Continue. The Enter General Information page appears.
6. Enter values for First Name, Last Name, and email.
7. To open the Role(s) list, click the  button to the right of the field. Assign roles to the user. Remember, the user cannot do anything in Agile PLM until a role is assigned.
8. In the Profile section, enter other values as needed. These fields are not required and may be filled in later. Click Next.
9. On the Define Preferences page, enter values for the properties. You can accept the default values.
10. Click Finish. The User page appears.

For instructions on assigning user properties later, see [Modifying User Properties](#) (on page 153).

11. To confirm the addition and review the new user's properties, click Tools > Administration > Users. double-click the new user ID in the table of users. The new user's page appears.

## About Usernames

For security reasons, Agile PLM usernames must be unique. You can create multiple users with the same name (first and last), as long as the username is unique.

If there is an active or inactive user with the same username as a deleted user and the deleted user is undeleted, you must change the username of the deleted user to make it unique. All history references from other objects to the undeleted user remain intact.

---

**Note** The "Username" property is now called "User ID." Both of these terms are seen in the Agile PLM clients and documentation, and they can be thought of as equivalent.

---

**Caution** To prevent frequent user inconvenience, it is important to periodically evaluate your license requirements with your Agile Account Executive, and upgrade as needed.

## About Passwords

When you add new users, you assign passwords so that they can log in to Agile PLM for the first time. Users can then change their passwords themselves based on the settings in their Password property and the systemwide account policy. The Agile PLM administrator can also change a user password later if necessary.

Although the account policy established from the Account Policy node governs password expiration, length, and uniqueness, you can specify settings from the Users node that override those settings; however, it is a best practice that the settings you specify from the Users node for individual users do not routinely conflict with your established security policy for Agile PLM as represented in the Account Policy node.

For example, if you want users to change their passwords periodically, you can designate an expiration interval when you set up your account policy. If you set passwords to expire in 30 days in the account policy, and then set a user's Password property to never expire, the setting in that user's Password property overrides the systemwide setting in the account policy.

For additional security, users can have different passwords for login and approval. For more information, see [Changing a User's Password](#) (on page 153).

For more information, see [Account Policy](#) (on page 160).

## Change Internal User Password

There are four “special users” in Agile PLM, which are used for internal purposes.

Special User	Purpose
superadmin (internal user)	used internally to gain access to all data
agileuser (internal user)	used internally to gain access to all data
ifsuser (external user)	needed for access by File Manager
etluser (external user)	needed for access by ETL tool

There are two problems with these users:

1. The passwords for these users are hard-coded. Previously, customers have not been able to change the passwords for these users. (All Agile customers have the same password for these users out-of-the-box.)
2. These users are not exposed through UI, that is, they exist in the PLM database table but are not visible in Java Client. However, anyone who knows the password is able to access agile data through SDK.

You can change the default passwords for the “IFS” user (file server), the “ETL” user (Datamart), and the “Agile” user. The “Super Admin” user password cannot be changed.

**To reset, for example, the “ifsuser” password:**

1. Under User Settings, double-click Users. The Users window appears.
2. In the menu bar, click the Change Internal Password User drop-down list.

3. Click Change Password of “ifsuser”. The Change Password of “ifsuser” dialog opens.
4. Fill with appropriate values the Old Password, New Password, and Retype New Password fields. When you are finished, click OK.
5. When the password for ifsuser is reset, the following steps must be performed:
  - Run <AgileHome>\agileDomain\bin\encryptpwd.cmd to encrypt the new password.
  - Paste the new password to agile.properties under <AgileHome>\agileDomain\config and server.conf under <AgileHome>\Tomcat\webapps\Filemgr\WEB-INF\classes\com\agilewebfs\configuration.

If ifsuser password is changed during installation, only this second step needs to be performed.

The File Manager needs to be restarted for the configuration change to take effect.

## LDAP as a Node in Administrator

Administrator has an LDAP node under the Server Settings node folder in which to configure a Lightweight Directory Access Protocol. Please see [LDAP](#) (on page 278).

## Modifying User Properties

You can modify any of the fields for existing users from the Users node. The following is a general process for changing property settings.

---

Note	For information about the filter bar at the top of the Users window, see <a href="#">Filtering Data</a> on page 16.
------	---

---

### To modify a user's fields in Java Client:

1. Under User Settings, double-click Users. The Users window appears.
2. Double-click the user's name in the list. That user's window appears.
3. Modify fields directly, make a selection from a list, or make changes in a dialog box.
4. Click the Save button.

### To modify a user's fields in Web Client:

1. Click Tools > Administration > Users. The Users page appears.
2. Click the user's name in the list. That user's page appears.
3. Click Edit. The fields become editable. You can directly edit a field, make a selection from a list, or make changes in a dialog box. Modify the fields you want.
4. Click the Save button.

The next time the user logs in, he will see the results of changes you have made to his user properties. However, for some properties (for example, Time Zone and Receive Email Notification), you must log out and log back in to Web Client to see your changes to these properties.

## Changing a User's Password

When you are adding new users, you assign passwords so that users can log in to Agile PLM for

the first time. Users can then change their passwords within Agile PLM if necessary. The Agile PLM administrator can also change a user's password.

Each user can have both a login password and an approval password, although a single password can be used for both purposes. You can specify whether to establish separate login and approval passwords, or to use a single password for both. The login password is required to establish access to Agile PLM. In addition, the system prompts users who approve objects, such as changes, for an approval password.

Using separate approval passwords provides additional security. If your company requires this type of security, or requires the assurance that only the correct person can approve an object (perhaps for audit purposes), set Use Login Password for Approval to No.

### **To change a user's login or approval password in Java Client:**

1. Under User Settings, double-click Users. The Users window appears.
2. Double-click the user's name in the list. That user's window appears.
3. Click the Change Password button to change the login password.
4. The Reset Password (or Reset Approval Password) dialog box appears. Enter the new login or approval password, remembering that passwords are case-sensitive. If you enter the password here in all capital letters, then the user must always enter the password in all capital letters when logging in to Agile PLM.
5. Confirm the password by retyping it. Click OK.
6. Click the OK button in the message that appears.

### **To change a user's login or approval password in Web Client:**

1. Click Tools > Administration > Users. The Users page appears.
2. Click the user's name in the list. That user's page appears.
3. Click the Reset Password button to change the login password; click the Reset Approval Password to change the approval password.
4. The Change Password (or Change Approval Password) window appears. Enter the new login or approval password, remembering that passwords are case-sensitive. If you enter the password here in all capital letters, then the user must always enter the password in all capital letters when logging in to Agile PLM.
5. Confirm the password by retyping it. Click OK.

## **Changing a User's Role Assignments**

You can modify a user's role assignments from either the Users node or the Roles node. Any user role changes you make in either of these nodes are automatically reflected in the other node as well.

- From the Users node, you can see or change an individual user's role assignments.
- From the Roles node, you can see and change the users assigned to a particular role, as well as the role properties and masks.

## User Properties Defined

The table below lists and describes the properties common to all users in the Agile PLM system. The General Info, Preferences, Escalations, and User Groups tabs are documented. Share, Subscription, Attachments, and History tabs are all automatically populated, and do not have fields or properties per se.

**Note** Preferences for users are found on the Preferences tab of any user object. There are three sub-categories of user preferences: system-related, format-related, and display-related. These “user preferences” should not be confused with Administrator > Server Settings > Preferences node of “systemwide preferences.”

Property	Description (default is underlined)
General Info tab, required fields	
User ID (username)	The user's Agile PLM login user identification, or username. It must be unique in the Agile PLM address book. The maximum is 128 characters. See <a href="#">About Usernames</a> (on page 151).
First Name and Last Name	The user's public name. Neither of the user's Names fields has to be unique in the system, only the user's <b>User ID</b> must be unique (see <a href="#">About Usernames</a> (on page 151)).
Status	Indicates whether the user is enabled (Active) or disabled (Inactive). A disabled user cannot log in.
Email	The user's valid email address for change notification/routing. <i>Example:</i> <a href="#">danny.design@agile.com</a> . <b>Note:</b> If there is not a valid email address in the <b>Email</b> field, the user will not receive any email notifications.
General Info tab, optional user information	
Status	Active or Inactive. (This is the same thing as Enabled or Disabled, respectively.)
Title	The user's title, for example, Senior Engineer.
Address fields	There are four address fields that are used for informational purposes only: <b>Address</b> (street), <b>City</b> , <b>Postal/Zip Code</b> , and <b>Geography</b> . The Geography field is a series of drop-down lists.
Phone number fields	The user's <b>Business Phone</b> , <b>Home Phone</b> , and <b>Mobile Phone</b> numbers (for informational purposes only).
Fax	The user's fax number (for informational purposes only).
Pager	The user's pager number (for informational purposes only).
Secondary Email	The <b>Secondary Email</b> is optional, but when the field is filled in, the user receives notifications at both email addresses.
General Info tab, Profile fields	

Property	Description (default is underlined)
Role(s)	The user's role assignments. This property determines a user's access to the objects in Agile PLM from the point of discovery forward. The default roles (automatically assigned when you create a user) are My User Profile and (as of PLM Rel. 9.2.2.4) Read And Discover By Creator. For more information, see Chapter 9, <a href="#">Roles</a> (on page 173), and also <a href="#">Read and Discover Objects I Created Role</a> on page 183.
Lists	<p><b>Note:</b> these lists are particular to routable objects and their workflows, as specified below. They are not editable at the Lists node; names are added or removed from these lists based on this setting in a user's profile.</p> <ul style="list-style-type: none"> <li>▫ <b>Change Analyst List</b> controls whether the user's name appears in the Change Analyst list on the Cover Page of Engineering Changes.</li> <li>▫ <b>Component Engineer List</b> controls whether the user's name appears in the Component Engineer list on the Cover Page of Manufacturing Changes.</li> <li>▫ <b>Compliance Manager List</b> controls whether the user's name appears in the Compliance Manager list on the Cover Page of Declarations.</li> <li>▫ <b>Price Administrator List</b> controls whether the user's name appears in the Price Administrator list on the Cover Page of Price objects (PCOs, Quote Histories, and Published Prices).</li> <li>▫ <b>Quality Administrator List</b> controls whether the user's name appears in the Quality Administrator list on the Cover Page of Quality Change Request objects (CAPAs and Audits).</li> <li>▫ <b>Quality Analyst List</b> controls whether the user's name appears in the Quality Analyst list on the Cover Page of Product Service Request objects (Problem Reports and NCRs).</li> </ul>
Searches	<p><b>Change Analyst Searches</b> controls whether a user has the following in Java or Web Client:</p> <ul style="list-style-type: none"> <li>▫ A Change Analyst Searches folder</li> <li>▫ Change Analyst queries in My Inbox</li> </ul> <p><b>Component Engineer Searches</b> controls whether a user has a Component Engineer Searches folder in Java or Web Client.</p> <p><b>Quality Searches</b> controls whether a user has the following in Java or Web Client:</p> <ul style="list-style-type: none"> <li>▫ A Quality Search folder</li> <li>▫ Quality queries in My Inbox</li> </ul> <p><b>Content Manager, Price, Program, Supplier RFQ, and Sourcing Searches</b></p>
User Category	Power, Concurrent, or Restricted. See User Licenses.
Use Login Password for Approval	Each user has a login password and approval password (used to approve changes). Set <b>Use Login Password for Approval</b> to Yes to use one password for both. Set it to No if you require an approval password. Use the <b>Change Password</b> button at the top of the setup window to define new (case-sensitive) passwords for the user.



Property	Description (default is underlined)
<b>Allow Escalation Designation Approval</b>	If the user has identified one or more designated escalation persons (DEPs), this setting determines when the DEPs can approve or reject a routable object. <i>Settings:</i> After Escalation – The user's DEP can approve a routable object only after it has been escalated. Always – The user's DEP can always approve or reject a routable object. (For more information about designated escalation person status, see <a href="#">Assigning Escalation Persons to User Groups</a> (on page 167).)
<b>Home Organization</b>	The name of the company profile (organization name) for all users created from the <b>Users</b> node and the supplier name and supplier number for all users created from the <b>Supplier Groups</b> node.
<b>Site(s)</b> and <b>Default Site</b>	<b>Sites</b> are used for distributed manufacturing, and indicate all of the company's locations where the user is involved; selecting from the drop-down list for this property populates the drop-down list for Default Site. <b>Default Site</b> is the user's main base of work.
<b>Ship-To</b> address fields	<b>Authorized Ship-To</b> (called "Site" in earlier versions of PCM), used only by PCM, indicates all company locations where the user can initiate sourcing activity; selecting from the drop-down list for this property populates the drop-down list for <b>Home Ship-To</b> .  <b>Home Ship-To</b> is the primary location where the user is responsible for sourcing activities.
<b>Program Manager for Partners</b>	The partners for which this user is program manager (which is the change analyst for Package objects). See <a href="#">Setting Up User Groups as Partners</a> (on page 169).
<b>Rate</b> fields	There are three <b>Rates</b> fields: <b>Labor Rate</b> , <b>Overhead Rate</b> , and <b>Bill Rate</b> . The drop-down lists in these fields show all currencies entered in the <b>Currency Exchange Rates</b> node. You can select a currency different from the user's Preferred Currency (see <b>Preferences</b> tab). Used by PPM.
<b>Comment</b>	The Agile PLM administrator may enter a comment regarding the user. This comment does appear to the user when he or she clicks <b>Settings &gt; User Profile</b> .
<b>Program Type</b>	Types of programs the user can participate in. Available values depend the Program Type List.
<b>Region</b>	Regions the user has belongs to. Available values depend the Region List.
<b>Division</b>	Divisions the user belongs to. Available values depend on the Division List.
<b>Product Line</b>	Product lines the user has access to. Available values depend on the Product Line List.
<b>Customer</b>	Customers the user is associated with. Available values depend on the Customer List.
<b>Launch Year</b>	Product launch years the user is associated with. Available values depend on the Launch Year List.
<b>Category 7, Category 8, Category 9, Category 10</b>	Optional Product Portfolio Management Dashboard fields.

Property	Description (default is underlined)
Preferences tab: System Preferences	
Preferred Client	This field controls the type of link provided in system notifications to the user. Select Web Client, Java Client, or Portal Client.  <b>Important:</b> Agile's PCM, PG&C, and PPM solutions operate only in Web Client. Users who work primarily in those areas should have their Preferred Client set to Web Client.
Preferred File Server	Select from the list of file servers. For best performance, select a file server that is a local server for the user. For example, for a user in the United States, select a server located in the United States. (For more information about file management servers, see <a href="#">File Management in Agile PLM</a> (on page 269).)
Preferred Portal URL	Specify the URL used to access the Agile PLM portal. The user's Agile PLM email notifications will contain a link to the portal URL.
Receive Email Notification	Controls whether the user can receive automatically generated email notifications from the system. <i>Settings</i> = Yes or No
File Productivity Preference	Controls whether the user has access to advanced productivity components, or standard components, or wants to be prompted in each situation. If set to Standard mode, non-supported files will not be opened automatically. Instead, the user is prompted to choose Save or Open. <i>Settings</i> = Prompt, Advanced, or Standard  <b>Note:</b> this user preference will not appear in any user's Profile if the systemwide preference Allow Download of Productivity Components is set to No. (See <a href="#">Preferences</a> (on page 284).)
Preferences tab: Format Preferences	
Language	English is available with all Agile PLM licenses. Agile PLM includes Japanese, Traditional Chinese, Simplified Chinese, French, or German, per your license.
Workweek Settings	This setting is for future use only, and is not referenced in any Agile PLM module.  <b>Note:</b> this property is not applicable to any Agile PLM module including Product Portfolio Management and Microsoft Project schedules.
Preferred Date Format	The format in which dates are displayed to the user. Default is MM/dd/yyyy.
Time Zone	The time zone where the user is located.
Preferred Time Format	The format in which times are displayed to the user. The default is hh:mm:ss aaa (aaa = am or pm).
Preferred Currency	The currency in which prices/costs are displayed to the user. The default is U.S. Dollar. The drop-down list in this property shows all currencies entered from the <a href="#">Currency Exchange Rates</a> node.

Property	Description (default is underlined)
Number Format	The format in which numbers are displayed to the user. The administrator or user selects a type of format (for example, use commas for thousand separators and point for decimal separator; use nothing for thousand and comma for decimal). An example of each format is displayed in the drop-down list.
Preferences tab: Display Preferences	
Preferred Start Page	Select between Home, Dashboard, Dashboard Financial, Dashboard My Activities, Dashboard Programs, and Dashboard Resources.
Preferred Inbox View	Select between Activities, Notifications, and Workflow.
Response Edit Mode	Choose between Basic, Advanced Table Edit, and Advanced Wizard Edit. The Basic setting brings the user – generally a “supplier” who does not work at the “buyer” company – to a simplified Web Client user interface. The two Advanced settings bring the user to the familiar Web Client UI. For more information about these settings, see <i>PCM Supplier Handbook</i> and <i>PG&amp;C Supplier Guide</i> .
Rows per Table Display	The number of rows that appear in the user’s Agile Web Client user interface. The default is 50.
Static Table Headers	Set to Yes to carry table headers to additional pages.
Maximum Rows Displayed	The maximum number of rows displayed in any Agile PLM table, including search results. The default is 1000. If you set this property to a higher value, searches will take longer to display results.  <b>Note:</b> If this user preference is set to fewer rows than Max Query Results Displayed systemwide preference, the former value will override the latter value.
Main Toolbar (Web Client)	Menu “headings” on Web Client’s main toolbar can be seen as Icons Only, Text Only, or both Icons and Text.
Encode Type	Select from: <u>Western European (ISO)</u> , <u>Japanese (Shift JIS)</u> , <u>Traditional Chinese (Big 5)</u> , <u>Japanese (EUC)</u> , <u>Simplified Chinese (GB2312)</u> , and <u>Unicode (UTF-8)</u> .
Show Timesheet	Set to Yes to display the Timesheet tab. Default setting is No.
Escalations tab	
Criteria and Notify Users	Set <b>Criteria</b> and <b>Notify Users</b> , which is an individual user or user group (personal or global) to be notified when a workflow status exceeds its escalation time period without a signoff by the user. A user can have multiple designated escalation persons assigned to a variety of workflow-related criteria. For more information, see <a href="#">Assigning Escalation Persons to User Groups</a> (on page 167).
User Group tab	
Name and Status and Role(s)	The user’s user group assignments for the address book. These fields can be set in this tab or on the <b>Users</b> tab of the user group setup window. A user can belong to multiple groups. For more information, see <a href="#">User Groups</a> (on page 162).

## Deleting and Undeleting Users

You cannot either “hard delete” or “soft delete” a user that is associated with any other object. A newly created user who is not associated can be deleted from the Users node. You will then find the user object on the Deleted Users node.

This process can be reversed: on the Deleted Users node, select a deleted user and click the Undelete button. The user object is restored to the Users node; you will, however, have to close and re-open the Users node to see this user, this cannot be accomplished with the Refresh button.

If someone leaves the company, or will no longer be using Agile PLM, or you need to prevent a user from logging in to the Agile PLM system, disable the user object by setting the Status property to Inactive. The user remains on the Users node, and the name still appears on existing workflows, escalations, and so forth, but the user will no longer appear in the Address Book for other users to select. You can re-set the user to Active status at any time.

For users you have made Inactive, you can use Global Replace to locate and replace him in all the places in the system that his name is used (see [Global Replace](#) (on page 19)).

## Account Policy

To provide an enhanced level of access security in Agile PLM, you can set a systemwide user account policy. The features of this policy include password aging, length, uniqueness, and lockout.

### Before You Begin

Before configuring systemwide user account policy for Agile PLM, make sure you answer the following questions:


- Will you be using an LDAP system to create Agile PLM users? You may decide to set up Account Policy functionality on your LDAP server. See [LDAP as a Node in Administrator](#) (on page 153).
- Do you want user passwords to expire? If so, how often (number of days)?
- Do you want users to be able to change their passwords at any time? If not, how often (number of days) should they be changed?
- What is the minimum number of characters permitted?
- Do you want to prevent users from using the same password over again? If so, how many previous passwords do you want the system to remember?
- Do you want a systemwide lockout policy to prevent unauthorized attempts to log in to the system?
- If a user is locked out, do you want yourself or others to be notified?

## Configuring the Account Policy

To configure your systemwide account policy:

1. Under User Settings, double-click Account Policy. The Account Policy window appears.
2. Configure your systemwide account policy by setting the properties described in the table below.

Property	Description
Account Lockout	Controls whether the system remembers failed logons. When this property is set to Disabled, the system does not remember failed logons, and these properties are not in use: Logon Attempts, Reset Count Time, Logout Duration, and Account Lockout Notify User. When Account Lockout is set to Enabled, these properties are enabled.
Logon Attempts	Enabled when Account Lockout is set to Enabled. Enter a value between 1 and 999,999,999. The default is 3 bad attempts, in which case the lockout of that computer occurs upon the third failure.
Reset Count Time (in minutes)	Enabled when Account Lockout is set to Enabled. Enter a value between 1 and 999,999,999. The default is 30 minutes, after which that computer reverts to allowing the number of attempts set in Logon Attempts. Note that a user who is locked out, and whose Logout Duration value is set higher than Reset Count Time, will still be locked out when Reset Count Time expires, while another user can log on to this machine once Reset Count Time has expired.
Lockout Duration (in minutes)	Enabled when Account Lockout is set to Enabled. Enter a value between 1 and 999,999,999. The default is 0, which means the user is locked out until you reset that user account. Lockout Duration and Reset Count Time do not "trump" each other, meaning a user, upon being locked out, will have to wait for the higher value of these two properties to expire.
Maximum Password Age (in days)	Enter a number of days you want as a limit of how long passwords may remain in effect. Default is 0.
Minimum Password Length	This value sets the minimum number of <i>characters</i> that any user's password can be. Default is 1.
Password Uniqueness	<p>The value 0 (default) permits users to re-use passwords they have used before when it comes time to change passwords. To prevent users from reusing passwords, enter a number, which is the number of passwords that the system remembers for each user, and does not allow to be re-used.</p> <p>For example, with a value of 3, users will not be able to re-use their first password when it is time to select their fourth password. When it is time to select their fifth password, however, each user could re-use their first password, because the system remembers their second, third, and fourth passwords, but not their first.</p>

Property	Description
Account Lockout Notify User	<p>Enabled when Account Lockout is set to Enabled. To assign users to receive email notification if a user is locked out, click the  button at the right for the address book to appear, and select any number of users to be notified.</p> <p>On the <b>User Groups</b> tab of the address book, when you select a user group, only the button that adds all the members of the group is enabled; you can, however, add all the members of a group and then remove individuals from the Recipients list.</p>

---

**Note** The account lockout rules apply to all Agile PLM clients, including Java Client, Web Client, ChangeCAST, AIS, and SDK.

---

## Administrator Reset of Locked Out Account

If a user is locked out of their account because of entering the wrong password more times than Logon Attempts allows, and the Reset Count Time is a high value, you should reset the user's login password. This will reset the user's locked status and allow them to access the system.

---

**Note** An additional setting concerning passwords (for Web Client users) is under Preferences node. See [Allow Password Reset](#) (on page 290).

---

## User Groups

From the User Groups node, you can assign users and designated escalation persons to user groups, change a user group's name, or create new user groups.

You can also define project teams, partners, departments, business units, divisions, site-related groups and global groups and their assigned users. This configuration is reflected in the User Groups node of the Agile PLM address book for use in addressing email notifications.

Agile PLM administrators set up the user group configuration for their Agile PLM system from the following two nodes:

- From the User Groups node, you set up user groups by creating, naming, and assigning users to them. User groups are displayed in the Agile PLM address book. When a user clicks the To button in the Send Object dialog box in Agile PLM clients, the address book opens. You can select a user group in the address book. Any user group assignments you make in the User Groups node are also reflected on the user's User Groups tab of the user's window or page.
- From the Users node, you configure user properties, including user group assignments. Any user group assignments you make from the Users node are also reflected in the Users property of that user group in the User Groups node. When you add new users in the Users node, you can assign them to one or more user groups. You can change these assignments later as necessary, from either the Users node or the User Groups node. For information about how to change a user's properties, see [Modifying User Properties](#) (on page 153).

---

**Note** If you create a new user group and want to assign existing users, it is faster to configure the new user group's User property than each user's User Group property.



---

If you have upgraded to Agile PLM from a previous version of Agile Product Collaboration, and want to keep your existing organizational structures in the system, you can create subclasses of user groups called, for instance, Departments, Global Groups, and Partners.

## Creating a New User Group

Before creating a new user group, you should review the user groups you currently have. Run the User Group Configuration report (under the Analytics and Reports tab > Standard Reports > Administrator Reports node): it lists current user groups and the users assigned to them. (See [Administrator Reports](#) (on page 16) for more information about reports.)

### To create a new user group in Java Client:

1. Under User Settings, double-click User Groups. The User Groups window appears.
2. Click the New button . The Create User Group dialog opens.
3. From the Subclass drop-down list, select the type of user group.  
User Groups is the only subclass available if you have not created another one in that class. If you want to designate a new group to be of a type that has not been created, you must first create it from the Classes node for it to appear in the drop-down list.
4. Fill in a value in the Name field.
5. Click  next to the Users field. The address book appears. Move users (from the Names list) or other user groups (from the Groups list) to the Recipients list.
6. Click OK. The new user group object appears.

The new user group object is available to users from this point on. Its name appears under the User Groups node, and user group assignments are updated in the Users node. The new user group name also appears in the Agile PLM address book.

### To create a new user group in Web Client:

1. Click Tools > Administration > User Groups. The User Groups page appears.
2. Click Create. The Create User Group wizard opens to the Select Subclass, Identify Name page; this heading refers to the fact that each user group object is a subclass in the User Groups class of Agile PLM objects.
3. From the Subclass drop-down list, select the type of user group.  
If you want to designate the new user group to be of a type that has not been created, you will have to create that from the Classes node in Java Client before it will appear in the drop-down list.
4. Fill in a value in the Name field.
5. Click Continue. The Define the User Group page appears.
6. Enter user group properties as needed. For more information, see [User Group Properties](#) (on page 164).
7. When you are finished, click Next. The Add Users page appears.

To create the new user group without assigning users, click **Finish**. The new user group name appears on the **User Groups** page on the **Users** tab, and in the Agile PLM address book.

8. To assign a user to the user group, click **Add**. A selection window appears. You may type a name to find the user, or select from the list of existing users. You may also sort from the list of existing users by first name and last name, and there are buttons to help you view details of a selected user or to find a user.
9. Select one or more names from the **Available Values** list and click the right arrow. The names move to the **Selected Values** list.

Click **Add**. The users are added on the **Add Users** page.

Click **Finish**.

The new user group name appears on the **User Groups** page, and user group assignments are updated on the **Users** page. The new user group name also appears in the Agile PLM address book.

## User Group Properties

The following table lists user group properties.

Property	Description
Name	Allows you to enter a user group name of up to 29 characters.
Type	Select a subclass. The out-of-box subclass is <b>User Group</b> . The administrator can create other subclasses in the <b>User Groups</b> class; these will appear in this drop-down list.
Description	Description of the user group.
Status	Whether the user group is active or inactive. An active group appears in the address book, an inactive group does not.
Global/Personal	Global user groups can be used for all users. Personal groups are seen and used only by their creators.
Roles	Roles applied to groups apply to all the users in the group.
Resource Pool	Allows this user group to be used as a resource pool for assignment in Product Portfolio Management objects
Define as Partner Group	If the user group is to be a partner (members can create and submit package objects), select <b>Yes</b> . The user group will then appear in the list of valid partners when you set any user's <b>Program Manager for Partners</b> property. See <a href="#">Setting Up User Groups as Partners</a> (on page 169).
Allow Escalation Designation Approval	If the user group has identified one or more designated escalation persons (DEPs), this setting determines when the DEPs can approve or reject a routable object. <i>Settings:</i> After Escalation—the user group's DEP can approve a routable object only after it has been escalated. Always—the user group's DEP can always approve or reject a routable object. (For more information about designated escalation person status, see <a href="#">Assigning Escalation Persons to User Groups</a> (on page 167).)



Property	Description
Owner	Names the creator of the user group; for information purposes.
Max Number of Named Users	Maximum number of users the user group can have. <i>Settings:</i> Blank (default) — The number of users is unlimited. Any positive integer — Defines the maximum number of users contained in the user group. The number can exceed the number of user licenses, but it cannot be less than the number of users already assigned to the user group.
Lists, Program Type, Region, Division, Product Line, Customer, Launch Year, Labor Rate, Overhead Rate, and Bill Rate	See User Properties Defined.

## Modifying a User Group

The following sequence applies to modifying any property of a user group.

### To modify the User Groups settings in Java Client:

1. Under User Settings, double-click User Groups. The User Groups window appears.
2. Double-click a specific user group, say, Customer Support. The Customer Support window appears. The user group tabs are General Info, Users, Escalations, Attachments, History, and Share.
3. In any editable field, enter a new value or select from the drop-down list.
4. When you have finished, click Save.
5. If you wish to revert to the original settings or start over, click Close. You will be prompted whether you want to save new settings on the window; click Yes if you do or No if you do not.

---

**Note** If your company uses an LDAP system with PLM, if the User Group "synch" function enabled, you cannot remove or add users on a user group's Users tab that have been synchronized (that is, where users have been added to a user group via LDAP). See [Synchronizing Users and User Groups](#) on page 284.

---

### To modify the User Groups settings in Web Client:

1. Click Tools > Administration > User Groups. The User Groups page appears.
2. Click a specific user group, say, Customer Support. The User Group: Customer Support page appears. The user group tabs are General Info, Users, Escalations, Attachments, Share, and History.
3. On the General Info tab, click Edit.
4. In any editable field, enter a new value or select from the drop-down list.
5. When you have finished, click Save.
6. If you wish to revert to the original settings or start over, click Cancel. You will be prompted whether you want to cancel new settings on the page; Click OK if you do or Cancel if you do not.

## Deleting a User Group

You can delete a user group that is no longer needed. If you delete a user group to which users have been assigned, you can do so without removing the users who were in the user group: when you delete the user group, user assignments to that user group are also deleted.

When you delete a user group, it is removed from the Agile PLM address book. You cannot delete a user group if it is in use in these cases:

- It is on any routable object signoff list in Agile PLM clients.
- It is listed in any workflow “Notify” properties (in the Workflows window).
- It is used as a designated escalation person for any users, user groups, and partners.

---

Note	When you remove a user from a user group, use the Global Replace tool to determine all the places in the system that user is used (see <a href="#">Global Replace</a> (on page 19)).
------	--

---

### To temporarily delete a user group in Java Client:

1. Under User Settings, double-click User Groups. The User Groups window appears.
2. Select a user group name in the list.
3. Click the Delete button. You are prompted to confirm the deletion.
4. Click Yes. The user group no longer appears on the User Groups window.

### To temporarily delete a user group in Web Client:

1. Click Tools > Administration > User Groups. The User Groups page appears.
2. Click a user group name in the list. That user group page appears.
3. From the Actions menu, choose Delete. You are prompted to confirm the deletion.
4. Click Yes. The user group no longer appears on the User Groups page.

## Hard-Deleting a User Group

When you delete a user group, it is moved to the Deleted User Groups node. Although it does not appear in the address book, it still exists in the database. This is referred to as a “soft-deleted” user group. To permanently remove a user group, you can delete it from the Deleted User Groups node. This is referred to as a “hard-deleted” user group.

---

Note	A hard-deleted user group is permanently removed from the database and cannot be restored or undeleted.
------	---

---

### To hard-delete a deleted user group in Java Client:

1. Under User Settings, double-click Deleted User Groups. The Deleted User Groups window appears.
2. Click to select the user group you want to hard-delete, and click the Delete button.  
The user group no longer appears in the Deleted User Groups window.

**To hard-delete a deleted user group in Web Client:**

1. Click Tools > Administration > Deleted User Groups. The Deleted User Groups page appears.
2. Click the name of the user group you want to hard-delete. That user group page appears.
3. Choose Actions > Delete. The Deleted User Groups page is displayed. The user group no longer appears on this page.

## Undeleting a User Group

From the Deleted User Groups node, you can view user groups that have been deleted from the Agile PLM system. It is useful to know which user groups have been deleted because the user group may have been assigned as an approver for routable objects. This allows you to maintain a complete “audit trail” of a product’s entire history.

A user group may be “undeleted.” By undeleting a deleted user group, you restore it to active use, and it appears in the address book again.

**To undelete a user group in Java Client:**

1. Under User Settings, double-click Deleted User Groups. The Deleted User Groups window appears.
2. Click to select the user group you want to undelete.
3. Click the Undelete button.
4. The user group’s name is added to the User Groups window. You might have to click the Refresh button to see the group listed in the window.

**To undelete a user group in Web Client:**

1. Click Tools > Administration > Deleted User Groups. The Deleted User Groups page appears.
2. Click the name of the user group you want to undelete. That User Group page appears.
3. Choose Actions > Undelete.
4. You can now edit the information, if necessary. The user group name is added to the User Group page.

## Assigning Escalation Persons to User Groups

When a workflow status exceeds its escalation time period without a signoff, user groups or individual users can be notified. These entities are called designated escalation persons. The Allow Escalation Designation Approval property determines when the designated escalation person can approve or reject a routable object.

**To assign designated escalation persons to a user group in Java Client:**

1. Under User Settings, double-click User Groups. The User Groups window appears.
2. Double-click the name of the user group you want. The user group’s tabbed window appears.
3. Click the Escalations tab to bring it forward.
4. Click the Add button. Use the drop-down list to select the reusable criteria for this escalation, such as All Change Orders.
5. Click next to the Notify Users field. In the Select Users window, select and move appropriate


users (from the Users list) or other user groups (from the User Groups list) to the Recipients list, and Click OK.

Click Save. The escalations are added to the Escalations tab.

If you want to cancel your changes, click Close.

Now, if the escalation period for the specified criteria passes without a signoff, those users who were selected receive an escalation notification email.

#### To assign designated escalation persons to a user group in Web Client:

1. Click Tools > Administration > User Groups. The User Groups page appears.
2. Click the name of the user group you want. The user group's tabbed object page appears.
3. Click the Escalations tab to bring it forward.
4. Click Create. Use the drop-down list to select the reusable criteria for this escalation, such as All Change Orders.
5. Click  next to the Notify Users field. Use the selection window to select and move appropriate users or groups from the Available Values list to the Selected Values list, and Click OK.
6. Click Save & Add More or Save & Close. (There is also a Cancel button.) The escalations are listed on the Escalations tab.

Now, if the escalation period for the specified criteria passes without a signoff, those users who were selected receive an escalation notification email.

## Adding User Groups as Approvers of a Change

In an Agile PLM workflow, two properties—Approvers and Observers—must be filled out for criteria-specific properties of each Review and Released status.

The possible selections in the Available Values list in the selection dialog depends on the selection you make in the Select Group drop-down list.

Select Group drop-down list choice	Possible selections in the Available Values list
All	When you select All, the <b>Available Values</b> list includes: <ul style="list-style-type: none"><li>▫ Variables (for example, \$CHANGEANALYST).</li><li>▫ All the Agile PLM users.</li><li>▫ All the global groups, listed twice with the suffixes Any and All. For example, if you select [Sales - Any], the routable object is routed to all users in the group, but only one user needs to approve or reject. If you select [Sales - All], the routable object is routed to all the users in the group, and all the users in the group must approve or reject.</li></ul>
All Groups	When you select All Groups, the <b>Available Values</b> list includes: <ul style="list-style-type: none"><li>▫ All the global groups, listed twice with the suffixes Any and All. For example, if you select [Sales - Any], the routable object is routed to all users in the group, but only one user needs to approve or reject. If you select [Sales - All], the routable object is routed to all the users in the group, and all the users in the group must approve or reject.</li></ul>

Select Group drop-down list choice	Possible selections in the Available Values list
group name	<p>When you select a group name, the <b>Available Values</b> list includes:</p> <ul style="list-style-type: none"> <li>▫ The members of that group. For example, if you select [Sales], the <b>Available Values</b> list contains the names of the members of that group. This allows you to select a subset of the group members.</li> </ul>

Select these in the same way you use any multiselect dialog box: either double-click single names or select multiple names and click the right arrow to move users or user groups to the Selected Values list on the right. Click OK to return to the Criteria table on the Status tab, and click Save to complete assigning approvers for that status.

---

**Note** When [user group - Any] is assigned to a workflow as an approver, any member of the user group may sign off a routable object (passing through the status in which the group was named), and the individual's signoff is, in effect, for the entire user group; no one else needs to or can approve or reject the routable object. Once one member of the group has approved or rejected it, the routable object no longer appears in the Inbox of the other users in the group.

---

However, other members *can* approve or reject the routable object after the first user has responded. If a member rejects the routable object, a warning appears, "You are about to override a previous signoff in CCB (or Released) which differs from yours." If this user clicks OK, it will override the approval by the earlier user.

## Setting Up User Groups as Partners

This section collects the various elements that must be set up to enable Agile partners to send packages and to have program managers manage their package submissions. A "partner" may be defined as a company that works with your company and that has Agile users who need to send packages; or, a partner could be any Agile user that represents a company to your company.

---

**Note** The term "program manager" refers to the change analyst who manages package objects (instances of the Packages class); here it does *not* refer to the Agile role "Program Manager."  
Also, this use of "program" is *not* involved with the Programs base class.

---

### To create partners and program managers to function together in Agile:

1. Define Agile partners, which are Agile users – usually external – who belong to a user group that has been defined as a partner. Each user group object has a Define as Partner Group property. When set to Yes, the user group will appear on the list of partners available under any user's Program Manager for Partners property.
2. Partners can be assigned the Partner role, which gives them the privileges to create and submit packages.
3. Define one or more Agile users – usually internal – as a program manager of each partner. The Program Manager for Partners user property lists all "Partner" user groups, which you set up in Step 1. You pick the partner groups for each program manager, that is, you can have one user be program manager for one or more of the partner groups, and another user can be program manager for the same or different partner groups.

4. Program managers for partners need to be assigned the Content Manager role, which enables them to work with Agile package objects. Again, as stated in the Note above, do not be misled by the Agile role called Program Manager – that role deals with functionality in the PE/PPM solution.

## Supplier Groups

The Supplier Groups node provides a way to “bundle” approved suppliers so that users who are involved in the PCM solution can easily select multiple suppliers during the RFQ process.

Using Java Client or Web Client, the administrator can set up global supplier groups that can be leveraged by users with appropriate roles. An Agile PLM user can also define (create, edit, delete) a unique supplier group that meets his particular needs, a personal supplier group. Administrators (users who have the ability to create and modify user profiles) can also create, edit, and delete user-level supplier groups for each user.

In Java Client, under User Settings, double-click Supplier Groups to display the main Supplier Groups window. Supplier groups are created with the following properties.


Property	Description	Editable	Default
Name	Name of supplier group	Yes	Empty
Description	Description of supplier group	Yes	Empty
Suppliers	List of suppliers in the supplier group	Yes	Empty
Type	Type of supplier group: Global or Personal group. <b>Note:</b> if you create a supplier group in Java Client, the default is Global with no alternative; if you create a supplier group in Web Client, Personal is available.	Not after creating the supplier group	Global
Enabled	Whether the supplier group is active or inactive	Yes	Yes

The actions that are available are:


- Create – A user administrator can create a new supplier group.
- Edit – A user administrator can edit a supplier group. To add or remove suppliers (users who have been assigned Supplier Administrator, Supplier Manager, or Supplier Project User roles) from the group, the user administrator can add or remove suppliers from the group.
- Enable and Disable – Supplier groups can be enabled or disabled in Edit mode (Web Client) or using the buttons at the top of the Supplier Group window (Java Client).

### To create a supplier group in Java Client:

1. Under User Settings, double-click Supplier Groups. The Supplier Groups window appears.
2. Click the New button. The Create New Supplier Group dialog box opens.
3. Fill in the Name and Description fields, and select Yes or No in the Enabled field.

4. The **Type** field is grayed, with the value of **Global** entered. (As noted in the table, “**Personal**” is an available choice when creating a supplier group in **Web Client**.)
5. Click  next to the **Suppliers** field, and move suppliers from the **Choices** list to the **Selected** list.
6. Click **OK**, and Click **OK** again. The new user group object is listed in the **Supplier Groups** window. It is available to users from this point on.

#### To create a supplier group in **Web Client**:

1. Click **Tools > Administration > Supplier Groups**. The **Supplier Groups** page appears.
2. Click the **Create** button. The **Create Supplier Group** wizard appears.
3. Fill in the **Supplier Group Name** and **Supplier Group Description** fields.
4. Select the **Supplier Group Type**, either **Global** or **Personal**.
5. Click  next to the **Suppliers** field. Use the selection window to move suppliers from the **Available Values** list to the **Selected Values** list, and Click **OK**.

---

**Note** The supplier group must have at least one supplier selected.


---

6. Click **OK**.
7. Click **Finish**.

#### To edit a supplier group in **Java Client**:

1. Under **User Settings**, double-click **Supplier Groups**. The **Supplier Groups** window appears.
2. Double-click the group you want to modify. The **Supplier Group** setup window appears.
3. On the **General Info** tab, select or accept values from the drop-down lists. Add or remove supplier users by moving them into or out of the **Selected** list.
4. When you are finished, click **Save**.

#### To edit a supplier group in **Web Client**:

1. Click **Tools > Administration > Supplier Groups**. The **Supplier Groups** page appears.
2. Select a supplier group, and click **Edit**.
3. Modify values as needed. To add or remove suppliers, click  next to the **Suppliers** field.
4. When you are finished, click **Save**.

## User Monitor

The **User Monitor** window lists the users that are presently logged in to the **Agile PLM** system. It displays the following information about each logged-in user.

Table column	Description
User Name	The first and last name of the logged in user.
User ID	The login username of the user.
Host	Indicates the user's host.

Table column	Description
Login Time	The time the user logged in.

## Refreshing the User Monitor Window

The User Monitor window is not dynamic; it shows the user session information at the moment that the window was displayed. To see the most current information, click the Refresh button to update the information displayed in the window.

## Terminating a User Session

You can use the User Monitor window to terminate a user session.

### To terminate a user session in Java Client:

1. Under User Settings, double-click User Monitor.
2. Select one or more users whose sessions you want to terminate.
3. Click the Terminate Session button.

The users sessions are not terminated immediately. It may take up to a minute to terminate active user sessions. When you click the Terminate Session button, users can continue working for one minute. When the session is terminated, the login window is displayed in the user's browser.



# Roles

This chapter includes the following:

▪ About Roles .....	173
▪ Viewing Roles .....	176
▪ Guidelines for Working with Roles .....	177
▪ Default Agile PLM Roles .....	178
▪ Securing and Maintaining Roles and Privilege Masks .....	184
▪ Working with Roles .....	186

This chapter explains how to use Agile PLM's preconfigured roles and how to create new ones.

## About Roles

Roles and privileges govern a user's access to Agile PLM functionality. To do anything in Agile PLM, users must be assigned to at least one role. Each user (or user group) can be assigned to multiple roles, depending on which actions they need to perform. Agile PLM includes a comprehensive set of preconfigured roles and privilege masks. You can modify roles and privilege masks as necessary. However, you are encouraged to become familiar with the default roles, privileges, and criteria of Agile PLM before constructing your own.

The actions that users can perform in Agile PLM—such as creating, sending, or canceling—are based on *privileges*. Privileges are combined with reusable criteria to create *privilege masks*, which act as filters to manage user actions. Privilege masks are then grouped into *roles* that provide a way of allocating a common set of privileges to a group of users who have common functions in the change control process.

**Note** When you assign a role or a privilege mask to a user, it takes effect only after the user has logged out and logged back into an Agile PLM client.


The following table defines *privilege*, *privilege mask*, and *role*:

Term	Definition	Examples
<b>Privilege</b>	The action users are allowed to take.	Create; Send; Release
<b>Privilege mask</b>	A set of <i>criteria</i> statements that define under what specific conditions an action can be taken on an object. Each role requires at least one privilege mask.	Create Eng. Changes; Create Items; Create Mfr. Changes; Send Eng. Changes; Send Items
<b>Role</b>	A common set of privileges that can be assigned to one or more users who perform the same functions in the change control process. A user can be assigned to more than one role.	Change Analyst role: comprises some six dozen privilege masks



## Roles as Groupings of Privilege Masks

Privilege masks are grouped into roles so that you can assign a common set of privileges to multiple users with the same functions in the change control process. The example for the Acme Company below illustrates how users can be assigned to roles, and how privilege masks can be grouped together into roles.

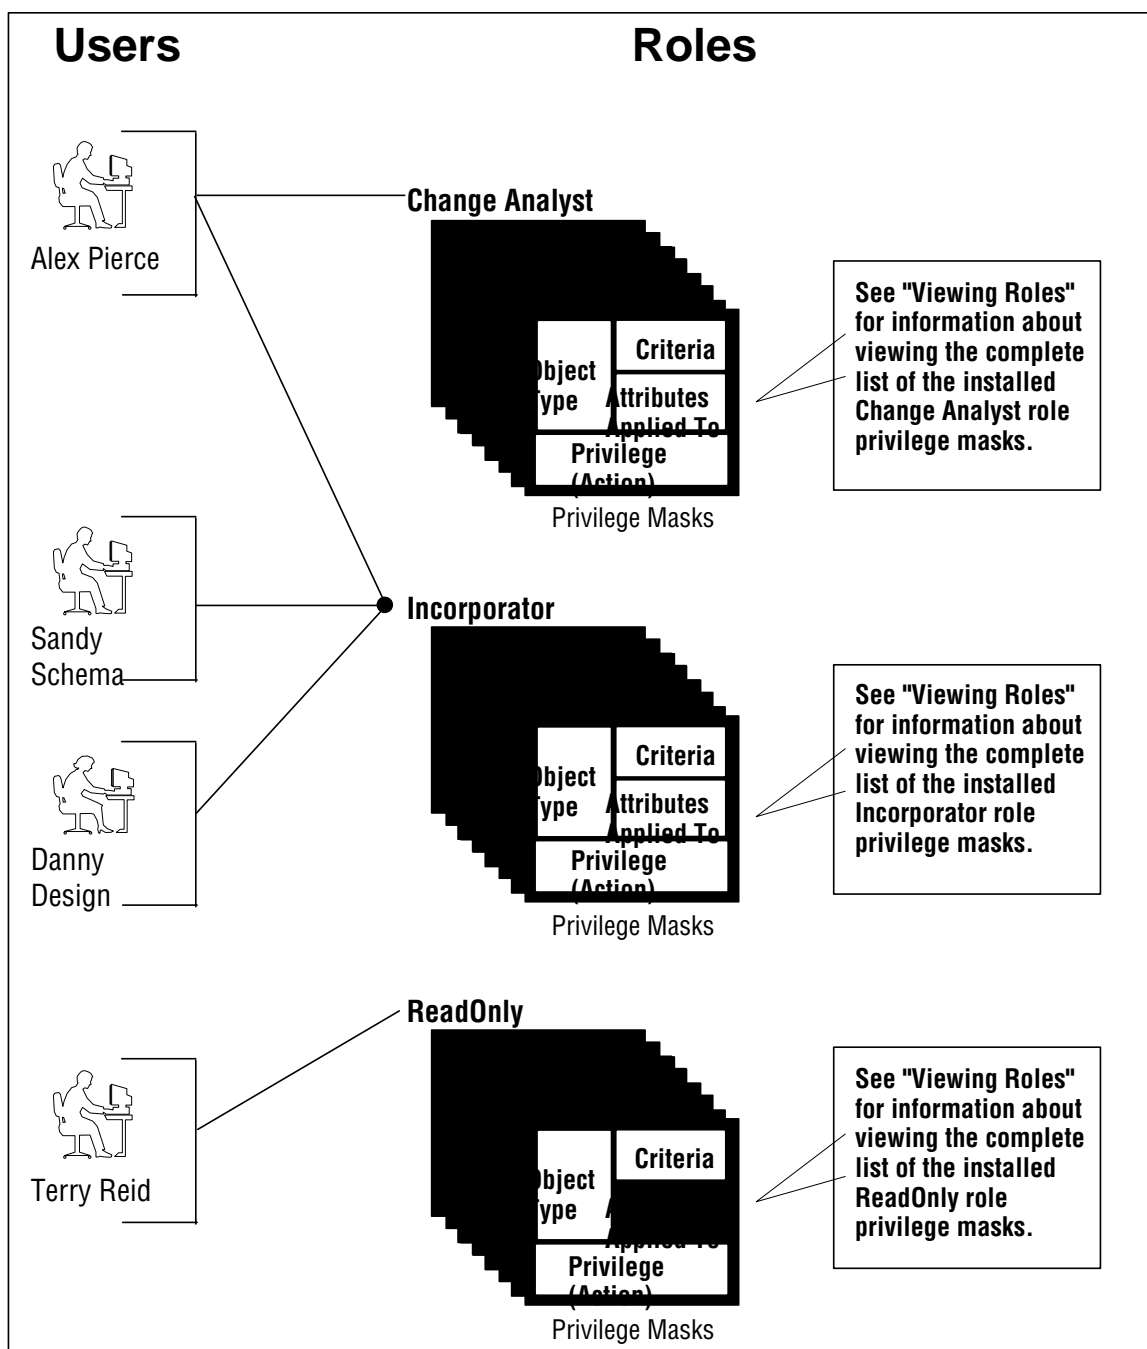

The previous figure shows that:

- Users and user groups can be assigned to more than one role.
- More than one user can be assigned to a role.
- Roles combine access and permissions required by a set of users who perform similar functions.

## Viewing Roles

Click the Roles node to view the existing Roles. You can do the following:

- Enable or disable a role.
- Export or import a role (see [Object History](#) (on page 21)).
- Create a new role.
- Delete a role.

When you double-click the name of Role, its tabbed window appears. For most roles, you can do the following:

- Change the name of an existing role. Exceptions are the restricted roles, and the Administrator, My User Profile, and View Historical Report roles, whose names cannot be changed.
- Enable or disable a role on the General Information tab. Exceptions are the restricted roles, and the Administrator, My User Profile, and View Historical Report roles, which cannot be disabled.
- Assign a user to a role or remove a user assignment from a role on the Users tab. Exceptions are the restricted roles, and the My User Profile and View Historical Report roles, which don't allow you to modify user assignments.
- Add or remove privilege masks for the role by using the Privileges tab. Exceptions are the restricted roles, and the My User Profile and View Historical Report roles, which don't allow you to add or remove privilege masks.
- On the Privileges tab, double-click the name of a privilege mask to display the privilege mask's tabbed object window. When a privilege mask's tabbed window is displayed, you can modify that privilege mask.

You *cannot* do the following from the Roles window:

- Change the object type of a privilege mask.
- Modify any reference copy (Example) of a role or its privilege masks.

## Viewing the Roles Window

**To view the Roles window:**

1. Under User Settings, double-click Roles. The Roles window appears
2. You can filter roles records to narrow your search. For example, filter records by Description Contains Change to find all the roles pertaining to change objects. (See [Filtering Data](#) on page

16.)

The list of roles is displayed in the table. The Roles table shows the name, description and enabled status for each role. The buttons in the window allow you to perform various role management tasks.

Button	Action
New	Create a new role. See <a href="#">Creating a New Role</a> (on page 188).
Delete	Deletes the selected roles. A role cannot be deleted if it is already in use.
Enable	Enables the selected roles.
Disable	Disables the selected roles.
Import	Import a text file to create a new role. See <a href="#">Object History</a> (on page 21).
Export	Exports role data for the selected role. See <a href="#">Object History</a> (on page 21).
Refresh	Refreshes the table with the latest information about the list of roles.

## Viewing a Role

To view a specific role:

1. Under User Settings, double-click Roles. The Roles window appears.
2. You can filter roles records to narrow your search. For example, filter records by Description Contains Change to find the all the roles pertaining to change objects. (See [Filtering Data](#) on page 16.)
3. In the Roles window, double-click the role you want.

The tabbed window for that role appears. The role's basic properties are displayed on the General Information tab.

The buttons that appear at the top of the window are Save As, Delete, and Export.

## Guidelines for Working with Roles

Follow these steps when working with roles:

1. Print a Roles and Privileges Summary report and a Privilege Mask Detail report to see the definitions currently active in your Agile PLM system. See [Administrator Reports](#) (on page 16).

**Caution** The Privilege Mask Detail report can be extremely long. You may wish to generate and view the report before printing it.

2. Read and follow the security recommendations in [Securing and Maintaining Roles and Privilege Masks](#) (on page 184).
3. If necessary, modify and create roles as described later in this chapter.
4. Assign users to appropriate roles. See [Modifying a Role](#) (on page 186).

## Default Agile PLM Roles

When you double-click the Roles node, you see a list of your currently configured roles. The table below lists the out-of-box roles and briefly describes what each role allows the user to do.

You can assign a user as many or as few roles as he needs to perform his duties. You can use the roles provided as they are, or you can copy a provided role (using Save As) and modify the copy to create a new role, or you can create a new role from scratch.

**Caution** As much as possible, copy (using Save As) and adapt the roles and privilege masks provided with your Agile PLM installation rather than create new ones. This is especially true for roles, since the nature of their privilege mask combinations is not immediately obvious.

Role	Applies to these base classes	Description
Administrator roles: apply to users working with the Administrator solution		
Administrator	All Classes	Perform all administrative tasks. The other, specialized Administrator roles (including Discussion, Folder, Price, Program, Quality, Resource Pool, Sourcing, and User administrators) all have less capability than this role.
User Administrator & (Restricted) User Administrator	Users, User Groups	Perform administrative tasks (create, modify, delete) as defined by the Agile administrator
Agile PLM roles: apply to users working across all Agile PLM solutions		
Approve/Reject	Changes, Packages, QCRs, PSRs, Transfer Orders, and Programs	Approve or reject routable objects via workflows, and read items and changes
Design Engineer	File Folders (only Designs class objects)	Create and manage design model structures.
Discussion Administrator	Discussions	Create and manage discussion objects. Discussions are used primarily in Agile PPM and PCM solutions, but it is possible to use that class in other solutions.

Role	Applies to these base classes	Description
Discussion Participant & (Restricted) Discussion Participant	Discussions	Manage portions of discussions; the (Restricted) Discussion Partner would generally be someone who works outside the enterprise.
Enforce Field Level Read	N/A	This "role" is used in conjunction with other roles; it enforces the AppliedTo fields under Read privileges in all roles assigned to the user, which reduces the user's capabilities
Folder Administrator	File Folders	Create and manage file folders. For additional information, see <a href="#">Attachment Privileges</a> (on page 315).
Folder Manager	File Folders	Create and manage file folders. For additional information, see <a href="#">Attachment Privileges</a> (on page 315).
My User Profile & (Restricted) My User Profile	User	View and modify his own user profile properties under My Settings, and create and modify personal user groups. Assigned to every user, and is required to use the Agile PLM system
Read and Discover Objects I Created	All objects	Creator can read and discover object he or she created. This new role is by default enabled and part of every new user's profile; removing the role from a user means the creator can no longer Read or Discover objects he or she created.
Read My File Folder	File Folders	Permits reading file folders created by the assignee.
(Restricted) Grant	All objects	Grant roles to users in a controlled, finite way, using Access Control List (ACL) capability.
Viewer Markup for All	File Folders (Affected Item Attachments)	Modify the redline Markups or other users' for File Folders or for the Affected Item attachments of change orders. User must have Read privileges for the file folder objects or change order objects. For additional information, see <a href="#">Redline Markup Default Roles and Privileges</a> (on page 319).
Viewer Markup for Self	File Folders (Affected Item Attachments)	Create and modify the user's own redline Markups for File Folders or for the Affected Item attachments of change orders. User must have Read privileges for the file folder objects or change order objects. For additional information, see <a href="#">Redline Markup Default Roles and Privileges</a> (on page 319).
Product Collaboration roles: apply to users working in the Agile PC solution		

Role	Applies to these base classes	Description
Change Analyst	Changes, Items, Manufacturers, Manufacturer Parts, File Folders	Create items and changes, and manage the routing and release process of changes through workflows. Also create BOMs, MPNs, AMLs, and to manage file folder references
Component Engineer	Items, Manufacturers, Mfr Parts, Manufacturer Orders	Create manufacturer change objects and manage the routing and release process of MCOs
Item Content Creator	Changes, Items	Create items, and create and submit changes
Manufacturing Content Manager	Items, Manufacturers, Mfr Parts, Manufacturer Orders	Create items, manufacturers, and manufacturer parts, and create and submit MCOs
Partner Package Access	Packages	Create and submit package objects
Read Product Content	Changes, Items, Manufacturers, Manufacturer Parts	Discover, read, comment, get, print, send, and view items, changes, manufacturers, and manufacturer parts
<b>Product Quality Management roles: apply to users working in the Agile PQM solution</b>		
Organization Manager	Suppliers, Customers	Manage suppliers and customers (also applies to PCM solution)
Quality Administrator	Quality Change Requests	Manage the corrective and preventive action and audit processes
Quality Analytics User	Product Service Requests	Submit quality incidents and manage their resolution
<b>Product Cost Management roles: apply to users working in the Agile PCM solution</b>		
Organization Manager	Suppliers, Customers	Create and manage suppliers and customers (also applies to PQM solution)
Price Administrator	Prices, Price Change Orders	Control price management activities, including PCOs
Price Manager	Prices, Price Change Orders	Manage pricing information through creation of price objects and PCOs
(Restricted) Price Collaborator	Prices, Price Change Orders	Manage pricing information through creation of price objects and PCOs, but more limited than price manager role; typically provided to supplier users
Sourcing Administrator	Sourcing Projects, RFQs	Control sourcing activities, including the ability to view and modify all sourcing projects and RFQs
Sourcing Project Manager	Sourcing Projects	Create and manage sourcing projects



Role	Applies to these base classes	Description
RFQ Manager	RFQs, RFQ Responses	Create RFQs and manage the RFQ process
(Restricted) RFQ Responder	RFQ Responses	Respond to RFQs; generally provided to supplier users
(Restricted) Supplier Manager	Suppliers	Manage supplier information, limited to suppliers' own organizations, including the ability to create users in the supplier organization
Product Portfolio Management roles: apply to users working in Agile PPM (Product Portfolio Management) solution		
Executive	Programs	Global read access to all programs that have matching categories; for example, if a program is associated with the North American region, and a user has an Executive privilege for all North American, then he can read them
Program Administrator	Programs	Create and manage complete programs
Program Manager	Programs	Create and manage routing and release process for programs
Program Team Member	Programs	Manage portions of programs
Resource Pool Administrator	Programs	Create and manage resource pools
Resource Pool Owner	Programs	Manage resource pools
Timesheet Administrator	Programs	Perform administrative tasks on all timesheets that are created in the system.
Reports roles: apply to users working with reports		
Report Manager	Reports	Access and manage all reports, even those they did not create
Report User	Reports	Create new custom reports and manage reports they created
View Historical Report	Reports, Historical Report File Folders	View specific instances of previously executed reports; this is a non-editable role and is automatically assigned whenever a report instance is shared with a user
Agile Content Services role: applies specifically to users working in the Agile ACS solution		

Role	Applies to these base classes	Description
Content Manager	Transfer Orders, Packages	Create, modify, route, release and implement CTO and ATO objects, as well as package objects
Product Governance & Compliance roles: apply to users working in the Agile PG&C solution		
Compliance Manager	Declarations, Commodities, Specifications, Substances	Create and manage PG&C objects, run PG&C reports, and route material declarations to suppliers
(Restricted) Material Provider	Declarations	Create, modify, and complete material declarations; generally provided to supplier users
Agile Configuration Propagation roles: apply to users working in the ACP solution. For more information see the <i>9.2.2.4 ACP User Guide</i> .		
(Propagation) Administrator	All Classes	Perform propagation tasks.
(Propagation) User Administrator	Users, User Groups	Perform propagation tasks that are limited to users and user groups.

## Example Roles

Your Agile PLM installation includes both a read–write version and a read-only example or reference copy of the roles. double-click the Example Roles node under the Example node folder to see the reference copy, which is provided so that you always have default copies of the roles as they were installed. To restore the default version of any role, you can just make a copy (using Save As) of its Example role.

For example, the following are the two versions of the Change Analyst role provided at installation:

- Change Analyst — This is a modifiable (Read–Write) role that you can assign to users.
- Example–Change Analyst — This is an uneditable (Read–Only) reference copy of the Change Analyst role.

---

Note	If Agile PLM users are unable to move a routable object from one status to another, for example from Hold to CCB, often they don't have appropriate privileges to make these status changes. In such cases, check the roles they are assigned and the privilege masks included in those roles.
------	--

---

More information about example roles is in [Using the Example Roles](#) (on page 191).

## Restricted Roles

Some roles are restricted in the extent to which they can operate on their specified objects; these role names are preceded by the word Restricted in parentheses. Their purpose is the same as the like-named role that is not preceded by "(Restricted)". They are generally assigned to members of supplier organizations, that is, Agile PLM users who work outside the enterprise.

### Role-based Enhancements in Rel. 9.2.2.4

#### User Administrator Enhancement

There has always been a PLM role "User Administrator." Its operative privilege mask was (and is) Admin Access for User Admin, whose AppliedTo property dictated which Administrator (User-related) nodes could be accessed in Web Client.

With Rel. 9.2.2.4, a new privilege (and privilege mask) called User Administrator has been added to the role. The AppliedTo property of User Administrator privilege mask is populated with PLM Roles. This enhancement means that a user administrator can be configured so that he can only assign specified roles to PLM users.

This is documented in [Options for Building Administrator Assistants](#) on page 202, which is part of the important topic [AppliedTo Capability](#) on page 200.

#### Read and Discover Objects I Created Role

This new role simply enforces access to an object to be strictly based on assigned roles and privileges.

It has always been possible for the creator of a business object to subsequently access the object even if he did not have specific Read or Discover privileges for the object. While this is usually not a serious problem, it could pose problems to a company when users change departments or other assignment.

Now a new user is created with two default roles: besides My User Profile, each user is assigned Read and Discover Objects I Created. This role can be removed from any user at any time.

---

Note	Upgrade customers will not see a change in behavior with existing users; that is, upgrading users can still see objects they created.
------	---

---

#### Advanced Search Security

Two restrictions have been added to Advanced Search utility.

The first restriction applies to the "Search for" field when a user creates any type of search (Quick, Advanced, Parametric search). Now he will see (in the drop-down list of classes) only those classes for which he has been assigned the Discovery privilege.

Similarly, "Field" criteria condition (drop-down list) will not display fields if user does not have a Read privilege (or Enforce Field-level Read privilege) to them. In order to ensure restricted field-level read, the user's Read privilege mask must include in its AppliedTo property only the fields you

wish the user to read. In addition, the user must also be assigned an Enforce Field Level Read privilege mask, for example, by assigning the Enforce Field Level Read role.

For a user to be able to view Workflow Routings folder under Search tab (on the Navigation pane), in the user's profile > Searches field, "Workflow Routings" must be moved from Choices to Selected table.

## Securing and Maintaining Roles and Privilege Masks

By following the recommended plan described in this section, you will help prevent security violations, interruptions in your change control process, and confusion if you need to restore the system to a previous security configuration.

**Caution** Failure to follow the recommendations in this section could have serious consequences:

- Without your knowledge, users may unexpectedly be able to perform actions they had been prohibited from performing.
- Users could suddenly lose their ability to carry out required actions.

When corruption or unplanned alteration to your Agile PLM system occurs, you will have to interrupt regular system management just to restore essential permissions, which itself could result in additional violations.

## Recommended Security and Maintenance Plan

You should take great care when making changes to the powerful Agile PLM roles. Please follow these configuration and maintenance recommendations:

- It is strongly recommended that one person be assigned responsibility for configuring roles and privileges. If a change in ownership is to occur, the current administrator should explain to the new owner:
  - The roles and privileges configuration
  - Any changes that have been made
  - The system of tracking changes to roles and privileges
- Perform a roles export (in the Roles window, select all roles, and click Export) and run the Roles and Privileges Summary report and the Privilege Mask Detail report before you change or create roles or privilege masks. Save the results for later comparison in case you need to determine what changes caused particular effects. Keep a log of changes to the privileges configuration. For more information about exporting, see [Object History](#) (on page 21). For more information about reports see [Administrator Reports](#) (on page 16).
- Use the supplied roles and privileges and make only required alterations.
- Follow the Action–Criteria–Object Type privilege mask naming convention (described in [About Privileges and Privilege Masks](#) (on page 193)) to avoid confusion and potential security breaches. Include at least these three recommended basic identifying parts, and maintain consistent word order. Use the names of the privilege masks provided at installation as your guide.
- Avoid changing role and privilege assignments after their initial assignment. For example, if a change originator or CCB member has the Discovery privilege removed after an ECO has been

routed, the originator or CCB member still receives notifications but cannot view the change.

- Avoid changing role and privilege assignments while users are working on the system. If such changes are made, users must log out and restart Agile PLM clients again for some changes to take full effect.

## Database Backup Procedures

Before you make any changes, it is a good idea to back up the entire Agile PLM database, and run Administrator reports. You can use the database backup to rebuild the previous database. You can compare “before-and-after” reports and use them to diagnose the cause of changes to Agile PLM security.

## Exporting Agile PLM Administrative Settings

Follow the instructions in [Object History](#) (on page 21). When you have finished backing up current role and privilege settings, run your reports.

---

**Note** If you are importing these settings, be certain you are importing to the same database or the Agile PLM administrative data will not match.

---

## Running Reports

When you run an Administrator report, include the report date and time in the filename, such as Roles\_072601\_3pm.csv. If you keep these report files, you can compare them later to track changes.

---

**Note** Be aware that the Privilege Masks Details report can be quite long (hundreds of pages), depending on the number of users on the system.

---

### To run the Roles and Privileges Summary report:

1. Select the Analytics and Reports tab in the navigation pane. The Analytics and Reports folders appear.
2. Expand the Standard Reports > Administrator Reports folder.
3. Double-click (Java Client) or click (Web Client) the Roles and Privileges Summary report. The Roles and Privileges Summary Report page appears.
4. Click Execute. The Get Attachment window appears.
5. Click Continue. This accepts the displayed default encoding type (Western European (ISO)). If you need to use a different encoding type, select it in the drop-down list and click Continue.
6. Follow the directions in the File Download and Save As dialog boxes to save the file to disk and specify a location to save it.
7. Modify the filename to include the report date and time. For example, Roles072602\_3pm.csv
8. When the download is complete, Click OK in the Get Attachment dialog box.

### To run the Privilege Mask Detail report:

1. Select the Analytics and Reports tab in the navigation pane. The Analytics and Reports folders appear.

2. Expand the Standard Reports > Administrator Reports folder.
3. Double-click (Java Client) or click (Web Client) the Privilege Mask Detail report. The Privilege Mask Detail Report page appears.
4. Click Execute. The Get Attachment window appears.
5. Click Continue. This accepts the displayed default encoding type (Western European (ISO)). If you need to use a different encoding type, select it in the drop-down list and click Continue.
6. Follow the directions in the File Download and Save As dialog boxes to save the file to disk and specify a location to save it.
7. Modify the filename to include the report date and time. For example, Privmask072602\_3pm.csv
8. When the download is complete, Click OK in the Get Attachment dialog box.

---

Note	Be aware that the Privilege Masks Details report can be quite long (hundreds of pages), depending on the number of users on the system.
------	---

---

By running the Roles and Privileges Summary report and the Privilege Mask Detail report, you create a record of the current roles and privileges configuration. These reports are ASCII text files in .CSV format (comma separated values) that can be opened with an analysis application, such as Microsoft Excel.

You can also use a word processing program to compare two versions of the same report. If the changes you make to the security configuration produce unexpected results, you can run these reports again, and compare them in the word processing program to see the changes that you made.

## Working with Roles

You can modify existing roles and create new ones. Once a role exists, you can assign it to users. This section describes the following role-management tasks:

- Modifying a Role
- Creating a New Role
- Deleting a Role

### Modifying a Role

When you open a role, you can change its name, description, whether it's enabled or disabled, its list of privilege masks, and the users assigned to it. You cannot modify the properties for the Example-ReadOnly roles.

#### **To change the name or description of a role:**

1. Under User Settings, double-click Roles. The Roles window appears.
2. Use the filter bar to display the role you want to modify.
3. Double-click a role to open it.

4. In the Name field, type a unique name (up to 255 characters).

---

Note	You cannot rename the Administrator, My User Profile, or View Historical Report roles, or any of the Restricted roles.
------	--

---

5. In the Description field, type a short description (up to 510 characters).
6. Click Save.

**To disable a role:**

1. Under User Settings, double-click Roles. The Roles window appears.
2. Use the filter bar to display the role you want to modify.
3. Click the Disable button.

---

Note	You can also disable a role by opening it and changing its Enabled property. You cannot disable the Administrator, My User Profile, or View Historical Report roles, or any of the Restricted roles.
------	--

---

To remove privileges from a role:

1. Under User Settings, double-click Roles. The Roles window appears.
2. Use the filter bar to display the role you want to modify.
3. Double-click a role to open it.
4. Click the Privileges tab.
5. Select the privilege you want to remove.
6. Click Remove to delete the selected privilege from the role.
7. Click Yes on the Delete dialog.

To add privileges to a role:

1. Under User Settings, double-click Roles. The Roles window appears.
2. Use the filter bar to display the role you want to modify.
3. Double-click a role to open it.
4. Click the Privileges tab.
5. Click add Privileges to open the Select Privileges dialog box.
6. Select privilege masks in the Choices list and use the right arrow to move privilege masks to the Selected list.
7. When you are finished, click OK.

To remove a user from a role:

1. Under User Settings, double-click Roles. The Roles window appears.
2. Use the filter bar to display the role you want to modify.
3. Double-click a role to open it.
4. Click the Users tab.
5. Select the user you want to remove.
6. Click Remove to delete the selected user from the list of assigned users.

7. Click Yes on the Delete dialog.

To add users to a role:

1. Under User Settings, double-click Roles. The Roles window appears.
2. Use the filter bar to display the role you want to modify.
3. Double-click a role to open it.
4. Click the Users tab.
5. Click add Users to open the Select Users dialog box.
6. Select and use the arrows to move users from the Names list to the Recipients list.
7. When you are finished, click OK.

## Building and Testing Attributes, Read/Modify Privileges, and Roles

Agile's privilege model is powerful and flexible, but it is also complex. The following task is a simple procedure for you to check that attributes (both pre-defined and user-defined attributes), privilege masks, and roles all work together as you customize them for your users' work.

### To test that an attribute works with Read or Modify privilege masks and roles:

1. In a class, for example, Parts class, create a new, simple Page Two attribute. In this example, you are creating Parts.PageTwo.Test01. (See [About Attributes, Flex Fields, and Read-Through Fields](#) on page 65.)
2. Create test privilege masks called Read Parts and Modify Parts. Apply them to the Test01 attribute. (See [AppliedTo Capability](#) on page 200. You may want to examine [Discovery and Read Privileges](#) on page 204.)
3. Assign the Read Parts and Modify Parts privilege masks to the Content Manager role. (See [Adding a Privilege Mask to a Role](#) on page 195.)
4. Assign the Content Manager role to a user, perhaps a test user you create for the purpose. (That task precedes this section.)
5. Log out of your client, log in as that user, and check to see that you can both read and modify the Test01 field.

---

Note	This procedure is an overview of building and testing attributes, privileges, and roles. The task of setting up Agile PLM for your company is quite large, and you might consider enlisting the services of an Oracle Consulting – Agile Practice consultant for this important task.
------	---

---

## Creating a New Role

Before creating a new role, you should review the roles you currently have. Run the Roles and Privileges Summary report to see a listing of current roles and their privilege masks (see [Running Reports](#) on page 185).

The recommended method for creating a new role is to copy an existing role, and then make any necessary changes to the copy (see [Creating a New Role Using Save As](#) on page 189). You can also create a new role from scratch (see [Creating a New Role from Scratch](#) on page 190).



---

**Note** If you delete a role, you can reuse the name of the deleted role when you create a new role or rename an existing role.

---

## Before You Begin

Before creating a new role, answer the following questions:

- What will you name the new role?
- Which users will be assigned to the new role?
- What do you want the users assigned to this role to be able to do in Agile PLM?
- What do you want users assigned to this role to be prevented from doing in Agile PLM?
- Can you modify one or more existing roles to achieve the results you want?
- Is there an existing role that you can copy and modify to avoid having to create the role from scratch?

## Creating a New Role Using Save As

You might find it easier to duplicate an existing role under a new name.

---

**Note** Creating a new role by duplicating one of the Example roles is a different process and produces different results. Review both processes to determine which one meets your needs. See [Using the Example Roles](#) (on page 191).

---

### To create a new role from an existing role:

1. Under User Settings, double-click Roles. The Roles window appears.
2. Use the filter bar to display the role you want to modify.
3. Double-click the role you want. The tabbed window for that role appears.
4. Click the Save As button. The Save As dialog box appears.
5. Enter a new name for the role.
6. Click OK.

The new role is created with the new name, and its tabbed window appears. The new role has the same description as the one you copied. You can modify the description now, if you want. See [Modifying a Role](#) (on page 186).

The list of privilege masks assigned to the original role is also assigned to the new role. However, no users have been assigned to the new role.

For example, if the original role included the Modify Item privilege mask, the new role also includes the Modify Item privilege mask.

---

**Note** A read-only example role has read-only example privileges. When you use Save As to create a copy of an example role, the way the privilege masks are copied from the example role is different from what is described above. See [Using the Example Roles](#) (on page 191) for details.

---

7. Do one or more of the following:

- On the Privileges tab, remove the privilege masks you do not want in the role.
- On the Privileges tab, add the privilege masks you want to include in the role.


For instructions on how to add or remove privilege masks, see [Modifying a Role](#) (on page 186).

8. To assign the new role to specific users, see [Modifying a Role](#) (on page 186).

## Creating a New Role from Scratch

You may decide to create a role or roles from scratch.


### To create a new role from scratch:

1. Under User Settings, double-click Roles. The Roles window appears.
2. Click the New button. The Create Role dialog box appears.
3. Type the name and description of the new role.
4. To enable or disable the role, select Yes or No in the Enabled drop-down list. It is suggested that you disable the role while you develop it; select No.
5. Do one of the following:
  - To finish creating the role without assigning privilege masks or users (you can assign privilege masks and users later), click Finish.
  - To assign privilege masks to the role, click  next to the Privilege field. The Select Privileges dialog box opens. Continue with step 6.
6. Select privilege masks in the Choices list and use the right arrow to move privilege masks to the Selected list.
7. When you are finished, Click OK.

---

**Note** You can also click New in the dialog box to create a new privilege mask. The Create Privilege dialog box opens. See [Creating a New Privilege Mask from Scratch](#) (on page 231). (Start with step 3.) The new privilege mask will be added to the role, and the privilege mask will appear in the list of available privilege masks in the Privileges node.

---

8. Do one of the following:
  - a. To finish creating the role without assigning users, click Finish. You might want to do this while developing the role and its privilege masks.
  - b. To assign specific users to the new role, click  next to the Users field. The address book opens. Continue with step 9.
9. Select users from the Names tab—and groups from the Groups tab—and use the right arrow to move them to the Recipients list.
10. When you are finished, Click OK.

11. When you are finished defining the new role, click Finish.

The new role name appears in the Roles table. (Click Refresh if you do not see the role in the table.) Add privileges and users as needed. If you disabled the role in step 4, the Enabled field says No. You must enable the role for its assignment to users to go into effect.

## Using the Example Roles

Agile PLM includes a number of example roles that you can use as references or as a starting point for your own roles. They are stored under the Example node folder in the Example Roles node. Example roles are read-only and cannot be modified. However, you can use Save As to make a copy of an example role and modify the copy.

Each example role corresponds to one of the preconfigured roles provided when Agile PLM is first installed. If you have modified the preconfigured roles and privileges, you can view the example roles to compare your modifications to the original construction of the preconfigured roles and privileges.

### Example Privilege Masks in Example Roles

Example roles include example privilege masks. Example privilege masks are also read-only and cannot be modified. When you use Save As to create a copy of an example role, the system populates the new role with copies of the read-only example privileges.

For example, the Example - Creator role includes an example privilege mask named Example - CS - Submit ChgOrder. If you use Save As to make a copy of the Example - Creator role, the new role will include a privilege named Copy of Example - CS - Submit ChgOrder. This privilege mask copy is a new privilege mask that did not exist in the database before you copied the example role. All the privilege masks in the new role are copied in the same manner.

## Creating a New Role from an Example Role Using Save As

**To create a new role from an example role:**

1. Under Examples, double-click Example Roles. The Example Roles page appears.
2. You can filter roles records to narrow your search. (See [Filtering Data](#) on page 16.)
3. In the Example Roles window, double-click the example role you want. The tabbed window for that example role appears.
4. Click the Save As button. The Save As dialog box appears.
5. Enter a new name for the role.
6. Click OK.

The new role is created with the new name, and its tabbed window appears. The new role has the same description as the example role you copied. You can modify the description now, if you want. See [Modifying a Role](#) (on page 186).

The privilege masks in the new role are copies of the example privilege masks in the example role. For more information, see “Example Privilege Masks in Example Roles” above.

7. Do one or more of the following:
  - On the Privileges tab, remove the privilege masks you do not want in the role.
  - On the Privileges tab, add the privilege masks you want to include in the role.

For instructions on how to add or remove privilege masks, see [Modifying a Role](#) (on page 186).

You can also change the names of the privilege masks or change the criteria or applied to properties of the privilege masks.

On the Privileges tab, double-click a privilege mask to display its tabbed object page. Once you have displayed the privilege mask window, you can:

- Change the name or description.
  - Modify the privilege mask criteria (see [Modifying Privilege Mask Criteria](#) on page 368).
  - Modify the privilege mask applied to property (see [Viewing and Modifying the AppliedTo Property](#) on page 201).
8. For information about how to assign the new role to specific users, see [Modifying a Role](#) (on page 186).

## Deleting a Role

If a role is no longer needed and no users have been assigned it, you can delete it.

### To delete a role:

1. Under User Settings, double-click Roles. The Roles window appears.
2. Click the role you want to delete. The tabbed window for that role appears.
3. Click the Users tab to bring it forward.

---

Note	You cannot delete a role if it has been assigned to any users or user groups. Before you can delete the role, you must remove all of its users and user groups. Remember that it is always possible to disable a role if you are not ready to delete it but want to block its effect on assigned users and user groups.
------	---

---

4. If there are any users listed on the Users tab, select all the users on the table.
5. Click Remove to clear the Users tab.
6. Repeat steps 3, 4, and 5 for the User Groups tab.
7. Click the Delete button.

# Privileges and Privilege Masks

This chapter includes the following:

▪ About Privileges and Privilege Masks.....	193
▪ Viewing the Privileges Window.....	193
▪ Agile PLM Privileges.....	195
▪ AppliedTo Capability.....	200
▪ Discovery and Read Privileges.....	204
▪ Modify Privilege .....	209
▪ Other Privileges in Detail .....	213
▪ Privilege Mask Components .....	218
▪ Viewing Privilege Masks .....	223
▪ Modifying Privilege Masks .....	227
▪ Enabling a Privilege Mask .....	230
▪ Creating New Privilege Masks.....	230

This chapter explains how to use Agile PLM's preconfigured privileges and privilege masks, and how to create new ones.

## About Privileges and Privilege Masks

This chapter focuses on privileges and the construction of privilege masks. The actions that users can perform in Agile PLM—such as creating, sending, or canceling—are based on *privileges*. Privileges are combined with reusable criteria to create *privilege masks*, which act as filters to manage user actions. Privilege masks are then grouped into *roles* that provide a way of allocating a common set of privileges to a group of users who have common functions in the change control process.

Agile PLM provides a comprehensive set of preconfigured roles, privilege masks, and reusable criteria that are accessible from the Roles, Privileges, and Criteria nodes, respectively. You can change the preconfigured roles and privilege masks as necessary, or you can create new ones to fit your specific needs.

---

**Note** When you assign a role or a privilege mask to a user, it takes effect only after the user has logged out and logged back into an Agile PLM client.

---

## Viewing the Privileges Window

To view the Privileges window:

1. Under User Settings, expand the Privileges node. The Privileges node expands to show all the basic privileges (the action component of privilege masks) as subnodes.
2. Double-click a Privileges subnode. The page that opens is called Privileges for <selected privilege>.

although no privilege masks are listed. For example, when you double-click Administrator, the Privileges for Administrator page opens. You must set some filter criteria; often it is useful to set the Match If field to Show All, and then click the Apply button to the right. All the privilege masks that use the Administrator privilege are displayed.

---

**Important** Despite the page in this example reading “Privileges for Administrator,” it means the following:

---

“Privilege Masks that use Administrator privilege”

You see the lists are constructions of <privilege–object–criteria> (see [Privilege Mask Components](#) on page 218).

3. You can filter the returned privilege masks to further narrow your search of privilege masks. In this example, setting a new filter with Match If set to Contains and Value with User typed in, clicking Apply reduces the returns to Admin Access for User Admin. (See [Filtering Data](#) on page 16.)

You can click a column header in the privilege mask table to sort the table by that column.

## Tasks Performed from the Privileges Window

You perform various privilege mask management task from the Privileges window by selecting one or more privilege masks, then clicking the appropriate button.

Page menu button	Action
Enable	Enables the selected privilege masks. When the privilege mask is enabled, Yes appears in the <b>Enabled</b> column.
Disable	Disables the selected privilege masks. When the privilege mask is disabled, No appears in the <b>Enabled</b> column.
Delete	Deletes the selected privilege masks.
New	Opens the Create Privilege dialog box. See <a href="#">Creating a New Privilege Mask from Scratch</a> (on page 231).
Assign Roles	Allows you to add the privilege mask to one or more roles. <b>Note:</b> When you assign a role or a privilege mask to a user, or change the privilege masks in a role, the change takes effect for a given user only after the user has logged out and logged back in to an Agile PLM client.
Export	Exports the selected privilege masks to a text file. See <a href="#">Object History</a> (on page 21).
Export All	Exports all privilege masks to a text file. See <a href="#">Object History</a> (on page 21).
Import	Imports a text file to create one or more new privilege masks. See <a href="#">Object History</a> (on page 21).
Refresh	Refresh the displayed table with the latest information.

When you double-click a privilege mask, the privilege mask’s tabbed window appears.

## Removing a Privilege Mask from a Role

To remove a privilege mask from a role on the privilege mask **Where Used** tab:

1. Under User Settings, expand the Privileges node in the navigation pane. The list of basic privileges appears.
2. Double-click the basic privilege for the privilege mask you're interested in. The form for that privilege appears.
3. Click the Refresh button at the bottom of the form. All the privilege masks for that privilege appear.
4. Double-click the specific privilege mask you want. Its tabbed window appears.
5. Click the Where Used tab to bring it forward. The roles that include the privilege mask are listed in the table.
6. Select the role from which you want to delete the privilege mask, and click the Remove button.
7. When the confirmation dialog appears, click OK. You are not deleting the role itself; you are removing the privilege mask (which is the actual object you have opened) from that role.

## Adding a Privilege Mask to a Role

To add a privilege mask to a role on the privilege mask **Where Used** tab:

1. Under User Settings, expand the Privileges node in the navigation pane. The list of basic privileges appears.
2. Double-click the basic privilege for the privilege mask you're interested in. The form for that privilege appears.
3. Click the Refresh button at the bottom of the form. All the privilege masks for that privilege appear.
4. Double-click the specific privilege mask you want. Its tabbed window appears.
5. Click the Where Used tab to bring it forward. The roles that include the privilege mask are listed in the table.
6. Click the Add Roles button. The Select Roles dialog box appears.
7. Move roles from the Choices list to the Selected list.
8. Click OK when you are finished. You are not adding a role in any way; you are adding the privilege mask (which is the actual object you have opened) to that role.

---

**Note** You may want to review the simple tutorial [Building and Testing Attributes, Read/Modify Privileges, and Roles](#) (on page 188).

---

## Agile PLM Privileges

The following table lists and defines the privileges supplied with Agile PLM. Some privileges depend on the basic Read privilege for their effectiveness, since users must first be able to open and read objects before they can perform most other functions. This table indicates which privileges work only if the user also has a Read privilege.

For more information about the Read privilege and privilege masks, see [Relationships among Discovery and Read Privileges](#) (on page 206).

Privilege	Allows the user to...	Requires basic Read privilege
Add Approver/Observer	Add approvers/observers to the <b>Workflow</b> tab of a routable object. For more information, see <a href="#">Add Approver/Observer and Remove Approver/Observer</a> (on page 213).	Yes
Administrator	Log in to Java Client with access to PLM Administrator functions.  The Administrator role includes the Administrator privilege mask, which can be made specific to nodes based on the AppliedTo criteria.  For more information, see <a href="#">Administrator Privilege and the AppliedTo Capability</a> (on page 201).	No
Approve/Reject	Approve or reject a routable object that the user has been named as an Approver.	Yes
Attachment Redlines for Self	This privilege is disabled as of Release 9.2.2.2. The ability to enable and control access to attachment redline markups is provided by the Markups subclass (of File Folders class) and its associated Create, Read, Modify, Checkin, and Checkout privilege masks.  For more information, see <a href="#">Redline Markup Default Roles and Privileges</a> (on page 319).	-
Attachment Redlines for Others	This privilege is disabled as of Release 9.2.2.2. The ability to enable and control access to attachment redline markups is provided by the Markups subclass (of File Folders class) and its associated Read, Modify, Checkin, and Checkout privilege masks.  For more information, see <a href="#">Redline Markup Default Roles and Privileges</a> (on page 319).	-
Cancel Checkout	Cancel a checkout of an attachment (file or URL). For more information, see <a href="#">Attachment Privileges</a> (on page 315).	Yes
Change Status	Move a routable object from any status to any other status. The class of the criteria that is selected determines the list of available workflows to which to apply the Change Status privilege.  For more information, see <a href="#">Change Status</a> (on page 214).	Yes
Checkin	Check in an attachment (file or URL). (For more information, see <a href="#">Attachment Privileges</a> (on page 315).)	Yes
Checkout	Check out an attachment file (file or URL). For more information, see <a href="#">Attachment Privileges</a> (on page 315).	Yes
Comment	Comment on a routable object. The comment is emailed to specified users, and is recorded in History. (Not the same as comments submitted during approval or rejection of a routable object.)	Yes



Privilege	Allows the user to...	Requires basic Read privilege
Create	<p>Create a new object in the business class specified in the privilege mask.</p> <p><b>Note 1:</b> The Create privilege is required for users of the Agile PLM Import utility.</p> <p><b>Note 2:</b> If you have activated the CreateUser attribute for an Agile PLM class by making it visible on the <b>Page Two</b> tab, the user can open and create objects withhaving a Read privilege. See <a href="#">Applying Create User Criteria</a> (on page 229).</p> <p><b>Note 3:</b> The Create privilege allows the user to fill in required fields at the time of creation even if the user does not have Modify privilege for those fields. Required fields are fields with their attribute property <b>Required</b> set to Yes; see <a href="#">Defining Attribute Properties</a> (on page 72).</p>	Yes
Create From Template	Used in Create Program From Template privilege mask, which is enabled out-of-the-box for Program Manager and Program Administrator roles.	Yes
Dashboard Tab View	<p>Used in Read Dashboard Tabs privilege mask, which is enabled out-of-the-box for Executive, Program Manager, and Program Administrator roles.</p> <p>All newly created Dashboard tabs under <b>Systems Settings &gt; Dashboard Management</b> require this privilege to permit viewing the tab in Web Client.</p> <p>For more information, see <a href="#">Dashboard Management</a> (on page 203).</p>	Yes
Delete	<p>Delete an object.</p> <p><b>Note:</b> A routable object must be Pending or Unassigned.</p>	Yes
Discovery	<p>Learn that an object exists.</p> <p><b>Note 1:</b> You must restart the WebLogic server when you change the Enabled property of Discovery Privilege in the <b>Database</b> node.</p> <p><b>Note 2:</b> If Discovery Privilege is disabled in the <b>Database</b> node, users with a basic Read privilege can discover all objects.</p> <p>For more information, see <a href="#">Discovery Privilege</a> (on page 204).</p>	No
Enforce Field Level Read	<p>Control certain performance consequences when a user does a Field-level Read query.</p> <p>For more information, see <a href="#">Enforce Field-Level Read Privilege</a> (on page 207), including <b>Important</b> note about a workaround due to removal of the Specify Output Columns privilege.</p>	Yes
Export	Extract data from selected objects and export it to either a comma-delimited text file or a PDX package. For more information about this privilege, see <a href="#">Export</a> (on page 215).	Yes

Privilege	Allows the user to...	Requires basic Read privilege
FileLoad	Run the FileLoad utility. See the Import and Export Guide for more information about the FileLoad utility.	Yes
FullSearchDisplay	See a full return of reports queries on objects. For more information, see <a href="#">Full Search Display</a> (on page 215).	Yes
GetFile	Get or open a file from an object's <b>Attachments</b> tab. Note that GetFile privilege works in tandem with Checkout privilege to actually deliver the attachment file to the user's machine. The GetFile privilege (without Checkout) allows the administrator to permit a user to get a file without being able to change it in the product record.  For more information, see <a href="#">Attachment Privileges</a> (on page 315).	Yes
GlobalSearches	Create, modify, or delete a search that shows up in everyone's search list. This privilege also allows user to order searches and search folders: in Java Client, there is a button with a down arrow when you click on any search folder or search; in Web Client, in the Organize Search popup, there is an extra Order button.	No
Grant	Grant roles, and therefore privileges, to users in a controlled, finite way, using Access Control List (ACL) capability.	Yes
Import	Use the Import wizard tool. See the <i>Import and Export Guide</i> for more information about the Import wizard tool.	Yes
Incorporate	Toggle the incorporation status on the <b>Attachments</b> tab.  <b>Note:</b> An item can be Incorporated or Unincorporated under an Introductory rev.	Yes
Manage Report	Modify and delete report schedules and layouts, and create and delete global report folders.	Yes
Microsoft Project	Access, use, or modify Microsoft Project, and part of Program Manager and Program Administrator roles. See <a href="#">Microsoft Project Privilege</a> (on page 357).	Yes
Modify	Modify fields on the tab of an object. Modify privileges are assigned using the AppliedTo attribute settings.  For more information about various aspects of the Modify privilege, see <a href="#">Modify Privilege</a> (on page 209), <a href="#">AppliedTo Capability</a> on page 200, and <a href="#">Modify Privilege and Attachments</a> (on page 316).	Yes
Override	Override incomplete required fields and required approvers who have not signed off, and move the routable object to the next status.  For more information, see <a href="#">Override</a> (on page 215).	Yes
PrintFile	Print from the Agile Viewer window. The user must also have ViewFile privilege.  For more information, see <a href="#">Attachment Privileges</a> (on page 315).	Yes

Privilege	Allows the user to...	Requires basic Read privilege
PrintTab	Print from the tabs of an object.	Yes
Purge Folder Version	Purge unused file folder version from the Agile File Management vault. See <a href="#">Purge Folder Version Privilege</a> (on page 216).	
Read	<p>Open an object to read all tabs.</p> <p>For more information, see <a href="#">Discovery and Read Privileges</a> on page 204.</p> <p>The Read privilege is based on the AppliedTo property for specific attributes. See Field-Level Read Privilege and <a href="#">AppliedTo Capability</a> on page 200.</p> <p>The Read privilege is further applied on a field-by-field basis when Enforce Field-level Read is assigned to the same user.</p> <p>For more information, see <a href="#">Enforce Field-Level Read Privilege</a> (on page 207).</p> <p><b>Note:</b> If Discovery Privilege is enabled in the Database node, a corresponding Discovery privilege mask is required.</p>	Yes
Remove Approver/Observer	<p>Remove approvers/observers from a routable object.</p> <p>For more information, see <a href="#">Add Approver/Observer and Remove Approver/Observer</a> (on page 213).</p>	Yes
Reset	Reset the checksum in the Agile PLM database to match a referenced file. Reset privilege is found in Reset File Checksum privilege mask, which is not included in any out-of-box Agile role. See <a href="#">Handle File Checksum</a> (on page 271).	Yes
Run Report	Run reports, create schedules for reports, and create report layouts. Modify and delete a user's own schedules and layouts.	Yes
SaveAs	Copy an object by saving to another name.	Yes
Send	Carry out a <b>File   Send</b> on an open object. A corresponding Create privilege mask is required.	Yes
Subscribe	Subscribe to notification emails when selected attributes of an object are modified. Note that the Database-node property Notification Enabled must also be set to Yes.	Yes
Transfer Authority for Self	<p>Designates users to approve changes for a specified period of time when the designator—oneself—is an approver (but not observer) on a routable object.</p> <p>For more information, see <a href="#">Transfer Authority for Self</a> (on page 217).</p>	No
Transfer Authority for Others	Designates users to approve changes for a specified period of time when the original user—an “other”—is an approver (but not observer) on a routable object; the original approver is copied on all notifying email.	No

Privilege	Allows the user to...	Requires basic Read privilege
	For more information, see <a href="#">Transfer Authority for Others</a> (on page 217).	
Undelete	Undelete an object.	Yes
Unincorporate	Unincorporate an item.	Yes
Update All Timesheets	View all tasks for a selected user and change timesheet details entered by that user for each task. Overrides system privileges for viewing tasks – the user accessing the timesheet need not be a team member on the task. This privilege also allows the user to search timesheet entries by all users in the system.	Yes
User Administrator	Uses its AppliedTo property to tailor which <b>roles</b> that user can assign to other users.	Yes
ViewFile	View files in the Agile Viewer window. For more information, see <a href="#">Attachment Privileges</a> (on page 315).	Yes

## Further Discussion of Specific Privileges

The following sections detail the AppliedTo property, which is a part of just a handful of privileges; Discover and Read; Modify; and details of other privileges.

- [AppliedTo Capability](#) on page 200
- [Discovery and Read Privileges](#) on page 204
- [Modify Privilege](#) (on page 209)
- [Other Privileges in Detail](#) (on page 213)

Later this chapter explores how privilege masks are constructed, beginning with [Privilege Mask Components](#) on page 218.

## AppliedTo Capability

The AppliedTo capability is set in privilege masks based on the following privileges.

Remember, in a privilege object, the rows are its constituent privilege masks: double-click a row to open the privilege mask object (which has AppliedTo property if it is based on these privileges):

- Administrator privilege: Administrator privilege mask pertains to Java Client; Admin Access for User Admin pertains to Web Client
- User Administrator privilege: User Administrator privilege mask sets roles that user can assign to

other users

- Read
- Modify
- Microsoft Project: a PPM-specific privilege
- Dashboard Tab View: a PPM-specific privilege

Although the following discussion centers on the `AppliedTo` capability as it works with the Administrator-specific privilege masks, the information in this section is pertinent to the privilege masks based on Read, Modify, Microsoft Project, and Dashboard Tab View privileges.

## Administrator Privilege and the `AppliedTo` Capability

The Administrator role includes two important privilege masks:


- “Administrator” pertains to Java Client nodes;
- “Admin Access for User Admin” pertains to Web Client nodes (the User Administrator role also has the latter).

Both of these privilege masks provide access to Administrator nodes in the designated PLM client, as well as the correlated ability to modify administrative objects and settings in those nodes.

A crucial property of the Administrator privilege masks is the `AppliedTo` property, which is used to specify what Administrator nodes are available to a user who has been assigned either the Administrator or Admin Access for User Admin privilege mask.

If the Agile administrator (more specifically, any user who has been assigned the Administrator privilege mask) or assisting “user administrator” (any user who has been assigned the Admin Access for User Admin privilege mask) does not have a particular node properly selected in the `AppliedTo` property of their “Admin” privilege mask, that node will not be a live link in that user’s view of the Administrator nodes, and the user will not be able to access the capability.

## Show Visible Attributes Only Checkbox


In the task below, you will view the General Info tab of a privilege mask that contains the `AppliedTo` property. When you click the down-arrow  of the `AppliedTo` property, the Show visible attributes only checkbox is displayed. It is checked by default: uncheck it if you want to view attributes whose Visible property is set to No; all non-visible attributes are then displayed in the Choices list.

## Viewing and Modifying `AppliedTo` Property

This task can be applied to any of the privilege masks that contain the `AppliedTo` property.

**To view the `AppliedTo` property of the Administrator privilege:**

1. Under System Settings node folder, expand Privileges node.
2. Double-click Administrator privilege. The Privileges for Administrator filter dialog appears.
3. In Match If field drop-down list, select Show All. Click the Apply button.
4. Available Administrator-related privilege masks appear. Double-click Administrator privilege mask.

5. On the Administrator privilege mask's General Info tab, click the down-arrow  of AppliedTo property.
6. The Choices list displays all Administrator nodes or other Admin utilities (for example, Global Replace) that are not currently available (visible) to any user whose roles and privileges include this privilege mask. The Selected list displays all nodes that are visible. (The Show visible attributes only checkbox will be checked; it does not really affect matters in the Administrator privileges.)

**Important** The Choices list reflects the nature of the privilege mask. "Admin nodes and utilities" are selected in Administrator-, Read-, and Modify-based privilege masks. Microsoft Project and Dashboard Tab View-based privilege masks offer a different array of choices; see [Dashboard Management](#) (on page 203) and [Project Summary Page Configuration](#) (on page 204).

## Specialized Administrator Privilege Masks

It is possible to create specialized Administrator privilege masks. Particularly with this privilege mask, it is safer to alter the individual case, as it is assigned to one or several users, than to change the out-of-box privilege.

**Caution** Be extremely careful about modifying the AppliedTo properties of Administrator privilege masks that are already in use. For example, if you were to modify the AppliedTo property of the Administrator privilege mask so that it no longer included Privileges, you and other administrators would no longer have access to the Privileges node, and it would be very difficult to modify the Administrator privilege mask to apply to privileges again. (This kind of scenario is where Example Roles could be needed.)

If you need multiple administrator privileges and roles, test the new roles and privileges carefully before you modify or disable any existing administrator roles and privileges.

---

**Note** Carefully consider the impact on your company of having multiple administrative users, each with specific tasks. This allows you to divide administrative tasks among a larger group of people, restricting each user to a specific type of administrative task. Be sure to read [Options for Building Administrator Assistants](#) on page 202.

---

Here are specific caveats for removing nodes from the AppliedTo property of a user's Administrator privilege mask, regarding access to Admin nodes in Java Client.

- If Criteria is removed, there will be no Criteria link from the privilege object's General Information tab, the Workflow node, the workflow object's General Information tab, or the subscriber object's General Information tab. Also, the New Criteria buttons in Create Workflow and Create Privilege dialog boxes will be disabled.
- If Role is removed, there will be no Role link from the Users or Deleted Users nodes.
- If Workflow is removed, there will be no Workflow link from the Criteria Where Used table.
- If Privilege is removed, there will be no Privileges link from the Criteria Where Used table.

## Options for Building Administrator Assistants

PLM Release 9.2.2.4 has enhanced the User Administrator role with a new "User Administrator"

privilege and privilege mask. The User Administrator privilege mask performs a different function than "Admin Access for User Admin."

You, the main Agile PLM administrator, have decided that you want the assistance of a few select users in your administrative tasks. (How many and what kind of assisting administrators depends on the size of your company, the number of PLM solutions purchased, and so forth.) Here are your options:

- Assign and refine the Administrator role to give a user access to administrative functions in Java Client. In each user object (to whom you are assigning Administrator privilege mask), use the AppliedTo property to tailor which nodes that user can work in.
- Assign and refine the User Administrator role to give a user access to administrative functions in Web Client. The User Administrator performs administrative tasks via Web Client > Tools > Administration.
  - The User Administrator role uses the privilege mask called Admin Access for User Admin, with a reduced AppliedTo list of nodes. In each user object (to whom you are assigning Admin Access for User Admin privilege mask), use the AppliedTo property to tailor which Web Client nodes that user can work in.
  - The User Administrator role also uses the new privilege mask called User Administrator. Using the same sequence of steps (in "Viewing and Modifying AppliedTo Property" above), you see that the Choices list is populated not with names of Admin nodes but with a complete list of PLM roles. In each user object (to whom you are assigning User Administrator privilege mask), use the AppliedTo property to tailor which roles that user can assign to other users.

A role that is moved over to the Selected list permits that user to assign that role to another user.

## **Save Import Preference Setting (AppliedTo Choice)**

"Save Import Preference Setting" is a new Choice in the Administrator-specific AppliedTo property (found in Administrator and Admin Access for User Admin privilege masks). This setting (when moved to Selected) enables you or an assistant administrator to set default preferences in the PLM Import utility (Web Client > Tools > Import) that users of Import will see when they use the utility.

Of course, any user can reset preferences in Import for their own use, but these will not be saved. However, it is possible to assign the Admin Access for User Admin privilege mask to any user and select this one Choice in AppliedTo: this enables that user to have no other "User Administrator" capability other than saving preferences in Import.

## **Manage Report Template (AppliedTo Choice)**

"Manage Report Templates" is a new Choice in the Administrator-specific AppliedTo property (found in Administrator and Admin Access for User Admin privilege masks). This setting (when moved to Selected) enables you or an assistant administrator to upload templates for reports in the PLM Report Template utility (Web Client > Tools > Administration > Template Management > Report Template) that users will see when they use the report template.

## **Dashboard Management**

The Dashboard Tab View privilege is used to configure Dashboard tabs. For more information, see [Dashboard Management](#) (on page 203).

## Project Summary Page Configuration

The Administrator privilege mask with Project Summary Page Configuration specified as the Applied to property is used to configure the widgets for the Summary page of a program. Widget and page configuration for the Project Summary page can be done using the Tools > Administration menu in Agile Web Client.

## Discovery and Read Privileges

This section looks closely at Discovery and Read privileges.

The Read and Modify privilege masks are made specific by, among other properties, the AppliedTo property naming individual attributes that can be accessed. (To contrast, the Administrator privilege mask is made specific by the AppliedTo property naming individual nodes that can be accessed.)

---

**Note** A section in the previous chapter, [Advanced Search Security](#) on page 183, describes enhancements to "search security" that apply to Discovery, Read, and Field-level Read privileges (not repeated in this section).

---

### Discovery Privilege

As outsourcing and "virtual companies" become more common, Agile PLM customers are allowing employees of other companies in their supply chain to access their Agile PLM database. For security reasons, it is important that these outside users see only information that applies directly to them. For example, you might not want one supplier to know that another supplier is providing the same part, or that you are providing the same part to a company and its close competitor.

The Agile PLM Discovery features—Discovery Privilege database property, Discovery privilege, and Discover privilege mask—are designed to address these security issues. These features control whether users are allowed to learn that certain objects exist in Agile PLM.

You control object discovery in two ways:

- At a global level, by setting the Discovery Privilege database property (in Server Settings > Database) to Enabled or Disabled.
- At the level of roles, with Discover privilege masks.

For example, if employees of one supply chain partner have the Discovery privilege only for parts provided by that partner, they can be blocked from seeing parts provided by other partners in search results tables or even on BOMs (see [Related SmartRules](#) (on page 205)).

---

**Note** If you grant users Read or Create privileges, you must also grant users a corresponding Discovery privilege for objects that they are allowed to read. Users should always be able to discover and read objects that they created.

---

For example, if you create a role that has a Read privilege mask applying to All Change Orders criteria, you must also include in that role a Discovery privilege mask applying to All Change Orders criteria.

For information about using the Discovery Privilege database property for global discovery control,



see [Database](#) (on page 276).

For more information about the Discover privilege masks assigned to each role supplied with Agile PLM, see [Viewing a Role](#) (on page 177).

---

Note	If a change originator or CCB member has the Discovery privilege removed after an ECO has been routed, the originator or CCB member still receives notifications but cannot view the change. For best results, avoid removing Discovery privileges after their initial assignment.
------	--

---

## Discovery Privilege and Sites

Site objects are explicitly filtered out of Discovery privilege criteria. Therefore, you cannot define a new Discovery privilege mask to control a user's ability to access Sites.

To control a user's access to Sites, set user properties appropriately. Open a user in Java Client or Web Client, and specify the Sites and Default Site properties.

## Discovery Privilege and Life Cycle Phases

If you create Discovery privilege criteria based on RFQ Response lifecycle phases, you must restart the Agile Application Server to run a search that uses the criteria. Otherwise, the search won't return any results.

## Related SmartRules

The following SmartRules define how Agile PLM responds when users encounter objects that their privileges don't allow them to discover:

- Display BOM Tables
- Discovery Object Tables
- DiscoveryResultsTable

For more information about these SmartRules and their default settings, see [SmartRules Defined](#) (on page 234).

## Discovery Privilege and Reports

Agile users do not see and cannot run the Administrator reports. The following information is about the availability of specific objects in the standard reports that users can run.

A user who does not have Discovery privilege for an object cannot include that object in a report. Parts for which a user does not have Discovery privilege are displayed in the same way they are displayed on BOMs.

If you, the administrator, have decided to display a warning message, that warning message will appear in the reports. You also have the option of displaying either the item number only or the item description only, so the user can see all the items in the report, but does not have access to the undiscovered items.

To run a report on a particular type of object, a user must be granted the following privileges:

- Read privilege

- Discovery privilege
- Run Reports privilege

---

**Note**      The Manage Reports privilege alone is not sufficient to execute the report.

---

## Relationships among Discovery and Read Privileges

Agile PLM administrators can use the Discovery and Read privileges to grant users several levels of access to Agile PLM data, as shown in the following table.

Access level	Discovery privilege	Read privilege
Full access	Granted	Granted for all tabs
Limited access	Granted	Not granted for <b>History</b> or <b>Workflow</b> tabs
Discovery only	Granted	Not granted
No discovery	Not granted	Not granted

Privilege masks made up of the Discovery and Read privileges build on each other, as shown in the following table.

Privilege mask type	Effects and comments
<b>Discover</b>	<ul style="list-style-type: none"><li>▫ Can see that the discoverable object exists</li></ul>
<b>Read</b>	<ul style="list-style-type: none"><li>▫ Must be able to discover the object</li><li>▫ Can open the object</li><li>▫ Can read all tabs as defined in the privilege mask's AppliedTo dialog box (see below)</li></ul>

---

**Note**      If you remove or modify a Read privilege mask, the Discovery privilege mask is not automatically removed or modified at the same time.

---


## Field-Level Read Privilege

“Field-level Read” describes an Agile PLM client user’s ability or inability to read various fields within tabs through the Read privilege mask. Any field in any tab can be hidden from any user. A good use of Field-level Read is a customer hiding a “cost” field on the Page Two tab from certain suppliers.

To see a field of an object:

- A user must have a Read privilege to the object.
- The field must appear in the AppliedTo property for that user’s Read privilege mask.

For example, in the Privileges window, double-click any Read privilege mask to display it. The AppliedTo field on the General Information tab lists all the fields to which the Read privilege is applied.

When you create a Read privilege mask, there are no values listed in the **AppliedTo** property. During the creation process, at the **AppliedTo** field, you click  to display the selection dialog box. All the fields of the object are in the Choices list. You refine the privilege mask by moving fields from the Choices list on the left to the Selected list on the right.

If you wished to prevent the user from seeing the Workflow tab for the object specified by the criteria, all the Workflow tab fields would remain in the Choices list. Only the fields in the Selected list will be visible to the user. This is an example of Field-level Read.


The Field-level Read capability may be affected by whether the user has the Enforce Field-level Read privilege, which is discussed in “Enforce Field-Level Read Privilege” below.

## Modifying the AppliedTo Fields of Read Privilege Masks

This task is specific to Read privilege masks. The **AppliedTo** capability is used by a few other privileges – for more information, see [AppliedTo Capability](#) on page 200.

**To modify the list of fields to which a Read privilege mask is applied:**

1. Under User Settings, double-click Privileges. The Privileges window appears.
 

<b>Note</b>	Filter privilege mask records to narrow your search. For example, filter records by <b>Privilege Contains Read</b> to find all the Read privilege masks on the list. (See <a href="#">Filtering Data</a> on page 16.)
-------------	---
2. Double-click the privilege mask you want to modify. The privilege mask window appears. The privilege mask properties are displayed on the General Info tab.
3. On the General Info tab, click  next to the **AppliedTo** field. The selection dialog box opens.
4. Use the right and left arrows to move selected values from one list to the other list.
5. When you are finished, Click OK.
6. To finish editing the privilege mask, click Save.

## Enforce Field-Level Read Privilege

The Enforce Field-level Read privilege is a way the Agile PLM administrator can control certain small performance consequences when a user is under the restrictions of a Field-level Read (see [Field-Level Read Privilege](#) (on page 206)). The Enforce Field-level Read role comprises only the Enforce Field-level Read privilege mask.

If a user has a role with Enforce Field-level Read privilege included, the software checks everything at the

“field level,” that is, the fields within tabs in Agile PLM clients. Users with this privilege may notice their computers’ performance on some operations is slightly slower; this is because the software is checking all possible fields. This impact depends on how many items are in the tables being searched (for instance, BOMs, affected items, results).

If the user does not have a role with this privilege included, the system does not check everything at the field level, and so computer performance is not affected. In this case, even if the user has the Read privilege defined at the field level, the system does not check everything at the field level; that is done only when the Enforce Field-level Read privilege is present and enabled.

**Important** Previous versions of Agile PLM used the Specify Output Column privilege to permit users to select output attributes in setting up advanced searches. That privilege is removed; therefore, all users can potentially specify output attributes in advanced searches. However, you may want to assign the Enforce Field Level Read privilege to any user who did *not* have Specify Output Column privilege previously. This ensures that search results will be appropriately filtered—for example, for sensitive fields such as costs.

For a user with two roles, one with Enforce Field-level Read privilege and one without, the default is to “enforce” the Field-level Read. Similarly, for a user with a single role that has two Enforce Field-level Read privileges, one disabled and one enabled, the default is to “enforce” the Field-level Read. In both these cases, users can see only the fields for which they have the Read privilege. For this reason, Agile recommends that only users who are prevented from seeing certain fields have this privilege enabled.

System behavior with Enforce Field-level Read set to Yes interacts with certain privileges and SmartRule as follows:

- Discovery privilege — Dictates if the object is listed on Results and other tables.
- User does not have the Read privilege for the object — The user sees “no privilege” in the object’s fields on the Results and most other tables. The display of these objects on the BOM table is governed by the Display BOM Tables SmartRule. The user cannot open these objects.
- User has Read privilege for the Object Number and Description fields — The user sees object number and description on Results and other tables. The user can open these objects.
- User has Read privilege for all fields — The user sees all fields on all tables. The user can open these objects.

## **Display on Tables Due to Enforce Field-level Read**

Up to Agile’s Product Collaboration Release 7, if a user had a role that included the Enforce Field-level Read privilege, the display of objects that the user could not read but could discover (in the Results, Where Used, Affected Items, and Manufacturers tables) has “no privilege” in all the corresponding fields, and the user could open the objects to view them. Display of fields on the BOM table was governed by the Display BOM Tables SmartRule.

If you wish a user to “mimic” the 6.x behavior on the tables, you need to add the Read privilege to the user’s roles for a subset of fields. The Read privilege could include the object number and description as AppliedTo attributes, and only these fields will be displayed on the returned tables.

For example, for a certain type of object, you might define Attachment Type values such as Internal Only and External, and then give users outside the company privileges only for files marked as External. If an Agile PLM client user adds an attachment to that type of object and defines it as Internal Only, outside suppliers and contractors won’t be able to access the file.

To use the Attachment Type attribute in privilege mask criteria, the object type that you specify cannot be a base class (Items, Changes, Reports, and so forth).

---

<b>Note</b>	If you decide to enable the Attachment Type attribute to control access to attachments, be sure to tell the users how to use the field. This field can be edited in Agile PLM clients.
-------------	--

---

## Modify Privilege

The crucial Modify privilege is covered generally in “Some ‘Modify’ Basics and Rules” below and in an important specific context in [Controlling the Ability to Modify Items at Introductory Revision with \\$CURRENTREV](#) (on page 210). Again, the Read and Modify privilege masks are made specific by, among other properties, the AppliedTo property naming individual attributes that can be accessed.

### Some ‘Modify’ Basics and Rules

The Modify privilege allows a user to modify or edit fields on the tab of an object. Modify privileges are assigned using the AppliedTo attribute settings.

---

**Note** The Create privilege allows the user to fill in required fields at the time of object creation even if the user does not have Modify privilege for those fields. (Required fields are fields with their attribute property Required set to Yes; see [Defining Attribute Properties](#) (on page 72).)

---

- The Modify privilege is required for users of the Agile PLM Import utility.
- Modify privilege and Relationships: To create a relationship between two objects without setting up a rule (detailed in *Getting Started with Agile PLM*), you must have the appropriate Modify privilege for both objects tailored to Relationships. To create a rule between two related objects, you must, in addition, have the appropriate Modify privilege for both objects tailored to Rules. For example, for items, a user must have a Modify Items privilege mask that includes, in its AppliedTo property, the Relationship tab "Name" attribute and the Relationship tab "Rule" attribute.
- Users with the Modify Manufacturer Parts privilege mask can modify Manufacturer Parts attributes that also appear on the Manufacturers tab without an MCO or ECO being issued.

---

**Note** A user must be assigned the Modify privilege for both Manufacturer.Mfr Name and Manufacturer.Mfr Part Number fields to properly modify Manufacturer (AML) information.

---

- Item, New Rev, and Type (Lifecycle) fields on the Affected Items tab of changes cannot be modified at Released or Implemented statuses.
  - For other changes, the item number fields on the Affected Items tab cannot be modified at Released, Closed, Expired, or Resumed statuses.
- To be able to modify a Page Three tab, users must have a Modify privilege mask for the specific subclass and attributes.

**Important** Although Agile PLM can be configured to allow modification of the lifecycle phase of previously released revisions by modifying released ECOs, such a practice is highly discouraged because of the following reasons:

- a) Potential regulatory compliance violations
- b) Potential data integrity issues in the system

It is strongly recommended that user privileges be configured not to allow modification of lifecycle of released revisions by directly modifying released ECOs.

Agile PLM does not allow you to modify the item Rev and item Description on the Affected Items table of a released ECO, even if you have Modify ECO privileges that would, in

theory, allow that.

The Modify privilege is also utilized with regard to attachments; this capability is documented in [Modify Privilege and Attachments](#) (on page 316).

## Controlling the Ability to Modify Items at Introductory Revision with \$CURRENTREV

Modify privilege masks for item objects that use \$CURRENTREV in their criteria can be used to control a user's ability to modify (or inability to modify) items that are either released, preliminary, or introductory. To further define a user's modify ability, you can use multiple \$CURRENTREV conditions to identify an Introductory revision, the latest revision, and the workflow statuses of the change order associated with the selected item revision..

### Applicable Item Attributes

On item objects, the user can use the Rev drop-down list to display information for a specific revision. The user's assigned Modify privilege masks determine whether he can modify those attributes.

- Revision drop-down list is available for the item Sites tab in both Web Client and Java Client.
- Revision drop-down list is available for the item Page Two and Page Three tabs in Java Client
- Because the item Page Two and Page Three data in Web Client is displayed on the Title Block tab, the Revision drop-down list on Web Client Title Block tab also controls display of Page Two and Page Three data.

### \$CURRENTREV Criteria Logic

Using \$CURRENTREV in an item criteria allows the administrator to build in privilege control based on the displayed revision. Using combinations multiple \$CURRENTREV criteria conditions allows the administrator to narrowly define which items a user is allowed to modify.

A \$CURRENTREV criteria condition can be set to be Equal To or Not Equal To the following values:

- \$LATEST (the latest released revision of the item)
- Status type variables, for example, \$STATUSTYPE.RELEASED.
- Workflow statuses pertaining to specific workflows, for example, Default Change Orders.Pending.
- Special values for evaluating Introductory revisions:
  - \$INTRODUCTORY\_NOCHANGE
  - \$INTRODUCTORY\_PENDINGCHANGE
  - \$INTRODUCTORY\_RELEASEDCHANGE

For detailed information about \$CURRENTREV criteria values, see .

### *Definition of a Released Revision*

A Released Revision occurs when the change object (Change Order or Manufacturer Order) that

created the Revision is in its workflow at a status type of Released or Implemented. This is indicated in both clients when the Revision is not in parentheses.

### ***Definition of a Pending Revision***

A Pending Revision occurs when the change object that created the Revision is in its workflow at a status type of Unassigned, Pending, Submit, Review, or Hold. This is indicated in both clients when the Revision is in parentheses.

---

Note	A change object in Cancelled status is not applicable because it will not appear in the Revision drop-down listing.
------	---

---

## **Building Criteria for Specific Use Cases**

Typically, there are three cases where the Agile administrator needs to control Modify privileges. These can be extended with additional criteria as are needed.

1. Allow broad Modify at Introductory only
2. Allow targeted Modify for a Pending revision
3. Allow targeted Modify for a Released revision

### ***1. Allow broad Modify at Introductory only***

Items ( \$CURRENTREV Equal To \$INTRODUCTORY\_NOCHANGE OR  
 \$CURRENTREV Equal To \$INTRODUCTORY\_PENDINGCHANGE OR  
 \$CURRENTREV Equal to \$UNASSIGNED )

This combination of statements will allow a user to modify the Introductory revision of an item if the item has never been released. The item may have no changes or it may have a pending change. If the item has a pending change, the user must select the Introductory revision in the Rev drop-down list.

Use of a criteria with this combination of statements in a Modify Item privilege mask with many AppliedTo fields will allow broad Modify privilege at Introductory while there is no Released revision, and then prevent broad Modify privilege after the first Released revision when there is a Pending revision.

### ***2. Allow targeted Modify for a Pending revision***

Items ( \$CURRENTREV Equal To \$UNASSIGNED OR  
 \$CURRENTREV Equal To \$STATUSTYPE.PENDING OR  
 \$CURRENTREV Equal To \$STATUSTYPE.SUBMIT OR  
 \$CURRENTREV Equal To \$STATUSTYPE.REVIEW OR  
 \$CURRENTREV Equal To \$STATUSTYPE.HOLD )

Writing a criteria with these statements will generally satisfy this requirement. Use this criteria in a Modify Item privilege mask with a small number of AppliedTo fields. When the user selects a pending revision from the Rev drop-down list, he will be able to modify the specified fields of the selected pending item revision.

### 3. Allow targeted Modify for a Released revision

Items ( \$CURRENTREV Equal To \$STATUSTYPE.RELEASED OR  
\$CURRENTREV Equal To \$STATUSTYPE.IMPLEMENTED )

This combination of criteria statements evaluates as True when the workflow status of change that released the selected item revision has a status type of either Released or Implemented. Use this criteria in a Modify Item privilege mask with a small number if AppliedTo fields. When the user selects a Released revision in the Rev drop-down list, he will be able to modify the specified fields of the selected released item revision.

#### **\$CURRENTREV Criteria Examples**

This section shows examples of ten different criteria statements using \$CURRENTREV and \$LATESTREV and illustrates how they are evaluated for different item revisions.

The following table shows the ten criteria that are used in the examples:

Criteria #	Description
1	\$CURRENTREV Equal To \$INTRODUCTORY_NOCHANGE
2	\$CURRENTREV Equal To \$INTRODUCTORY_PENDINGCHANGE
3	\$CURRENTREV Equal To \$INTRODUCTORY_RELEASEDCHANGE
4	\$CURRENTREV Equal To \$LATEST
5	\$LATESTREV Is Introductory
6	\$LATESTREV Is Released
7	\$CURRENTREV Equal To \$UNASSIGNED or \$CURRENTREV Equal To \$STATUSTYPE.PENDING
8	\$CURRENTREV Equal To ECO.Released or \$CURRENTREV Equal To ECO.Implemented
9	\$CURRENTREV Equal To Default Change Orders.Implemented
10	\$CURRENTREV Equal To \$INTRODUCTORY_NOCHANGE or \$CURRENTREV Equal To \$INTRODUCTORY_PENDINGCHANGE or ( \$LATESTREV Is Introductory and ( \$CURRENTREV Equal To \$UNASSIGNED or \$CURRENTREV Equal To \$STATUSTYPE.PENDING ) )

The following table shows five items (EX-1 through EX-5) and the revision history for each of these items. This table illustrates how each of the criteria in the table above (Criteria #1 through Criteria #10) will evaluate (T= True, a blank table cell = False ) when a specific revision is selected from the Rev drop-down list of and of the example items.

Item Number	Revision	Change Status	Status Type	1	2	3	4	5	6	7	8	9	10
EX-1	Introductory	N/A		T			T	T					T
EX-2	Introductory	N/A			T		T	T					T
	(?)	Unassigned						T		T			T



EX-3	Introductory	N/A				T			T				
	A	ECO.Implemented	Complete				T		T		T		
EX-4	Introductory	N/A				T			T				
	A	ECO.Implemented	Complete				T		T		T		
	(?)	Unassigned							T	T			
EX-5	Introductory	N/A				T			T				
	A	ECO.Released	Released				T		T		T		
	(B)	ECO.CCB	Review						T				
	(C)	ECO.Submitted	Submit						T				
	(D)	ECO.Pending	Pending						T	T			

## Other Privileges in Detail

This section provides detailed information about some important Agile PLM privileges. It is not a comprehensive detailing of all the privileges in the Agile PLM system. Keep in mind, the privileges do not work alone; they must be cited by a privilege mask—for example, Create Item—and then activated by inclusion in a role that includes that privilege mask.

---

**Note** Information about privileges that are involved in working with attachments is provided in [Attachment Privileges](#) (on page 315).

---

## Add Approver/Observer and Remove Approver/Observer

The Add Approver/Observer privilege allows the user to designate a user, global user group, or partner to approve or reject a specific routable object. This privilege also allows the designation of any of these categories to be an observer, who will see the routable object but not be able to approve or reject it.

The Remove Approver/Observer privilege allows the user to remove any of these from the list of approvers or observers on a specific routable object. For more information about adding an approver or observer, see [More about Affected Items: Adding Approvers and Observers](#) (on page 112).

---

**Note** To successfully add or remove approvers or observers from a Review or Released status of a workflow, the Ad Hoc Approvers/Observers property for that status must be set to Yes.

---

## Attachment Redlines for Self: Disabled in Rel.9.2.2.2

This privilege is disabled as of Release 9.2.2.2. The ability to enable and control access to attachment redline markups is provided by the Markups subclass (of File Folders class) and its associated Create, Read, Modify, Checkin, and Checkout privilege masks.

## Attachment Redlines for Others: Disabled in Rel.9.2.2.2

This privilege is disabled as of Release 9.2.2.2. The ability to enable and control access to attachment redline markups is provided by the Markups subclass (of File Folders class) and its associated Create, Read, Modify, Checkin, and Checkout privilege masks.

## Change Status

Change Status is crucial in the approval process that advances changes through workflows. The Change Status privileges use privilege criteria to control the statuses a user can manipulate—for specified changes, move forward or backward in the workflow. The function of the privilege is to designate which statuses can be affected by a user in a given role.

---

Note	Each Change Status privilege mask applies to one named status of one specified workflow. You must create Change Status privilege masks for each status of every new workflow you create and enable them, including the statuses of workflows created by SaveAs (that is, a workflow that is given another name via SaveAs, whether it is modified or not, needs its own Change Status privileges).
------	--

---

The status types that are available to the privilege are determined by the workflow selection for the privilege when it is created. This is also affected by the reusable criteria applied to the privilege.

There can be multiple “From” or “To” settings defined in Change Status. The administrator can designate a role to move a change from multiple statuses to a single status, for example, Pending, Submit, or Review to Hold status. Or the administrator can designate a role to move a change from a single to multiple statuses, for example, Hold to Pending, Submit, or Review status.

### To define a Change Status privilege mask:

1. Under User Settings, double-click Privileges.
2. In the Privileges window, click the New button. The Create Privilege dialog box appears.
3. Fill in the Name and Description fields for the Change Status privilege mask.
4. By default, the privilege mask is enabled. If you want, select No in the Enable field to disable the privilege mask.
5. In the Privilege field, select Change Status from the drop-down list.
6. In the Criteria field, select a criteria from the list, and click the OK button.

Or click the New Criteria button to define a new reusable criteria. (See [Creating a New Criteria](#) (on page 109).)

7. In the Workflow field, select a workflow from the drop-down list.

Additional fields, Status-From and Status-To, are displayed in the dialog box.

---

Note	If you select All in the Workflow field, the Status-From and Status-To fields are not available. When you select All for the workflow name, you create a Change Status privilege mask that allows a user to change from any status to any status in any workflow. This is useful when you want to test workflows.
------	---

---

8. In the Status-From dialog box, move statuses from the Choices list to the Selected list. Click OK when you are finished.

9. In the Status-To dialog box, move statuses from the Choices list to the Selected list. Click OK when you are finished. When you have complete all the fields in the dialog box, Click OK.

## Export

This privilege allows Agile users to extract data from selected objects and export it to such formats as: a comma-delimited text file, a Microsoft Excel file, a PDX package, or an "Agile XML" (aXML) file.

PDX is a standard for electronic exchange of engineering and manufacturing information across the supply chain. A PDX package is an XML file that can be viewed with Agile eXpress, a free client.

Please contact Oracle Consulting–Agile Practice for information about the eXpress viewer.

## Full Search Display

The Full Search Display *privilege* does not apply to searches. It applies to results of report queries. Users with the Full Report Display *privilege mask* will see all results of reports; users without the privilege mask will see up to the maximum number of results specified by the Maximum Query Results Displayed preference. Additionally, all privilege checking is bypassed on users with this privilege when they view report results.

## Grant

A user's ability to grant roles to another user for a specific object is handled by the Grant privilege.

The *sharing* feature of Agile PLM lets a user "grant" one or more of his roles to another Agile PLM user or user group for specific objects. The capability to share a given role includes:

- The user's assigned, "permanent" roles, although he shares the role with another user regarding only a specific object
- Roles that have been shared with the user (by another user) for a particular object
- Roles that have been shared with the user by virtue of belonging to a user group to which the role has been shared.

The named user (or members of the named user group) can then perform actions permitted by the roles for that object only; the user does not acquire the role in any permanent or far-reaching way.

A user's or user group's Share tab lists those objects for which the user has been granted "shared roles" by a different user. A user can click User Profile > Share to see objects being shared with them and what role(s) inform their interaction with each. A user can click User Profile > User Groups > (specific group) > Share to see objects being shared with you via user group.

## Override

The Override privilege governs who can override the required fields and required approvers for a status and move the change to the next status without those fields being filled in or approvers signed off. With Override privilege, a user can release a change even when all required fields are not filled in.

The Override privilege is specific to each status. A change can be moved to the next status without all approvals as long as the user has the privilege to move a change to the next status. For

example, a user might be able to override the promotion of a change from the Manager Review status to the CCB Review status, but not the promotion of a change from Final Review to Released.

A warning is issued to the user if there are missing fields, approvers, or other requirements for the usual move to the next status level.

**Caution** A user with the Override privilege can promote a routable object to the next status in all of the following situations:

- Regardless of the presence of any required fields.
- When Pass Release Audit is set to Yes.
- When the Change Status Approver Rejected Change SmartRule is set to Warning or Disallow.
- When the Change Status Observer Rejected Change SmartRule is set to Warning or Disallow.
- When the Change Status No Response Change SmartRule is set to Warning or Disallow.

For the Change Status Approver Rejected Change and Change Status Observer Rejected Change SmartRules, a Warning setting does not prevent the routable object from being autopromoted; that is, the SmartRules *must* be set to Disallow to prevent autopromotion.

To allow the change analyst to decide whether or not to promote a routable object that has been rejected, the following conditions need to be true:

- AutoPromotion is set to Yes for that status.
- These two SmartRules are set to Disallow.
- The change analyst has the Override privilege for this status.

The Override privilege calls for specific “From” and “To” settings, such as Change Status. The Override privilege lets a user change the status of a routable object, even if the Pass Release Audit is set to Yes. The only exception is during the initial release of a routable object. If the Pass Release Audit is set to Warning, then the warning appears even during an override.

Note that when the user does not have Override privilege, and Pass Release Audit = Warning or No, the Status Audit should give an Error (which requires user to fix conditions) instead of a Warning.

## Purge Folder Version Privilege

The Purge Folder Version (PFV) privilege allows a user to purge unused file folder versions from the Agile File Management fault. The file folder version number is removed from the file folder Version drop-down list. You can create Purge Folder Version privilege masks for specific subclasses of folders by selecting the appropriate folder object criteria when you create and define the PFV privilege mask. The user must have appropriate privilege masks to discover and read the file folder object in order to select the file folder version to purge. If a file folder version is checked out, has redlines, or is in use on a business object Attachments tab or Content tab, it cannot be purged.

The Purge Folder Version command appears on the file folder object More... menu (Java Client) and Actions menu (Web Client).

## Transfer Authority for Self

The Transfer Authority for Self privilege allows the user to designate a target user, who is allowed to approve or reject changes for her for a specified period of time. The authority transfer applies when the user is an approver on a routable object, but not when the user is an observer. Transfer Authority for Self is very useful for situations where the original user is going on a vacation or extended leave.

The target user can vary depending on criteria within the privilege. For example, all changes for Project A can be directed to Mary and all changes for Project B can go to Joe. If the criteria for the different transfers overlap, then both users who have been defined as the target of the transfer receive the notifications and are able to sign off for the original user.

The transfer of authority is in effect for the duration specified by the start and end dates. Once this time has elapsed, signoff authority is automatically transferred back to the original user.

If a user's authority needs to be transferred to more than one person, such as multiple targets during a longer vacation, the target users should be specified sequentially, as shown in the following table.

From User	To User	Start Date	End Date
Brian Henson	David Goelz	14-July-2007	30-July-2007
Brian Henson	Kevin Clash	31-July-2001	12-Aug-2007

**Caution** If you need to remove a user from the system who is named as the “To” user in signoff authority transfers, see [Deleting and Undeleting Users](#) (on page 160) for more information.

## Transfer Authority for Others

The Transfer Authority for Others privilege allows an authorized user to transfer an original approver's right to approve or reject changes to another user for a specified period of time. The authority transfer applies when the original user is an approver on a routable object, but not an observer.

This privilege overrides transfers designated by users who have the Transfer Authority for Self privilege. The original approver is copied on all notifying email.

**Note** When you create a transfer criteria, you can include criteria conditions with Affected Items tab fields. To select a specific routable object, an Affected Items field condition must be true for all the objects on the Affected Items tab of that routable object.

For example, if you specify Affected Items.Old Lifecycle Phase Equals Preliminary, then all the objects on the Affected Items tab must have the Old Lifecycle field equal to Preliminary. If you select Contains as the search operator, then every object on the Affected Items tab must contain the specified value in the specified field.

## Site Change Order Save As Limitations

You cannot initiate Save As from a non-Site Change Order (SCO) change object in order to create

an SCO object, nor can you initiate Save As from an SCO object in order to create a non-SCO change object. Because Site Change Orders (SCOs) affect only site-specific information, and other types of changes are not limited to site-specific information (for example, ECOs and MCOs), SCOs can be Save-As-created only from another SCO. The Site Change Order's site-specific only usage makes it incompatible with other change types when using the Save As feature.

## Subscribe

The Subscribe privilege allows a user to *subscribe* to an object to receive notification of events that happen to that object. Users can even be notified when specified fields are modified, and can select the events about which to be notified.

The user needs the Subscribe privilege for a specific object class to be able to subscribe to that class's objects.

On the Subscriptions tab of a user, you can view the objects to which this user has subscribed.

Subscription events trigger two types of notifications: Email and Inbox. Email notifications are sent only if the user's Receive Email Notification preference is set to Yes; this property is on the Preferences tab of the user object.

## Privilege Mask Components

Privilege masks are a powerful and complex feature. Each privilege mask is composed of several components. Together, the privilege mask components define the following:

- What action the user can perform;
- The object type on which the action can be performed;
- Filtering conditions that define a subset of objects on which the action can be performed.
- AppliedTo attributes – found only in privilege masks based on the Administrator, Modify, Read, Microsoft Project, and Dashboard Management privileges – which displays specific object attributes;
- For the Change Status privilege, the workflow, the status the user can change from, and the status the user can change to (see the second diagram in [Combining Options in Criteria and AppliedTo Attributes](#) on page 226).

## All Privilege Masks have a Privilege, Object Type, and Criteria

Privilege masks act as filters to either enable or prevent user actions. By combining the types of action with the precise conditions under which it should be enabled, privilege masks control user activity in Agile PLM. The following components are used to construct privilege masks and are among the privilege mask properties:

1. The privilege or action (see [Privilege Mask Component 1: Privileges](#) on page 220)
2. The object type to be acted upon (see [Privilege Mask Component 2: Object Type](#) on page 220)
3. The criteria or conditions under which to apply the action (see [Privilege Mask Component 3: Criteria](#) on page 222)


4. The attributes the action will be applied to (see [Privilege Mask Component 4: Attributes](#) on page 222)

## A Few Privileges are the Basis to Privilege Masks with AppliedTo

Speaking to No.4 above: privilege masks that are based on some privileges that use a fourth component, that is, named attributes found in the AppliedTo property. This important property was introduced in [AppliedTo Capability](#) on page 200.


## Diagramming Privilege Masks

Privilege masks employ a reusable criteria to define the object type and filtering conditions. When you create a privilege mask, you select a reusable criteria from the list of criteria objects, as seen in the schematic diagram.

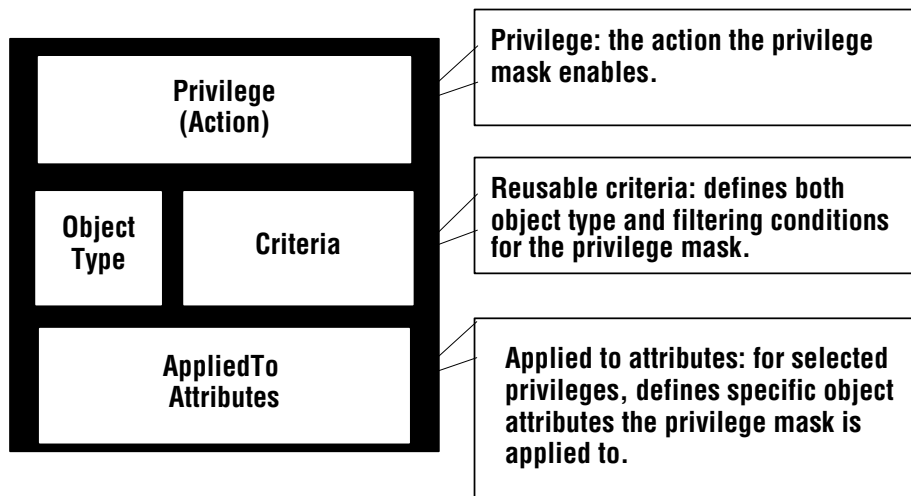

## Naming Privilege Masks


The following convention for naming privilege masks has been used so their purpose and function is as clear as possible.

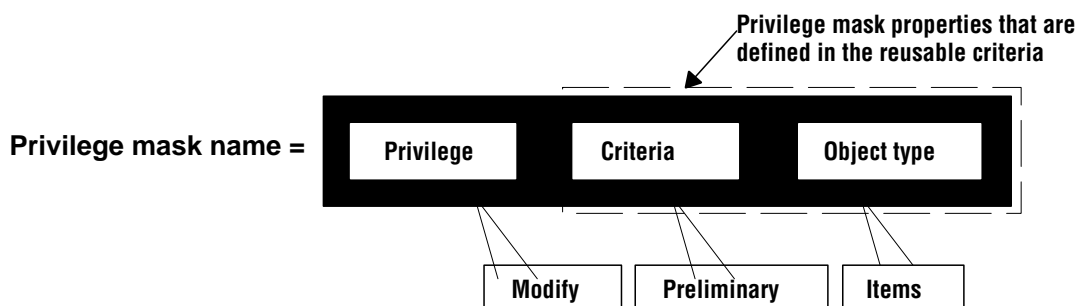

Some privilege masks consist of only the privilege and the object type, for example, Send Changes.

## Privilege Mask Component 1: Privileges

The fundamental building block of a privilege mask is the *privilege*, or the action it enables, such as Discovery, Modify, or Submit. We have already looked at the basic privileges in the Agile PLM system in Agile PLM Privileges.

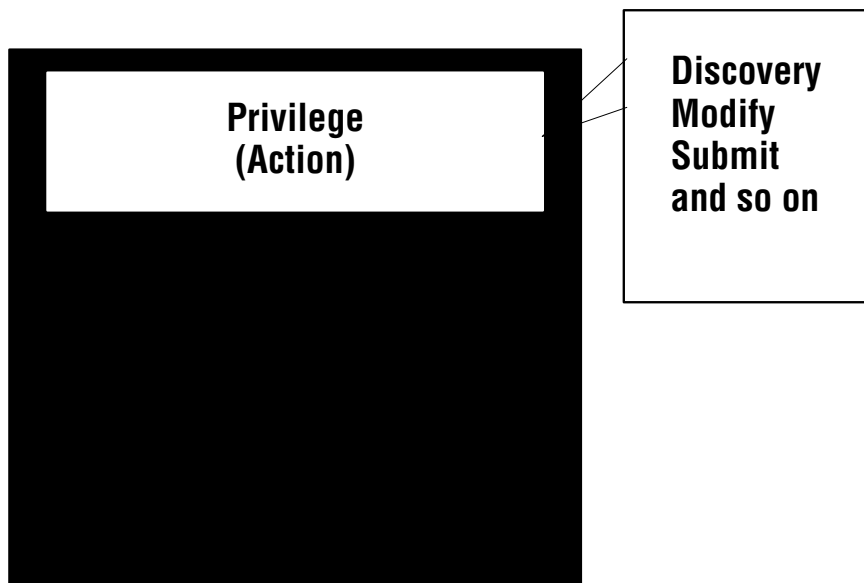

This basic privilege is defined when the privilege mask is created, and can be viewed on the General Information tab of the privilege mask. For example:

### To view the properties of the Modify Eng Changes privilege mask:

1. Under User Settings, double-click Privileges.
2. In the Privileges window (which actually lists Privilege Masks based on the named Privilege), double-click the privilege mask Modify Eng Changes. The privilege mask object appears.

Note	Filter privilege records by Privilege Contains Modify to find the all the Modify privilege masks on the list. (See <a href="#">Filtering Data</a> on page 16.)
------	--


3. You can now modify the editable fields of the General Information tab.  
Notice that you cannot edit the Privilege field, indicating that you cannot change this value after the privilege mask is created. Notice, also, that you can edit the Privilege Criteria field.
4. Click Cancel when you have finished viewing the editable properties of the privilege mask.

## Privilege Mask Component 2: Object Type

Most privilege masks consist of the *object type* to be acted upon, for example, changes, Change



Orders class, or ECO. The object type is also a privilege mask property that is defined when the privilege mask is created, when you select the reusable criteria. The object types are defined in the Classes node. For more information about object types, see [Agile PLM Class Structure](#) (on page 46).

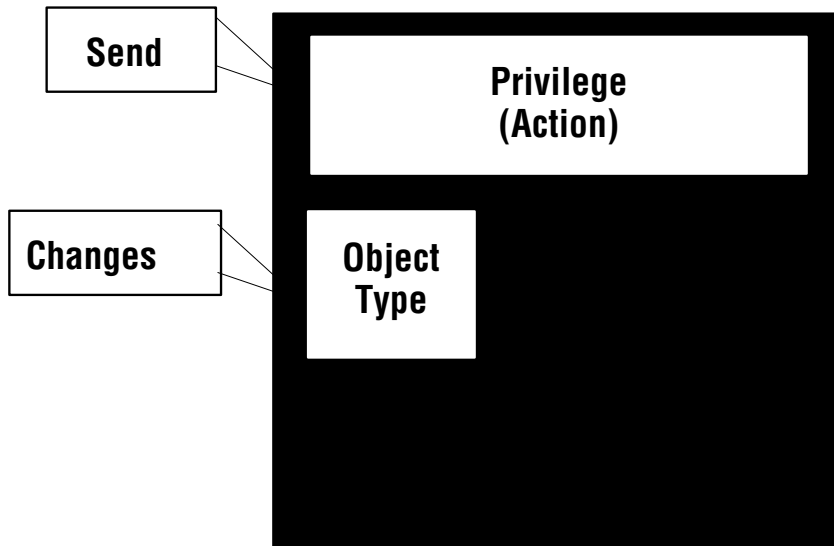

Some privilege masks, such as Send Changes (depicted above), consist of only the privilege and the object type. For this type of privilege mask, select a reusable criteria that specifies the object type only with no filtering criteria, such as the For Changes Only reusable criteria.

You can use the object type to broaden or narrow the privilege. The following example illustrates how a Modify Changes privilege mask could be broadened to include all changes, or narrowed to include just ECOs. See Installed Agile PLM Classes, Base Classes, and Subclasses for a complete list of Agile PLM object types.

Select this object type	To allow user to modify...	
	These classes:	These subclasses:
Changes	Change Orders class Change Requests class Deviations class Manufacturer Orders class Price Change Orders class Site Change Orders class Stop Ships class	ECO ECR Deviation MCO PCO SCO Stop Ship
Change Orders class	Change Orders class	ECO (also includes any other Change Order subclasses that you have defined)
ECO	N/A	ECO (includes this subclass only)


---

**Note** If you remember to use the Action–Criteria–Object Type naming convention, the object type is part of the privilege mask name. (See [Naming Privilege Masks](#) on page 219.)

---

## Privilege Mask Component 3: Criteria

Another property of a privilege mask is the set of *criteria* you want to apply, or the conditions under which the privilege mask will work. Criteria are defined in the reusable criteria when it is created. The criteria for the privilege mask is defined when the privilege mask is created and the reusable criteria is selected from the list. You can select a different reusable criteria later.

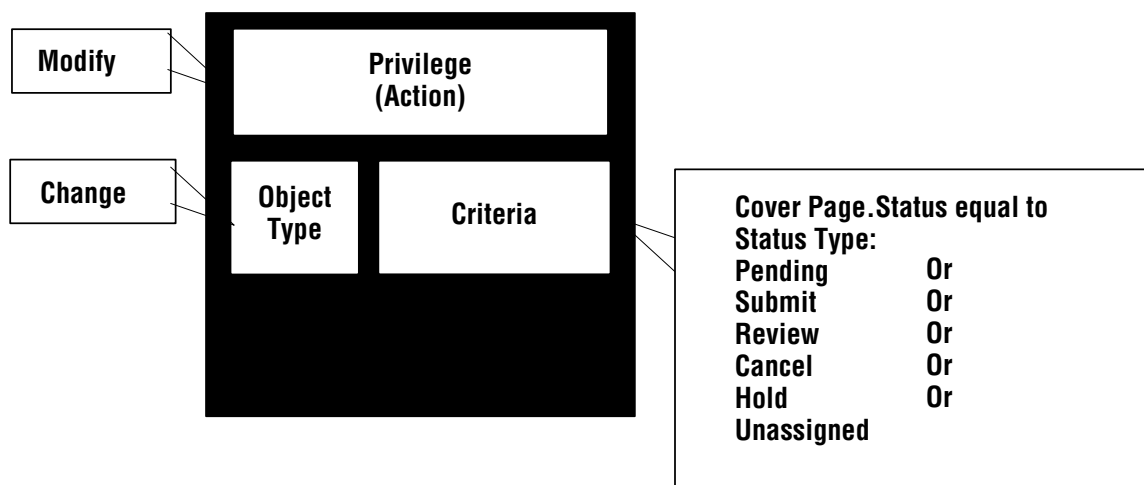


Using this particular reusable criteria allows users to modify only engineering changes in one of the status types defined in the reusable criteria (Pending, Submit, Review, Cancel, Hold, or Unassigned).

## Privilege Mask Component 4: Attributes

Another building block of a privilege mask is the *attribute* (or attributes) you want the privilege mask applied to. These are called AppliedTo attributes, and are used only in Modify and Read privilege masks. AppliedTo attributes are defined when the privilege mask is created and can also be changed later.

Modify privilege masks are designed to let users modify the attributes on a particular tab, such as the Cover Page, Title Block, or General Information tab.

For example, the Modify Eng Changes privilege mask provided with your Agile PLM installation is designed to apply to, or allow users to modify, the attributes shown in the figure below:

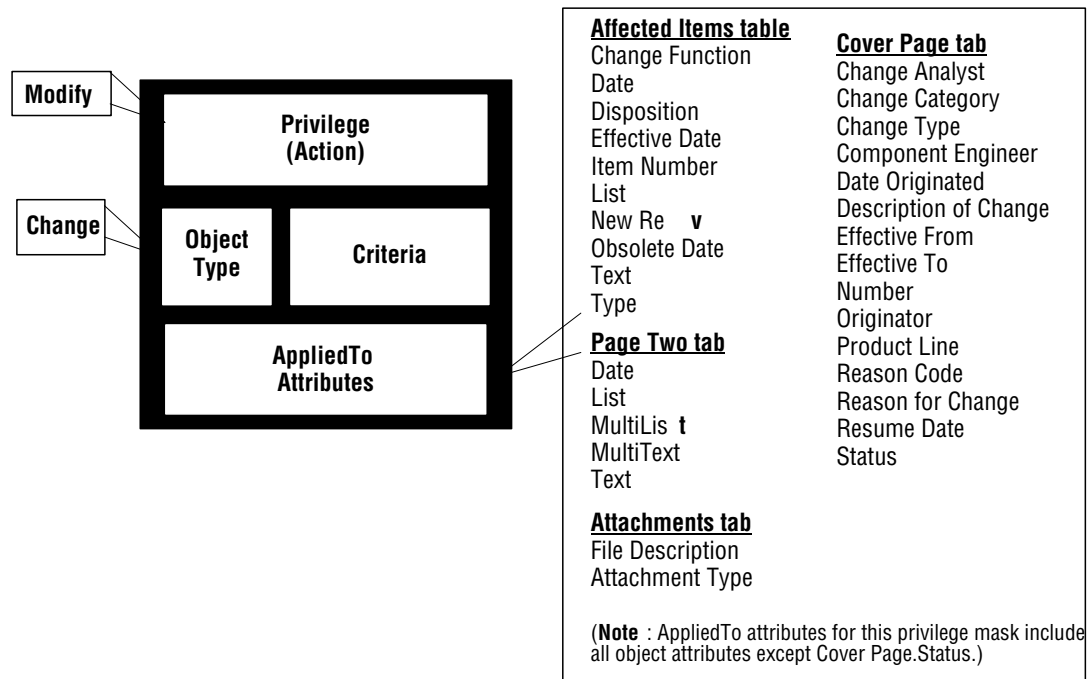


#### To view these AppliedTo attributes:

1. Under User Settings, double-click Privileges.
2. In the Privileges window, double-click the privilege mask Modify Eng Changes. The privilege mask appears; see the schematic above.

**Note** Filter privilege records by Privilege Contains Modify to find all the Modify privilege masks on the list. (See [Filtering Data](#) on page 16.)

The AppliedTo attributes are listed on the General Information tab.

3. To view the lists of available attribute values and selected attribute values, click the down-arrow  next to the AppliedTo field. The Choices and Selected lists appear in the selection dialog box.
4. Click Cancel when you have finished viewing the lists. Click Close when you have finished viewing the General Information tab fields.

## Viewing Privilege Masks

The privilege masks that make up a role define the actions its users can perform. Agile PLM provides you with a set of preconfigured privilege masks for the installed roles. Every role has at least one privilege mask.

#### To view the privilege masks for a particular role:

1. Under User Settings, double-click Roles.

2. In the Roles window, double-click the role. The role's tabbed window appears.
3. Click the Privileges tab. The privilege masks are displayed in the table.

## Viewing Privilege Mask Properties

Each of the privilege masks that make up a role has its own set of properties that define the privilege being controlled. The available privilege mask properties are listed and described in the following table. Not all of these properties are configurable for all privilege masks.

Property	Description
Name	A name, for example, "Modify Resume Date." A privilege mask name of up to 255 characters.
Description	A maximum 510-character description of the privilege mask, for example Modify Resume Date After Release.
Enabled	Yes or No. When set to No, allows you to work with a privilege without its being in effect. This is useful when setting up privileges.
Privilege (governing action)	A privilege, for example, Create. Identifies the privilege, or action, such as Create, Delete, Modify, Print, or Read. Only one privilege is defined in a privilege mask. After the privilege mask has been created, this property is not editable.
Privilege Criteria	The reusable criteria selected for this privilege mask. Only one reusable criteria is selected for each privilege mask. The selected reusable criteria defines two important properties of the privilege mask: <ul style="list-style-type: none"><li>▫ <b>Object Type</b> — Identifies the Agile PLM object type for the privilege mask.</li><li>▫ <b>Criteria</b> — Specifies the exact conditions for applying the privilege, for example, Cover Page.Status Equal to StatusType.Released. The reusable criteria specifies all possible fields and match-if values for the object type.</li></ul>
AppliedTo	Modify, Read, Administrator, Dashboard Management, and Microsoft Project privileges only. Specifies the attributes that a Modify or Read privilege mask is applied to, such as Cover Page.Date Originated. See <a href="#">Discovery and Read Privileges</a> on page 204 and <a href="#">Modify Privilege</a> (on page 209). Specifies which administrator node the Administrator privilege mask is applied to, such as Users. See <a href="#">AppliedTo Capability</a> on page 200. Two other privileges that use AppliedTo are described in <a href="#">Dashboard Management</a> (on page 203) and <a href="#">PPM-specific Privileges</a> (on page 357).
Workflow	(Change Status and Override privileges only) For Change Status, specifies the workflow in which the user can change statuses or override change status actions. For Override, the From Status and To Status properties define the change status action the user can override.

Property	Description
From Status	<p>(Change Status and Override privileges only)</p> <p>For Change Status, specifies the statuses from which the user can change to another status.</p> <p>For Override, the From Status and To Status properties define the change status action the user can override.</p>
To Status	<p>(Change Status and Override privileges only)</p> <p>For Change Status, specifies the statuses the user can change to.</p> <p>For Override, the From Status and To Status properties define the change status action the user can override.</p>

### To view privilege mask properties:

1. Under User Settings, double-click Privileges.
2. In the Privileges window, double-click the privilege mask you want to view. The privilege mask window appears.

---

**Note** Filter privilege mask records to narrow your search. For example, filter records by Privilege Contains Modify to find all the Modify privilege masks on the list. (See [Filtering Data](#) on page 16.)

---

3. To modify a property, enter text in text fields or use the drop-down lists.

---

**Note** The Privilege (governing action) field is not editable.

---

4. When you are finished, click Save, or click Close to exit without saving your modifications.

## Using Privilege Mask Criteria Variables

You can use the variables listed and described in the following table when creating a reusable criteria for use as a privilege mask criteria. In the Create Criteria dialog box, some variables appear on the Attribute list, and others can be entered in the Value field. See [Agile PLM Variables](#) (on page 36) for a complete list of Agile PLM variables.

Variable	Description
\$CHECKOUTUSER	The user who checked out the object's attachment.
\$LATEST	The latest revision of an object; more specifically, the latest released revision for a released item, or the latest pending revision for an unreleased item (with Pending changes); \$LATEST applies only to the Read and Modify privilege.
\$CREATEUSER	<p>The user who created the object.</p> <p>To specify the Create User as an attribute (for example, Create User equal to \$USER), select Page two.Create User in the <b>Attribute</b> field when you are defining a reusable criteria. See also <a href="#">Applying Create User Criteria</a> (on page 229).</p>
\$PARTNER	The current supply chain partner company.


Variable	Description
\$CURRENTREV	The current revision of an object you have selected from the rev list, or the revision of an object you are currently viewing.

## Combining Options in Criteria and AppliedTo Attributes



When you create or modify a privilege mask, the AppliedTo and Criteria dialog boxes let you make selections from all possible combinations of attributes, but not all criteria or attributes make sense for all privilege masks. Evaluate the options you combine to make sure they function as expected.

For example, when modifying the Modify Released Eng Changes privilege mask, you can select the Affected Items.Item Number and Affected Items.New Rev fields from the list in the AppliedTo dialog box. However, these two fields cannot be modified once the routable object has been released. Because you *can* specify these attributes in the AppliedTo dialog box, it doesn't necessarily follow that you *can* modify those fields on a released routable object.

The following are examples of privilege masks and their properties that are provided with your Agile PLM installation.

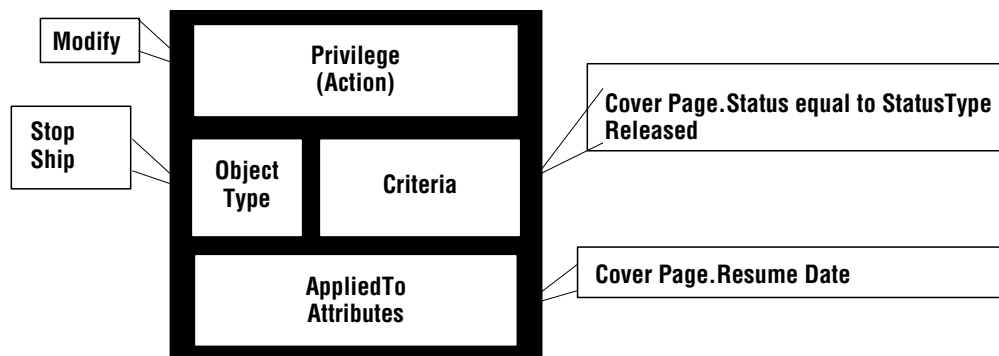

The Change Status privilege does not include AppliedTo properties, like the one in the figure above. However, the Change Status privilege includes properties for Workflow, From Status, and To Status, as seen in the figure below.

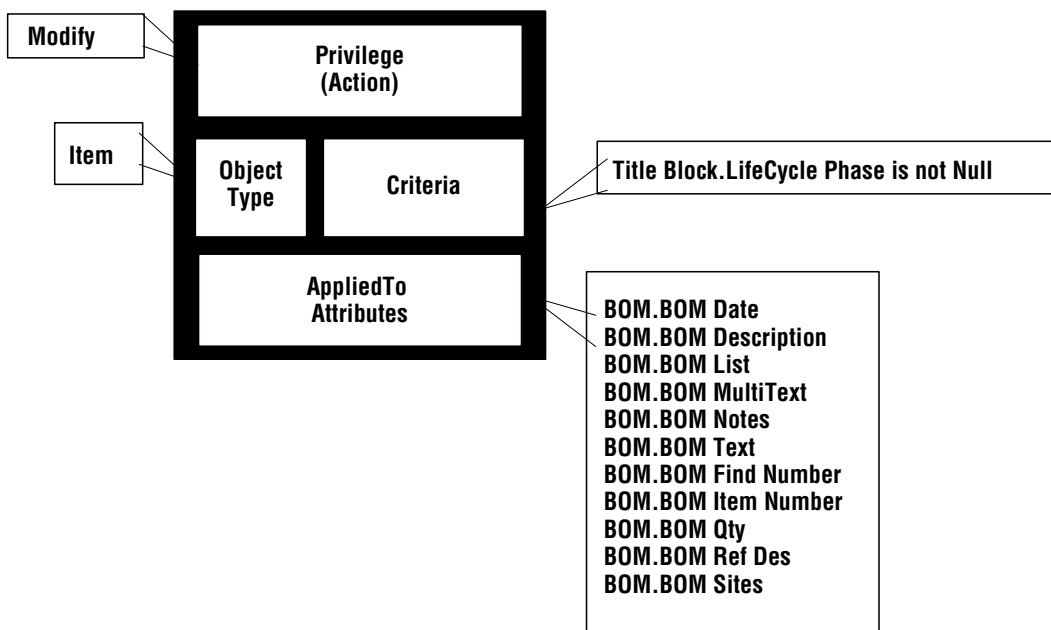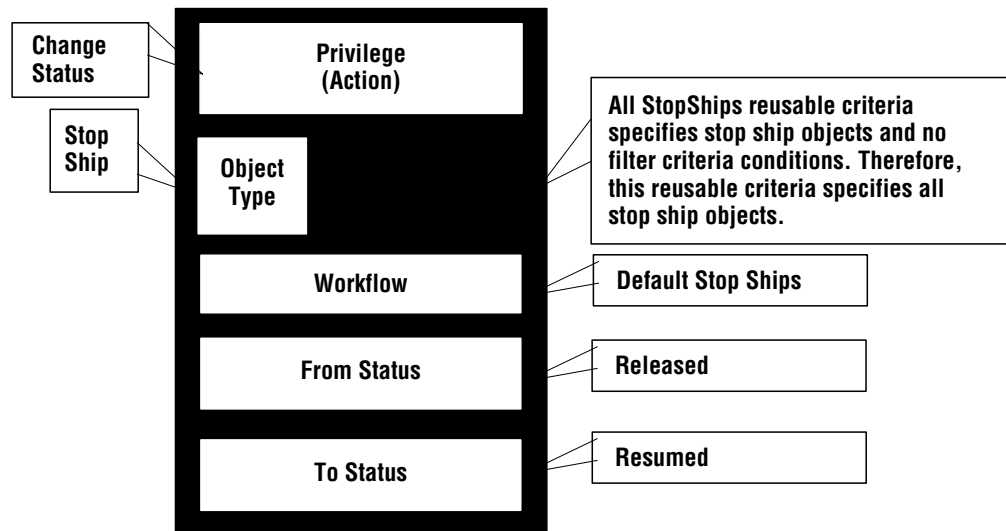

## Modifying Privilege Masks

You can modify privilege masks in many ways. This section describes these modifications.

## Modifying Privilege Mask Criteria

### To modify existing Privilege Mask Criteria:

1. Under User Settings, double-click Privileges.
2. In the Privileges window, click the privilege mask you want to modify. The privilege mask window appears.

---

Note	Filter privilege mask records to narrow your search. For example, filter records by Privilege Contains Modify to find all the Modify privilege masks on the list. (See <a href="#">Filtering Data</a> on page 16.)
------	--

---

The privilege mask properties are displayed on the General Information tab.

3. To modify a property, enter text in text fields or use the drop-down lists.
4. In the Privilege Criteria field, select a different reusable criteria from the drop-down list.  
Or click Create to define a new reusable criteria. (See [Creating a New Criteria](#) (on page 109).)
5. When you are finished, click Save. To cancel the changes, click Close.

## Modifying the AppliedTo Property

The AppliedTo property lets you specify exactly which attributes or fields may be modified by the privilege mask. This property is available only for Modify, Read, Administrator, Dashboard Management, and Microsoft Project privileges. (This information, presented earlier in the chapter, is here for convenience.)

The Choices list contains all available attributes for the privilege mask's object type. The Selected list contains all the attributes that have been selected for the privilege mask. For example, the selection dialog in the figure above, includes all the fields and attributes for a change, such as those found in an ECR, ECO, MCO, and so on.

---

Note	See <a href="#">Administrator Privilege and the AppliedTo Capability</a> (on page 201) for information about the AppliedTo attribute in the Administrator privilege.
------	--

---

### To select the AppliedTo attributes for a qualified privilege mask:


1. Under User Settings, double-click Privileges. The Privileges window appears.
2. Double-click the qualified privilege mask you want to modify. The privilege mask window appears.

---

Note	Filter privilege mask records to narrow your search. For example, filter records by Privilege Contains Modify to find all the Modify privilege masks on the list. (See <a href="#">Filtering Data</a> on page 16.)
------	--

---

The privilege mask properties are displayed on the General Information tab.

3. On the General Information tab, click the down-arrow  next to the AppliedTo field. The selection dialog box opens.
4. Use right arrow to move selected values from the Choices list to the Selected list.
5. When you are finished, click OK.



6. To finish editing the privilege mask, click Save.

---

**Note** The AppliedTo selection dialog box lets you select from all available fields on a tab. However, users may not be able to modify all the fields you select under all conditions.

---

For example, when creating the Modify Released Eng. Changes privilege mask, you can select from all fields on the Affected Items tab, including Item Number, New Rev, and Type. However, these fields cannot be modified once the routable object is released. Because you can select these attributes from the Choices list in the AppliedTo selection dialog box, it doesn't necessarily follow that users can modify those fields under all conditions.

## Applying Create User Criteria

Create User criteria statements restrict users to reading only those objects they have created. The Create User feature allows a user without a read privilege to create an object. To implement Create User criteria, you need to first make both of the following visible:

- The Page Two tab of that class (see [Showing, Hiding, or Renaming a Tab](#) (on page 59)).
- The Create User attribute field on the Page Two tab of an Agile PLM class (see [Showing or Hiding an Attribute on a Tab](#) (on page 79)).

Once you've done this, Agile PLM clients automatically display the creator's name in the Create User field of the Page Two tab *for that class*. Any user who has a Create privilege can now open a blank form *for that class* and create an object. In this way, users don't need to have a basic Read privilege to create objects. However, this privilege limits users to reading only pending or preliminary objects they've created.

For users who have the Create privilege, you can expand the Read privilege to include all objects they've created, regardless of the state, by creating a Read privilege mask for the subclass with a reusable criteria that specifies Page Two.Create User criteria conditions. In addition to making the Page Two tab visible and making visible the Create User field on the tab, you need to:

- Create a reusable criteria that specifies the Page Two.Create User attribute, typically Page Two.Create User Equal to \$USER.
- Create a privilege mask that specifies the reusable criteria you created.

For example, for a user who creates ECOs, create a new privilege mask as follows:

- Name — Read ECOs
- Description — Read-Only ECOs created by this user
- Privilege — Read
- Select or create a reusable criteria that specifies:
  - Type: ECO
  - Attribute: Page Two.Create User
  - Match If: Equal To \$USER

You can read the Create User attribute into the Manufacturers tab for both Manufacturers and Manufacturer Parts by making it visible on these tabs. Remember to first make the Page Two tab and its Create User attribute visible for the class.

## Enabling a Privilege Mask

To enable a privilege mask that is currently disabled:

1. Under User Settings, double-click Privileges. The Privileges window appears.
2. Click the privilege mask you want to enable.

---

Note	Filter privilege mask records to narrow your search. For example, filter records by Privilege Contains Modify to find all the Modify privilege masks on the list. (See <a href="#">Filtering Data</a> on page 16.) Or you can click the Enabled column header to sort by Yes (enabled) or No (disabled).
------	--

---

3. Click the Enable button on the window toolbar.

The disabled privilege mask is now enabled.

---

Note	You can also enable and disable a privilege mask when you edit the General Information tab of the privilege mask.
------	---

---

## Creating New Privilege Masks

As with roles, it is easy to create new privilege masks, although you should use extreme caution whenever you change user access and permissions. Before creating a new privilege mask, you should review the privilege masks you currently have. Generate the Privilege Mask Detail report from the Administrator Reports node for a listing of current privilege masks and their criteria (see [Administrator Reports](#) (on page 16)).

We recommend that you modify (or copy and modify) an existing privilege mask that is similar to the one you need instead of creating a new one. The existing privilege masks have been tested extensively; their operation and interaction in Agile PLM are documented.

### Before You Begin

Consider the following details before creating a new privilege mask.

- Does the privilege mask you want already exist? If so, you can assign it to the role without creating a new privilege mask. If the appropriate reusable criteria exists, check its Where Used tab for the privilege mask you want.
- What action do you want the privilege mask to enable in Agile PLM?
- What action do you want the privilege mask to prevent in Agile PLM?
- Upon what object type will the privilege mask act?
- What will you name the new privilege mask? Remember to use the *Action–Criteria–Object Type* naming convention.
- Which role will require the new privilege mask?
- If you are creating a basic Read or Modify privilege mask, do you also need to create a corresponding Discover privilege mask? Does a corresponding Discover privilege mask already exist? (A Discover privilege mask is not automatically created when you create a new Read or

Modify privilege mask.)

- If it is not a Read privilege mask, does its effectiveness depend on a Read privilege?
- Under what specific conditions do you want to enable this privilege mask? Is there an existing reusable criteria that you can select when you create the privilege mask? If so, check the reusable criteria's Where Used tab to see if the privilege mask you want already exists.
- Will the privilege mask conflict with any existing masks in the role?
- Does the role have an existing privilege mask you can modify to achieve the results you want?
- Is there an existing privilege mask, either in this role or another role, that you can copy (using Save As) and modify to avoid having to create one from scratch?

You can create a new privilege mask from scratch using the following procedure. You can also create a new privilege mask by using the Save As process. See [Copying a Privilege Mask Using Save As](#) (on page 232).

## Creating a New Privilege Mask from Scratch

**To create a new privilege mask:**

1. Under User Settings, double-click Privileges. The Privileges window appears.
2. Click New on the toolbar. The Create Privilege dialog box appears.
3. Enter a name. Remember to use the Action–Criteria–Object Type naming convention. (See [Naming Privilege Masks](#) on page 219.)
4. Enter a description.
5. By default, the privilege mask is enabled. If you want, select No in the Enabled field to disable the privilege mask. You may want to do this while developing the privilege mask.
6. Select a privilege from the Privilege drop-down list.

Depending on which privilege you select, more fields may appear in the wizard for you to complete.

Note	If you selected the Change Status privilege, see <a href="#">Change Status</a> (on page 214) for detailed information about completing a Change Status privilege mask.
------	--


7. Do one of the following:
  - To finish creating a privilege mask that doesn't require a privilege criteria (reusable criteria), click Finish.
8. For all other privileges, in the Privilege Criteria field, select a reusable criteria from the drop-down list. The reusable criteria defines both the object type and the filtering conditions (criteria) for the privilege mask.

Or click the New button in the dialog box to define a new reusable criteria. See [Creating a New Criteria](#) (on page 109).

(See [Privilege Mask Component 2: Object Type](#) on page 220 for more information about selecting an object type for your privilege mask. See [Criteria](#) (on page 107) for more information about reusable criteria.)

9. If you are creating a Read or Modify or Administrator privilege mask, you can select the object fields for which the Read or Modify privilege is applied. (See [Privilege Mask Component 4:](#)

[Attributes](#) on page 222.)

- Click  at the AppliedTo field. The selection dialog box opens.
- Use the right and left arrows to move selected values from one list to the other.
- When you are finished, click OK.

10. If you are creating a Change Status or Override privilege, see [Change Status](#) (on page 214).

11. When you have completed the fields on the Create Privilege wizard, click OK.

---

Note	If you disabled the privilege mask while you were creating it, remember to enable it so it can be used.
------	---

---

## Copying a Privilege Mask Using Save As

Use the Save As button in the privilege mask window to make a copy of an existing privilege mask. You can change the copy to suit your needs.

### To copy a privilege mask:

1. Under User Settings, double-click Privileges. The Privileges window appears.
2. Double-click the privilege mask you want to copy. The privilege mask window appears.

---

Note	Filter privilege mask records to narrow your search. For example, filter records by Privilege Contains Modify to find all the Modify privilege masks on the list. (See <a href="#">Filtering Data</a> on page 16.)
------	--

---

3. Click the Save As button.
4. Enter a name for the new privilege mask.
5. Click Save when you are finished. The new privilege mask appears.

# General System Settings

**This chapter includes the following:**

▪ SmartRules .....	233
▪ Viewer and Files .....	244
▪ Notifications .....	252
▪ Full Text Search.....	254
▪ My Assignments .....	257
▪ Unit of Measure (UOM).....	258
▪ Company Profile .....	259
▪ Currency Exchange Rates.....	259
▪ Dashboard Management .....	260

This chapter explains how to set System Settings that affect multiple Agile PLM solutions.

## SmartRules

SmartRules let you choose how to manage specific behaviors in Agile PLM, which enhances your change control process. Since SmartRules apply systemwide, you can easily modify processes.

In addition, if a user changes an attribute value to one that does not match the criteria for the current workflow of the routable object, a SmartRule governs the choice of the options that follow.

**Note** For all SmartRules, any workflow on which a routable object is advancing is not modified.

## Modifying SmartRules Settings

**To modify a SmartRules setting:**

1. Under System Settings, double-click SmartRules. The SmartRules window appears.
2. At the rule you want to change, select a setting from the drop-down list. The list of possible settings can include the following values:
  - **Allow** — The system allows the process to occur.
  - **Disallow** — The system prevents the process from occurring.
  - **Warning** — The system warns the user that the process is occurring.
  - **Remove** — Removes all approvals/rejections on the Workflow tab when the routable object returns to the status where first rejected.
  - **Retain** — Keeps all approvals/rejections on the Workflow tab when the routable object returns to the status where first rejected.
  - **Display** — Displays the object in the table.

- **Display with Just Description** — Displays the object with its subclass and description. The part number and other values read from the object are not displayed.
  - **Display with Just Part Num and Rev** — Displays the object with its subclass, part number, and revision. The description and other values read from the object are not displayed.
  - **No Display** — Does not display the object in the table. No warning is given.
  - **No Display with Warning** — Does not display the object in the table. Issues the following on the tab: "There are x objects not displayed due to insufficient user privilege."
3. When you have finished, click **Save**.
  4. If you wish to revert to the original settings or start over, click **Close**. You will be prompted whether you want to close the window without saving; click **Yes** if you do or **No** if you do not.

## SmartRules Defined

The following table lists and describes Agile PLM SmartRules.

SmartRule Name	Description	Possible Settings
<b>Allow Deletion of Attachments</b>	When set to Yes, upon removing an attached file from a business object <b>Attachments</b> tab, if the file folder is not in use by any other business object (that is, no versions of the file folder are referenced by a business object), the file folder is automatically soft-deleted.  A user with the appropriate search capabilities can run the File Folder Recycle Bin Search and hard-delete (or undelete) the soft-deleted file folder.	Yes No (default)
<b>Auto-Installs from PPM</b>	Allows or disallows automatic installation of Microsoft Project (2002 and 2003) DLLs into a user's system registry. Installation of these DLLs enables seamless publishing using an Agile menu within Microsoft Project. It should be set to Disallow if your company does not want any applications to be automatically installed, or if you prefer to set up an Agile-MS Project connection systemwide.	Allow (default) Disallow Warning
<b>Auto-Publish Quote History</b>	Allows or disallows RFQ or response-line data to be published to objects in the Quote History subclass.	Allow (default) Disallow Warning

SmartRule Name	Description	Possible Settings
<b>BOM Multi-Level Recursion</b>	<p>For systems based on Oracle DB, this SmartRule validates whether a BOM recursion can occur, that is, when a subassembly includes one of its parent items from an upper level of the BOM tree structure on its own BOM. (A recursive BOM structure, if carried to its logical conclusion, would repeat indefinitely).</p> <p>The validation happens when a change order (ECO, SCO, and MCO) advances to Released, or when Release Audit is performed, or when the change tries to advance when current status needs to Pass Release Audit (assuming SR setting is Disallow).</p> <p>Notes: Because non-Oracle DB systems do not allow or check for recursion, this SmartRule has no effect; these systems should see the default setting is Allow.</p> <p>Because previous customers of Agile PLM may use recursive BOMs, the 9.2.2.1 upgrade process should leave the default setting as Allow. These customers may run an Agile-supplied script to detect all BOMs with possible recursion. When these have been detected and "cleaned up," these customers may elect to set this SmartRule to Disallow.</p> <p>Important: The PG&amp;C and PCM solutions do not support BOM recursion. For companies using either of these solutions, set this SR to Disallow.</p>	<p>Allow (default for non-Oracle DB systems, and for upgrading customers)</p> <p>Disallow (default for Oracle DB systems)</p>
<b>Change Status Approver Rejected Change</b>	<p>Determines whether to allow movement of the routable object to the next status or warn the user that an approver has rejected the change. It affects all Review or Released status types.</p> <p>If you require the ability to determine if a routable object should be allowed to proceed when it does not meet the SmartRule, set it to Disallow. A user with Override privilege is able to advance the routable object in the workflow. <i>Please see the Caution about this property in Override (on page 215).</i></p> <p><b>Note:</b> To make sure that a routable object is not autopromoted through the workflow after a user has rejected it, set this SmartRule to "Disallow." Setting it to "Warning" will, in some cases, allow the routable object to be autopromoted through the workflow even when that is not the intended behavior.</p>	<p>Allow</p> <p>Disallow</p> <p>Warning (default)</p>
<b>Change Status No Response Change</b>	<p>Determines whether to allow movement of the routable object to the next status when an approver has not responded with either an approval or a rejection. It affects all Review or Released status types and applies only to changes that are being manually moved to the next level. Autopromotion requires that each approver either approve or reject the routable object.</p>	<p>Allow</p> <p>Disallow</p> <p>Warning (default)</p>

SmartRule Name	Description	Possible Settings
<b>Change Status Observer Rejected Change</b>	<p>Determines whether to allow movement of the routable object to the next status or warn the user that an observer has rejected it. It affects all Review or Released status types.</p> <p>If you require the ability to determine if a routable object should be allowed to proceed when it does not meet the SmartRule, set it to Disallow. A user with Override privilege is able to promote the routable object. <i>Please see the Caution about this property in Override (on page 215).</i></p>	<p>Allow</p> <p>Disallow</p> <p>Warning (default)</p>
<b>Check In Attachment With Different File Extension</b>	<p>Determines whether an attachment file that is being checked in can have a different file extension than the file that was checked out.</p> <p><b>Note:</b> This rule is overridden when an item's attachment is Latest-x and the file extension in the attached file folder is changed and is therefore different than the extension of the item's checked-out file.</p>	<p>Allow</p> <p>Disallow (default)</p> <p>Warning</p>



SmartRule Name	Description	Possible Settings
Copy Files To Rev	<p>Controls automatic copying of files to a new revision. The system checks this SmartRule only when a pending change is created and not when attachments are added. The settings work as follows:</p> <ul style="list-style-type: none"> <li>▫ <b>Copy</b> – For the item's new pending revision, Agile creates a new file folder and creates a new copy of the attachment file, which is placed in the new file folder.</li> <li>▫ <b>Reference</b> – Agile uses the existing file folder and creates a new reference to it on the item's new pending revision <b>Attachments</b> tab.</li> <li>▫ <b>Disallow</b> – The new item pending revision is created with no attachments.</li> <li>▫ <b>Copy with Warning</b> – The same as the <b>Copy</b> setting, with the option of choosing no attachments for the new pending revision.</li> </ul> <p>When you add items to the pending ECO, you are presented with a warning dialog that includes a row for each item you are adding.</p> <ul style="list-style-type: none"> <li>• To add the item and to copy the attachments, check both the <b>Add</b> checkbox and the <b>Attachments</b> checkbox.</li> <li>• To add the item with no attachments, check only the <b>Add</b> checkbox.</li> </ul> <li>▫ <b>Reference with Warning</b> – The same as the <b>Reference</b> setting, with the option of choosing no attachments for the new pending revision.</li> <p>When you add items to the pending ECO, you are presented with a warning dialog that includes a row for each item you are adding.</p> <ul style="list-style-type: none"> <li>• To add the item and to reference the existing attachments, check both the <b>Add</b> checkbox and the <b>Attachments</b> checkbox.</li> <li>• To add the item with no attachments, check only the <b>Add</b> checkbox.</li> </ul> <p><b>Note:</b> If you set this rule to Disallow, files that were added to the Introductory revision after the object was associated with a change (that will result in released Rev A) will not be copied to subsequent revs. Also, when a new Change is created, all the files that were added to the Introductory revision won't be added to the newly created revision.</p>	Copy Copy with Warning Disallow Reference (default) Reference with Warning

SmartRule Name	Description	Possible Settings
<b>Demotion Approvers Removal</b>	<p>Defines whether ad hoc (not the default) approvers and observers will be removed from the list when the routable object is rejected and returned (that is, demoted) to a previous status. It affects all Review and Released status types in all workflows.</p> <p><b>Retain:</b> When a workflow is returned to a previous status (including Pending), the ad hoc approvers are retained and they will see the change when it advances through the workflow again.</p> <p><b>Remove:</b> When a workflow is returned to a previous status (including Pending), the ad hoc approvers are removed – they will not see the change again unless the originator or change analyst adds them back.</p>	Retain (default) Remove
<b>Demotion Signoff Removal</b>	<p>Defines whether approvals/rejections already recorded will be removed from the routable object's <b>Workflow</b> tab when it is rejected and returned (that is, demoted) to a previous status. It affects all Review and Released status types in all workflows.</p> <p><b>Retain:</b> When a workflow is returned to a previous status (including Pending), the signoffs that are already recorded are retained.</p> <p><b>Remove:</b> When a workflow is returned to a previous status (including Pending), the signoffs are removed and approvers will have to sign off again when the change advances through the workflow.</p>	Retain (default) Remove
<b>Detailed TimeSheet Entry</b>	<p>Controls the display of the Timesheet tab in Product Portfolio Management.</p> <p><b>Disallow:</b> The Timesheet tab and all associated actions are disabled.</p> <p><b>Allow:</b> The Timesheet tab is displayed next to the My Assignments tab for users to enter Actual Hours against a task or activity. When the Timesheet is enabled, data entry for Actual Hours on the Team tab is disabled.</p>	Disallow (default) Allow
<b>Discovery Object Tables</b>	<p>Controls the display of information about an object on the Change History, Where Used, Affected Items, Manufacturers, BOM, or Pending Changes tables when the user doesn't have the Discovery privilege for the object. Possible settings are Warning (the default) and No Display.</p> <p>If the Discovery Privilege property in the Database node is disabled, then so is this SmartRule.</p> <p><b>Note:</b> When this setting is changed, users must exit the Agile Java Client and log in again before the change takes effect.</p>	Warning (default) No Display
<b>Discovery Results Table</b>	<p>Controls the display of information about the Results table when the user does not have the Discovery privilege for an object in the table.</p> <p>If the Discovery Privilege property in the Database node is disabled, so is this SmartRule.</p> <p><b>Note:</b> When this setting is changed, users must exit Java Client and log in again before the change takes effect.</p>	Warning (default) No Display

SmartRule Name	Description	Possible Settings
Display BOM Tables	Controls the display of information about an item in the BOM table when the user does not have the Discovery privilege for the item.  <b>Note:</b> When this setting is changed, users must exit Java Client and log in again before the change takes effect.	No Display with Warning (default)  Display  Display with Just Description  Display with Just Part Num and Rev  No Display
Display Structure Tables	Controls the display of model structures that are created by objects of the Designs class.	Display (default)  No Display
Duplicate Find Numbers	Controls the use of duplicate find numbers when users add items to a BOM.  This SmartRule has been expanded to dictate whether or not the same find number can be used in a site-specific portion of a BOM as is used in the global portion of a BOM. It also dictates whether or not the same find number can be used within a site-specific portion of the BOM.  For example: If the Duplicate Find Numbers SmartRule is set to Disallow, then: <ul style="list-style-type: none"> <li>▫ Find Number 1 cannot be used for Part 123 on the Milpitas BOM if Find Number 1 is used for Part 234 on the Global BOM.</li> <li>▫ Find Number 1 cannot be used for Part 123 on the Milpitas BOM if Find Number 1 is also used for Part 234 on the Milpitas BOM.</li> </ul> The same find number can be used in more than one site-specific portion of the BOM regardless of the Duplicate Find Numbers SmartRule setting.  For example: Find Number 1 could be used for Part 123 on the Singapore section of the BOM and Find Number 1 could be used for Part 234 on the Milpitas section of the BOM. The setting of the Duplicate Find Numbers SmartRule does not affect this behavior.  If the Duplicate Find Numbers SmartRule is set to Allow, any item can have the same find number as another item regardless of what site section of the BOM they are on.	Allow  Disallow  Warning (default)

SmartRule Name	Description	Possible Settings
Duplicate Item Numbers	<p>Controls the use of duplicate item numbers when a user adds items to a BOM.</p> <p>This SmartRule has been expanded to dictate whether or not the same item number can be used in a site-specific portion of a BOM as is used in the global portion of a BOM. It also dictates whether or not the same item number can be used within a site-specific portion of the BOM.</p> <p>For example: If the Duplicate Item Numbers SmartRule is set to Disallow, then:</p> <ul style="list-style-type: none"><li>▫ Part 123 cannot be added to the Milpitas BOM if Part 123 is already on the Global BOM.</li><li>▫ Part 123 cannot be added to the Milpitas BOM if Part 123 is already on the Milpitas BOM.</li></ul> <p>The same item number can be used in more than one site-specific portion of the BOM regardless of the Duplicate Item Numbers SmartRule setting.</p> <p>For example: Part 123 can be added to the Singapore section of the BOM and the Milpitas section of the BOM. The setting of the Duplicate Item Numbers SmartRule does not affect this behavior.</p> <p>If the Duplicate Item Numbers SmartRule is set to Allow, any item can be added more than once as a component on the BOM regardless of what site section of the BOM they are on.</p>	<p>Allow</p> <p>Disallow</p> <p>Warning (default)</p>

SmartRule Name	Description	Possible Settings
Duplicate Ref Des	<p>Controls whether duplicate reference designators can be used on a BOM. This SmartRule has been expanded to dictate whether or not the same reference designator can be used in a site-specific portion of a BOM as is used in the global portion of a BOM. It also dictates whether or not the same reference designator can be used within a site-specific portion of the BOM.</p> <p>For example: If the Duplicate Ref Des SmartRule is set to Disallow, then:</p> <ul style="list-style-type: none"> <li>▫ Reference Designator 1 cannot be used for Part 123 on the Milpitas BOM if Reference Designator 1 is used for Part 234 on the Global BOM.</li> <li>▫ Reference Designator 1 cannot be used for Part 123 on the Milpitas BOM if Reference Designator 1 is also used for Part 234 on the Milpitas BOM.</li> </ul> <p>The same reference designator can be used in more than one site-specific portion of the BOM regardless of the Duplicate Ref Des SmartRule setting.</p> <p>For example: Reference Designator 1 could be used for Part 123 on the Singapore section of the BOM and Reference Designator 1 could be used for Part 234 on the Milpitas section of the BOM. The setting of the Duplicate Ref Des SmartRule does not affect this behavior.</p> <p>If the Duplicate Ref Des SmartRule is set to Allow, any item can have the same reference designator as another item regardless of what site section of the BOM they are on.</p>	Allow Disallow Warning
Effectivity Date Order	Controls whether a new rev can be released with an effective date that is earlier than one or more old revisions. This SmartRule also applies to the effectivity dates for site-specific items on the Affected Items table.	Allow Disallow Warning (default)
Effectivity Gap	Controls gaps between the obsolete date of an existing part and the effective date of its replacement part on affected items. This SmartRule also applies to the effectivity dates for site-specific items on the Affected Items table.	Allow Disallow Warning (default)
Effectivity Overlap	Controls overlaps in the effective dates of an existing part and the obsolete date of its replacement parts on an affected item. This SmartRule also applies to the effectivity dates for site-specific items on the Affected Items table.	Allow Disallow Warning (default)
Enable Addition of Activities and Gates to Completed Activities	Controls ability to add new data from PPM Activities or Gates to completed (Released) Activities.	Allow Disallow (default)
Enable Comments for Deleting, Archiving & Delegating	Controls whether comments can be recorded while performing Delete, Archive, or Delegate actions in Product Portfolio Management.	Disallow (default) Allow

SmartRule Name	Description	Possible Settings
<b>Force Commodity and Part Family to be Identical</b>	<p>This rule applies only to customers that have both the PCM and PG&amp;C solutions. Otherwise, you can ignore it.</p> <p>The rule controls whether legacy Part Family objects (in PG&amp;C solution) and new Commodity objects (in PCM solution) are to be treated by the system as Commodity objects that are shared by both solutions. The default is Yes.</p> <p>If you want to treat Part Families and Commodities differently, set the rule to No. However, you must also configure the Commodities class to make the rule effective. For more information, see <a href="#">Part Groups: Configuring Part Families</a> (on page 439).</p>	<p>Yes (default)</p> <p>No</p>
<b>Items Released First</b>	Controls whether an item can be released when the item's BOM contains unreleased items. This SmartRule is pertinent to multiple sites: when a "parent" item is released, the rule checks the BOM components for site association and whether the BOM components are also released for that particular site.	<p>Allow</p> <p>Disallow</p> <p>Warning (default)</p>
<b>Many Items per PSR</b>	Allows or limits the association of items (parts or documents) with PSRs (problem reports or NCRs).	<p>Allow</p> <p>Disallow (default)</p> <p>Warning</p>
<b>Many QCR per PSR</b>	Allows or limits the association of QCRs (CAPAs or audits) with PSRs (problem reports or NCRs).	<p>Allow</p> <p>Disallow (default)</p> <p>Warning</p>
<b>Multiple Items Per Manuf Part</b>	<p>Controls whether a manufacturer part can have multiple item parents.</p> <p>If set to Disallow or Warning (the default), the system checks items as the change order's Workflow performs a Release Audit. This function has been enhanced; for more information, see <a href="#">Release Audit, or Audit Current Status for Conditions to Release</a> (on page 142).</p>	<p>Allow</p> <p>Disallow</p> <p>Warning (default)</p>
<b>Negative Value For Material Price Adder Fields</b>	Controls the entering of "negative prices" in the <b>Material Price Adder</b> attribute.	<p>Allow</p> <p>Disallow (default)</p> <p>Warning</p>
<b>Negative Value For Material Price Fields</b>	Controls the entering of "negative prices" in the <b>Material Price</b> fields.	<p>Allow</p> <p>Disallow (default)</p> <p>Warning</p>
<b>Negative Value For Non-Material Price Fields</b>	Controls the entering of "negative prices" in <b>Non-Material Price</b> fields.	<p>Allow</p> <p>Disallow (default)</p> <p>Warning</p>
<b>Notify Resource Pool Owner for Proposed Programs</b>	Controls the sending of notifications to resource pool owners for programs in Proposed state.	<p>Allow (default)</p> <p>Disallow</p>

SmartRule Name	Description	Possible Settings
Overlap Price Line Effectivity Periods	Controls overlapping effectivity periods of price lines on price objects and PCOs.	Allow Disallow (default) Warning
PSR Contains Items & Related PSRs	Controls whether a PSR can be associated with both affected items and related PSRs (Allow), or only affected items or related PSRs (Disallow).  <b>Notes:</b> 1. There is <i>no</i> business logic between items on the <b>Affected Items</b> tab and items on the <b>Related PSR</b> tab (that is, an item listed on <b>Related PSR</b> will not be copied to the <b>Affected Items</b> of the parent PSR). 2. There <i>is</i> business logic between PSRs and QCRs, so if a PSR is associated with a QCR, items from both the PSR's <b>Affected Items</b> tab and its <b>Related PSR</b> tab will automatically populate the QCR's <b>Affected Items</b> tab.	Allow Disallow (default) Warning
Redline Manufacturers On Change Order	Controls whether users are allowed to redline the <b>Manufacturers</b> tab from an ECO. If the setting is Disallow, all buttons in the Redline Manufacturer table are disabled. Possible settings are Allow (the default) or Disallow.	Allow (default) Disallow
Release QCR With Unresolved Items	Controls whether a QCR can be released either manually or through auto-promotion even though all items on the Affected Items tab have not been associated with a Change.  <ul style="list-style-type: none"> <li>▫ If you set it to No Display, the SmartRule allows a QCR to be released even though all its affected items do not have an associated Change. Such a QCR will also pass a release audit without a warning.</li> <li>▫ If you set it to Warning, the SmartRule warns users that a QCR is being released even though all its affected items do not have an associated Change.</li> </ul>	No Display (default) Warning
Released Rev Required	Controls whether a routable object can be unreleased if has an affected item that is on the BOM of a released assembly.	Allow Disallow Warning (default)
Unrelease Change Order	Controls whether change orders can be unreleased.	Allow Disallow Warning (default)
Unrelease Change Request	Controls whether change requests can be unreleased.	Allow Disallow Warning (default)
Unrelease Deviation	Controls whether deviations can be unreleased.	Allow Disallow Warning (default)

SmartRule Name	Description	Possible Settings
Unrelease Manufacturing Order	Controls whether manufacturer orders can be unreleased.	Allow Disallow Warning (default)
Unrelease Stop Ship	Controls whether stop ships can be unreleased.	Allow Disallow Warning (default)
Workflow Matching Criteria Attribute Modification	<p>A user may modify an attribute by giving it a value that does not match the workflow's matching criteria. This SmartRule governs whether the system accepts the changed attribute.</p> <p><b>Note:</b> If this SmartRule is set to Warning or Disallow, any attempt to modify attributes of the routable object that are specified in the workflow's matching criteria results in an immediate warning or prevention of the modification. However, if the workflow's matching criteria includes a reusable criteria that specifies an item's attribute, the user will be allowed to modify the value of that item attribute to a value that does not match the reusable criteria. No warning will be given. If, after that item attribute has been modified, the user then modifies the routable object in any way, the user is warned that the routable object no longer matches the workflow's matching criteria.</p>	Allow Disallow (default) Warning <b>Note:</b> None of the choices result in the workflow being altered.
Zero Value For Material Price Fields	Controls the use of "0" as a value for the <b>Material Price</b> field.	Allow Disallow Warning (default)
Zero Value For Material Price Adder Fields	Controls the use of "0" as a value for the <b>Material Price Adder</b> field.	Allow Disallow Warning (default)
Zero Value For Non-Material Price Fields	Controls the use of "0" as a value for the <b>Non-Material Price</b> field.	Allow Disallow Warning (default)

## Viewer and Files

You can double-click Viewer and Files under System Settings to open the Viewer & Files window. You can set viewing preferences for files that are attached to Agile PLM objects. The following table lists the properties on the General Information tab of the Viewer & Files window; elaborations about some of the properties follow.



Property	Description	Default
AutoPurge Enabled	Determines whether old versions of attachments should be deleted from the Agile File Manager.	No
File Version Keep	Dictates the number of versions to keep for archival purposes; used with AutoPurge Enabled set to Yes. Whether or not these versions include redlined versions depends on the settings of AutoPurge Enabled and Purge Redlined Files; see Note in text below.	3
Purge Historical Reports Unaccessed (in days)	Dictates the number of days that a Historical Report is not accessed before it is automatically purged.	30
Purge Redlined Files	Determines whether files with redlines are deleted, depending on the setting of AutoPurge Enabled. Overrides the File Version Keep preference.	No
Supported File Types	List of attachment filename extensions: used by PLM to trigger Agile Viewer to open a graphic file when the user clicks the <b>View</b> button or clicks the link under the filename.	See table below.
Structured File Type	List of modeling (e.g., CAD) file types that your company uses; the file extensions are entered as in Supported File Types field. See <a href="#">Structured File Types and CAD Revision BOM Attribute</a> (on page 248).	—
CAD Revision BOM Attribute	This field lets the administrator enable a text field in the Documents class, which permits assigning Revision letters (A, B, etc.) to CAD modeling BOMs (structured BOMs). The process to set up this field is described in <a href="#">Structured File Types and CAD Revision BOM Attribute</a> (on page 248).	—
Upload File Size Limit (in MB)	Defines the maximum size (in MB) of uploaded files for Java Client, Web Client, Portal Client, and SDK.  The default value, 0, indicates "No Limit"; any non-negative integer sets the size limit in MB. Users get error message in Java & Web clients if a file is too large.  Files that successfully upload (before a failure occurs) remain uploaded, other files (after a failure occurs) will not be uploaded.	0 (= No limit to file size)

## Options for Purging and Retaining Files

The following settings determine the circumstances under which files are purged or retained on the Agile PLM system and on users' local computers. Purging and retaining take place only during checkout and checkin routines.

### AutoPurge Enabled

Old versions of attachments can be automatically deleted from the Agile File Manager when new versions are checked in; the system does this after the checkout or checkin routine. If AutoPurge

Enabled is set to Yes, old versions are deleted. To specify how many versions of the files you want to keep, use the File Version Keep field. See [File Version Keep](#) (on page 246) and [Purge Redlined Files](#) (on page 246) below.

If AutoPurge Enabled is set to No, old versions of attachments are kept on the Agile PLM system.

**Caution** There is no operation to restore an autopurged file. AutoPurge is *not* an archive function.

### To enable or disable AutoPurge:

1. Under System Settings, double-click Viewer & Files. The Viewer & Files window appears.
2. In the Auto Purge Enabled drop-down list, select No (disabled) or Yes (enabled).
3. When you are finished, click Save.

## File Version Keep

Use this property to specify how many old versions of the files you wish to keep. For example, if the value is set to 3, then the three most recent versions of the file are archived. (The latest version is also kept.) Use this property when Auto Purge Enabled is set to Yes; if Auto Purge Enabled is set to No, all versions are kept. See [AutoPurge Enabled](#) (on page 245) above and [Purge Redlined Files](#) (on page 246).

### To specify the number of attachment versions to keep:

1. Under System Settings, double-click Viewer & Files. The Viewer & Files window appears.
2. In the File Version Keep field, type a number. The number indicates how many attachment versions you want to keep, in addition to the current version.
3. When you are finished, click Save.

## Purge Redlined Files

The Purge Redlined File field determines whether redlined files are automatically deleted along with files without redlines, depending on the setting of Auto Purge Enabled.

With Auto Purge Enabled set to Yes and Purge Redlined File set to Yes, the value of File Version Keep is the number of versions that will be kept. All earlier redlined files are purged. With Auto Purge Enabled set to Yes and Purge Redlined File set to No, the value of File Version Keep is the number of versions (either redlined or non-redlined) that will be kept. All earlier redline files are also kept.

See [AutoPurge Enabled](#) (on page 245) and [Purge Redlined Files](#) (on page 246).

### To set the Purge Redlined File property:

1. Under System Settings, double-click Viewer & Files. The Viewer & Files window appears.
2. In the Purge Redlined File drop-down list, select No (disabled) or Yes (enabled).
3. When you are finished, click Save.

## Specifying Supported File Types for the Agile Viewer

In the Supported File Types list (on the General Information tab), you can list the types of files that users can view with the Agile Viewer. Supported File Types controls whether or not the files can be viewed

in the Agile Viewer.

---

**Note** The user needs to be assigned the ViewFile privilege in order to view attachments.

---

The “2D” file formats in the following table have been tested and verified by Agile to run with Agile PLM. These formats are automatically listed in the Supported File Types list in Administrator. Current customers may also have additional file types listed after upgrading.

Note that any given file extension should only appear in either the Supported File Types list or the Structured File Types list, not both.

File extension	File type
BMP	Microsoft bitmap
CAL	CALS Group IV
CGM	Computer Graphics Metafile
DGN	Intergraph
DOC	Microsoft Word
DWG	AutoCAD Drawing File v 14, 2000
DXF	AutoCAD Drawing Exchange Format
GIF	Graphic Interchange Format
GP4	a neutral 2D viewable format
JPG, JPEG	Joint Photographic Experts Group
PCX	Microsoft Paintbrush
PDF	Adobe Portable Document Format
PLT	HPGL & HPGL 2
PPT	Microsoft PowerPoint
PS	Adobe Postscript
SLDDRW	SolidWorks 2D
TIF, TIFF	Tagged Image File Format
TXT	Text
XLS	Microsoft Excel
ZIP	Zip

The Agile Viewer is based on the AutoVue viewer developed by Cimmetry Systems Corp. For an updated list of file formats supported by the Agile Viewer, see the following Cimmetry Systems website:

<http://www.cimmetry.com/formats.html>

File types are listed by extension. When a user selects an attached file that has one of the filename extensions on the list, the View button is enabled. This is also true for a multiple-file attachment where one of the included files is supported.

**Caution** If you are the administrator of Agile PLM on a Chinese, Hebrew, or Swedish operating system, Agile recommends that you remove the Supported File Types property of all file-type extensions. This is because the Agile Viewer is not supported on those operating systems. For detailed information about using Agile PLM with international operating systems, contact the Agile support Web site.

### **To add or delete a file to the Supported File Types list:**

4. Under System Settings, double-click Viewer & Files. The Viewer & Files window appears.
5. To delete a file type from the Supported File Types list, select that line and press the Delete key to delete it.
6. To add a file type to the Supported File Types list, enter its name on a new line. You can also use Ctrl-C and Ctrl-V to copy and paste a list from one of the other file type fields or from another application.
7. When you are finished, click Save.

## **Structured File Types and CAD Revision BOM Attribute**

In addition to the Supported File Types property, Rel.9.2.2.2 adds two properties to facilitate work with modeling (CAD) file types.

Structured File Types lets you type in file type extensions that should be viewed in a structured manner. When you click on a file attachment that is listed in this property, the system knows to traverse the document BOM (or "DocuBOM") to search for other files necessary for viewing the complete model (such as a CAD assembly).

Note that any given file extension should only appear in either the Supported File Types list or the Structured File Types list, not both.

---

**Note** The files extracted to the viewer are determined by the Attachment Type attribute on the document's Attachments tab. If there is a value in this attribute (such as SOURCE) for the originally selected file attachment, then only files whose Attachment Type attribute matches this value are extracted. If there is no value in the Attachment Type attribute, then all files within the structure hierarchy are extracted.

---

To facilitate the usefulness of the Structured File Type property, a value for the CAD Revision BOM Attribute can also be specified. If entered, this value identifies the attribute that is configured as part of Agile's EC CAD Connectors to hold the "As Saved" revision.

### **To set the CAD Revision BOM Attribute:**

1. Double-click Viewer & Files.
2. From the CAD Revision BOM Attribute drop-down list, select the BOM attribute that you previously configured for holding the CAD Revision, as part of your EC installation. Click OK, then click Save.

If you wish to use the CAD Revision BOM Attribute to provide fixed BOM resolution for the viewer even though you are not using an Agile EC CAD Connector, you must manually store the current value of the Revision field, for each object in the BOM, in the BOM attribute you designate for "CAD Revision".

---

**Note** If CAD Revision BOM Attribute field is left "blank," the system uses standard Agile BOM resolution to determine how to traverse the structure to find files. Standard resolution is considered "floating", in that child objects can "rev" forward even after the parent object is released.

---

## Printing Banners and Watermarks

The Viewer & Files window includes a Watermark tab and a Banners tab. The settings on these tabs determine whether banners and watermarks appear on printouts of files attached to Agile PLM business objects, and the content of those banners and watermarks. These banners and watermarks appear on files printed with the Agile Viewer.

The only way to have no print appear is to make sure the Banner and Banner Text pairs (and Attribute Watermark/Attribute Watermark Text) are *both* blank: delete the text in the appropriate text field. For example, if you make Top Left Banner blank, you will then see an unwanted "Printed by:" because this was not deleted from Top Left Banner Text.

The following table lists the watermark properties; these can be set on the Watermarks tab.

Property	Description	Default Text or Setting
Attribute Watermark	The value of this attribute appears in the watermark as text after the Attribute Watermark Text.	[Select from drop-down list. This becomes \$ATTRIBUTENAME:]
Attribute Watermark Text	Text that appears before the text of the value in the Attribute Watermark.	[None: enter your own text, including colon if appropriate.]
Back Rev Watermark Text	Watermark text that appears if the item object is not the latest revision. This property is available only for the Parts and Documents Banner & Watermark attributes.	Back Revision
Name	Lists all the Agile PLM business classes for selection	[one for each business class]
Pending Rev Watermark Text	Watermark text that appears if the Item object is a pending revision. This property is available only for the Parts and Documents Banner & Watermark attributes.	Pending Revision
Print Watermark	Turns printed watermarking on (Yes) and off (No).	No

The following table lists the banner properties; these can be set on the Banners tab.

Property	Description	Default Text or Setting
Name	Lists all the Agile PLM business classes for selection	[one for each business class]

Property	Description	Default Text or Setting
Bottom Left Banner	Banner appears at the bottom of the printout, on the left, after the Bottom Left Banner Text.	[object number]
Bottom Left Banner Text	Text that appears before the text that is the value of the Bottom Left Banner.	\$ATTRIBUTENAME:
Bottom Middle Banner	Banner appears at the bottom of the printout, in the middle, after the Bottom Middle Banner Text.	<i>Item: "Rev [letter] of Latest Released Revision"</i> Empty for other classes
Bottom Middle Banner Text	Text that appears before the text that is the value of the Bottom Middle Banner.	<i>Item: "Rev:"</i> Empty for other classes
Bottom Right Banner	Banner appears at the bottom of the printout, on the right, after the Bottom Right Banner Text.	[Status for workflow class; Lifecycle Phase for non-workflow class]
Bottom Right Banner Text	Text that appears before the text that is the value of the Bottom Right Banner.	"Status:" [or] "Lifecycle phase:"
Top Left Banner	Banner appears at the top of the printout, on the left, after the Top Left Banner Text.	[Print User]
Top Left Banner Text	Text that appears before the text that is the value of the Top Left Banner.	"Printed By:"
Top Middle Banner	Banner appears at the top of the printout, in the middle, after the Top Middle Banner Text.	—
Top Middle Banner Text	Text that appears before the text that is the value of the Top Middle Banner.	—
Top Right Banner	Banner appears at the top of the printout, on the right, after the Top Right Banner Text.	[Print Date]
Top Right Banner Text	Text that appears before the text that is the value of the Top Right Banner.	"Printed On:"

Here are a few points about the watermark and banner settings:

- All the properties except Print Watermark can be filled with your own text.
- For any specific attachment, only one setting is available per banner or watermark property.
- You cannot create multiline banners.
- The variable "\$ATTRIBUTENAME:" inserts the name of the attribute that is selected in the Attribute Watermark property or the banner properties.
- *Within* the Banner Text and Attribute Watermark Text properties, it is possible to enter your

own text *before* the “\$ATTRIBUTENAME:” variable, but not after.

## Banner and Watermark Properties

When you set values that specify text to appear in printed banners and watermarks, you select from a drop-down list of variables and attributes (fields that appear in Agile PLM clients). The following table lists and describes the choices.

Variable in drop-down list for property	Default printed value and restriction
Effective Date – Obsolete Date	<i>Effective from: [effective date] to: [obsolete date]</i> Available for items only: Effective Date and Obsolete Date are derived from the <b>Affected Items</b> tab of the change that created the specific rev of the item.
Page Number	Page <i>[page number]</i> Also specifies the region of an image when a specific region is printed.
Page Number and Page Count	Page <i>[page number]</i> of <i>[total pages]</i> Also specifies the region of an image when a specific region is printed.
Print Date	<i>[print date]</i>
Print User	<i>[user]</i>
Rev of Latest Released Revision	<i>[rev letter of latest released revision]</i> Available for items only.
Watermark Text	The value specified for the Watermark Attribute property, regardless of whether that property is enabled. Available as a variable for banners only.
Attribute	<i>[attribute name].[attribute value]</i> Many selections: Attachments. <i>[value]</i> , Change History. <i>[value]</i> , Page Two. <i>[value]</i> , Title Block. <i>[value]</i> , Cover Page. <i>[value]</i> , General Info. <i>[value]</i>

### To print watermarking and specify watermark text:

1. Under System Settings, double-click Viewer & Files. The Viewer & Files window appears.
2. Click the Watermark tab to bring it forward.
3. Double-click the watermark you want, and update the property setting for the class.
4. Select Yes in the Print Watermark drop-down list to enable watermark printing.
5. To select watermark text, in the Attribute Watermark the drop-down list, select an attribute. The value of this attribute will appear as watermark text when Print Watermark is set to Yes.
6. To specify custom text for back revisions and pending revisions, in the Back Rev Watermark Text or the Pending Rev Watermark Text field, type the text that you want to appear in the watermark or accept the default text.
7. When you are finished modifying the Watermark tab, click Save.

## Specifying Banner Text and Location

To specify a banner to print on Agile PLM object printouts:

1. Under System Settings, double-click Viewer & Files. The Viewer & Files window appears.
2. Click the Banners tab to bring it forward.
3. For each banner you want to appear (Bottom Left, Middle, or Right; or Top Left, Middle, or Right), select an attribute or variable from the drop-down list. The value of this attribute or variable will appear in the banner.
4. If you want to remove the default text or enter new text in the banner, place your cursor in the corresponding text field of the banner, for instance, Bottom Left Banner Text, and delete or alter the text. Since this text appears *before* the value in Bottom Left Banner property, you may end this text with a colon.
5. To change a text property, in the corresponding text field of the banner, for instance, Bottom Left Banner Text, delete or alter the text, type the new text or variable in its place.
6. When you are finished modifying the Banners tab, click Save.

## Notifications

Agile PLM automatically sends notifications to users either when the user is required to take action or to notify the user that various actions have taken place.

Aside from the specific event that triggers a notification to be sent, each notification has the same attributes. By default, each notification includes text for the subject and body of the message. You can use the default text, or you can enter a text message that you want to use.

A notification is sent only if it has been enabled (its Enabled property = Yes). Depending on the Type property setting for the notification, the notification appears in the user's Inbox, is sent by email, or both. The Enabled and Type properties can be set as needed for each notification.

A user can receive notifications in Java Client or Web Client. The User preference Preferred Client (under User Settings > Users > <any user> > Preferences tab) determines in which client a user receives notifications. Remember that Agile's PPM, PCM, and PG&C solutions operate only in Web Client, so it is recommended that the Preferred Client be set accordingly for users whose work will be in those solutions.

If an action triggers multiple notifications to the same user, the user will receive only one notification. For example, if the triggering action is the status promotion of a routable object, and Bob is an approver, *and* Bob is added to the Notify list when the object is promoted, Bob is now specified as a recipient of notifications for both <routable object> Status Promotion, Approver and <routable object> Status Promotion, Observer, Notify. However, Bob will receive only one notification related to this triggering action.

**Important** To fully configure email notification in Agile PLM Clients, please see [Configuring Web Client Notification](#) (on page 267) and [Configuring Java Client Notification](#) (on page 268).



## Editing a Notification

### To edit a notification:

1. Under System Settings, double-click Notifications. The Notifications window appears.
2. Double-click one of the notification classes. The appropriate list of notification templates appears.
3. Double-click the name of the notification you want to edit. Its tabbed window appears.
4. Edit the attributes in the appropriate manner: select from a drop-down list or enter text. Refer to the following table:

Notification attribute	Description
Name	Name of notification; not editable
Enabled	Yes = the notification is enabled. This notification will be sent when the triggering event occurs.  No = this notification will not be sent.
Importance	Default is Regular; list includes High and Low.
From	Select a user from the list who will be listed in the "From:" field of the email. The defaults are variables: \$AGILE is always present on the drop-down list; \$ORIGINATOR and \$SENDER are often present; on routable objects, the appropriate routing manager variable is present (for example, \$CHANGE ANALYST). Only one user can be selected for the <b>From</b> attribute.
Type	Select Email, Email and Inbox, or Inbox from the drop-down list.
Subject (and Data)	You may compose a subject line for the notification.  By including Data tags when you compose the subject line, you can include references specific to the triggering event, such as Change Number and Originator.  See <a href="#">Entering Subject and Body Text</a> (on page 253).
Body (and Data)	You may compose body text for the notification.  By including Data tags when you compose the body text, you can include references specific to the triggering event, such as Change Number and Originator.  See <a href="#">Entering Subject and Body Text</a> (on page 253).

5. To insert a data tag (or data variable) into the Subject or Body field, click the Add Data Tag button. For more information, see [Entering Subject and Body Text](#) (on page 253).
6. Click Save.

## Entering Subject and Body Text

During the editing of a notification, when you enter the text you want to appear in the subject line

and body of the notification, you can add data tags that refer to pertinent information for that notification.

For example, for an ECO Status Promotion, Approvers and Change Analyst notification, you might want the subject line to say:

[Cover Page.Change Type] [Cover Page.Number] has been moved from [From Status] to the [To Status] of [Cover Page.Workflow] workflow.

**To include the From status in the subject line:**

1. Click to position the cursor in the appropriate place in the subject message.
2. Select From Status in the Data field next to the Subject field.
3. Click add Data Tag. The data tag [From Status] appears in the Subject field.
4. As you continue to enter text in the subject line, you can add more data tags.

Similarly, use the Data field next to the Body field to add data tags to the body text.

## Full Text Search

From the Full Text Search node, you specify how the search is done and manage the indexing of attachment files. The information on indexing in this chapter applies only to indexing files. Indexing of database information for Web searches is always done synchronously.

When a user searches for attachment file content, the search results list each object that contains files matching the search criteria. Only the latest versions of attachments are listed. For more information about setting up searches and finding data in Agile PLM, see *Getting Started with Agile PLM*.

---

Note	Regarding the Agile multi-language capability, Full Text Search is supported for attachment files in Japanese, Traditional Chinese, Simplified Chinese, German, and French localized versions.
------	--

---

## Full Text Search Limitations

Full Text Search has the following known limitations:

- Full Text Search follows existing roles and privileges. Users who do not have privileges for objects do not see these objects in search results.
- Users who do not have Field-level Read for fields do not see these fields in the search results.
- Full Text Search does not support searches for the following:
  - Synonyms
  - URL attachments
  - Viewer (Cimmetry) redline data
- For non-English text in documents, Full Text Search is supported only for attachment files, not for Stem searches or Concept searches.
- Attachment files that can be returned by a full text search must be created and saved in

Microsoft Word (.DOC) or Excel (.XLS). Non-English–text attachment files created in .RTF or .TXT formats are not returned (although .TXT files might work if the encoding type is Unicode).

- Files on any Agile File Management file vault are available to Full Text Search, and are indexed based on the Administrator settings.
- If an object contains multiple files (that is, multiple documents are attached to the object), even if only one of the files contains the search text, the entire object is returned. The file that contains the text is not indicated, and you may need to look through all attachment files to find the appropriate one.

## Full Text Search Properties

When you double-click the Full Text Search node, the Full Text Search window appears, with General Information and History tabs. There is more information about the settings for indexing attachment files in the next section.

Property	Editable?	Default	Notes
Stem Searching	Yes	Disabled	Finds variations of a word. From “run” it could find <i>ran</i> , <i>runs</i> , <i>running</i> .
Concept Searching	Yes	Disabled	Finds words that fit the same general concept. From “sports” it could find <i>running</i> , <i>track</i> , <i>basketball</i> , and the like.  <b>Important:</b> Concept searching is not supported on Microsoft SQL Server.
Indexing	Yes	Synchronous	Indicates when words in a file will be available for full text search:  Manual – indexes files when a user clicks the <b>Index Attachments</b> button only.  Scheduled – indexes files according to the specified schedule—see next table.  Synchronous – indexes files as soon as a file is added.  See <a href="#">Indexing Attachment Files</a> (on page 256).
Index File Type	Yes	doc, ppt, pdf, txt, html, rtf, xml, xls	Makes possible selective indexing of specified files. A comma separates each file type, which are not case-sensitive. The default values cover a range of common file types. If you narrow the field to include one or two file types for a specific search, be sure to re-populate the field with your preferred file types upon completion of the search.
Last Indexed	No	N/A	Date the system was last indexed.
Next Scheduled Index	No	System-generated if scheduled indexing is running	Indicates the time the next scheduled index will occur. Only appropriate if indexing is “Scheduled.”

Property	Editable?	Default	Notes
Recurrence	Yes	N/A	Indicates how frequently indexing occurs. Activated when indexing is "Scheduled."

The following additional attributes appear when you click the Recurrence field:

Property	Editable?	Default	Notes
[Once a Day] or [Every X Hours Y Minutes]	Yes	No	Specifies the frequency that indexing occurs.
Starting At	Yes	0:00:00 am	Indicates the starting time of the schedule
Ending At	Yes	0:00:00 am	Indicates the ending time of the schedule. This option will be disabled if recurrence = Once A Day.
Days	Yes	M-F	Indicates which days the schedule will take effect


## Indexing Attachment Files

There are some "best practice" recommendations for setting the system for indexing attachment files.

### Using FileLoad and Indexing New Files

If the Indexing property is set to Synchronous and a large number of files are added to the File Management file vault using Agile FileLoad, the indexing process can take a long time. It has been found that setting this field to Manual increases the loading speed for a large number of files. Or, if the files being added tend to be large documents, set the Indexing property to Scheduled and set up an indexing schedule for once every 3 or 4 hours. If most of the new files are relatively small, the Indexing property can be set to Synchronous.

### Index Attachment Button

Use the Index Attachment button  on the toolbar (Admin > System Settings > Full Text Search) to manually index new attachments that are not yet indexed. The Index Attachment button is available only when indexing is set to Manual.

### "Stop" Words

There are short, common words called "stop" words that are ignored by the system in searching against attachment files. So, a search for "the mouse" will return only matches for "mouse". You don't need to know the words unless you run a lot of searches; the list of words is in "Using Quick Search to Find Attachment File Content" in the Searches chapter in *Getting Started with Agile PLM*.

## My Assignments

This node configures some aspects of what your users see when they click the My Assignments tab in Web Client's home page. (If a user's Preferred Inbox View user preference is set to My Assignments, it will already be displayed when that user opens Web Client.) You can set the order of the columns, and you can rename the column names; the default columns are called Name, Status, Due Date, % Complete, Related To, Actual Hours, and Flag.

### To change the order of the columns:

1. Under System Settings, double-click My Assignments. The Configure My Assignment Table opens.
2. Click the Order Columns icon. The Order dialog opens.
3. Select a column name and use the Up or Down buttons to move that name in the list. ("Top-to-bottom" in the list is equivalent to "left-to-right" in the user interface.)
4. When you are finished, click OK. The dialog closes and you see the numbers in the Order column reflect the new order. A user will have to open or re-start Web Client to see the columns in the revised order.

### To change the name of a column:

1. Under System Settings, double-click My Assignments. The Configure My Assignment Table opens.
2. Click in the field of the Column Name that you want to change. The field becomes editable.
3. Enter the new name. You can change other column names in this procedure.
4. When you are finished, click Save. A user will have to open or re-start Web Client to see the new column names.

### To create a new column:

1. Under System Settings, double-click My Assignments. The Configure My Assignment Table opens.
2. Click the New icon. A new row (representing the eventual column in Web Client user interface), is created.
3. Enter a name in the Column Name field.
4. In the Column Data Source field, use the drop-down dialog to select a data source for the column. You can choose a Class – Activities or Gates – and enter a Find value, using the Down or Up buttons to "find next" or "find previous," respectively. When you have selected a data source, click OK.
5. Use the Order Columns icon to adjust the order of the new column with the others (and to activate the Save button). When finished, click Save to complete the procedure. A user will have to open or re-start Web Client to see the new column.

### To remove a column:

1. Under System Settings, double-click My Assignments. The Configure My Assignment Table opens.
2. Select the row that you want to remove. (It is easiest to click in Data Type or Order column of the row.)
3. Click the Remove Column icon. The row will be removed. Default Columns cannot be removed, they can only be made non-visible.
4. When you are finished removing columns, click Save.

## Unit of Measure (UOM)

---

Note	If you do not see the UOM node under System Settings, modify the Administrator privilege so that Applied To list includes UOM.
------	--

---

The UOM node allows you to define different units of measure for use in Agile PLM. Units of measure are important for Product Governance & Compliance (PG&C), where you must measure the weight or quantity of restricted substances contained in your products.

You can define a new measure, and then specify the units used for that measure. You can also specify units of measure for any existing measure defined in your Agile PLM system. For example, the Dram unit of measure could be added to the Weight measure. In avoirdupois weights, 16 drams equal 1 ounce.

Each measure has a standard unit. All unit of measure values are normalized to the standard unit using a conversion factor. If you define a new unit of measure, you must specify the conversion factor relative to the standard unit. For example, if the standard unit of the Weight measure is Gram, the conversion factor for Ounce is 31.1034.

## Creating Categories of Measure and Units of Measure

The following tasks describe how to create a new category of measure and new units of measure.

### To create a new category of measure:

1. Under System Settings, double-click UOM. The Measures window opens.
2. Click the New button. The Create a New Measure dialog box appears, referring to a new category of measure, just as "Weight" and "Quantity" really are kinds or categories of measurement.
3. Enter the Name, Description, and Range Match Factor for your new category of measure.  
The Range Match Factor expands the range of search results for a particular unit of measure that you search for. Its purpose is to adjust for inexact conversions to the standard unit for a measure.
4. Click OK.

### To create a new unit of measure:

1. Under System Settings, double-click UOM. The Measures window opens.
2. Double-click a category of measure in which your new UOM belongs. The Measure: <Name> window appears.
3. Click the UOM tab.
4. Click the New button. The Create a New Unit of Measure dialog box appears.
5. Enter values for fields described in the following table. When you have finished Click OK.

Unit of Measure Attribute	Description
Name	Name of the unit of measure.
Abbreviation	Standard abbreviation for the unit of measure.
Conversion Factor	Factor used to convert values to the standard unit. (See "Is Standard" description.)
Is Exact Conversion	Select <b>Yes</b> if the specified conversion is exact.
Is Standard	Select <b>Yes</b> if the unit is the standard for your company. Only one unit of measure can be the standard.  The first UOM that you create in a new category of measure must be the standard, whose conversion factor must be 1. All subsequent unit of measure values are normalized to the standard unit using the specified conversion factor.
Enabled	Whether the unit of measure is enabled. Only enabled units of measure appear to the end-users of Agile PLM clients.

## Company Profile

The Company Profile node provides a single location for storing information about your company.

### To define the company profile:

1. Under System Settings, double-click Company Profile. The Company Profile window opens.
2. Enter the name, address, phone and FAX numbers, URL, and the corporate currency.
3. Click Save.

## Currency Exchange Rates

From the Currency Exchange Rates node, you manage the Currency Exchange Rates table for in-system currency conversion. The list of available currencies is determined when Agile PLM is installed. For information about maintaining the list of available currencies, contact your Oracle Consulting – Agile Practice representative. The table in the Currency Exchange Rates window displays the currencies in use and their exchange rates for the corporate base currency.

---

**Note** Currency exchange rates affect costs in two places: Product Portfolio Management activities and the Analysis tab of a sourcing project.

---

Currency conversion rates are used to convert currency values to the selected corporate currency. For instructions on how to select the corporate currency, see [Company Profile](#) (on page 259).

Currency conversion is not an automatic process. From the Analysis tab, you can switch between normalized currency rates and the original currency values entered by suppliers. Elsewhere in Agile PLM, currency conversion rates don't apply. For example, your system can be configured to have money fields on Page Two or Page Three of items. If you change the currency for a money field (for

example, from USD to GBP), the field value isn't automatically recalculated for the new currency.

**To add a currency:**

1. Under System Settings, double-click Currency Exchange Rates. The Currency Exchange Rates window opens.
2. Click the New button. The Add Currency dialog box appears.
3. Select one or more currencies in the Choices list and use the right-arrow to move them to the Selected list.

An additional dialog box opens for entering conversion rates.

4. Type the appropriate values in all Conversion Rate fields. Enter rates as decimal values, for example, 1.04 or 0.96.
5. Click OK. The new currency exchange rates appear in the list.

**To modify the exchange rate for a currency:**

1. Under System Settings, double-click Currency Exchange Rates. The Currency Exchange Rates window opens.
2. Double-click a currency to update. The Currency window opens.
3. In the Conversion Rate field, type a decimal value.
4. Click OK. The new currency exchange rates appear in the list.

---

Note	To import updated currency exchange rates from a Microsoft® Excel file or a delimited text file, choose Tools > Import. For more information, see <i>Getting Started with Agile PLM</i> .
------	---

---

**To view historical rates for a currency:**

1. Under System Settings, double-click Currency Exchange Rates. The Currency Exchange Rates window opens.
2. Double-click a currency. The currency window opens.
3. Click the Historical Rates tab. The Historical Rates tab displays a list of conversion rates for the currency by date. You cannot edit historical currency rates.
4. Click Close.

## Dashboard Management

From the Dashboard Management node, you can configure the information display and behavior of the Agile PLM Dashboard. The Dashboard is highly configurable and can be used to present key project information to the user, according to preferences.

As an administrator, you can add an unlimited number of system-level tabs to the dashboard. The visibility of each tab can be controlled through roles and privileges.

You can configure a dashboard tab to generate and display content from any Agile object. Custom dashboard extensions (DXs) can be used to retrieve and present data from external systems (for example, ERP inventory numbers) into the dashboard. Tables within a dashboard tab can be configured to display data retrieved through advanced search queries or process extensions in




various graphical formats. You can even configure a dashboard table to display an internal or external Web site.

Within Dashboard Management, you can:


- View and edit all dashboard tabs
- Add or delete optional dashboard tabs
- Add tables to optional dashboard tabs
- Configure multiple sources of data for the tables, such as:
  - Advanced search queries
  - Dashboard extensions (chart and table)
  - Custom content through URL process extensions (PXs)
- Configure the display of dashboard tabs

## View Dashboard Tabs

To view dashboard tabs, click System Settings > Dashboard Management node. The list of default dashboard tabs displays. You can reorder this list using the  icon, to change the order in which the tabs display in Web Client. To navigate to a tab, click on its name. You can edit the name and description of the tab, and specify whether the tab should be visible or not.

Optional tabs can be renamed and configured.

## Adding Dashboard Tabs


To add a new tab, click the  icon in Dashboard Management. In the Create Dashboard Tab dialog, enter a Name and Description. In the Visible field, select Yes.

---

**Note** Although you can create an unlimited number of tabs, the tabs displayed in Web Client are restricted by the user's roles and privileges. To enable a user to view a particular dashboard tab, you must assign the Dashboard Tab View privilege to that user, and select the required tab in the AppliedTo property of that privilege. For further information, see [AppliedTo Capability](#) on page 200.

---

## Deleting Dashboard Tabs

You can only delete dashboard tabs that you have created. Default tabs cannot be deleted. To delete a newly created Dashboard tab, within Dashboard Management, select the tab and click .

---

**Note** Once a tab has been accessed, you cannot delete it. Attempts to delete it will result in an error - "Object is in use."

---

## Adding Tables to Optional Tabs


Once a new optional tab is created, tables need to be inserted into the tab. To add a table, double-click the new tab name in Dashboard Management and click the Tables tab. Click the Create

Dashboard Table icon.

The table below lists the properties in the Create Dashboard Table for Table type.

Property	Description	Possible Settings
Name	Enter the name of the table	
Description	Enter the description of the table	
View List Type	Lists the type of table type. Select Table	Chart, Table, Custom, Advanced Search
Dashboard Extension (DX)	Lists all the dashboard extensions created for Table type list.	
Visible	To enable in Web Client	Yes/ No

## Adding Data to Tables

Double-click the new table, click on Attributes tab and click on the Add an Attribute  icon to create a new attribute. Agile currently supports Text, Numeric, Image, Date, Money, and Link type of table attributes.

---

**Note** Attributes need to be of a specific type which is supported by Agile. While creating a DX, the data for the DX would already be defined as currency, numeric, text, and so on.

---

In the Column attribute General Information tab, the Attribute field needs to be mapped to the attribute name mentioned in the DX. For example, if an attribute name in the DX is Mytext and the attribute type is selected as Text, the attribute field should be mapped with the attribute name Mytext.

## Adding Charts to Optional Tabs

**To create a chart type table in a newly created optional tab:**

1. In Dashboard Management, double-click the name of the new tab to open it.
2. In the Tables tab, click the New Dashboard Table icon.
3. Specify table fields and attributes as described in the table below:

Property	Description	Possible Settings
Name	Enter a name for the table.	
Description	Enter a description for the table	(optional)
View List Type	Lists the type of table. Select <b>Chart</b> (when you select Chart, additional options are displayed).	Chart, Table, Custom, Advanced Search

Property	Description	Possible Settings
Dashboard Extension	Lists all the dashboard extensions created for chart type. Select the dashboard extension you want.	
Visible	Select Yes to enable display in Web Client	Yes/ No
Chart Type	Select the type of chart you want displayed.	Area, Bar, Line, Pie, Polar, Scatter, Stacked Area, Stacked Bar, Table
X axis	Type the X axis label.	(optional)
Y axis	Type the Y axis label.	(optional)
Show Legend	Specify whether the chart legend should display on screen.	Yes/ No
Legend Position	Specify the position where the Legend should be displayed.	Bottom, default, left, right, top
3D Style	Specify whether the view should be 3-dimensional.	Yes/ No
Header	Enter a header note if required.	(optional)
Footer	Enter a footer note if required.	(optional)

**Note** For Stacked type Charts, the Chart DX can be coded with unlimited X- and Y-axis values.

**Important** In the Dashboard Extension field, all Chart type DXs will be displayed only if the user has the SDK license and if the DX was created as Chart type. There are two classes for creating Chart type dashboard extensions: 1. ChartDataModel, and 2. ChartDataSet. These classes should be used while creating Chart DXs. The saved Chart DX needs to be saved in the *agile\_home/integration/sdk/extensions* folder and linked in the Dashboard Extension field. For further information on creating DXs, refer to Agile PLM SDK Guide

## Adding Advanced Search to Optional Tabs

**To create a dashboard table that uses an Advanced Search query as the data source:**

1. In Dashboard Management, double-click the name of the new tab to open it.
2. In the Tables tab, click the New Dashboard Table icon.
3. Specify table fields and attributes as described in the table below.

Property	Description	Possible Settings
Name	Enter a name for the table.	
Description	Enter a description for the table.	(optional)
View List Type	Select Advanced Search.	Chart, Table, Custom, Advanced Search

Property	Description	Possible Settings
Dashboard Extension		Disabled (not applicable for Advanced Search)
Visible	Select Yes to enable display in Web Client.	Yes/ No

---

**Note** When you select View List type as Advanced Search, the dialog box automatically displays fields applicable only to Advanced Search type table.

---

## Configure Table for Advanced Search

Once the table is created, double-click the new created table and click the Configure Dashboard Table icon in the General Information tab.

You can create a new or use a saved search. The Configure Table dialog is similar to the Advanced Search function of Agile except for a few differences as follows:


- Output Fields
  - The Output Fields option allows you to select the available fields as the X and Y axis values. Clicking the Output Fields button displays the Customize Output Display dialog. Select the required fields from the Available Fields list and click the left and right arrow buttons to move field names to and from the Available Fields and Selected Fields lists.
  - The Display Chart button allows a Chart and Table type display option. If Chart option is selected, the Configure Table dialog is displayed. You can do the following:
- Select the Chart type.
- Select the 3D style for Chart.
- Show or Hide the Legend.
- Select the position of the Legend to be displayed in the Chart.
- Select the X axis value from the drop down list (which is displayed from the Customize Output field)
- Label the header, footer, X axis and Y axis values on the chart
- Perform a mathematical function for the Data values such as Average, Count, Max, Min, and Sum.

## Adding Custom (URL) Process Extensions for Optional Tables

URL process extensions that are created with Dashboard as the integration point are listed in the Dashboard Extension field, while a Dashboard table with View Type List is created. The output of the URL process extension is displayed in the Dashboard table.

For more information, see the *Agile SDK Developer Guide*.

## Reordering Table Rows in a Tab

You can reorder the tables in a tab from Dashboard Management > [OptionalTab Name] > Tables > Config Dashboard icon . The Config Tab dialog is displayed in which you can select all the tables from the Available Content field and place it in the required rows. There are only three rows; by default the new tabs are created in Row 3. You can reorder the tabs in the order of the rows to be displayed.

## Displaying Optional Tabs

To ensure that all optional tabs that are newly created under Systems Settings > Dashboard Management display properly, go to User Settings > Privileges > Dashboard Tab View and enable each tab for end-users in Web Client.

Select the New icon and type in a new privilege name and description. Set Enabled to Yes. All created tabs will be displayed in the AppliedTo > Choices field. Select the tabs you want displayed in the Dashboard and use the right arrow icon to move these to the Selected area. Any tab you choose can be set as the Home page.



# General Server Settings

**This chapter includes the following:**

▪ Locations .....	267
▪ File Management in Agile PLM.....	269
▪ Database .....	276
▪ LDAP .....	278
▪ Preferences .....	284
▪ Licenses.....	291
▪ Task Monitor .....	293
▪ Task Configuration.....	294

This chapter provides information about Server Settings, such as Locations, File Manager, Database settings, systemwide Preferences, and Licenses.

## Locations

The Locations window displays information about the location of the application and various servers in your Agile PLM configuration.

On the General Information tab of the Locations window, you can define the Web Server URL and the Java Client URL. Properties that are also seen on this tab but are not editable are the Application Server URL, DB Server Hostname, DB Server Username, and an informal Name of the database server; these fields were populated when the Agile PLM system was installed.

---

**Note**      The Web Server URL and Java Client URL properties should only be changed by you, the administrator, with confirmation from your IT people.

---

## Configuring Web Client Notification

Agile PLM users whose Preferred Client property is set to Web Client will receive automatic email notifications that contain a link to the Web Client. You can specify the Web Client location in the Web Server URL setting.

**Important**    Agile's Product Cost Management and Product Portfolio Management solutions operate only in Web Client. Users who work primarily in those areas should have their Preferred Client set to Web Client.

**To configure Web Client notification by modifying the Web Server URL:**

4. Under Server Settings, double-click Locations. The Locations window appears.
5. Enter your Web Server URL in this format: <http://Web> Server:<port>/Agile/PLMServlet

Note	The Web Server URL is case-sensitive. Ports are usually configurable. A port listed herein is either an industry-standard port or a default port. If the Web server uses the standard HTTP port (80), the port isn't needed in the URL.
------	--

6. When you are finished, click Save.

## Configuring Java Client Notification

Agile PLM users whose Preferred Client property is set to Java Client will receive automatic email notifications that contain a link to the Java Client. You can specify the Java Client location in the Java Client URL setting.

Note	Although you can access the Java Client through a proxy server, the Java Client URL must be the location where Java Client is deployed on the application server for email notifications to work.
------	---

### To configure Java Client notification by modifying the Java Client URL:

1. Under Server Settings, double-click Locations. The Locations window appears.
2. Enter the Java Client URL appropriate for your application server

Oracle Application Server:

`http://<appserver>:8888/JavaClient/start.jsp`

WebLogic Application Server:

`http://<appserver>:7001/JavaClient/start.jsp`

Note	The Java Client URL is case-sensitive.
------	--

3. When you are finished, click Save.

## Specifying the Location of Agile Portals

If your Agile PLM system includes the Portlets server license (corresponding to Agile Portlet Services solution), your company can set up Web-based portals to use as Agile PLM clients. You must specify portal locations, and your company can have multiple portals set up for different types of users, for example, executives, change analysts, content managers, and program managers.

Agile PLM users whose Preferred Client property is set to Portal Client will receive email notifications that contain a link to the user's preferred portal URL. For information about how to set a user's preferred client and preferred portal URL, see [Users and User Groups](#) on page 149.

### To add a Agile Portal Client URL:

1. Under Server Settings, double-click Locations. The Locations window appears.
2. Click the Portals tab.
3. Click the New button. The Create a New Portal URL dialog appears.
4. Specify the name of the portal and its URL. Make sure the Enabled field is set to Yes.
5. Click OK.



## File Management in Agile PLM

This section describes how file management works in Agile PLM, both in enterprises with a single file management server and in larger enterprises with multiple, distributed file management servers. Elements described below generally have an Administrator setting on the Server Settings > Locations > File Manager tab, which is configured at the end of this section. After installing the File Manager and setting up a proxy server for it, you must configure the File Manager settings in the Java Client.

---

**Note** File Manager is no longer bundled on the Agile Application Server. It runs as a separate process, running on Tomcat version 5.0.28(+). This has probably been configured on installation of Agile PLM 9.2.

**Note** Before configuring the File Manager, make sure you set up a proxy server. See the appropriate *Agile PLM Installation Guide*.

---

### Agile File Management Server

There are two main components to Agile File Manager (AFM): the file server and the file vault. When a file is added to Agile, it is assigned an internal Agile identifier (ID) number by the file server and added to the file vault. It is not stored in the file vault under its original filename: mapping information is maintained in the Agile PLM database, and the filename is modified per Filename Prefix systemwide preference.

When a user requests a file through an Agile PLM client (which requires privileges such as Get, View, or Checkout), the request is routed to the file server, which looks up the file's ID, retrieves the file from the file vault, and sends it to the user.

### File Vault

The file vault contains all file attachments stored by AFM. It is recommended that a separate server or storage device be designated as the Agile File Vault to store attachments or files. This is particularly useful when taking advantage of application clustering because each server in the cluster needs access to the same file vault.

### Using FileLoad and Indexing New Files

If the Indexing property is set to Synchronous and a large number of files are added to the File Management file vault using Agile FileLoad, the indexing process can take a long time. It has been found that setting this field to Manual increases the loading speed for a large number of files. Or, if the files being added tend to be large documents, set the Indexing property to Scheduled and set up an indexing schedule for once every 3 or 4 hours. If most of the new files are relatively small, the Indexing property can be set to Synchronous.

### Distributed File Management

Due to the geographically dispersed nature of the global enterprise, multiple AFM servers can be deployed in a distributed configuration for efficient distribution of product content. A Distributed File Management (DFM) setup allows you to manage files efficiently at remote locations. Deploying DFM servers reduce download time by placing Agile PLM files closer to where they are needed, and allowing users configure which file manager to use. Agile PLM 9.2 supports a large number of DFM servers.

## Optimized Replication Systemwide Preference

When there are more than two File Managers, this systemwide preference (Preferences node) allows the PLM system to keep track of the File Managers that contain each file. During replication, the requesting FM only contacts other FMs that contain the file, and downloads a given file from the nearest FM (which is determined by shortest 'ping' to all the FM servers). Set to Enabled or Disabled, the latter can be set to troubleshoot problems with the optimizations.

## Using the Agile Viewer Server in a Distributed Environment

If Agile Viewer is used, an Agile Viewer Server should be installed locally with each DFM server. The local viewer server can be installed on the same machine as the DFM. If local users are accessing Agile PLM from outside the firewall, a proxy is recommended in the DFM configuration.

## How Distributed File Manager Works

Agile's file management servers have a peer-to-peer relationship. When a user requests a file, the request is directed to that user's configured file manager (see [Configuring a File Manager](#) (on page 272)). If the file is found, it is served to the user. If the file is not found at that location, the FM sends a request for the file to its peer file servers. The peer file server who has the file sends it back. The local file server saves it to its vault and serves it to the user.

A DFM scenario might be as follows: the AAS is installed in San Jose, California, and a DFM server is installed in Tokyo, Japan. A user from the Tokyo site selects a file attachment to view. The DFM in Tokyo determines that the file is located in San Jose and downloads the file, copies it to the file vault in Tokyo, and serves the file to the user through the View Server. Another user selects the same file attachment. Since the file now resides in the Tokyo DFM vault, it is served directly to the user.

You can install multiple file vaults, or DFM servers. Multiple file vaults are defined on the Server Settings > Locations > File Manager tab. On the Preferences tab for each Agile PLM user, you can specify the preferred file server for that user.

---

Note	If your Agile PLM system is using multiple DFM servers, your users must use the full domain URL when logging in. If a user does not use the full domain URL, she will be asked to provide login information again when he performs a file operation.
------	--

---

## File Management Security

There are two components to file security: server security and client access security. There is also a utility called Handle File Checksum in Java Client that permits users to be warned of problems with improperly accessed files and a means to fix them.


### Server Security

Content in Agile file vaults must be protected from deletion or modification by unauthorized users. Agile recommends allowing access only to Agile PLM administrators. System users who access files through the clients do not need Add and Read privileges to the Agile file vault or file directory because Agile file servers retrieve files for users, this task is not performed by individual users.

## Client Access Security

Whether you access files from Java or Web Clients, your files are secure. When the client is run behind the firewall, the files are transferred behind the firewall, which secures your files from outside intervention. When clients access files from outside the firewall, Secure Sockets Layer (SSL) communications protocol is supported.

## Handle File Checksum


File Checksum is a feature in Agile that warns users when they encounter a file – say, an attachment to a business object – that may have been accessed improperly. In both Java and Web Clients, the Attachments tab of business objects and the Files tab of file folders have a field called Has Checksum Error . When a file on an attachment row has a checksum error, the Has Checksum Error field displays the same symbol.

In support of the Checksum feature, the administrator can manage file validation with a systemwide preference and a privilege mask:

- Checksum Computation systemwide preference sets whether to enable or disable checksum computation for attachment files. Note that the default setting is Disabled, which does not allow for this security feature to function. (It is possible that server speed is improved when this preference is set to Disabled, but that may not be as important as enabling the Checksum functionality.)
- Reset File Checksum privilege mask, which is built on the Reset privilege. All users who have been assigned this privilege mask will be notified of any file with a checksum problem. (Note that this privilege mask is not included with any out-of-box Agile role.) You can add the privilege mask to any existing role; at first, however, it may be safest to add it to specific individual's role, or perhaps to your Administrator role and to your User Administrators.

The notification provides such information as the offending file's filename, the file folder(s) to which it is associated, the File Manager that hosts the file, and the file's location.

Besides the Reset File Checksum privilege, you will need to assign Read and Modify privileges for file folders to enable users to resolve checksum errors.

Checksum errors are resolved at the level of the file folder. Use the notification link to open the file folder, then click the  in the offending file's row and use the dialog to resolve the error. You can click one of three options:

1. Delete the file – Deletes the file attachment itself across the Agile system. Use this option when you believe that the file is corrupted and irrecoverable, even across DFM.
2. Delete only invalid files – This option can be used to attempt to fix the checksum issue:
  - Deletes the file from File Managers where the file status is Invalid.
  - Resets the checksum flag.

Deleting invalid files while leaving the valid copies alone allows you to replicate the file on a preferred DFM.

This option is disabled in the following situations:

- There is just one entry in the file status table.
  - All the entries in the table have file status as Invalid.
3. Upload a new file to replace the problematic file in iFS vault – Replaces the current file with a new file and resets the checksum to the value of the new file in the database. The file's ID in the

database and the filename in the vault remain unchanged.

## Configuring a File Manager

On the Server Settings > Locations > File Manager tab, you can define multiple file managers.

File Manager

Name: iFS

File Manager URL: http://grange.agile.agilesoft.com/Filemgr/AttachmentServlet

Enabled: Yes

Primary file server: Yes

Standard <<

File Manager Internal Locator: http://grange.agile.agilesoft.com/Filemgr/services/FileServer

Viewer Server URL: http://grange.agile.agilesoft.com/Filemgr/VueServlet

Viewer Proxy URL: http://grange.agile.agilesoft.com/Filemgr/JVueProxy

Viewer Content URL: http://grange.agile.agilesoft.com/Filemgr/JVue

Vault Configuration

Vault Type	Description	Base Storage Dir...	Purge Directory	Category
Standard	Primary Vault	C:\Agile\Agile92\f...	C:\Agile\Agile92\f...	Read-Write

OK Cancel

When you click the File Manager tab and either click the New button or double-click one of the property fields, you see the first four fields in the table below. Click the Advanced button to see the other fields. From the advanced view, you can click the Standard button to return to the standard view.

**Important** You must re-start your file server when you make changes on the File Manager tab, or create a new one, for the changes to take effect.

If a URL is specified in the documentation or release notes, copy the upper- and lower-case characters exactly, including the full domain name specified.

Field	Description
-------	-------------

Field	Description
<b>Fields in the “Create a File Manager” dialog and File Manager “Standard” view</b>	
<b>Name</b>	The informal name of this instance of File Manager. Use a descriptive name that is easy for you and your user administrators to understand, especially in a DFM (multiple) server configuration. This name will appear in the Preferred File Server drop-down list on each user’s Preferences tab.
<b>File Manager URL</b>	The file server URL that Agile Web Client will connect to. The format is: <i>http://&lt;proxy/loadbalancer&gt;:&lt;port&gt;/&lt;fileservice_virtual_path&gt;/AttachmentServlet</i>
<b>Enabled</b>	Enables or disables the file management server. If you want to create the file manager now and enable it later, select No.
<b>Primary File Server</b>	Select Yes or No from the drop-down list to make this server the primary file server or not. The primary file server should be co-located with the application server, that is, in the same LAN.  Setting a different file manager to be “primary” – setting this field to Yes when another file manager is already the primary – will automatically re-set this field in the previous primary file server to No.
<b>Click the Advanced button to view and edit these fields:</b>	
<b>File Manager Internal Locator</b>	The file application server URL for the File Manager or other component application (such as Agile SDK) to use. The format is: <i>http://&lt;File Manager host&gt;:&lt;port&gt;/&lt;fileservice_virtual_path&gt;/services/FileServer</i>
<b>Viewer Server URL</b>	The viewer server (jVue server) URL that Agile Web Client will connect to. The format is: <i>http://&lt;proxy/loadbalancer&gt;:&lt;port&gt;/&lt;fileservice_virtual_path&gt;/VueServlet</i>
<b>Viewer Proxy URL</b>	The viewer proxy URL that the Viewer Server uses to communicate with the File Manager. If local users are accessing Agile PLM from outside the firewall, a proxy is recommended in the DFM configuration. The format is: <i>http://&lt;File Manager host&gt;:&lt;port&gt;/&lt;fileservice_virtual_path&gt;/VueLink</i>
<b>Viewer Content URL</b>	The location from where the Viewer Applet is downloaded. The format is: <i>http://&lt;proxy/loadbalancer&gt;:&lt;port&gt;/&lt;appserver_virtual_path&gt;/jVue</i>

### To create a new File Manager:

1. Under Server Settings, double-click Locations. The Locations window appears.
2. Click the File Manager tab.
3. Click New. The Create a File Manager dialog appears.
4. Fill in the fields for Name, File Manager URL, and Primary File Server, which are described in the table above.

---

**Note** If your company is using Agile Viewer, an Agile Viewer Server should be installed locally with each DFM server.

---

5. The Enabled field must be set to Yes for that server to be put into active use.
6. Click the Add New Vault button to add and configure a new file vault.
7. When you have defined the new file manager, Click OK.

Once you have created this new instance of a file manager, you can open it and add other server definitions, as described in the next task.

### Creating a Custom File Vault

If you are using Java Client to upload references to files stored in a Custom file vault, you must set up the vault first. A Custom vault is “Read Only” and is not available to users to check out and modify attachments; it is used for uploading files using Agile FileLoad (which is documented in *Agile PLM Import & Export Guide*).

#### To set up a Custom file vault:

1. Under Server Settings, double-click Locations. The Locations window appears.
2. Click the File Manager tab.
3. Double-click the entry to display the File Manager dialog box.
4. Click the + button to add a new vault.
5. In the Vault Type field, select Custom.
6. In the Description field, type a description of the vault.
7. In the Base Storage Directory field, enter the primary location where the files are stored. See next subsection
8. In the Purge Directory field, enter the primary location where the purged files are moved to. See next subsection.
9. Click OK.
10. Restart the Agile File Manager.

#### ***Base Storage Directory and Purge Directory Fields***

The Base Storage Directory default location is \files. The location can be a shared network storage directory, such as a Storage Area Network (SAN).

**Important** Do not specify a mapped location. Instead, specify the actual machine name and directory, like this:

[\\fileserver\files](#)

The Purge Directory field indicates where purged (deleted) files are automatically moved. The default location is agile\_home\files\purge. The location can be a shared network storage directory, such as a Storage Area Network (SAN).

**Important** Do not specify a mapped location. Instead, specify the actual machine name and directory, like this:

[\\fileserver\files\purge](#)

### Modifying a File Manager Definition

#### To modify a File Manager definition:

1. Under Server Settings, double-click Locations. The Locations window appears.

2. Click the File Manager tab.
3. Double-click the row of the file manager you want to modify. The File Manager dialog appears.  
Be sure to navigate to the correct server field – use the Advanced button as needed.
4. When you have finished your modifications, click OK.

## **Deleting a File Manager Definition or Removing a File Server**

### **To delete a file manager definition:**

1. Under Server Settings, double-click Locations. The Locations window appears.
2. Click the File Manager tab.
3. Double-click the row of the file server you want to modify. The File Manager dialog appears.  
Be sure to navigate to the correct server field – use the Advanced button as needed.
4. You can simply delete the reference to the server in the field – the file server definition.  
To remove a configured server, select a row and click the Remove Selected Vault button. If you have rights to that server, it will be removed.
5. When you are finished, click OK.

## **Setting the Preferred File Manager for a User**

If your Agile PLM system uses Distributed File Management, each user should specify the preferred file manager to use. For best performance, specify a file server in the same location as the user. For example, users in the United States should select a file manager located in the United States and not one located in China.

### **To set a user's preferred file manager in Java Client:**

1. Under User Settings, double-click Users. The Users window appears.
2. Double-click the user's name in the list. That user's window appears.
3. Click the Preferences tab.
4. For Preferred File Manager, select a local file manager from the list.
5. Click Save.

### **To set a user's preferred file manager in Web Client:**

1. Click Tools > Administration > Users. The Users page appears.
2. Click the user's name in the list. That user's page appears.
3. Click the Preferences tab.
4. Click Edit. The fields become editable.
5. For Preferred File Manager, select a local file server from the list.
6. Click Save.

## Purging Older Versions of Files

If AutoPurge is enabled for your Agile PLM system (see [Viewer and Files](#) (on page 244)), the Agile File Manager automatically purges old versions of files. A background thread starts every day at 6:00 am local time that determines what files should be purged. If there are such files, a folder named by date and time is created in the purged files location and the files are moved into it. If no files need to be purged, the dated folder is not created. You can change the default interval between the hard-coded time and the time that the purge actually takes place. This interval is set in Attachment Purging Task; see [Task Configuration](#) (on page 294, on page 294).

---

Note	The Agile File Manager doesn't permanently remove purged files from the system. Your company's IT personnel must handle that task.
------	--

---

## Use Case for Attachment Purging Task

If there happened to be server failure during the time that was configured for attachment purging, the task would not run that day. For example, if the task runs at 6:00 am every day but the server shut down between 5:00 am and 9:00 am, the task would not run because the Task Lookback Window is set to 120 minutes, and 9:00 am is a greater value of minutes from 6:00 am. The workaround is to temporarily set Task Lookback Window to a value that is larger than 180 minutes (in this case), say, to 200 minutes. Then the task will run when the server is restarted.

In general, the value for Task Lookback Window (Server Settings > Task Configuration > <any task> > General Info page) should always bigger than the value for Task Interval to make sure that no event is skipped.

## Database

From the Database node you can view and configure Agile PLM's systemwide database settings.

### To modify a Database setting:

1. Under Server Settings, double-click Database. The Database window appears.
2. In any editable field, enter a new value or select from the drop-down list.
3. When you have finished, click Save.
4. Restart the Agile Application Server to activate the change.

**Caution** If you change the Notification Enabled setting, it takes effect immediately. Changing any other Database setting requires that you restart the Agile Application Server for the new setting to take effect. All active users' connections will be terminated when the Agile Application Server is restarted.

The following table lists Database properties.



Property	Description	Default
Discovery Privilege	Enabling Discovery Privilege allows all Discover privilege masks for this Agile PLM system to function.  If Disabled, all Discover privilege masks and Discovery-related SmartRules are disabled. If you are not using Discovery functions, you can improve your system's performance by setting this property to Disabled.	Enabled
GUID	The unique ID for your company's Agile PLM database. This property is not editable.	(GUID)
Name	The name of the main Agile PLM database; you can rename the node, using up to 29 letters.	Agile Database
Notification Enabled	Whether email notifications are sent to users.  If this property is disabled (= No), all other email notification settings are ignored.	No
Schema	Database "username," or the name of the schema, that is used to log in to the database. This property is not editable.	(Schema name)
Server	The name of the current Agile PLM database server. This property is not editable.	(Server name)
DB Version	The version of Agile PLM database being used. This property is not editable.	(DB version)
Mail From Domain	Domain name for email notification, for example, mydomain.com.	(None)
Mail From User	The From email address that is used in Agile PLM email notifications. The value must be a valid email address, for example, <a href="mailto:AgileAdmin@mydomain.com">AgileAdmin@mydomain.com</a> .	(None)
Mail Server External	The name of the computer running your external email server.	(None)
Mail Server Internal	The name of the computer running your internal email server.	(None)
Customer ID	The unique ID for your company. This property is not editable.	(ID number)
Year Cycle – Start Month	First month of your company's fiscal year.	(Set during installation)
Year Cycle – Start Day	First day of your company's fiscal year.	(Set during installation)

## LDAP

Many enterprises use the Lightweight Directory Access Protocol (LDAP) system, as well as a dedicated LDAP server, to create their user accounts. The Server Settings node folder now includes an LDAP node. When you open the LDAP node, the LDAP Configuration Editor appears. The administrator can change LDAP settings (especially the search filter), preview the results, and save the changes, all without having to re-start the server.

---

**Note** The LDAP node may not be visible in your out-of-box Administrator tree. If your company does not use an LDAP system, the node is not needed. The node is made visible through the AppliedTo capability; see [Administrator Privilege and the AppliedTo Capability](#) (on page 201).

---

Agile PLM supports LDAP authentication through the Agile Directory Server Integration Module. You can integrate Agile with your existing directory server to manage your users in one place. This approach can be fully integrated into Agile PLM, for these supported directory servers:

- Microsoft Active Directory Server
- Sun Java System Directory Server

If you chose to manage your user accounts through a directory server (instead of the database) during installation, then all new users (except supplier users) are added, and certain user attributes are configured, only through the directory server. Supplier users are authenticated by the database and managed by the supplier administrator.

---

**Note** PLM 9.2.2.4 introduces the possibility of integrating aspects of your PLM system with Single Sign-On (SSO) capability. With SSO configured and deployed for your PLM system, a user that has signed in to the system once (for instance, through the corporate portal) is not prompted again by a "login" dialog (see Appendix A, [Single Sign-On and PLM 9.2.2.4](#) on page 445).

---

## Configuring BEA WebLogic Server for LDAP with Agile PLM

Oracle Application Server supports the Agile-certified LDAP servers; however, BEA WebLogic Server requires further configuration to support them, as detailed in the tasks below.

### Configuring WebLogic with Sun Java System Directory Server

**To configure WebLogic with a Sun Java System Directory Server:**

1. Open the Administration console by typing the following:  
[http://localhost:<port\\_number>/console](http://localhost:<port_number>/console)
2. In the left pane, choose agileDomain > Security > Realms > AgileRealm > Providers > Authentication.
3. In the right pane, click Configure a new iPlanet Authenticator.
4. On the General tab, change the value of the Control Flag to SUFFICIENT.
5. Click Create.

6. Click the iPlanet LDAP tab.
7. Enter the host name and port number of the LDAP server in the respective fields.
8. Enter the name of the user that WebLogic should use to connect to the LDAP server in the Principal field.
9. Enter the password of that user in the Credential field.
10. Click the Users tab.
11. Enter the value for the User Base DN attribute. If there are no additional filtering requirements, do not change the remaining attributes.
12. Click the Groups tab.
13. Enter the value for the Group Base DN attribute. If there are no additional filtering requirements, do not change the remaining attributes.
14. Click Apply.
15. Restart the WebLogic server and, if installed in a cluster, all managed servers.

## Configuring WebLogic with Microsoft Active Directory Server

### To configure WebLogic with Microsoft Active Directory Server:

1. Open the Administration console by typing the following:  
[http://localhost:<port\\_number>/console](http://localhost:<port_number>/console)
2. In the left pane, choose agileDomain > Security > Realms > AgileRealm > Providers > Authentication.
3. In the right pane, click Configure a new Active Directory Authenticator.
4. On the General tab, change the value of the Control Flag to SUFFICIENT.
5. Click Create.
6. Click the Active Directory tab.
7. Enter the host name and port number of the LDAP server in the respective fields.
8. Enter the name of the user that WebLogic should use to connect to the LDAP server in the Principal field.
9. Enter the password of that user in the Credential field.
10. Click the Users tab.
11. User Name attribute default is "cn" and this should be changed to "sAMAccount". User From Name attribute default is also "cn" and this should also be changed to "sAMAccount". If there are no additional filtering requirements, do not change the remaining attributes.
12. Click the Groups tab.
13. Enter the value for the Group Base DN attribute. If there are no additional filtering requirements, do not change the remaining attributes.
14. Click Apply.
15. Restart the WebLogic server and, if installed in a cluster, all managed servers.

## Creating Users in an LDAP Directory

You have the following options for creating Agile PLM users:

- Create all users in Agile PLM – this can be done even if your company uses LDAP for its non-Agile applications.
- Create all user objects using the corporate LDAP system – the basic user data (for instance, user ID, first and last name, password, email address) are imported to Agile PLM, where each user's profile is completed.
- Combine the two approaches – your company may use LDAP for its employees that are assigned to use Agile PLM, but create non-employees (for instance, supplier users) within the Agile PLM system. In this case, the LDAP accounts are imported and validated, and there is no risk reconciling user data within Agile PLM.

---

**Note** You cannot create regular Agile PLM users (that is, Power or Concurrent users) *both* in Agile PLM and in LDAP. The only way to combine the two approaches is to use Agile PLM to create Restricted users only.

**Note** More specifically, you should not create multiple users with the same User ID (username), especially in the WebSphere environment. WebSphere uses an embedded LDAP adapter to authenticate users, and that adapter does not allow multiple users with the same ID.

---

Users created in Agile PLM with the "(Restricted)" supplier user roles are authenticated through the Agile PLM database.

## Configuring Multiple LDAP User Repositories

You can configure multiple LDAP user repositories for the security domain by repeating the configuration steps for the specific directory server.

Do *not* delete the AgileAuthenticator authentication provider: it is used to authenticate users against the Agile database. The Control Flag for the AgileAuthenticator must remain Optional. AgileAuthenticator must be the first authentication provider in the list if there are additional authentication providers, such as Sun Java System or Microsoft Active Directory.

## Enhanced LDAP

**To modify LDAP information:**

1. Under Server Settings, double-click LDAP node. The LDAP Configuration Editor window appears.
2. On the LDAP Configuration tab, double-click the row that names the LDAP server you want to populate. This is also where you can create a new LDAP server configuration.

The Edit LDAP dialog presents the contents of the LDAP server you selected for your modification.

3. When you have completed entering modifications, click OK.
4. With the row selected (for the LDAP server you modified), click the Preview button. The Preview Results tab lets you preview the results of your LDAP query.

When you click Preview, the server validates the LDAP configuration. If there are errors – such

as inconsistent data across LDAP servers in a cluster, or duplicated users on multiple servers, or syntax errors – the server passes an exception back to the client, and you will see a popup window displaying the errors.

- If the LDAP configuration contains clustered LDAP servers, the preview shows data from only one of the LDAP servers, since the data is identical across the cluster.
  - If the LDAP configuration contains multiple LDAP servers, the preview shows the union of data from all LDAP servers.
5. Click Save to save changes to the LDAP configuration. Again, the server validates the LDAP configuration. If any errors are detected, an error message displays and the exception prevents the Save operation from completing.

## Synchronizing LDAP and Agile PLM

In Java Client, the Refresh Users from LDAP button on the Users node toolbar window integrates LDAP-originated users into the Agile PLM system. In Web Client, if you use LDAP, the Refresh from Directory Server button is enabled in the Users node (under Tools > Administration) for the same purpose.

Refer to your LDAP documentation to import user accounts to Agile PLM.

After clicking Refresh (or Refresh from Directory Server) to automatically update the accounts for use in Agile PLM, complete each user object by populating Agile PLM user properties as required.

Synchronization of Agile PLM users with LDAP-created user accounts depends on the Agile PLM users' Login ID being equivalent to the LDAP user-accounts' Login ID. During an upgrade of Agile PLM systems, it assumes user authentication through the Agile PLM database.

There is another way to synchronize users between LDAP and Agile PLM: a script is included in the Bin directory called migrateUserToDB.bat/sh that you can run manually or on a scheduled basis. This script serves the same purpose as the Refresh (or Refresh from Directory Server) button in Java and Web clients, respectively.

## LDAP-controlled User Properties

If your company is using LDAP for user accounts, the following properties will always be managed by LDAP. They cannot be edited in Agile PLM.

- UserID
- First Name
- Last Name
- Password
- Email Address
- Title
- Work Phone
- Mobile Phone
- Fax Number

---

**Note** If an LDAP directory is used to create and manage Agile PLM users, by default users do not require a separate approval password. However, you can uncheck the Use Login Password for Approval Password property for a user and enter an approval password.

---

You can set up Account Policy functionality on the LDAP server. For more information, see your LDAP system documentation.

## Agile LDAP Configuration

The LDAP Configuration Editor (Server Settings > LDAP node) is used to configure your integration between Agile PLM and your company's LDAP system.

Click the New LDAP icon and fill in the properties (defined below). You can double-click an existing configuration (row in the table) to bring up the Edit LDAP dialog. You can remove an existing configuration by selecting its row, clicking the Delete LDAP icon, and following the prompt.

You can define multiple sets of parameters to configure integration with multiple directory servers.

**Important** Verify all settings in LDAP Configuration Editor with your LDAP administrator.

## Directory Service Connection Parameters

Connection parameters include the hostname, port, protocol, account name and filter. The account name is used to connect to the directory server during synchronization, so it must have the appropriate privileges. The filter is used to select only a subset of the users defined in the directory server as Agile users.

## Configuration Parameters Defined


The properties in the New LDAP configuration page are described in the table below:

Field Name	Description
ID	Unique string identifying the LDAP server. The string must be less than 30 characters and cannot be changed once in use.
Description	Information about the server configuration
Agent	The Directory Server used for authentication; valid values are SunONEDirectory or ActiveDirectory
URL	The URL for the authentication agent
Domain	The authentication string when using Active Directory Server in the format of <username>@<auth.domain.name>
Username	Username (does not need to be the LDAP Administrator)
Password	Encrypted password of the user
User Path	Tree under which all Agile users can be found; this property should be set to the node closest to the root of the Directory Tree structure; any user that is not found under the subtree starting at this node should not be on the Agile system.

Field Name	Description
Search Scope	Scope of search for Agile users under the user-path node; valid values are ONE_LEVEL or SUB_TREE; this property should be set to ONE_LEVEL only if all users in the organization are directly under the User Path node
Search Filter	Search filter for Agile users under the <user-path> node; this must be a valid LDAP search filter that matches all Agile users under the scope defined by <auth.ldap.user.path> and <auth.ldap.user.search.scope>; users not matching this filter are considered invalid users on the Agile system; a valid LDAP search filter must be enclosed in parentheses.
Mechanism	Authentication mechanism supported by the directory server; valid values are "simple" or "strong"
Group Path	This property should be set to the node closest to root of the Directory Tree structure; it's the path in which group search starts
Group Scope	Valid values: ONE_LEVEL, SUB_TREE; similar to <search-scope>
Group Filter	This must be a valid LDAP search filter that matches the LDAP groups where all expected users to be used in Agile are contained.  When using the Group Filter to synchronize all users and user groups from the LDAP server, the <user-path> and <search-scope> must be set for the Search Filter.  With User Group Sync function enabled. You cannot remove/ add users for LDAP Synced User group on User's Tab
Group Membership	Used for authentication to check if the current user belongs to the specified group (defined in group-filter); using "%M" to designate current login user DN.
Dynamic Group Filter	This must be a valid LDAP search filter that matches the LDAP Dynamic groups that contain all expected users to be used in Agile

### Mapping LDAP Attributes

#### To map an Agile attribute to an LDAP-system attribute:

1. In the User-LDAP Attributes Mapping or Usergroup-LDAP Attributes Mapping field, click Add  to create a new entry.
2. From the New Attribute Mapping dialog, choose an Agile ID (that is, attribute) from the drop-down list.
3. In the LDAP ID field, type the name of an attribute from your LDAP system that you want mapped to the selected Agile attribute.

For example, "Date09" might map to an attribute called "End Date".

### Multiple Directory Server Support

It is possible to indicate multiple directory servers. This is useful if you have users in multiple

domains that need access to Agile, or if you have backup directory servers to provide fail-over support.

On the Edit LDAP page, in the URL field, type a semicolon (;) after the existing URL, then (with no space) type the URL of a backup or secondary server. When you have saved the new URL (by clicking OK), click the Preview Result tab: it will display all the users on the primary server. Now, if you stop the services of this server, then the Preview Result will display the users from the backup or secondary server. (Remember to restore services to the primary server.)

If a backup or secondary directory server is configured, the integration module tries the backup server if access to the primary server fails.

## Configuration Scripts

One directory server can be configured during the Agile installation. Additional directory servers can be configured manually after installation. Agile provides scripts to enable configuration after installation. These scripts are located in the *agile\_home\agileDomain\bin* directory:

- `encryptpwd` — `ldapconfig.xml` needs an encrypted password for the directory server user; this script generates an encrypted password based on the existing user password
- `checkLDAPConfig` — use for checking LDAP configurations; all errors should be fixed, if encountered
- `migrateUserstoDB` — use to migrate a user from LDAP to the Agile database; this script allows you to update existing users and to create new users in the database.

## Synchronizing Users and User Groups

This feature (added in PLM 9.2.2.2) applies to iPlanet server.

- LDAP user groups and group members can be synchronized into the Agile system using `<group-filter>` to "synch" the static users in the user group, and `<dynamic-group-filter>` to "synch" dynamic group users. To enable this function, make sure that `auth.ldap.group` is enabled (set to True) in `agile.properties` file.

Note	With User Group "synch" function enabled, you cannot remove or add users on a user group's Users tab that have been synchronized (that is, where users have been added to a user group via LDAP).
------	---

Again, this feature only applies to iPlanet server.

## Preferences

The Preferences node lets you view and configure Agile PLM's systemwide preferences.

### To modify preference settings:

1. Under Server Settings, double-click Preferences. The Preferences window appears.
2. In any editable field, enter a new value or select from the drop-down list.
3. When you have finished, click Save.



The following table lists and describes the Agile PLM Preferences. They are listed in alphabetical order here.

**Note** These “systemwide preferences” should not be confused with “user preferences” (Administrator > User Settings > Users node > [any user] > Preferences tab), even though a sub-list of user preferences are system-related.

Preference Name	Description	Default
<b>Add User's Default Site to New Items</b>	For enterprises that utilize "Sites" information, this Preference can be set so the Default Site of a user is automatically added when the user creates an item.	No
<b>Allow Download of Productivity Components</b>	Controls whether your users will have access to the Java applets that permit advanced file uploading and other features, depending on what is allowed by the License Key your company purchased. Settings are No and Yes. See <a href="#">Allow Download of Productivity Components</a> (on page 289).	No
<b>Allow Password Reset</b>	Lets you select whether Web Client users who forget their password can automatically receive a new one by clicking a link on login screen. See <a href="#">Allow Password Reset</a> (on page 290).	No
<b>Allow Unsecured Files</b>	Allows Agile PLM to manage pointers to unsecured URLs, that is, it allows attachments to be URLs (as opposed to files). If you select Yes, pointers to URLs are stored on the Agile Application Server computer, although Checkin and Checkout are disabled for referenced URLs.	Yes
<b>Checksum Computation</b>	Sets whether to enable or disable checksum computation for attachment files. Settings are Enabled or Disabled. See <a href="#">Handle File Checksum</a> (on page 271).	Disabled
<b>Content Service Maximum Retries</b>	Determines how many times, after the initial attempt, a transfer order object will attempt to make delivery to a failing destination before further delivery attempts are blocked. See <a href="#">Content Service Maximum Retries</a> (on page 290).	5
<b>Content Service Wait Time (in seconds)</b>	Determines how often the Content Server “wakes up” to check for transfer order objects to process.	300
<b>Default User Name</b>	Names of users appear with the first name appearing before the last name, or vice versa (with appropriate comma).  Changing Default User Name setting requires re-starting the server for the change to take effect.	FirstName LastName
<b>Display URLs as Hyperlinks</b>	Text and Multitext fields enable typed URLs to automatically convert to hyperlinks. Setting this to No will display URLs typed in Text and Multitext fields as plain	Yes

Preference Name	Description	Default
	text. Note that certain "URL" and "mail" fields in Agile are not controlled by this preference; they will always convert typed URLs to hyperlinks.	
Display User ID	Determines whether or not User IDs (usernames) appear.  Changing Display User ID setting requires re-starting the server for the change to take effect.	No
Enable BI Publisher for Reports	Determines whether or not BI Publisher is used to generate reports in multiple output formats.  Setting this to Yes generates reports in multiple output formats using BI Publisher. Setting this to No means reports continue using existing reporting layout.	No
Filename Prefix	Agile File Manager uses a prefix that is attached to each file that is stored in the file vault. Type in the identifier that will be automatically added to every attachment file. The default is "agile".  <b>Caution!</b> The effects of this systemwide preference are far-reaching and the value should not be changed without good reason.	agile
Garbage Collection Wake-up Time (in seconds)	The "garbage collection" is a thread for cleaning out idle threads in the cache. After "cleaning," garbage collection is put to "sleep" for the number of seconds in this setting. 300 seconds (5 minutes) is a reasonable value.	300
Maximum Attribute Display Width	A value that defines the maximum width of text or multi-text boxes, in Web Client, applying to Create and Edit modes. The unit is pixels; one character = 7.5 pixels. Valid setting is 10–100. See <a href="#">Display Width Attribute</a> (on page 77).	40
Maximum Query Results Displayed	Sets a maximum number of search results that can be displayed (advanced or quick searches); can be any positive integer less than 5000, but 1000 is recommended.  If a user's Max Rows Displayed user preference is set to fewer rows than this systemwide preference, the former value will override the latter value.  <b>Caution:</b> The Full Search Display privilege applies to results of report queries, not to ordinary searches. All users, whether or not they have the Full Search Display privilege, will see the maximum number of search results specified in this property.	1000

Preference Name	Description	Default
Maximum Report Results	<p>Determines maximum number of objects displayed in Agile PLM Custom Reports; note that it does not apply to Standard Reports.</p> <p>This preference is overridden by Full Search Display (FSD) privilege (see Caution).</p> <p>The upper limit to this field has been increased to 500,000 (a comma is not needed in the field).</p> <p>The "Export to Excel" module (<b>Actions &gt; Microsoft Excel &gt; Export to Excel</b>; not to be confused with PLM Export utility) uses this setting; the number in this field limits the maximum number of results exported to Excel and CSV files.</p> <p><b>Caution:</b> Users with the FSD privilege see all results of reports; also, all privilege checking is bypassed on users with this privilege when they view report results. Users without the FSD privilege see the maximum number of reports specified in this property.</p>	50,000
Maximum Reports Executed Simultaneously	Defines maximum number of reports that the application server will run simultaneously.	5
Notification Wait Time (in seconds)	Determines how often the system "wakes up" to check for notification emails to send. Default is 600. Valid setting is 30 to 3600 seconds.	600
Notification Time Out (in seconds)	This setting is the timeout time for the user transaction in the notification thread. Valid setting is 30 to 3600 seconds.	1800
Object Cache Table Size	Sets the relative size of the object cache table (Hashtable), which helps determine how objects are distributed in cache (smaller means more objects per row, larger means fewer objects per row). You can choose Small, Medium, or Large Table (default is Medium Table), but it is an internally used attribute used in server implementation; therefore, no recommendation regarding performance is offered for this setting.	Medium Table
Optimized Replication	<p>When there are more than two File Managers, allows the PLM system to keep track of the File Managers that contain each file. During replication, the requesting FM only contacts other FMs that contain the file, and downloads a given file from the nearest FM (shortest 'ping').</p> <p>Settings are Enabled or Disabled. Disabled can be set to troubleshoot problems with the optimizations.</p>	Enabled
Recently Visited Folder Size	Controls the maximum number of objects that each user can store. The list selection allows these values: 10, 25, 50, 100.	10

Preference Name	Description	Default
Reference Designators Allow Range Expand Collapse	Allows reference designators to be described as a range instead of a sequence. See <a href="#">Reference Designators Allow Range Expand Collapse</a> (on page 290).	Collapse
Reference Designator Range Indicator	The symbol that appears between lower and upper range values in reference designator statements. Available symbols are asterisk (*), at (@), caret (^), plus (+), hyphen (-), colon (:), semicolon (;), tilde (~), or <b>None</b> .	Hyphen (-)
Reminder/Escalation Weekend Setting	In escalation and reminder periods of changes, determines how the system will count weekend days (Skip Saturday <i>or</i> Sunday, Skip Saturday <i>and</i> Sunday, or Don't Skip [= <i>count both weekend days</i> ]). This preference is not part of Product Portfolio Management scheduling.	Don't skip
Retain Local Files	When adding an attachment to a business object or checking it in, determines whether local files (on user's computer) will be deleted or retained, or whether the user is prompted to choose to delete it (Yes) or not (No).  Settings are Delete, Retain, and Warning.  Note: This preference is applicable only in Advanced uploader, and is not applicable in Standard uploader: Standard uploader does not delete files automatically when this preference is set to Delete.	Warning
Save As Attachments	Permits one of two ways to replicate a file, or allows each user to be prompted to choose the method. Settings are Prompt, Create new copy of file(s), Do not copy file(s), and Reference existing file(s). See <a href="#">Save As Attachments</a> (on page 312).	Reference existing file(s)
Save As BOM for Different Classes	Indicates whether or not to copy <b>BOM</b> tab values when copying from one item to another.  See more information about the "Save As" preferences in <a href="#">Copy Values along with Tabs</a> (on page 290).	Values Copied
Save As Manufacturer for Different Classes	Indicates whether or not to copy <b>Manufacturers</b> tab values when copying from one item to another.	Values Copied
Save As Page 2 for Different Classes	Indicates whether or not to copy <b>Page Two</b> tab values when copying from one class to another.	Values Copied
Save As Page 3 for Different Classes	Indicates whether or not to copy <b>Page Three</b> tab values when copying from one class to another.	Values Copied
Save As Page 3 for Different Subclasses	Indicates whether or not to copy <b>Page Three</b> tab values when copying from one subclass to another.	Values Copied

Preference Name	Description	Default
<b>Signoff User Dual Identification Type</b>	Controls whether approve/reject signoff (including user signing off for "self" or for another user due to Escalation or Transfer Authority) requires a dual identification, or "second signoff."  Settings are N/A (Not Applicable, the default), User ID, and Login Password. Selecting N/A means that these situations will not require a dual ID; selecting either User ID or Login Password means a dual ID is always required to sign off.  For more information, see <a href="#">Signoff User Dual Identification</a> (on page 291).	N/A
<b>Threshold (in seconds)</b>	One of the settings that determines when certain system actions, such as cleanup and reset tasks, are performed on any object that is idle in the logged-in user session longer than the value of the setting. Valid setting is 30–3600 sec.	300

---

**Note** The proxy server for your Agile PLM system has a default connection timeout of 1500 seconds, or 25 minutes. For information on how to change the proxy timeout setting, see the chapter "Installing and Configuring Agile Web Components" in the *Agile PLM Installation Guide for Windows*.

---

## Details of some Preferences

This section contains details about some of the systemwide Preferences.

### Allow Download of Productivity Components

This preference controls whether your users will have access to the Java applets that permit advanced file uploading, download of multiple files and the Excel integration (in PG&C). If it is set to No, users will not see the File Productivity Preference in their own user profile. If it is set to Yes, users will see the File Productivity Preference and be able to choose their own method.

- The preference allows the following functions regarding attachment management. The systemwide preference operates in conjunction with each user's File Productivity (user) Preference.
  - Advanced File Uploader
  - Automated checkin based on checkout location
  - Allow download of individual files instead of a Zip file in Web Client.
- The preference allows the Microsoft Excel-based Client to be integrated with Agile PG&C, which allows supplier users to provide compliance information to buyers while using Microsoft Excel.

## Allow Password Reset

The Allow Password Reset preference lets you choose whether Web Client users who forget their password can automatically receive a new one. The default setting is No, which forces a user to contact the administrator to reset the password. Java Client users who forget their password must contact the administrator for a new one.

When Allow Password Reset is set to Yes, the Forgot your password? link appears on Web Client's login screen. Since Preferences are *systemwide* settings, every Web Client user sees the link. If a user clicks the Forgot your password? link, he can enter his username and email address to receive a new random seven-character password. When the user logs into Web Client again, he is prompted to choose a new password.

## Copy Values along with Tabs

The several "Save As" preferences determine whether values are copied from the BOM, Manufacturers, Page Two, and Page Three tabs when you use Save As to copy an object from one class to another. By default, values are copied.

**Caution** There are exceptions to copying values during Save As operations. If an attribute in the source object does not exist or is not used in the target object, it is not copied even if the Save As preference is set to Values Copied. Also, if an attribute is a list value and the list ID of the source attribute is not the same as the list ID of the target attribute, the value is not copied even if the Save As preference is set to Values Copied.

## Content Service Wait Time

The Content Service Wait Time preference controls how often the system processes transfer order objects. For example, if this setting is 300, every 300 seconds the system checks if there are any transfer order objects to process and begins to process them.

## Content Service Maximum Retries

The Content Service Maximum Retries preference controls how many times, after the initial attempt, a transfer order object will attempt to make delivery to a failing destination. For example, if this setting is 5, the transfer order object will make one attempt at delivery. If that attempt fails, the transfer order object will make up to 5 more attempts. After the last attempt, further delivery attempts are blocked.

## Online Help Manuals URL

---

**Note** Online Help for Agile PLM 9.x is not available or supported. The Online Help Manuals URL setting is no longer active.

---

## Reference Designators Allow Range Expand Collapse

This setting is now editable in this release. By default, the Reference Designators Allow Range Expand Collapse preference is set to Collapse, which means it collapses ranges of reference designators, for example, RefDes01-03. A setting of Expand forces the sequence to list each individual reference designator, separated by commas, for example, RefDes01,02,03.

## Signoff User Dual Identification

FDA-regulated or other companies may have a corporate policy that requires double authentication of user identify in approving or rejecting change orders. The Signoff User Dual Identification preference controls whether approve/reject signoff requires a dual identification, or "second signoff."

This setting is applied to the Review and Released statuses of all default and custom workflows, that is, when the Signoff dialog is filled in by a user, the system verifies the electronic signatures before advancing the workflow to the Review or Released status. The preference comprises all situations when the user is signing off for himself, signing off as a member of a user group, signing off for another user due to Escalation or Transfer Authority, or a combination of signoff responsibilities. (The Signoff UI options are detailed in *Getting Started with Agile PLM*, the chapter about Workflow.)

The administrator must attend to a combination of settings to properly realize the "second signoff" functionality.

Setting this preference to N/A (Not Applicable, which is the default) means that signoffs require only a single signoff from any user in any capacity. The password already required to sign off is the Approval Password; this represents the first level of security in the signoff protocol.

The other two settings, User ID and Login Password, effectively enable the dual ID requirement for any user in any signoff capacity. They dictate that users also be required to enter their User ID (also called username), or the Login Password.

If you set this preference to Login Password, then it is imperative to ensure that every user's Use Login Password for Approval property is set to No; once you change all users' Use Login Password for Approval property to No, only then can you set the Login Password. (For bulk settings, contact your Agile representative for a script called SecondSignature.Zip.)

If you set this preference to User ID, you should set Display User ID preference to No

## Licenses

The Licenses node appears under Server Settings. This node provides information about your company's Agile PLM license configuration.

Oracle | Agile PLM uses a new system of licensing as of Rel. 9.2.2.4. Agile's "Server Licenses" are no longer operative.

Agile's "User Licenses" are tabulated in General Info tab. User licenses are assigned to each user by the Agile PLM administrator. The combination of assigned user licenses and assigned roles and privileges determines which specific tasks a user can perform.

### To view licenses information:

1. Under Server Settings, double-click Licenses node. The Licenses window appears.
2. Click the General Information, Modules, or History tab.

## General Info Tab

Agile PLM has three types of user licenses: Named (formerly "Power"), Concurrent, and Restricted.

Restricted users are people outside your company (such as distributors and suppliers) who are given limited access to the Agile PLM system.

Named users and Concurrent users have access to the same Agile PLM functionality based on their roles and privileges and the company's licensing.

The key difference is that users with a Named license are not applied against concurrency counts. This means that a Named user can log in to the system at any time. All users who are not Named or Restricted are subject to concurrency counts, and may be locked out of the system due to a concurrency limit.

The User Category field in every user's profile displays which user license has been assigned to the user. For more information, see [User Properties Defined](#) (on page 155).

The General Info tab of the Licenses window includes the information shown in the following table. You cannot edit this information.

"Name" field	Description
Count of Named Users	Shows the number of users who are active.
Count of Restricted Users	Keeps track of how many Restricted User licenses have been assigned.
Count of Concurrent Users	Shows the number of Concurrent User licenses purchased by the company. Concurrent users can access all Agile PLM functionality purchased by the company, but are subject to concurrency counts, and may be locked out of the system due to a concurrency limit.
Total Count of Users	Keeps track of how many PLM users of all types have been created by the company.

## Modules Tab

The biggest change to "licensing" in Oracle | Agile PLM is the removal of Agile's "Server Licenses". An Oracle "license key" was obtained (at <http://licensecodes.oracle.com/agile.html#PLM>) and was input at install time.

Now the administrator uses the Modules tab of the Licenses node to simply select the PLM solutions that his company has purchased. This will enable those PLM Classes and other solution-based functions that pertain to your company's business, while disabling those classes and functions that do not pertain.

For Product Collaboration, select Yes from the drop-down list. Then open each of the remaining drop-down lists and select Yes or No, as appropriate. When you are finished and click the Save button, you will be prompted "Please verify your company is contractually licensed to use the modules [PLM solutions] selected." You will need to re-start the system for a module selection to take effect.

Product Portfolio Management (PPM) is the only PLM solution that can operate without Product



Collaboration (PC); however, it is likely that even a company using only PPM will also use PC.

**Important** While it is possible to enable a PLM solution (by selecting Yes in Licenses > Modules) that your company has not purchased, it is not a Best Practice to attempt to do business using an unpurchased solution. You are likely working closely with an Oracle Consulting – Agile Practice representative, and you will likely need Support services at some point. However, if a problem you have encountered has been caused in the course of deploying and creating business objects from a PLM solution that your company has not purchased, you will find it more difficult to obtain the support for PLM that you and your company require.

If you encounter difficulties in enabling the PLM solutions that your company has purchased, please contact your Oracle | Agile representative.

## Task Monitor

The Task Monitor node is used to track the progress of certain scheduled tasks. These include:

- Report tasks – standard and custom reports that are scheduled to be executed
- |      |  |
|------|--|
| Note | Administrator reports cannot be scheduled. |
|------|--|
- User tasks – refreshes user list from Directory Server (for example, LDAP server)
  - Full Text Search task – indexing of attachments for full text search
  - Attachment Purge task – periodic purging of attachments in the DFM server
  - PPM-specific tasks – there are several Activity and Notification tasks
  - PG&C-specific task – the Compliance Rollup task has been added to manage scheduled compliance rollups.

You can use the Thread Status drop-down list to display only the tasks matching the following criteria:

- All – shows all tasks
- Scheduled – shows tasks scheduled when it's generating schedule results.
- Running – shows tasks currently running; this is the default filter
- Finished – shows tasks that have been successfully executed
- Failed – shows tasks that failed during execution
- Timed Out – shows tasks that timed out before full execution. Compliance Rollup task cannot time-out.

Note	Thread status criteria (except for All) do not apply to all types of tasks. For example, report tasks are listed in the Task Monitor window only when the selected Thread Status is All or Finished.
------	--



The following table lists the properties of the Task Monitor window. The properties are read-only.

Property	Notes
Name	Name of the scheduled report (custom or standard). Null for all other tasks.
Task Type	Report Task, FTS Task, or Attachment Purge Task.

Property	Notes
Owner	Name of the owner of the report schedule. Null for all other tasks.
Time Executed	When the task began.
Status	Current status of the task: Scheduled, Running, Finished, Failed, Timed Out

The Purge button allows you to delete tasks listed in the Task Monitor window. The Purge action applies only to selected tasks that fall within the specified date range.

**To purge tasks from the Task Monitor:**

1. Select a Thread Status to list certain tasks, such as all tasks or finished tasks.
2. Select one or more tasks.
3. Click the Purge button .
4. Specify values for From Date and To Date. Tasks that fall within the date range will be purged. Click the  button to select a date and time for each field.
5. Click OK.

## Task Configuration

From the Task Configuration node, you can manage various scheduled server-side activities such as reports and full text search indexing. Tasks never “time-out” before completion.

Name	Description	Default interval (minutes)
Refresh User List From Directory Server	Updates the Agile PLM user list with information from the Directory Server.	1440 (1 day)
Report Task	Checks if there are any scheduled report tasks to run. If so, it generates the report in the background, saves it on the file server, and sends an email notification to the report's owner and shared users.	30
Activity Summary Task	Identifies the list of activities scheduled for the coming week and notifies the owners in a summary format.	User-defined
Full Text Search Scheduler	Indexes the content in files for full text search capability.	600 (10 hours)
Attachment Purging Task	Moves outdated files into a special folder and cleans up metadata in the database. The system is hard-coded to begin this process at 6:00 am local time; the default interval value of 1440 re-starts the process 24 hours later. Another value entered for this task alters the start time, and then re-starts it at the new interval. See <a href="#">Use Case for Attachment Purging Task</a> (on page 276) for a particular use case of Attachment Purging Task.	1440 (1 day)

Name	Description	Default interval (minutes)
Activity Reminder Task	In PPM solution, identifies the list of activities that should start today and reminds the owners of these activities.	User-defined
Activity Health Task	In PPM solution, updates the “health” for all activities. It also updates the actual duration, variance, and estimated variance for these activities.	2
Compliance Rollup Task	In PG&C solution, runs compliance rollup calculations. <b>Note:</b> Even if the Product Governance & Compliance server license is disabled and not available, “Compliance Rollup Task” still appears in this list of tasks.	30
Due Tomorrow Notifications Task	In PPM solution, sends “due tomorrow” notifications.	2
Admin Cache Synchronization Task	Synchronizes servers via <b>Web Client &gt; Tools &gt; Administration &gt; Cache Health Monitor</b> .	5
Compliance Migration Task	In PG&C solution, for upgrades from 9.2.x to 9.2.2, this task must be enabled and run once; then this task can be disabled and is not needed. This task sorts all legacy compositions into three categories: Fully Disclosed, Partially Disclosed, or Undisclosed. See <a href="#">Compliance Migration Task</a> on page 452.	1 (this task is run only once by upgrade customers)

When you double-click a task in the Task Configuration page (anywhere in the row), the Task Configuration General Info window appears. It has the following properties; you can modify the properties and save the new settings.

Property	Description
Name	Name of the task being configured.
Task Interval	Periodic time interval in minutes after which the server updates the status of the task.  In general, the value for Task Lookback Window should always bigger than the value for Task Interval to make sure that no event is skipped.
Task Delay Time	How many minutes the event is delayed before it starts to run.
Task Lookback Window	How far back in minutes the task manager is to look to retrieve the events that can be run now.  See <a href="#">Use Case for Attachment Purging Task</a> (on page 276) for a particular use case that involves temporarily re-setting Task Lookback Window.  In general, the value for Task Lookback Window should always bigger than the value for Task Interval to make sure that no event is skipped.
Task Max Event Number	How many events can be running at the same time on one server.

Property	Description
<b>Task Restart Upon Failure</b>	Indicates whether the event should be restarted after it failed. Yes or No.
<b>Task Load Across Server</b>	Indicates whether the event can be executed at the same time in different servers of a cluster. Yes or No.
<b>Task Disabled</b>	Indicates whether this task is disabled (Yes) or enabled (No).  <b>Notes:</b> In order for a given task to be executed, this property must be set to No. Also, when this property is changed for any task, it is no longer required to re-start the system.
<b>Task Start Time</b>	Allows you to specify the exact time a task should start. For example, you can specify that an Activity Reminder Task or an Activity Summary Task should be triggered at 8 a.m. every morning.  <b>Note:</b> Once you reset the time, you must restart the server for the changes to apply.

**To disable a task in the Task Configuration window:**

1. Double-click the task to open it.
2. In the Task Disabled list, select Yes.
3. Click Save.

# Configuring Product Collaboration

**This chapter includes the following:**

▪ Reference Designator Preferences .....	297
▪ Revising Item Descriptions .....	300
▪ Notes on Configuring Product Collaboration Object Tabs .....	305
▪ Notes on Configuring Agile PLM Settings that Affect Product Collaboration .....	305
▪ Configuring Sites – Distributed Manufacturing .....	306

This chapter provides information about Product Collaboration administration settings.

## Reference Designator Preferences

Agile PLM 9.2 includes two system preferences related to reference designators. One preference defines the way reference designators are displayed in the BOM table. The second preference helps to determine the format of individual reference designators, including the format in which they are stored in the Agile database.

**Caution** Changing the Reference Designator Range Indicator preference after the initial implementation of Agile PLM may affect user data. See “Reference Designator Range Indicator” below for more information.

Read this entire section about “Reference Designator Preferences” before you make any updates or changes to these preference settings.

▫ **Reference Designators Allow Range Expand Collapse**

Allows reference designators to be displayed in the BOM table as a range instead of a sequence. For example, the reference designator range R1 through R5 can be displayed as either:

▫ **Expand setting:**

R1, R2, R3, R4, R5

▫ **Collapse setting:**

R1-R5

▫ **Reference Designator Range Indicator**

The symbol that appears between lower and upper range values in reference designator statements. The default character is hyphen ( - ). If the reference designator number format that you want to use includes the hyphen character as part of the format, you can use this setting to select a different character to use as the range indicator. For important information about this preference, see “Reference Designator Range Indicator” before you make any updates or

changes.

## Reference Designators Allow Range Expand Collapse

This preference (RDAREC) determines how reference designators are displayed in the BOM table when *not* in edit mode. This preference affects only the end user display of the reference designator data stored in the Agile database.

- Expand — Displays ranges of reference designators in expanded format; each reference designator is listed and the range is not collapsed. For example, the range of reference designators beginning with R1 and ending with R5 is displayed as:  

R1, R2, R3, R4, R5
- Collapse — Displays ranges of reference designators in collapse or concatenated format. Ranges of reference designators (3 or more reference designators in a sequence) are indicated by the first reference designator in the sequence, the reference designator range indicator character, and the last reference designator in the sequence. For example, the range of reference designators beginning with R1 and ending with R5 is displayed as:

R1-R5

### Edit Mode — How editing reference designators is affected by the Expand/Collapse setting

When a BOM row is in edit mode, the reference designators are always displayed in expanded mode, regardless of the RDAREC preference setting. This allows the user to select and delete individual reference designators.

Regardless of the RDAREC preference setting, the user can always type a reference designator range in edit mode. If the user enters R1-R99, when he saves his edits, the reference designators are displayed according to the RDAREC preference setting. If the Expand setting is selected, each individual reference designator is displayed on the BOM table.

---

Note	Whether they are originally entered as individual numbers or as ranges, Agile PLM stores reference designators as individual reference designator numbers. The RDAREC preference setting determines only the manner in which they are displayed on the BOM table (expanded or collapsed).
------	---

---

## Reference Designator Range Indicator

This preference determines which character is used to indicate a range of reference designators. The default reference designator range indicator is the hyphen character:

-

When the Reference Designators Allow Range Expand Collapse (RDAREC) preference is set to Collapse, this character is used to indicate the “missing” reference designators in the sequence. For example, the range R1-R5 indicates that the range consists of the reference designators beginning with R1 and ending with R5. Although R2, R3, and R4 are not displayed, the range indicator character implies that they are included in the range.

## Why Select a Non-default Reference Designator Range Indicator?

If you need to use a reference designator format that includes the hyphen character as part of the reference designator number (for example, a segmented reference designator such as R3-AB46), you can use this system preference to select a different character to use as the Reference Designator Range Indicator. If you select the colon character ( : ) as the reference designator range indicator, and the RDAREC is set to Collapse, the range of reference designators beginning with R3-AB44 and ending with R3-AB48 is displayed as:

R3-AB44:R3-AB48

If the RDAREC is set to Expand, the same range of reference designators beginning with R3-AB44 and ending with R3-AB48 is displayed as:

R3-AB44, R3-AB45, R3-AB46, R3-AB47, R3-AB48

**Caution** Changing the reference designator range indicator character may affect user data. Updates or changes after the initial Agile implementation should be made with extreme caution. Selecting a range indicator character that was previously used to segment reference designators may cause data mismatch problems.

For example, if you select the colon character as the range indicator character and use the hyphen character to segment reference designators, then you subsequently select the hyphen character as the range indicator character, a range indicator value R3-AB47 no longer has the same meaning, as the hyphen now indicates a range rather than part of the reference designator value.

## Reference Designators with Leading Zeros

The following rules apply to the manner in which reference designators with leading zeros may be entered on the BOM table:

- The user may enter leading zero reference designators regardless of the Expand/Collapse setting.  
(See Reference Designators Allow Range Expand Collapse.)
- The number of the numeric characters between reference designator segments in a range need not match. For example, the user may enter R0001-R100.
- When the number of numeric characters does not match, the first segment's number of numeric characters is used to store the reference designator values in the database. For example, R0001-R100 is stored as R0001, R0002, ... R0100.

## Multi-segmented Reference Designators

The following rules apply to the format of multi-segmented reference designators, that is, when the reference designator has a suffix.

- Reference designators may be separated into a maximum of three parts:
  - Prefix — May be any character that is not designated as the Range Indicator or a delimiter.
  - Number — Must be numeric (include only characters 0 through 9)
  - Suffix — May be any character that is not designated as the range indicator or a delimiter AND does not start with "0" (zero).

- Only the last number string is considered as the Number.

For example, in reference designator value A10B30D

- Prefix = A10B
- Number = 30
- Suffix = D

## Revising Item Descriptions

Agile PLM 9.2 provides several ways to manage and control the modification of the Description field of Item objects.

**Important** Regarding revision-controlled Description field modification: The item Description field cannot be modified through an MCO because an MCO does not create a new item revision. The MCO uses the Description field information from the ECO revision or Introductory revision on which it is based.

Three basic behaviors:

- Item object modification

The end user edits the Description field of the item object. This method is controlled by Modify privilege masks for item objects applied to the item Description field.

---

Note	Item descriptions are associated with a specific item revision. Although the actual modifications are made on the item object itself (a change order is not required), the resulting descriptions are revision-specific.
------	--

---

- Revision controlled - all Item objects

The end user must modify the item Description field on the Affected Items table of a change order, in the same manner that an item's Revision and Lifecycle attributes are revision controlled and, thus, are modified on the Affected Items table of a change order.

This method is controlled by Modify privilege masks for the change order object applied to the Item Description field of the Affected Items table. Also, the Item Description field must be enabled on the Affected Items table.

- Revision controlled - selected Item subclasses

This method is a mixture of the previous two methods: some selected item subclasses require revision-controlled modification of the Description field, while other item subclasses do not require it.

This method is controlled by using a combination of the previous methods:

- Modify privilege masks for the item subclass applied to the item Description field (for the subclasses that do not require revision-controlled description modification, but the users may edit the description on the item object itself).

The Item Description field must be enabled on the Affected Items table.

- Modify privilege masks for the change order object applied to the Item Description field of the Affected Items table (for the subclasses that do require revision-controlled modification).



In addition, the Modify privilege masks for the change order object must use the wildcard \$AFFECTEDITEMTYPE to determine which subclasses require revision-controlled modifications to the specific item subclass Description field.

## Setting up the Change Order Object

The Affected Items tab of change order objects (for example, ECOs) includes the following two attributes, which must be enabled or disabled appropriately for each Item Description modification method:

▫ Old Item Description

This Affected Items attribute is populated with existing Item Description field value when the item is added to the change order. This attribute is not editable on the Affected Items tab. By default, this attribute is not enabled.

For any item revision method that requires change order revision-controlled modification, you must enable this attribute.

▫ Item Description

This is the default Affected Items table item description attribute. With the appropriate modify privilege masks for change order objects, this attribute is editable on the Affected Items table.

In effect, this is the New Item Description and you may rename it if you wish.

When both these change order Affected Items table attributes are enabled, the Old Item Description field automatically displays the item description of the most recently released item (upon which the change order is based). The (New) Item Description field is available for the user to enter the desired item description for the pending revision of the item. This scenario requires the appropriate change order Modify privilege masks, with the appropriate Applied To properties for the (New) Item Description field.

## Setting up the Appropriate Modify Privilege Masks for each Method

The following tables illustrate how you should modify the Agile-supplied default privilege masks for each method. Use this table as a guideline for setting up the desired method in your Agile PLM system. If you are not using the Agile-supplied default roles and privilege masks, examine the Example privilege masks and compare them to the actions outlined in the tables.

### Item Object Description Field Modification

Goal: Modify the Item Description on the Item Object *only*.

Default Item Privilege Mask		Default Change Privilege Mask		Change Order Affected Items table, "Item Description" attributes
Name	Applied To property	Name	Applied To Property	

Default Item Privilege Mask		Default Change Privilege Mask		Change Order Affected Items table, "Item Description" attributes
Name	Applied To property	Name	Applied To Property	
<b>Modify Preliminary Items</b> (applies to Introductory or Pending revisions)	ADD: Items.Title Block.Description	All default privilege masks with object type Changes	REMOVE: Changes.Affected Items.Item Description	HIDE (disable): Old Item Description Enable and RENAME: New Item Description to: Item Description
Modify Released Items	ADD: Items.Title Block.Description	All default privilege masks with object type Changes	REMOVE: Changes.Affected Items.Item Description	HIDE (disable): Old Item Description Enable and RENAME: New Item Description to: Item Description

## Revision Controlled, All Items

Goal: Modify the Item description on Change Order *only*.

Default Item Privilege Mask		Default Change Privilege Mask		Change Order Affected Items table, "Item Description" attributes
Name	Applied To property	Name	Applied To Property	
<b>Modify Preliminary Items</b> (applies to Introductory or Pending revisions)	REMOVE: Items.Title Block.Description	All default privilege masks with object type Changes	ADD: Changes.Affected Items.Item Description	SHOW (enable): Old Item Description <i>and</i> New Item Description
Modify Released Items	REMOVE: Items.Title Block.Description	All default privilege masks with object type Changes	ADD: Changes.Affected Items.Item Description	SHOW (enable): Old Item Description <i>and</i> New Item Description

Goal: Modify the Item description on Item object *or* on Change Order.

Default Item Privilege Mask		Default Change Privilege Mask		Change Order Affected Items table, "Item Description" attributes
Name	Applied To property	Name	Applied To Property	
Modify Preliminary Items (applies to Introductory or Pending revisions)	ADD: Items.Title Block.Description	All default privilege masks with object type Changes	ADD: Changes.Affected Items.Item Description	SHOW (enable): Old Item Description <i>and</i> New Item Description
Modify Released Items	ADD: Items.Title Block.Description	All default privilege masks with object type Changes	ADD: Changes.Affected Items.Item Description	SHOW (enable): Old Item Description <i>and</i> New Item Description

## Revision Controlled, All Items

Goal: Modify the Item Type (subclass) description on Change Order *only*.

Note For each Item Type (subclass) to be modified by Change Order only, a modify privilege mask for change orders (with criteria for \$AFFECTEDITEMTYPE) is required.

Default Item Privilege Mask		Default Change Privilege Mask		Change Order Affected Items table, "Item Description" attributes
Name	Applied To property	Name	Applied To Property	

Default Item Privilege Mask		Default Change Privilege Mask		Change Order Affected Items table, "Item Description" attributes
Name	Applied To property	Name	Applied To Property	
Modify Preliminary Items (specific Item Type)  (applies to Introductory or Pending revisions)	REMOVE: Items.Title Block.Description	All default privilege masks with object type Changes	ADD: Changes.Affected Items.Item Description <i>where</i> Change.Affected Item. Item Type = (specific Item Type) Use criteria: Change.\$AFFECTEDITEMTYPE = (specific Item Type)	SHOW (enable): Old Item Description <i>and</i> New Item Description
Modify Released Items (specific Item Type)	REMOVE: Items.Title Block.Description	All default privilege masks with object type Changes	ADD: Changes.Affected Items.Item Description <i>where</i> Change.Affected Item. Item Type = (specific Item Type) Use criteria: Change.\$AFFECTEDITEMTYPE = (specific Item Type)	SHOW (enable): Old Item Description <i>and</i> New Item Description

Goal: Modify the Item description on Item object *or* on Change Order.

---

**Note** For each Item Type (subclass) to be modified on the item subclass, a modify privilege mask (with criteria for Title Block.Part Type) is required.

---

Default Item Privilege Mask		Default Change Privilege Mask		Change Order Affected Items table, "Item Description" attributes
Name	Applied To property	Name	Applied To Property	
Modify Preliminary Items (specific Item Type)  (applies to Introductory or Pending revisions)	ADD: Items.Title Block.Description	All default privilege masks with object type Changes	REMOVE: Changes.Affected Items.Item Description	HIDE (disable): Old Item Description Enable and RENAME: New Item Description to: Item Description
Modify Released Items (specific Item Type)	ADD: Items.Title Block.Description	All default privilege masks with object type Changes	REMOVE: Changes.Affected Items.Item Description	HIDE (disable): Old Item Description Enable and RENAME: New Item Description to: Item Description

## Notes on Configuring Product Collaboration Object Tabs

- Only the editable attributes on the BOM tab and the Manufacturers tab can be redlined. For more information, see [Read-Through Fields](#) (on page 68).
- In the BOM Bulk Change wizard to replace or remove an item from an assembly, when the user identifies an item to bulk replace or remove, a table of assemblies where that item is used is displayed in the wizard. That table is derived from the item's Where Used tab. That is, any attributes that are visible on the item object Where Used tab will also appear in the BOM Bulk Change wizard.

For example, if you want the assembly revision to appear in the table in the BOM Bulk Change wizard, then you must enable (make visible) the Revision attribute on the Where Used tab of item objects. For more information, see [Configuring Tabs](#) (on page 58).

## Notes on Configuring Agile PLM Settings that Affect Product Collaboration

- The Multiple Items Per Manuf Part SmartRule is applied when the user creates an item with the Save As feature. That is, if the original item has a manufacturer part and the user displays that item and chooses Save As, the SmartRule is applied to the new item. If the SmartRule is set to Disallow, the user is presented with an error message and will not be allowed to create the new item. If the SmartRule is set to Warning or Allow, no error message is displayed and the new item is created.

## Configuring Sites – Distributed Manufacturing

**Note** For information about implementing and configuring Agile multi-site manufacturing, see *Administrator Guide*. For information about using Agile multi-site manufacturing, see *Product Collaboration User Guide*, in particular, chapter 2, "Sites and Distributed Manufacturing."

---

When the Agile administrator enables the Agile PLM Sites license, the Agile Site object is available and Agile PLM multi-site manufacturing functions become available. Agile multi-site manufacturing capabilities are used to assist a company that builds its products in multiple locations (distributed manufacturing). Before taking this step, you must determine and plan how Agile PLM multi-site manufacturing will be integrated with your ERP system.

**Warning** Agile PLM multi-site manufacturing functionality is built differently than ERP sites. Agile Site objects and ERP sites are similar, but they are not identical. You should work with an Oracle Consulting - Agile practice representative to plan your Agile PLM to ERP integration before you enable the Agile Sites license. The type of information that you want to track in Agile PLM and how you choose record that information in Agile PLM may depend on how product information is stored in your ERP system.

Agile multi-site manufacturing helps a company that builds its products in multiple locations to do so by enabling parts and documents in those locations that are specific to the manufacturing process. In Agile PLM, revisions are global item attributes. If a part is used in two manufacturing sites, it must share the revision level, although the effectivity dates and disposition settings can be different.

The Agile multi-site manufacturing features allow you to annotate product data with three types of site relationships:

▫ **Item object-to-Site relationship**

An item can be associated with one or more sites by adding the site object to the sites table on the item Sites tab. Item-site relationships are similar, but not identical to ERP item-site relationships. You can see if an Agile part is enabled in any sites by viewing its Sites tab.

- Parts that are not released in any site have only global item effectivity dates and dispositions.
- Parts released in sites are can have both site-specific item effectivity dates and dispositions and global item effectivity dates and dispositions.

▫ **BOM row-to-Site relationship**

BOM row-site relationships are unique to Agile PLM. A child part can relate to its parent with no site relationship or through one or more specific sites. Each BOM row has either no site relationship or one site relationship. Use multiple rows, one for each site, to represent more than one site relationship for the same child part.

- A child part that reports to its parent without a specific BOM row-site relationship is considered a common part, that is, a part common to all manufacturing sites.
- A child part that reports to its parent with a BOM row-site relationship is a site-specific part, that is, a part that is specific to the related manufacturing site.

▫ **AML table row-to-Site relationship**

On an part's Manufacturers tab, you can specify site-specific AMLs (Approved Manufacturer

List). Rows on the part manufacturer table can be common (specify no site) or a site-specific (associated with a site listed on the part's Sites tab). BOM row-site relationships and AML row-site relationships are independent of one another.

- An manufacturer part without a specific AML row-to-site relationship is a common manufacturer part and can be used at any manufacturing site.
- A manufacturer part with an AML row-to-site relationship is a site-specific manufacturer part, which allows the manufacturer part to be used at the specified manufacturing site.

Other important Agile PLM sites and ERP sites differences to keep in mind:

- In many ERP systems, a part can appear in different sites and have independent revisions. Agile considers all revision to be a global attribute of the part, therefore, site-based revisions are not supported in Agile PLM. To accommodate this need, simply prefix or suffix the part number with a unique string, for example SJC-P1000 and NYC-P100. These are unique parts which have global revision, but because these parts aren't used in other sites their revisions appear to be site-specific.
- The item-site relationship and the BOM row-site relationship are independent of one another in that you can add a part to a BOM as a site-specific BOM row without first adding the site to the part. Unlike typical ERP systems, Agile does not require that a part must first be released in a site before it can be added to a site-specific BOM row.
- When adding a row to a BOM where the parent has Sites that are not on the child, Agile PLM prompts the user to add the Sites to the child. This occurs only on the initial add of the BOM row - either in authoring mode (direct editing of a part) or in redlining mode (modifying a part through change redline). The user can choose only to Copy the sites onto the child in order to add the row to the BOM; choosing Close will not add the BOM row. If additional Sites are subsequently added to the parent, the newly added Sites are not automatically copied to the child. If Sites are removed from the child, no check is made on whether there is inconsistency between Sites on the parent and the child.
- The SmartRule Child Released First is enforced by the Release Audit when a part is released. When a parent part is released, this rule checks the BOM components for Site association and whether the BOM components are also released. The Release Audit verifies whether or not the item has been released by a Change or Manufacturer Change after a Site was added. In order to correctly pass this SmartRule, the Item must be released after adding a Site.





# Administering Attachments

**This chapter includes the following:**

---

▪ Evaluating Your Company's Needs with Attachments or Designs .....	309
▪ Administrator Settings Related to Attachments .....	309
▪ Assign Roles and Privileges .....	314
▪ Document Management Enhancements in Rel. 9.2.2.4 .....	321
▪ Generating Attachment Quick Access URLs .....	322

This chapter collects information about attachments that the administrator has to know.

## Evaluating Your Company's Needs with Attachments or Designs

As with other areas of Agile PLM administration, the most important step comes before setting properties in Administrator. You have to determine an overall “policy” that supports your company's uses of attachment files, file folders, and design models.

As you decide about company objectives, these are a few factors you might evaluate:

- Does your company produce CAD design and graphic files? If so, you will build from the Designs class. Please refer to the next chapter,
- Does your company need to organize and track attachments and bundles of attachments? This may indicate building from the File Folder subclass.
- Does your company work in Viewer-based attachments that want markup and redlining capabilities? This indicates building from the Markup subclass.
- Are there other special purposes or uses of Agile's attachment capabilities to take into account?
- Invisible or Visible file folders?
- How should attachment files be named? Are such files to be named in a dictated or organized system? Or is it alright to allow users to name attachment files and count on users to use file folders to search and find specific attachments?

## Administrator Settings Related to Attachments

This section collects various Administrator settings – SmartRules, systemwide Preferences, and a user preference – for convenience. Roles and privileges that pertain to attachments are discussed

in a subsequent section. Refer to node-specific chapters for more information about the capabilities in Administrator.

## File Management in Agile PLM

Administrator settings on the Server Settings > Locations > File Manager tab are important in relation to attachment files and where originals and copies are found. This is documented in [File Management in Agile PLM](#) (on page 269).

The Checksum internal utility is a security measure against improper handling of files. Reset privilege and Checksum Computation preference are described in [Handle File Checksum](#) (on page 271).

## SmartRules

The Agile PLM SmartRules are documented in [SmartRules](#) on page 233.

## Copy Files To Rev

The Copy Files To Rev smartrule controls automatic copying of attachment files to a new revision; that is, the pending item revision that is created when an item is added to the Affected Item table of a change. The system checks this SmartRule only when a pending change is created and not when attachments are added. Possible settings are Copy, Reference (the default), Disallow, Copy with Warning, and Reference with Warning.

The following table illustrates how each setting works in the case of the following example:

- Part 55, Revision B, Attachments tab table lists attached file Test.txt, version 3; that is:  
File Name = Test.txt, File Folder = Folder004, Folder Version = 3.
- Part 55, Revision B is added to the Affected Items tab of a change object, thus creating pending revision C.

Setting	How it works
Copy	<p>For the item's new pending revision, Agile creates a new file folder and creates a new copy of the attachment file, which is placed in the new file folder.</p> <p>So, when pending revision C is created, the <b>Attachments</b> tab table lists the same attachments as revision B, that is, revision C inherits the same attachments as revision B:</p> <p><b>File Name</b> = Test.txt, <b>File Folder</b> = Folder004, <b>Folder Version</b> = 3</p>
Reference	<p>Agile uses the existing file folder and creates a new reference to it on the item's pending revision <b>Attachments</b> tab.</p>
Disallow	<p>When pending revision C is created, the <b>Attachments</b> tab table is empty. No attachment references are copied.</p>

Setting	How it works
<b>Copy with Warning</b>	<p>The same as the <b>Copy</b> setting, with the option of choosing no attachments for the new pending revision.</p> <p>When you add items to the pending ECO, you are presented with a warning dialog that includes a row for each item you are adding. To add the item and to copy the attachments, check both the <b>Add</b> checkbox and the <b>Attachments</b> checkbox. To add the item with no attachments, check only the <b>Add</b> checkbox.</p>
<b>Reference with Warning</b>	<p>The same as the <b>Reference</b> setting, with the option of choosing no attachments for the new pending revision.</p> <p>When you add items to the pending ECO, you are presented with a warning dialog that includes a row for each item you are adding. To add the item and to reference the existing attachments, check both the <b>Add</b> checkbox and the <b>Attachments</b> checkbox. To add the item with no attachments, check only the <b>Add</b> checkbox.</p>

---

**Note** All revision-specific rules that apply to ECO-created revisions (such as Revision B in the example above) also apply to the Introductory revision of an item.

---

If you set this smartrule to Disallow, files that were added to the Introductory revision after the object was associated with a change (that will result in released Rev A) will not be copied to subsequent revisions. Also, when a new Change is created, all the files that were added to the Introductory revision won't be added to the newly created revision.

## Check In Attachment With Different File Extension

This smartrule determines whether an attachment file that is being checked in can have a different file extension than the file that was checked out. This smartrule applies to all business objects.

This rule is overridden when a business object's attachment is Latest-x and the file extension in the attached file folder is changed and is therefore different than the extension of the business object's checked-out file.

## Preferences

Systemwide preferences are documented in [Preferences](#) (on page 284).

### Filename Prefix

Agile File Manager uses a prefix that is attached to each file that is stored in the file vault. Before PLM 9.2, the prefix was automatically assigned, and was derived from the Database username. But that made it difficult to retrieve files after an upgrade if the new Database username changed. Now you can type in the identifier that will be automatically added to every attachment file. The default is "agile".

### Optimized Replication

When there are more than two File Managers, this preference allows the PLM system to keep track of the File Managers that contain each file. During replication, the requesting FM only contacts other FMs that contain the file, and downloads a given file from the nearest FM (which is determined by

shortest 'ping' to all the FM servers).

Settings are Enabled or Disabled. Disabled can be set to troubleshoot problems with the optimizations.

## Save As Attachments

Here are further details on the available choices for the Save As Attachments preference. When Save As is used to create a new business object will include the same attached files; your choice is whether to create new copies of the files (which includes new file folders), to reuse the same file folders attached to the original business object, not to copy any files, or to allow the user to choose one of these methods at the time he performs the Save As operation.

Select the setting that best suites your company's business practices.

---

Note	This preference does not apply to File Folder objects themselves, except as outlined in the table below.
------	--

---

For Product Portfolio Management objects, this preference applies only to attachments in the current object; it does not propagate down to all children tasks. The preference does apply when creating a new program from a PPM template.

The following table illustrates how each setting works in the case of the following example:

- Object ABC includes the following attachment:  
File Name = Test.txt, File Folder = Folder004, Folder Version = 3.
- A user opens Object ABC and uses Save As to create Object XYZ.

Setting	Example of how it works
Create new copy of file(s)	<p>When Object XYZ is created, a new copy of the Test.txt is attached in a new file folder. Object XYZ's <b>Attachments</b> tab lists:</p> <ul style="list-style-type: none"><li>▫ <b>File Name</b> = Test.txt</li><li>▫ <b>File Folder</b> = Folder013</li><li>▫ <b>Version</b> = 1</li></ul> <p>A new copy of Test.txt is created in the file vault, and a new file folder (Folder013, Version 1) is created.</p> <p>The end result (new copy of the file, new file folder, at Version 1) is the same as if the user had added the attachment Test.txt by using the <b>Add   Files</b> button on the <b>Attachments</b> tab of Object XYZ.</p>

Setting	Example of how it works
Reference existing file(s)	<p>When Object XYZ is created, it reuses the same attachments as the original Object ABC. Object XYZ's <b>Attachments</b> tab is the same as Object ABC's <b>Attachments</b> tab, and lists:</p> <ul style="list-style-type: none"> <li>▫ <b>File Name</b> = Test.txt</li> <li>▫ <b>File Folder</b> = Folder004</li> <li>▫ <b>Version</b> = 3</li> </ul> <p>The end result (the file folder attachments are reused) is the same as if the user had added the attachment Test.txt by using the <b>Add   By Search</b> button on the <b>Attachments</b> tab of Object XYZ, searching for Object ABC and selecting its attachment: Test.txt, Folder004, Version 3.</p>
Do not copy file(s)	<p>When Object XYZ is created, no attachments are copied from the original Object ABC.</p> <p>The end result is that the newly created Object XYZ has no attachments; its <b>Attachments</b> tab is empty.</p>
Prompt	<p>The user is prompted to select one of the Save As Attachment methods:</p> <ul style="list-style-type: none"> <li>▫ <b>Reference existing file(s)</b></li> <li>▫ <b>Create new copy of file(s)</b></li> <li>▫ <b>Do not copy file(s)</b></li> </ul> <p>Agile PLM always prompts each user whenever a Save As operation is performed. However, if the original Object ABC does not have any attachments (the Attachments table is empty), the prompt will not appear.</p>

## Allow Download of Productivity Components

This preference controls whether your users — specifically Web Client users — will have access to Java applets that permit advanced features. Besides specific applications to the PE and PG&C solutions, this preference enhances system behavior with regard to attachments in these three ways:

- The Advanced File Uploader is available to users in Web Client.
- Automated checkin is based on the checkout location in Web Client.
- Allow download of individual files instead of a single Zip file in Web Client.

---

**Note** Java Client users always have access to these advanced attachment features, regardless of the setting of this preference.

---

If this preference is set to Yes, the end user must also have the appropriate user profile setting for his File Productivity Preference attribute.

If you have set this preference to Yes, and a Web Client user does not have access to the advanced attachment features, check his user profile. See also [File Productivity User Preference in the User Profile](#) (on page 314).

Setting	Results
Yes	File Productivity Preference attribute appears in the user profile, <b>Preferences</b> tab. User may set this to Advanced, Standard, or Prompt. If set to Advanced or Prompt, the Web Client user has access to advanced attachment features.
No	File Productivity Preference attribute does <b>not</b> appear in the user profile, <b>Preferences</b> tab. The Web Client user does not have access to advanced attachment features.

## File Productivity User Preference in the User Profile

---

**Note** File Productivity Preference is a user preference – strictly, simply an attribute in every User object – not a systemwide preference. It is discussed here because it works in conjunction with Allow Download of Productivity Components systemwide preference: the File Productivity Preference user preference will not appear in any user's Profile if the Allow Download of Productivity Components systemwide preference is set to No.

---

User properties are documented in [User Properties Defined](#) (on page 155).

This user setting controls whether the user has access to advanced productivity components, or standard components, or wants to be prompted in each situation. The available settings are Prompt, Advanced, or Standard. The default is Prompt; you as administrator can set any of the values for any user; each user can change the setting in their User Profile (again, assuming the systemwide preference Allow Download of Productivity Components is set to Yes).

---

**Note** The “Working with Attachments” chapter of *Agile PLM Getting Started Guide* includes instructions for the end user for setting his user profile File Productivity Preference and explains the behavior of each setting.

---

If the user preference is set to Standard mode, non-supported files will not be opened automatically. Instead, the user is prompted to choose Save or Open.

---

**Note** Make sure you choose appropriate character sets where required. There is a potential problem when adding files or URLs from a business object to a file folder object. If the file folder's File Description attribute has a Character Set = Numeric, but the business object's File Description attribute has a Character Set = Alpha or AlphaNumeric, the latter will override the former, meaning whatever control you wanted to impose in the file folder's File Description (being numeric) will be lost, the system will save the original character set.

---

## Assign Roles and Privileges

Agile PLM roles are fully documented in Chapter 9, [Roles](#) (on page 173), and privileges are fully documented in Chapter 10, [Privileges and Privilege Masks](#) (on page 193). You should evaluate your objectives carefully before creating new roles and privileges. While customized roles and privileges may need to be created, it is always preferable if your objectives can be handled by out-of-box roles and privilege masks.

---

**Note** In Agile PLM 9.0, a user could discover and read file folders that he created, even when he did not have explicit Discover and Read privileges. To preserve that 9.0 behavior, the administrator must create and assign a privilege mask as described below.

---

- Migrating from Agile 8.5 to 9.2 — No need to do anything, as the business object user cannot access the file folder (the file folder object did not exist before PLM 9.0).
- Migrating from Agile PLM 9.0 to 9.2 — Grant explicit access to *all* users to Read and Discover file folders that the particular individual created. In the privilege Criteria, set CreateUser = \$CREATEUSER.

The following section provides information about privileges that are constructed to realize attachment capabilities.

## Attachment Privileges

Some privileges allow users to perform actions on attachments; we will call them “attachment privileges” in this discussion. Users who are assigned Folder Administrator or Folder Manager roles may need to review the information below.

The following privileges allow users to perform actions on attachments:

- Checkin
- Checkout
- Cancel Checkout
- GetFile
- PrintFile
- ViewFile
- Modify

**Important** GetFile privilege works in tandem with Checkout privilege to actually deliver the attachment file to the user's machine. A user with Checkout but not GetFile will see in History that the file is checked out, but it has not been downloaded to the user. The GetFile privilege (without Checkout) allows the administrator to permit a user to get a file – open it, read it – without being able to change it in the product record.

In Agile PLM 9.2, you can create privilege masks and roles that allow you to provide users all attachment actions from the business object Attachments tab; direct access to the file folder object is not required. Thus, file folder objects are “invisible” to the user, even though the user has the capability to perform all attachment actions from the business object Attachments tab.

---

**Note** Attachment actions performed from the business object's Attachments tab are carried out on the referenced file folder object. For example, checking out an attached file on the Attachments tab actually checks out the referenced file folder. However, if the user has the correct attachment privileges, he does not also require file folder privileges.

---

However, if required, attachment privileges can apply directly to file folder objects, and privileges for file folder objects should be reserved for those users who will actively maintain those objects. These users can search for file folder objects, open them, check files in and out on the Files tab, get files, print files, and view files. But you don't want every user to have this range of permissions on the file

folders, and those roles don't give users the correct functionality anyway.

What will be more useful for standard users is having attachment privileges for specific classes or subclasses of business objects (or, as needed, specific objects). A user who has attachment privileges for manufacturer parts can perform attachment actions on any manufacturer part's Attachments tab, provided that the Folder Version selected in the attachments table is the latest version. If a user's attachment privileges pertain to a subclass of manufacturer parts, say, Resistors, the user can perform attachment actions on any resistor's Attachments tab, again provided that the Folder Version selected in the attachments table is the latest version.

As long as the latest version is selected, a user—from the Attachments tab of the current object—can check out and check in and perform the other attachment actions.

Therefore, a user with attachment privileges for *only* manufacturer parts can perform attachment actions from a manufacturer part's Attachments tab but *not* from an item's Attachments tab.

To summarize, users do not need privileges for file folder objects to work with attachments; however, they do need privileges for the business objects they will be working with (with the privilege specifying a class, subclass, or specific object). Users can create, check in, and check out file folder objects, but only in association with the Agile PLM class, subclass, or object for which they have business object attachment capability privileges.

### Attachment Capability Privileges in a Role

Some out-of-box roles have all of the above-named attachment privileges for the object types that role would usually work with, that is, the object types that the role is designed to create and modify. They may also have file capabilities (get, view, and print) for other related object types.

For example, the Item Content Manager role includes all seven attachment privileges for items and changes. It also includes GetFile, PrintFile, and ViewFile privileges (not Checkout or Checkin) for manufacturers, manufacturer parts, and price objects (that is, objects that are listed on the Manufacturers and Prices tabs of an item).

Following the Item Content Manager role as an example, you can create roles that allow users to get, print, and view attachments for all objects related to that user's Agile PLM system activities, and limit the checkin/checkout privileges to only those objects that the user can create and modify. A role that includes privileges for file folder objects does not allow you to control the user's attachment capabilities to the same level of granularity.

### Modify Privilege and Attachments

The Modify privilege allows a user to modify or edit fields on the tab of an object. Modify privileges are assigned using the AppliedTo attribute settings.

Agile PLM uses Modify privilege mask Applied To properties to determine and control certain specific user actions and attachment capabilities. For example, if a user has a role that includes a Modify privilege mask for parts and the Applied To property includes the Parts.Attachment.FileDescription attribute, then that user is able to modify the File Description field on the Attachments tab of a part object. This same modify action will also modify the File Description field on the Files tab of the referenced file folder object, however, a modify privilege mask for the file folder object is *not* required.

The following table lists the Modify privilege mask Applied To properties and which attachment actions they control.



**Note** This table uses File Folder or Business Object as a placeholder for the class or subclass name in the Applied To attribute column. The actual class or subclass name in any privilege mask is determined by the reusable criteria specified in the privilege mask. (See [Privilege Mask Components](#) on page 218.) If you view the example privilege masks mentioned in the Notes column, the Applied To properties will be appropriate for that specific privilege mask (for example, Manufacturer parts.Attachments.FileName).

The Notes column lists at least one example privilege mask that demonstrates a privilege mask that provides the user action; it is not a comprehensive list of example privilege masks. In cases where a Modify privilege mask is not required, only the needed privilege mask is listed (such as Example - Checkin for File Folders). If multiple privilege masks (in addition to a modify privilege mask) are needed to enable the user action, they are all listed.

User action	Privi	Class	Applied to	Example Privilege Mask or Role / Notes
<b>File Folder attachment actions</b>				
Add file to File Folder	Modify	File Folder	Files.FileName	Example - Modify File Folders
Checkin File from File Folder	Checkin	File Folder		Example - Checkin for all File Folders (criteria = Example - All File Folders)  Example - Checkin for File Folders (criteria = Example - All File Folders Checked Out By Me)
Delete File from File Folder	Modify	File Folder	Files.FileName	Example - Modify File Folders
<p>Example file folder roles:</p> <p>Example - File Folder Manager allows user to work with his own file folder objects.</p> <p>Example - File Folder Administrator allows user to work with any file folder objects.</p>				
<b>Business Object attachment actions</b>				
Add new attachment to Business Object	Modify	Business Object	Attachment.FileName	Example - Modify Mfr Parts
Add attachment by search to Business Object	Discover	Business Object (the business object being searched against)		As an example, if the user is searching for item objects from which to add attachments to a Mfr Part, then he requires:  Example - Discover Items

User action	Privi	Class	Applied to	Example Privilege Mask or Role / Notes
	Modify	Business Object	Attachment.Filename	Example - Modify Mfr Parts
				Example - Component Engineer role includes both these example privilege masks and would allow a user to add an attachment to a Manufacturer Part by using <b>Add   Search</b> to search for Items.
Add multiple attachments in one file folder to business object and specify Folder Description	Modify	Business Object	Attachment.Filename	Example - Modify Mfr Parts
	Modify	Business Object	Attachment.Folder Description	Example - Modify Mfr Parts
Checkin attachment on Business Object	Checkin	Business Object		Example - Checkin for Mfr Parts
Remove attachment from Business Object	Modify	Business Object	Attachment.Filename	Example - Modify Mfr Parts
Edit File Description on Business Object <b>Attachments</b> tab	Modify	Business Object	Attachment.File Description	Example - Modify Mfr Parts
Edit Folder Description on Business Object <b>Attachments</b> tab	Modify	Business Object	Attachment.Folder Description	Example - Modify Mfr Parts
Show Version on Business Object <b>Attachments</b> tab	Read	Business Object	Attachment.Filename	Example - Read Mfr Parts

## Markup Subclass

**Note** Attachment redline markups and file folder Ad Hoc redline markups are created, modified, and viewed in the Agile Viewer.

The Markup subclass of the File Folders class is used to save attachment-file redline markups. By assigning the appropriate privilege masks to different kinds of users, specific users (for example, vendors) can see and modify only their own markups, but cannot see markups created by other users.

For detailed information about Markup subclass privilege masks, see [Redline Markup Default Roles and Privileges](#) (on page 319).

Markup subclass objects are visible in Agile PLM for any user that has Read privileges for Markup objects. For example, if a user searches for File Folders class objects, Markup objects are included in the search results. However, the redline markup file they contain can be viewed only when viewing the item attachment-file or the file-folder file with which the redlines are associated. Attempting to view the redline markup from the Files tab of the Markup subclass object displays an error message when the Agile Viewer opens.

See also [Discovery and Read Privileges](#) on page 204.

## Markup Promotion

Markup Promotion is a generic capability supported within AutoVue to “promote” (copy) markup files from one base file to another. The user can promote markups from previous revisions (for change-based markup) or previous versions (for ad-hoc markup), permitting the user to see if the changes made in the following revision or version address the comments originally made in the markup.

This works with both File Folders class (therefore, objects from File Folder and Markup subclasses) and the new Designs class (objects from Design subclass). It works with both types of markup:

- Change-based – from Changes Redline Attachments tab
- Ad-hoc – from File Folders or Designs Files tab

Markups are selectable for promotion if they are on a previous revision or version and the base file extension is the same, for example, if Version 1 is file\_v1.pdf and Version 2 is file\_v2.pdf.

## Redline Markup Default Roles and Privileges

Agile PLM uses the file folder subclass Markup to store attachment redline markups created in the Agile Viewer. Agile PLM provides a default set of Markup subclass privilege masks and two default roles, Markup for Self and Markup for All. If you have upgraded PLM, you must create these roles by referring to the example roles Example - Markup for Self and Example - Markup for Others. See also [Markup Subclass](#) (on page 318).

Note	The Markup for Self and Markup for All default roles replace the Attachment Redlines for Self (ARS) and Attachment Redlines for Others (ARO) privileges. As of release 9.2.2.2, the privileges ARS and ARO are disabled; ARS and ARO privilege masks have no effect. However, any previously assigned custom ARS or ARO privilege masks are not deleted or removed; so, you can refer to the ARS and ARO privilege masks when creating and assigning redline capabilities with Markup subclass privilege masks or roles.
------	--

A user with Markup capabilities can create and modify the following types of redline markups:

- Create and modify attachment redline markups for the affected items of any change order object for which he has Read privileges.
- Create and modify Ad Hoc file folder redline markups for any file folder object for which he has

Read privileges.

The Markup for Self role allows the user to redline attachments from the Affected Items tab of a change order and to Ad Hoc redline files on the Files tab of a file folder, and he can modify or delete only those redlines he created. The privilege masks in the Markup for Self role are based on the Markup for Self criteria: Markup Page Two.Create User Equal to \$USER.

The Markup for Others role allows the user to redline attachments from the Affected Items tab of a change order and to Ad Hoc redline files on the Files tab of a file folder, and he can modify or delete only those redlines created by other users. The privilege masks for the Markup for Others role are based on the All Markups criteria.

The following table lists the default privilege masks in each of the default roles for Markup subclass:

Markup for Self role	Markup for Others role
Read My Markups	Read All Markups
Modify My Markups	Modify All Markups
Checkout My Markups	Checkout All Markups
Checkin My Markups	Checkin All Markups
Create Markups	Create Markups

## Redline Markup Privilege Guidelines

The following rules and guidelines apply to redline markup capabilities:

- If a user does not have Read privilege for a specific Markup object, the associated redline markup is not listed in the markup panel in Agile Viewer.
- If a user does not have Modify privilege for a specific Markup object listed in the Agile Viewer markup panel, the Agile Viewer markup panel is disabled and the user cannot edit any redline markup for that viewed file.
- If a user does not have a Create Markup object privilege mask, he cannot create new markups from the Agile Viewer.
- In Admin > Settings > Data Settings > Classes, for File folders class, the Page Two attribute Create User must be enabled. The default value is \$USER. This attribute is used to determine "ownership" of each redline markup.
- In order to differentiate between privilege masks for Markup subclasses and all other file folder subclasses, Create, Read, Modify, Checkout, and Checkin privilege masks for file folders must use criteria that specify specific file folder subclasses (for example, Markup subclass and File Folder subclass). This allows you to use a set of privilege masks specific to Markup subclass. The Markup-specific privilege masks are assigned only to those users to whom you wish to grant redline capabilities.

In contrast, privilege masks based on criteria that specify the File Folders base class or the File folders class will apply to all file folder subclasses, thus depriving you of the ability to restrict redline capabilities (by *not* assigning to users Markup subclass privilege masks). That is, privilege masks based on criteria for the File Folders base class or the File folders class will

always apply to Markup subclass objects.

- The default Markup subclass privilege masks are based on broadly-defined reusable criteria (All Markups and Markups for Self). However, you are not limited to these criteria when creating Markup subclass privilege masks. For example, you can enable a list attribute or a multilist attribute, then create criteria that will determine Markup capabilities based on the settings of that list attribute or multilist attribute.

## Document Management Enhancements in Rel. 9.2.2.4

A few enhancements in Rel. 9.2.2.4 are listed here:

Bulk download of attachments in Web Client

Limit Attachment Size

Identify Checkin User

URLs can be up to 255 characters

### Version Browser

On the standard Actions menu, the most significant added Action is Version Browser. The Version Browser action is available in File Folder and Design objects.

The Version Browser utility is extremely useful as file-folder structures or design structures grow, as it tracks the versions of each design or file-folder. Each version displays:

- Approved (users who have approved file folder or design in workflow), including the Awaiting Approval icon (users who have not yet approved);
- Checkin Date;
- Checkin User (which captures the user who checked in the version, and also can read thru to the design Structure tab and to Attachments tabs in designs or file folders);
- Change Info and Label (as filled in by users); and,
- Revision and Revision Date.

Many of these fields are pulled from the object's Title Block tab.

Using the View drop-down, you can have a quick View of a selected version of the design, or select two versions and Compare them visually.

### Limit Attachment Size

Administrators can set the maximum file size that can be uploaded at System Settings > Viewer and Files > Upload File Size Limit (in MB). This setting defines the maximum size (in MB) of uploaded files for Java Client, Web Client, Portal Client, and SDK.

The default value, 0, indicates "No Limit"; any non-negative integer sets the size limit in MB. Users will see an error message in Java and Web clients if a file is too large. Files that successfully upload (before a failure occurs) remain uploaded, while other files (after a failure occurs) will not be

uploaded.

## Identify Checkin User

The Checkin User field is available on File Folders and Designs Title Block tab and on any business object's Attachments tab. It identifies the user who checked in the specified version.

This field is not available on Project Content Tab.

## URLs can be up to 255 characters

Attached URLs can be up to 255 characters in length.

## Generating Attachment Quick Access URLs

Attachment URLs allow you to do the following:

- Generate a URL for an attachment on item objects.
- Generate a URL for a file on file folder objects.
- Generate a URL for a file on the Content tab of Program objects.
- Paste URLs from Agile to another application
- Externally open files outside of the Agile application.

You can generate attachment URLs from Items, Activities, and File Folders by two methods:

- Using Agile PLM commands to copy a URL to your clipboard:  
[Agile-Generated Attachment Quick Access URLs](#) (on page 322)
- Manually typing an Attachment Smart URL in an easy-to-understand format:  
[User-Generated Attachment Quick Access Smart URL Formats](#) (on page 323)

The URL format enables you to identify which object and files are being referenced. Because of the easy-to-understand format, you can generate your own URLs to point to specific file attachments without logging into the Agile system, if you know where the files are located.

## Agile-Generated Attachment Quick Access URLs

From Web Client, you can only generate Attachment Quick Access URLs from the Attachments tab of any object, the Content tab of Activities, and Files tab File Folders by clicking Get Shortcut after performing one of the following scenarios:

- Selecting only one row from the Attachments, Content, or Files tab to generate a URL that points to the folder corresponding to the file on that row.
- Selecting all the rows on the Attachments, Content, or Files tab to generate a URL that points to the collection of files on the tab.

---

**Note** You must have Read privileges for an object in order to generate a URL for the object.

---

**Caution** If you select more than one row on the Attachments, Content, or Files tab, the Get Shortcut link is disabled.

The URL is copied to your clip board. You can then paste it into another application or file, such as a word processing file, a spreadsheet file, or an email.

## User-Generated Attachment Quick Access Smart URL Formats

With the easy-to-understand Smart URL format, you can generate your own URLs to point to specific file attachments without logging into the Agile system, if you know where the files are located.

The formats of user-generated attachment Smart URLs depend on the object type, and fall into three main categories:

- [Item Attachment Quick Access URL Formats](#) (on page 323)
- [File Folders Quick Access URL Formats](#) (on page 325)
- [Program Content Quick Access URL Formats](#) (on page 326)

### Item Attachment Quick Access Smart URL Formats

You can generate Smart URLs for item attachments in the following format:

```
http://<server:port>/<VirtualPath>/link/<ObjectType>/<ObjectNumber>[/Revision/ChangeNumber]/files/Folder/<FolderNumber>[/<FileAction>]
```

or

```
http://<server:port>/<VirtualPath>/link/<ObjectType>/<ObjectNumber>[/Revision/ChangeNumber]/files/<FileName>[/<FileAction>]
```

where

<Server:Port>/<Virtual Path> element	Identifies the Agile instance
link	The text "link" identifies the URL as a special attachment URL to the Agile server.
ObjectType	Refers to the subclass of the Item, File Folder, or Program/Activity.
ObjectNumber	Refers to the actual object number for the object type.
Revision	Identifies an item revision by specifying the change number corresponding to that revision.
ChangeNumber	Identifies a unique revision (Released or Pending) of the item. If the number is not specified, the latest released revision is attached. If the number is not specified and the item does not have a released change, the Introductory revision is attached.
Folder	Indicates that the object is a file folder, not the actual file.
FolderNumber	Identifies the file folder related to the selected row. The version of the file retrieved is the most current version, based on the specific revision of the item.

<Server:Port>/<Virtual Path> element	Identifies the Agile instance
FileName	Refers to the name of the specific file attached to the specified revision of the item.
FileAction	Determines the action performed with the retrieved files. Values are GET or VIEW. If FileAction is not specified, a GET is performed.  If the parameters specified in the URL point to a single file, the file is retrieved in its native format. If the parameters specified in the URL point to a collection of files, then all the files are returned as a zipped file called "Download.zip".

If the specific revision of an item has multiple files contained in the same folder on the Attachments tab, but is referenced from different versions of the folder, then a Folder-based URL may not reflect the actual set of attachments from the item revision's Attachments tab.

Examples of user-generated URLs for item attachments:

- <http://myappserver/mycompany/Link/Document/DOC0001/files/Folder/Folder001>  
Returns a zipped file containing all files from Folder001 that are attached to the latest released revisions of DOC0001.
- <http://myappserver/mycompany/Link/Document/DOC0001/files/Folder/Folder001/VIEW>  
Opens all files from FOLDER001 that are attached to the latest released revision of DOC0001 in the Viewer.

### ***Limitations for Item Object Attachment Quick Access Smart URLs***

The following limitations apply to retrieving the attached files of item objects:

- In the case where a specific revision of an item has multiple files on its Attachments tab that belong to the same folder, but are referenced from different versions of the folder, a folder-based URL may not reflect the true set of attachments from that item+revision's Attachments tab. For example, consider an item P0001, whose revision A has two attachments: P0001\_3dmodel.dwg and P0001\_specs.pdf, both in Folder1. Assume that the DWG file is from version 2 of the filefolder, and the PDF file is from version 5 of the file folder. In this case, the following URL:

<http://server:port/<VirtualPath>/link/Part/P0001/Revision/C0001/files/Folder/Folder1>

returns all the files contained in either version 5 or version 2 (results are not predictable) of Folder1.

However, the following URL:

<http://server:port/<VirtualPath>/link/Part/P0001/Revision/C0001/files/ALL>

returns the complete set of files belonging to revision A of the item, including P0001\_3dmodel.dwg from version 2 of Folder1 and P0001\_specs.pdf from version 5 of Folder1.

- You cannot generate an item-based URL that will return a file from a historical version of a file folder referenced on an item's attachments tab. The user can, however, generate a folder-based URL to achieve this.



- In case of the following format example,

[http://server:port/<VirtualPath>/link/ObjectType/ObjectNumber\[/Rev/ChangeNumber\]/files/FileName\[/FileAction\]](http://server:port/<VirtualPath>/link/ObjectType/ObjectNumber[/Rev/ChangeNumber]/files/FileName[/FileAction])

If two files of the same name (filename + file extension) exist on the attachments table, and a user generate a URL using filename, only the first encountered file is retrieved. If the "ALL" option is used to access files from the Attachments tab of an item where there are multiple files by the same name on the attachments table, or if a URL is generated to return all the files of a file folder where there are more than one file with the same name, an error is displayed indicating that there are multiple files by the same name and therefore a valid zip archive of files cannot be generated.

- If the ALL option is used to access files from a Program's Content tab where multiple files with the same name exist, an error is displayed indicating that there are multiple files by the same name and therefore a valid zip archive of files cannot be generated.

## File Folders Quick Access Smart URL Formats

You can generate Smart URLs for file folders in the following format:

`http://<server:port>/<VirtualPath>/link/<ObjectType>/<ObjectNumber>/files/<FileName>[/</version>[/<FileAction>]`

where

<Server:Port>/<Virtual Path> element	Identifies the Agile instance
link	The text "link" identifies the URL as a special attachment URL to the Agile server.
version	Identifies the specific version of the file folder. The value can be a number, or the string, LATEST (default).
FileName	Refers to the name of the specific file from the folder or string ALL which attaches all the files in the specified version of the folder.  If more than one file of the same name exists in a specific version of a folder and a URL is generated based on filename, only the first version of the file is attached. You cannot use the ALL value to access files from a folder where more than one file of the same name exists.
FileAction	Determines the action performed with the retrieved files. Values are GET or VIEW. If fileaction is not specified, a GET is performed.  If the parameters specified in the URL point to a single file, the file is retrieved in its native format. If the parameters specified in the URL point to a collection of files, then all the files are returned as a zipped file called "Download.zip".

Examples of user-generated URLs for file folder attachments:

- <http://myappserver/mycompany/Link/FileFolder/Folder0001/files/abc.txt/1>  
Gets the abc.txt file from version 1 of Folder0001.
- <http://myappserver/mycompany/Link/FileFolder/Folder0001/files/ALL/VIEW>  
Opens all files from the latest version of FOLDER001 in the Viewer.

## Program Content Quick Access Smart URL Formats

You can generate Smart URLs for files on the Content tab of Programs and Activities. The Content tab allows specification of any object as valid content and allows the addition of external files, just like the Attachments tab. However, the Content tab stores the folder object related to an attached file as valid content. So, when retrieving, you must attach the entire folder.

The Smart URL for files on the Content tab is generated in the following format:

```
http://<server:port>/<VirtualPath>/link/<ObjectType>/<ObjectNumber>/content/Folder/<FolderNumber>[/<FileAction>]
```

where

ObjectType	Represents the subclass of the Program object.
ObjectNumber	Represents the identifier of the Program object.
Content	Indicates the Content tab.
Folder	Indicates that a specific folder is being retrieved.
FolderNumber	Refers to the number of the folder being retrieved from the Content tab. The most current version of the folder is always retrieved.
FileAction	Determines the action performed with the retrieved files. Values are GET or VIEW. If fileaction is not specified, a GET is performed.  If the parameters specified in the URL point to a single file, the file is retrieved in its native format. If the parameters specified in the URL point to a collection of files, then all the files are returned as a zipped file called "Download.zip".

## Accessing Attachment Files using Quick Access URLs

After clicking or opening an Attachment Quick Access URL, a login popup appears and you must log into the Agile system to view the attachment. Agile PLM then validates that you have the appropriate privileges to get or view the file or set of files specified in the URL. The attachments are viewable in all supported browsers, the Agile Viewer, or the native application.

**For example:**

4. In an email, the user clicks the Attachment Quick Access URL and an Agile login popup is displayed.
5. The user enters her login information.

Agile PLM verifies that the user has the appropriate privileges to read and view the file.

---

Note	If the URL returns a collection of files and the user does not have the appropriate Get or View privilege for one or more files, those files are excluded from the returned collection. However, a collection of files is returned to the user containing the rest of the files for which he does have the appropriate Get or View privileges.
------	--

---

# Administering Designs

**This chapter includes the following:**

▪ Evaluating Your Company's Needs with Designs.....	327
▪ Purpose of Design Data Model.....	327
▪ Designs Class Overview.....	328
▪ Designs Class Tabs.....	329
▪ Administrator Settings Related to Designs .....	331

## Evaluating Your Company's Needs with Designs

As with other areas of Agile PLM administration, the most important step comes before setting properties in Administrator. This chapter assumes that you answered the first question in the previous chapter affirmatively.

- Does your company produce CAD design and graphic files? If so, you will build from the Designs class.

The Designs class is a new business class in the File Folders base class, with PLM Release 9.2.2.4.

Objects created in the Designs class have many of the same properties and behaviors of File Folders, but have been significantly enhanced for use with Oracle | Agile Engineering Collaboration (EC). Therefore, this chapter highlights the differences; however, information in the previous chapter contains useful foundations about the File Folders base class.

---

**Note** It is assumed that deployment of Design structures in Agile PLM will require an Agile EC integration. That is, full use of CAD design graphics files needs an integration application that can automatically check out and check in Designs objects, track and update parent-to-child versioning of design structures, and so forth. Contact your Oracle Consulting–Agile Practice representative for additional information about Agile EC.

---

## Purpose of Design Data Model

The new Designs class supports structures between Design objects with explicit versions – let's call these "design structures" – and it supports integration with CAD tools. The Design object is very similar to File Folders, but has a few "extras" and specific features to realize its intended purpose.

The Designs class overcomes limitations that have existed in PLM using Documents class and the "DocuBOM" data model, which were not expressly designed for CAD use-cases. Three primary issues are resolved with design structures:

- Structure Resolution is easily captured

"Structure" information between designs can be captured, as required by CAD environments, while the "DocuBOM" structure does not directly support fixed structure resolution.

- Data Navigation is greatly enhanced

Structures of Designs objects are evident and easy to navigate, while the combination of Part-and-Document BOMs are difficult to navigate in the Agile user interface.

- Change Control Process carries much less "overhead"

The full change control process (in the Product Collaboration solution) has too much overhead for many CAD use cases.

Although the Designs class is enabled in new installations, it is disabled upon PLM upgrade: in upgrading installations, the Agile administrator must enable the Designs class.

Benefits of Designing Structures using the Designs Class

Besides the benefits to CAD environments mentioned above, additional benefits are:

- Easy recognition of CAD data in PLM; CAD data will "look" more like it does in CAD
- Users can "double-use" part names since Designs and Parts are separate classes of objects
- Searching for design objects will be easier for CAD engineers
- Using a single object has several advantages:
  - Change history is on the Design object instead of on a separate Change object
  - Design files are not in a separate "file folder"
  - Version-specific Where Used
  - Version-specific Routing Slip
- Designs class enables the next version of Oracle | Agile Engineering Collaboration, which will capture and exploit the capabilities built into the PLM model structures.

## Designs Class Overview

The Design object can be opened from Java Client, but it opens Web Client and the user works with Designs exclusively in Web Client.

There is a Checkout button, and modifications to a design structure cannot be done by a user without checking out the design.

Since a "parent" version of a design explicitly points at a "child" version, a user has to check out a version, update the children, and check it back in for the parent to reflect the changes. In CAD there can be multiple models for 1 part – there could be, for example, 20 or 30 versions of a single object – but in Product Collaboration the part is assigned to a single structure; moreover, the system lets you check in a "design structure" *without* checking in all child parts.

Now, those engineers who have "child" parts checked out must check that part back in, that is, he cannot "Cancel Checkout" for the part to "rejoin" the BOM. Attempting to do so will throw the error message: "This version is in use and cannot be cancelled."

So, "Version 1" of the parent is always going to point to a specific version, namely, the Latest version of the child; this follows accepted practices in CAD environments.

A new feature of the Version drop-down list is that the checked-out version is incremented and displayed in brackets, for example [4], so the user can always see what the new version number will be when the object is checked back in. This applies to both File Folders and Designs classes.

## Version Browser

On the standard Actions menu, the most significant added Action is Version Browser. The Version Browser action is available in File Folder and Design objects.

The Version Browser utility is extremely useful as file-folder structures or design structures grow, as it tracks the versions of each design or file-folder. Each version displays:

- Approved (users who have approved file folder or design in workflow), including the Awaiting Approval icon (users who have not yet approved);
- Checkin Date;
- Checkin User (which captures the user who checked in the version, and also can read thru to the design Structure tab and to Attachments tabs in designs or file folders);
- Change Info and Label (as filled in by users); and,
- Revision and Revision Date.

Many of these fields are pulled from the object's Title Block tab.

Using the View drop-down, you can have a quick View of a selected version of the design, or select two versions and Compare them visually.

## Designs Class Tabs

The tabs on Designs objects are: Title Block, Files, Structure, Routing Slip, Relationships, Where Used, and History. Most of these are given a look in the sections below; Relationships and History tabs are documented in *Getting Started with Agile PLM*.

### Title Block Tab

By default, the Design object Title Block tab contains the fields listed in the following table. Agile administrators determine which fields are enabled and visible on the Title Block tab.

In Web Client, the Title Block can contain two additional sections, called PageTwo and PageThree by default. Agile administrators can add custom class fields to PageTwo section and custom subclass fields to the PageThree section. The Agile administrator determines whether these sections are enabled, and what they are called.

Field	Description
Number	The Design object's number, completed when the file object is created.
Type	The subclass of this Design object. Depending on Agile system settings, this field is automatically completed when the Design object is created.
Lifecycle Phase	Current lifecycle; selected from a list.
Description	Text describing the Design object

Field	Description
Version	The currently selected version of the Design object
Last Modified Date	Date the Design object was last modified
Checkout Status	Indicates whether the Design object is currently checked out or checked in.
Checkout User	When the Design object is checked out, displays the user who checked out the Design object.
Checkout Date	When the Design object is checked out, displays the checkout date
Checkout Location	When the checkout user's File Productivity Preference is set to Advanced, the checkout location is automatically filled in
Create Date	The date the Design object was created
Label	Version-specific text field that holds a specified label
Component Type	Displays the type of component represented by the Design
Revision	Version-specific text field that holds the targeted revision of the Design version
Revision Date	Version-specific date field that holds the revision date associated with the Design version
Checkin User	Version-specific field indicating the user who checked in the currently selected version; completed automatically

## Files Tab

The actions available on Designs Files tab are generally the same as File Folders Files tab. Similarly, privileges around the Files tab of both kinds of objects will mostly be the same; however, for best control of user access, privileges should not be based on the File Folders *base class*, which will apply to the Files tab of both File Folders and Designs *class* objects.

In order for the end-user to execute Files tab actions for Design model objects, he must have the appropriate Modify privilege masks. Refer to [Attachment Privileges](#) (on page 315), especially [Modify Privilege and Attachments](#) (on page 316): see the section of the table for File Folder Attachment Actions.

**Important** If you are using privilege masks based on the File Folders *base class*, assigned users will have the *same* Modify, Checkin, Checkout (and so forth) capabilities for both File Folders class objects and Designs class objects. If you need to give users separate types of access to these two classes, you must create and define privilege masks based on the File Folders class (or subclasses) or the Designs class (or subclasses).

## Structures Tab

The Designs Structure tab supports "read-through" fields from Designs Title Block tab or PageTwo.

Like the Files tab, the Structure tab can only be edited when the object is checked out

In Structure, the parent explicitly specifies the version of the child.

The Multi-level drop-down allows you to Expand or Collapse the structure.

Agile Viewer supports Designs Structure tab as well as File Folder Attachments tab.

---

Note	File Folders (objects from File Folder and Markup subclasses) do not have a Structure tab, and they cannot be in a model structure. On the other hand, where you can use an "attachment" (that is, a file folder object), you can use a Design.
------	---

---

Icons indicate whether a Design is:

- Checked out
- Attached
- Latest Version
- Has Attachments

## Routing Slip Tab

The Routing Slip tab is now functionally "version-specific". Signoff on the Design object only signs off that specific version of the object.

Adding and removing Approvers and Observers can be done only when Design objects are checked in. In order to add or remove approvers and perform signoff actions, the user needs the appropriate privilege masks for Design objects.

## Where Used Tab

Files that are associated with this design are listed on two tables of the Where Used tab, the Attachments table and Design table.

The Where Used tables inherit Structure tab columns and read-through fields.

## Administrator Settings Related to Designs

This section collects various Administrator settings for convenience. Refer to node-specific chapters for more information about the capabilities in Administrator.

### Display Structure Tables SmartRule

The new SmartRule "Display Structure Tables" offers the choice between No Display (appropriate

for non-CAD business environments) or Display.

## Design-specific Role & Privilege

Design Engineer is a new Role tailored to create, access, and manage Designs class objects.

Privileges and privilege masks around the Designs business object use the existing Agile PLM Discovery and Read model, including on the Structure tab.

In order to add or remove approvers and perform signoff actions, the user needs the appropriate privilege masks for Design objects.

---

Note	When working in conjunction with a CAD-to-Agile PLM integration application, each CAD user must also be an Agile PLM user. Each CAD user must have appropriate PLM roles and privileges to allow him to perform Checkout, Modify, Checkin (and so forth) actions on Design model objects. Contact your Oracle Consulting–Agile Practice representative for additional information about CAD-to-Agile PLM integration applications.
------	--

---

Important	Remember that privilege masks written at the File Folder <i>base class</i> level will affect both the File Folders class (File Folder and Markup subclass) and the Designs class (Design subclass). Privilege masks tailored for CAD environments should be entered at Designs class level.
-----------	---



# Configuring Product Cost Management

**This chapter includes the following:**

▪ Product Cost Management Configuration Checklist.....	333
▪ Ship To Location.....	334
▪ Product Cost Management Roles.....	335
▪ RFQ Terms and Conditions.....	335
▪ Configuring Product Cost Management Classes.....	339
▪ Configuring BOM Filters .....	353

This chapter provides information about nodes in the Product Cost Management folder under System Settings.

## Product Cost Management Configuration Checklist

Use the following checklist to configure Agile PLM server settings for Product Cost Management:

- Define your company profile — Specify the name, address, phone number, URL, and the corporate currency for your company. For more information, see [Company Profile](#) (on page 259).
- Define currency exchange rates — Suppliers may quote prices in different currencies. You must maintain a table of currency exchange rates so that you can view normalized prices that have been converted to the project currency. For more information, see [Currency Exchange Rates](#) (on page 259).
- Define your company's Ship To locations — Ship To locations are essential to take advantage of Product Cost Management features. For more information, see [Ship To Location](#) (on page 334).
- Configure SmartRules — Make sure you properly configure SmartRules related to price fields, effectivity periods, automatic publishing of quote histories, and commodities. For more information, see [SmartRules](#) on page 233.
- Configure the Product Cost Management class — Configure the Agile PLM classes for Product Cost Management. For more information, see [Configuring Product Cost Management Classes](#) (on page 339).
- Configure the Sourcing Projects class — There are several things you can do to customize the Sourcing Projects class, which affects all of its subclasses. For example, you can enable flex fields on different tabs, configure AML tab attributes to pull values from other Item and Manufacturer Part attributes, and define price adders and non-material price fields for RFQ responses. For more information, see [Configuring Product Cost Management Classes](#) (on page 339).
- Define Suppliers — Define the Suppliers with whom sourcing project managers and RFQ managers will be working. This may be the responsibility of another user, someone with the

Organization Manager role. For more information about creating and managing suppliers, see *Getting Started with Agile PLM*.

---

Note	Separately, supplier managers should define the contact users and line cards for their particular suppliers. Supplier users have restricted access to Product Cost Management functionality.
------	--

---

- Define Supplier Offering Ratings — In the Agile PLM List Library, there is a list called Supplier Offering Rating, which is used to rate each supplier offering. You can customize the list of ratings. By default, the ratings are Approved, Strategic, Offered Active, and Offered Inactive. For information on how to customize lists, see [Lists](#) (on page 87).
- Define Product Cost Management Users and Roles — Define the users who will create and manage sourcing projects, RFQs, and prices. Assign those users appropriate roles, such as Sourcing Administrator, Sourcing Project Manager, RFQ Manager, and Price Administrator. For more information, see [Product Cost Management Roles](#) (on page 335). Make sure every user who will create sourcing projects has at least one authorized Ship To location. Otherwise, the user will not be able to move a project from Draft to Open status. For information about setting up new users, see [Users and User Groups](#) on page 149
- Configure Administrator Privilege — In order to see the RFQ Terms and Conditions node on the Admin tab in Java Client, you must configure the Administrator privilege. This is covered in [Configuring the RFQ Terms and Conditions Node](#) (on page 336).
- Define new subclasses of the Sourcing Projects class — Agile PLM provides one subclass of the Sourcing Projects class called Sourcing Project, but you can extend Sourcing Projects and define any number of subclasses for specific types of projects. For more information, see [Classes](#) (on page 45, "Installed Agile PLM Classes, Base Classes, and Subclasses" on page 47)
- Configure BOM Filters — In order to use the BOM filtering feature in PCM, you must create and configure certain attributes in Data & Workflow Settings > Classes > Parts. For more information about how to use this feature after it is set up, refer to *Agile PLM Product Cost Management User Guide*, "Working with Sourcing Projects" chapter. Also, refer to [Configuring BOM Filters](#) (on page 353).
- Establish Relationships between Objects — For information about how to establish relationships between fields, refer to *Getting Started with Agile PLM*, "Working with Business Objects" chapter.

## Ship To Location

Ship To locations are important for differentiating sourcing projects and for disseminating requests for quotes (RFQs) to suppliers.

### To add a Ship To location:

1. Under System Settings > Product Cost Management, double-click Ship To Location. The *Ship To Locations* window opens.
2. Click New icon. The *Create Ship To Location* dialog box appears.
3. Type the name and location code of the new Ship To location. Fill in other fields as needed.
4. Click OK. The new Ship To location appears on the list.

- 
- Note** Sourcing project managers must have at least one Ship To location defined in their user profiles. Otherwise, the projects they create cannot be opened. Similarly, each sourcing project must have a specified Ship To location. A project's Ship To location determines how RFQs are disseminated to suppliers based on their line cards.
- Note** When a Ship To Location is being used (referenced to) in any Sourcing Project, be the project in Draft or Open stage, it cannot be deleted in Java Client. When you attempt deleting, system issues a warning message "Fail to delete Ship To; one of the Ship To(s) is referenced to other objects".
- 

## Product Cost Management Roles

Agile PLM provides pre-defined roles you can assign to Product Cost Management users. These roles grant users the privileges for working with sourcing projects, RFQs, prices, discussions, suppliers, customers, and PCOs.

Roles with names that start with the prefix (*Restricted*) are intended for Suppliers. For a complete list of the predefined Agile PLM roles, see Default Agile PLM Roles.

- 
- Note** Although the Agile PLM administrator may not have assigned you the privileges needed to work with a sourcing project, other users with access to a project can share them with you, thereby granting you the same privileges that apply to the project and all the objects contained within it. However, you cannot access other projects that are not shared with you.
- 

## RFQ Terms and Conditions

You can limit a Supplier's access to an RFQ until they electronically agree to RFQ Terms and Conditions that you specify in Java Client. The RFQ Terms and Conditions node must be enabled in Java Client, and then you can set and store the content of the Terms and Conditions page.

To use the RFQ Terms and Conditions feature, you will need to complete several tasks.

### Tasks to Enable RFQ Terms and Conditions:

1. Enable the RFQ Terms and Conditions node in Java Client. For a detailed description of this task, see [Configuring the RFQ Terms and Conditions Node](#) (on page 336).
2. Set up and enter the content of the RFQ Terms and Conditions that you want the supplier to read and accept. For a detailed description of this task, see [Setting and Storing the RFQ Terms & Conditions Content](#).
3. Make the Require RFQ Terms and Conditions attribute visible in the Sourcing Project class. For a detailed description of this task, see [Making the Attribute Visible in Sourcing Project Class](#) (on page 337).
4. Make the Require RFQ Terms and Conditions attribute visible in the Requests for Quotes class. For a detailed description of this task, see [Making the Attribute Visible in Requests for Quote Class](#) (on page 337).
5. Update Modify My Sourcing Project General Info privilege to include Applied To field value: *Sourcing*

*Projects.Sourcing Project.Require RFQ Terms and Conditions*. For a detailed description of this task, see [Adding Criteria to Modify My Sourcing Project Privilege](#) (on page 338).

6. Update Read RFQs privilege to include Applied To field value: *Requests for Quote.RFQHeader.Require RFQ Terms and Conditions*. For a detailed description of this task, see [Adding Criteria to Read RFQs Privilege in Sourcing Project Manager Role](#) (on page 338).
7. Update Read RFQs privilege to include the following Applied To field values: *Status Accept Date, Status Accept User, Status Status, and Status Supplier*. For a detailed description of this task, see [Adding Criteria to Read Privilege](#) (on page 338).

---

Note	Optionally, you can make Terms mandatory at the project level. For a detailed description of this task, refer to <i>Product Cost Management User Guide</i> .
------	--

---

## Configuring the RFQ Terms and Conditions Node

In order to see RFQ Terms and Conditions node in Java Client, you must configure the user's Administrator privilege. By default, it is disabled.

For more information about the Administrator Privilege, and how Administrator nodes are made available to a user, see [Administrator Privilege and the AppliedTo Capability](#) (on page 201).

### Configuring the Administrator Privilege

1. Go to Settings > User Settings > Privileges.
2. Double-click Administrator privilege key to open Administrator window.
3. Select Show All in Match If drop-down list and click Apply.
4. Double-click Administrator privilege line. The *Privilege:Administrator* window opens.
5. Click the Arrow button in the Applied To field.
6. Select the RFQ Terms and Conditions option in the choices list and move it to the Selected list. Click OK.
7. Make sure the Enabled field is set to Yes.
8. Click Save and Close.
9. Close the *Privileges for Administrator* window.
10. Log out of Java Client and log back in. You should see RFQ Terms and Conditions node under Settings > System Settings > Product Cost Management.

## Setting and Storing the RFQ Terms & Conditions Content

After you have enabled the RFQ Terms & Conditions node, you can set and store the content.

### Create RFQ Terms & Conditions Content

1. Under Settings, expand System Settings node, and then the Product Cost Management node.
2. Double-click RFQ Terms and Conditions. The *RFQ Terms and Conditions* window appears.
3. Enter the content for your RFQ's Terms and Conditions in the text field.
4. Click Save followed by Close.

## Making the Attribute visible in Sourcing Project class

You must make the Require RFQ Terms and Conditions attribute visible in the Sourcing Project class General Information tab.

### To make the attribute visible:

1. Double-click Settings > Data Settings > Classes.
2. Double-click Sourcing Projects class.
3. Double-click General Information in User Interface Tabs tab.
4. Go to Attributes: General Information tab and double-click Require RFQ Terms and Conditions.
5. Select Yes in the Visible field.
6. Click Save followed by Close.

### Also

1. Double-click Classes in Settings > Data Settings.
2. Double-click Sourcing Projects class.
3. Double-click General Information in User Interface Tabs tab.
4. Go to Attributes:General Information tab and double-click Require RFQ Terms and Conditions.
5. Select Yes in Enable for Search Criteria.
6. Click Save followed with Close.

## Making the Attribute Visible in Requests for Quote class

You must make the “Require RFQ Terms and Conditions” attribute visible in the Requests for quote class.

### To make the attribute visible:

1. Double-click Classes in Settings > Data Settings.
2. Double-click Requests for Quote class.
3. Go to User Interface Tabs tab and double-click Cover Page.
4. Go to Attributes:Cover Page tab and double-click Require RFQ Terms and Conditions.
5. Select Yes in the Visible field.
6. Click Save and Close.

## Bid Decision attribute in RFQ Responses

The List entries of Bid Decision attribute are pre-defined, i.e., preset by Agile. You can neither add a new list item, nor modify or delete any.

### To see the available list items:

1. In Request for Quote class, go to User Interface Tabs tab
2. <double-click> Responses row and go to Attributes:Response tab

3. <double-click> Bid Decision attribute.
4. In Attributes:Bid Decision window, click View Details button. The List:Response\_Bid\_Decision window opens.
5. Go to List tab to see the pre-defined entries.

## Adding criteria to Modify My Sourcing Project privilege

You need to add criteria to “Modify My Sourcing Project General Information” privilege.

### To add criteria to Modify My Sourcing Project General Information Privilege:

1. Go to Settings > User Settings > Privileges.
2. Double-click All Privileges.
3. Type *Modify My Sourcing Project* in the Value field and click Apply.
4. Double-click Modify My Sourcing Project row
5. Click the arrow button next to the Applied To field.
6. From Choices cell, pick Sourcing Projects.General Information.Require RFQ Terms and Conditions and move it in Selected cell.

---

Note	If you do not find Sourcing Projects.General Information.Require RFQ Terms and Conditions in the Choices list, clear the 'Show visible attributes only' checkbox.
------	---

---

## Adding Criteria to Read RFQs Privilege in Sourcing Project Manager Role

### To Add Criteria to Read RFQs Privilege in Sourcing Project Manager Role:

1. Double-click Roles in Settings > User Settings.
2. Type *Sourcing Project Manager* in the value field and click Apply.
3. Double-click Sourcing Project Manager.
4. Go to Privileges tab.
5. Double-click Read RFQs in Name column
6. Click the arrow button next to the Applied To field.
7. From Choices cell, pick Requests for Quote.RFQHeader.Require RFQ Terms and Conditions and move it to Selected cell
8. Click OK.

## Adding Criteria to Read Privilege

### To Add Criteria to Read Privilege:

1. Double-click Read privilege key in Settings > User Settings > Privileges.
2. Type *Read RFQs* in the Value field and click Apply.

3. Double-click Read RFQs.
4. Click the arrow button next to the Applied To field.
5. From Choices cell, pick the following and move them to Selected cell
  - Requests for Quote.Terms and Condition Status.Accept Date
  - Requests for Quote.Terms and Condition Status.Accept User
  - Requests for Quote.Terms and Condition Status.Status
  - Requests for Quote.Terms and Condition Status.Supplier
6. Click OK.

## Configuring Product Cost Management Classes

This section describes ways to configure Product Cost Management specific Agile PLM classes. For details on how to configure Agile PLM classes, see [Classes](#) (on page 45, "Installed Agile PLM Classes, Base Classes, and Subclasses" on page 47)

Product Collaboration and Product Cost Management automatically exchange data between the Item Master and Sourcing Projects. If your Agile PLM system has enabled custom flex fields, you must configure the fields consistently and map them correctly to make sure the data exchange occurs successfully between the Item Master and sourcing projects for those fields.

If you require help customizing your Agile PLM system, contact your Oracle Consulting – Agile Practice representative.

If your company has purchased both Product Cost Management and Product Governance & Compliance solutions, you must decide how to configure the Part Groups class.

---

**Note** If you have set the *Force Commodity and Part Family to be Identical* SmartRule to No, enable the *Make Available As* attribute in Class:Part groups > User Interface Tabs tab > General Info > Attributes:General Info tab (set Visible to Yes). The Make Available As attribute allows you to specify whether a part group is used as a commodity in PCM, a part family in Product Governance & Compliance (PG&C), or both.

---

## Disabling Flex Fields

Class	Flex Fields Supported	
	Page Two	Page Three
Sourcing Project	Yes	Yes
Request for Quote	Yes	No
RFQ Responses	No	No

To avoid Create New Attribute buttons being disabled (grayed out) in an RFQ or Sourcing Project's Page Two, you must set the Page Two tab as invisible in Java Client.

Creating a new Flex field in Page Two or Page Three is not supported for Request of Quote and Sourcing Projects classes. By default, the Icon "New" in their corresponding Attributes Tabs is disabled (grayed out). However still, the Page Two /Page Three Attributes can be enabled or disabled in Java Client.

---

**Note** User-defined Flex Fields can be created in Prices and PCO classes.

---

**To make Page Two invisible in Web Client:**

1. Go to Settings > Data Settings > Classes.
2. Double-click either Sourcing Projects or Request for Quotes class.
3. Click User Interface Tabs, and double-click Page Two.
4. Select the attribute Visible as No.
5. Click Save and Close.

## Tips for Configuring Flex Fields

When you configure flex fields to share data between the Item Master and sourcing projects, make sure you configure the fields consistently across classes. Otherwise, the *Map Data To* and *Publish* actions in a sourcing project may not work. If you map a list field to another list field, both fields must be configured to use the same list.

Remember to name flex fields consistently across classes. Before modifying the Name of an attribute, copy the original name into the Description field so that you can identify the original attribute name later.

Product Cost Management does not support user-defined flex fields, except for Product Collaboration classes such as Parts and Manufacturer Parts. Consequently, you cannot map sourcing project attributes to any user-defined flex fields.

## Pulling Data from Item Master Flex Fields into Sourcing Projects

Sourcing projects can contain Items and Manufacturer Parts added directly from the Item Master. They are added as a copy of the Part in Item Master, and not as a reference. The Item or Manufacturer Part inside a Project supports only a few flex fields, as against unlimited in the Item Master.

Standard fields on the Title Page tab of Items and the General Info tab of Manufacturer Parts are mapped automatically to related Project AML fields. However, you may also want to pull data from Item and Manufacturer Part flex fields (such as those on Page Two or Page Three) into the AML and Analysis tab of sourcing projects and the Responses tab of RFQs. You can map custom fields so that sourcing projects automatically pull data from them correctly when you import those objects.

List flex fields (SingleList or MultiList) in a sourcing project have both a *List* property and a *Map Data To* property. If you select a value for the Map Data To property, the List property is automatically disabled (you cannot pull data from two places into one field). You can subsequently reconfigure the list field to pull data from another item master field, even after items have already been added to the project. However, when you change the value of the Map Data To property, you'll see a message warning that application data already exists with the current settings. If you decide to continue, the original flex field mapping is purged and cannot be recovered.

---

**Note** There are a limited number of flex fields provided for the AML tab of sourcing projects, so you cannot map AML attributes to all the flex fields that exist for item and manufacturer part attributes.

---



Field Type	Number of Fields
Date	5
List	5
Money	5
Multi-list	2
Multi-text	2
Number	5
Text	10

You can map these fields to flex fields in Item-Page Two & Item-Page Three.

Similarly, a Manufacturer Part in a Sourcing Project has the same number of flex fields. You can map them to flex fields in **Manufacturer Parts > Page Two or Page Three**.

When you map attributes from Project to the Page Three attributes of Items or Manufacturer Parts, you must ensure that they comply with the names of Page Three attributes and point to the same list (for List attributes) across all subclasses of the Item or Manufacturer Part.

#### To map sourcing project flex fields to Item and Manufacturer flex fields:

1. Enable and configure any of the following item, manufacturer part, and sites flex fields:
2. Enable and configure similar flex fields (that is, of the same data type) in the Sourcing Projects class. Make sure the fields are configured consistently with their related Item and Manufacturer Part flex fields. Otherwise, the data transfer between Product Collaboration and Product Cost Management won't work. For more information, see "[Tips for Configuring Flex Fields](#)".

The mapping of flex fields for Items & Manufacturer Parts can be done only in Sourcing Projects > AML tab. For each flex field that you enable in Sourcing Projects > AML > Items and in Sourcing Projects > AML > AML, specify the Map Data To property. This establishes the mapping between Product Collaboration and Product Cost Management.

The following table lists the Sourcing Projects flex fields that you can map to Item and Manufacturer Part flex fields.

Class/Tab	Attributes	Pull From
Sourcing Projects > AML > Items	Date (5) List (5) MultiText (2) Text (10)	Items.Page Two fields Page Three fields Items.Page Two fields Page Three fields
	Money (5) Number (10) MultiList (2)	

Class/Tab	Attributes	Pull From
Sourcing Projects > AML > AML	Date (5) List (5) Money (5) MultiList (2) MultiText (2) Number (10) Text (10)	Manufacturers Parts.Page Two fields Page Three fields

- You can also enable flex fields on the Sourcing Projects > Analysis > Analysis and Requests for quote > Responses tabs. Fields with an “ipn” prefix and an “mpn” prefix automatically map to the Map Data To fields you’ve selected for Sourcing Projects > AML.

For example, the Sourcing Projects > AML > Items > Date01 field shares its Map Data To mapping with Sourcing Projects > Analysis > Analysis > ipnDate01 and Requests for quote > Responses > ipnDate01.

The following table lists IPN and MPN flex fields.

Class/Tab	Item flex fields	Manufacturer Part flex fields
Sourcing Projects > Analysis > Analysis	ipnDate (5) ipnList (5) ipnMoney (5) ipnMultiList (2) ipnMultiText (2) ipnNumber (10) ipnText (10)	mpnDate (5) mpnList (5) mpnMoney (5) mpnMultiList (2) mpnMultiText (2) mpnNumber (10) mpnText (10)
Requests for quote > Responses		

## Example: Mapping Sourcing Project Flex Fields to Item Master Flex Fields

The following example shows how to configure sourcing projects to Map Data To flex fields, a Page Two field for items and a Page Two field for manufacturer parts. You can follow these steps to configure other item or manufacturer part flex fields for Product Cost Management.

### Step 1: Enable a Page Two field for the Parts class

1. Under Data Settings, double-click the Classes node. The Classes page appears.

2. Double-click the Items > Parts class.
3. Click User Interface Tabs.
4. Double-click Page Two.
5. Click the Attributes: Page Two tab.
6. Double-click Text01.
7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, change the value to Part Dimensions.
9. In the Visible field, select Yes.
10. Click Save.

---

Note	In Java Client, when you, for example, map <i>part.pagetwo.Text01</i> to <i>Sourcing Project.AML.Items.Text05</i> , this data will be pulled to Text05 in <i>sourcing project.AML</i> tab. If the <i>sourcing project.item.Text05</i> is enabled, this value will be pulled to <i>sourcing project.items.Text05</i> .
------	---

---

### Step 2: Enable a Page Two field for the Manufacturer Parts class

1. Under Data Settings, double-click the Classes node. The Classes page appears.
2. Double-click the Manufacturer Parts > Manufacturer parts class.
3. Click User Interface Tabs.
4. Double-click Page Two.
5. Click the Attributes: Page Two tab.
6. Double-click Text01.
7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, change the value to Mfr Part Dimensions.
9. In the Visible field, select Yes.
10. Click Save.

### Step 3: Map a sourcing project AML attribute to a Page Two attribute for items

1. Under Data Settings, double-click the Classes node. The Classes page appears.
2. Double-click the Sourcing Projects class.
3. Click User Interface Tabs.
4. Double-click AML.
5. Click the Attributes: Items tab.
6. Double-click text1.

---

Note	If you want to map a List or a Multi List field, make sure it points to the same list as pointed by the Page Two field in Items
------	---

---

7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, change the value to Part Dimensions.
9. In the Visible field, select Yes.
10. Click Map Data To field. Select Parts.Page Two.Part Dimensions. The AML tab attribute will pull its data from that Page Two attribute.
11. Click Save.

**Step 4: Map a sourcing project AML attribute to a Page Two attribute for manufacturer parts**

1. Go to Data Settings > Classes.
2. Double-click Sourcing Projects class.
3. Click User Interface Tabs.
4. Double-click AML.
5. Click the Attributes: AML tab.
6. Double-click text1.

---

Note	If you want to map a List or Multi List field, make sure it points to the same list as pointed by the Page Two field in Manufacturer Parts.
------	---

---

7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, change the value to Mfr Part Dimensions.
9. In the Visible field, select Yes.
10. Click Map Data To field. Select Manufacturer Parts.Page Two.Text01. The AML tab attribute will pull its data from that Page Two attribute.
11. Click Save.

**Step 5: Enable corresponding text attribute in sourcing project > analysis tab**

1. Go to Data Settings > Classes.
2. Click User Interface Tabs.
3. Double-click Analysis.
4. Click the Attributes: Analysis tab.
5. Double-click ipnText1.

---

Note	If you want to map a List or Multi List field, make sure it points to the same list as pointed by the Page Two field in Items.
------	--

---

---

**Note** Each flex field with the “ipn” prefix is automatically mapped to the same Item flex field as its related Sourcing Projects > AML > Items flex field.

---

6. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
7. In the Name field, change the value to Part Dimensions.
8. In the Visible field, select Yes.
9. Click Save.
10. Double-click mpnText1.

---

**Note** If you want to map a List or multiList field, make sure it points to the same list as pointed by the Page Two field in Manufacturer Parts

---

**Note** Each flex field with the “mpn” prefix is automatically mapped to the same Manufacturer Part flex field as its related Sourcing Projects > AML > AML flex field.

---

11. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
12. In the Name field, change the value to Mfr Part Dimensions.
13. In the Visible field, select Yes.
14. Click Save.

#### **Step 6: Enable corresponding text attributes in RFQ Responses > Response tab**

1. Go to Data Settings > Classes.
2. Double-click the Requests for Quote > Requests for quote class.
3. Click User Interface Tabs.
4. Double-click Responses.
5. Click the Attributes: Responses tab.
6. Double-click ipnText 1.

---

**Note** If you want to map a List or Multi List field, make sure it points to the same list as pointed by the Page Two field in Items

---

7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, change the value to Part Dimensions.
9. In the Visible field, select Yes.
10. Click Save.
11. Double-click mpnText 1.

---

**Note** If you want to map a List or Multi List field, make sure it points to the same list as pointed by the Page Two field in Manufacturer Parts.

---

12. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.

13. In the Name field, change the value to Mfr Part Dimensions.
14. In the Visible field, select Yes.
15. Click Save.

## Pushing Price Flex Fields from Sourcing Projects into the Item Master

Your company can enable custom price fields, such as additional material or non-material prices, for Item Master classes (such as Parts and Manufacturer Parts) and the Sourcing Project class. After you receive price quotes from a supplier, you can publish the prices from the project back to the Item Master. For subsequent sourcing projects, you can verify existing price scenarios by doing price lookups from the Analysis tab.

The Price Details tab of a sourcing project provides several price flex fields that you can enable for Product Cost Management. There are both Material Price Adder fields and Non Material Price Adder fields.

Price adders are basically overhead rates. Price adders can be the additional cost of an item such as the intellectual property value, the royalty value, and so on, apart from the material cost. You are limited to seven price adders fields, which are common to all projects. Price adder fields can be enabled for suppliers or buyers, that is, for Supplier or Internal only (Buyer) purposes.

**Important** There are seven Material Price Adder fields. All the material price adders can be set to visible "internally" (these won't be visible to suppliers) or to suppliers (suppliers will be able view & edit these fields). These fields also can be configured if they have to store a "fixed" value or a "percent" value.

Non-material prices are prices that include the labor rate, sales tax, and other overheads.

The following table lists Material Price and Non-Material Price flex fields you can enable in different classes. Make sure you configure the fields consistently from one class to another.

The fields are automatically mapped to one another based on ID. For example, Non Material Price 1 in one class is automatically mapped to other Non Material 1 fields. For more information about configuring flex fields, see [Tips for Configuring Flex Fields](#).

Class/Tab	Material Price Attributes	Non-Material Price Attributes
Sourcing Projects > Price Details	7 Material Price Adders	Non Material Price (25)
Sourcing Projects > Analysis > Non Material Price Entry	n/a	nonMaterialModifier (20) Non-Material Price (5)
Prices > Published Prices > Price Lines	Material Price (7)	Non Material Price (25)
Prices > Quote Histories > Price Lines	Material Price (7)	Non Material Price (25)
Items > Documents > Prices	Material Price (7)	Non Material Price (25)
Items > Parts > Prices	Material Price (7)	Non Material Price (25)
Manufacturer Parts > Prices	Material Price (7)	Non Material Price (25)

## Price Adders

Price Adders can be either Material or Non-Material. Many customers require Partners/Suppliers to apply adders to the top level of assemblies, not at the individual line-items. Often, these adders are represented as a percent (%) value instead of a fixed value.

Most Non-Material costs can be a fixed value only, so to use a percent value, configure one of the percent-specific Non-Material Adders that are configurable.

The price adders that can be configured are:

- **Material Adders**—numbers 1 through 7 can be configured as Internal or Supplier.
- **Non-Material Adders**—numbers 20 through 25 can be configured as a calculation type of either percent (%) or a fixed value.

When a supplier enters a percent value, the system will multiply the percentage with the Material Cost and the result is added to the Non-Material Price.

---

**Note** Non-Material percent types are useful only if Material Price exists.

---

The attributes are added to the Total Cost and are not associated with the non-material costs as shown in the table below.

Non-Material Price	Material Price
Non-Material Price_1 (fixed value) = 50	Material Price = 100
Non-Material Price_20 (percent value) = 25	
Total Non-Material Price = 75 ((0.25 * 100) + 50)	Total Material Price = 100
Total Extended Cost = 175	

## Configuring Material Price Adders

You can configure Material Adders numbered 1 through 7 as Internal or Supplier, with a fixed or percent value. The Material Adders function as Cost Elements that are added to every Cost Estimate after the initial Estimate of Costs for material and labor. Adders typically include General and Administrative Cost, Overhead and Profit.

---

**Note** The Material Adders can be given a fixed or percent value.

---

### Configuring Material Adders

1. Go to Data Settings > Classes.
2. Double-click the Sourcing Projects class and go to User Interface Tabs tab.
3. Double-click Price Details and go to Attributes: Price Details tab.
4. Double-click Material Price Adder 1.
5. Select either *Fixed* or *Percent* from the Calculation Type drop-down list

6. Select either *Internal Only* or *Supplier* from the Visible To drop-down list
7. Click Save and Close.

## Non-Material Adders

Non-material costs support a percent value of Material Costs. Some costs that are added to a Cost Estimate, such as royalties, warranties, and guarantees.

You can configure Non-Material Adders 20 through 25 to support a percent value of Material Costs.

---

Note	Sometimes the Non-Material Adders are referred to as Non-Standard Adders in the industry.
------	---

---

### Configuring Non-Material Adders as a Percent value:

1. Go to Data Settings > Classes.
2. Double-click the Sourcing Projects class and go to User Interface Tabs tab.
3. Double-click Price Details and go to Attributes: Price Details tab.
4. Double-click Non-Material Price 20.

---

Note	You can only configure Non-Material Price Adders 20 to 25 as "Percent." All others are set to "Fixed" and are not configurable.
------	---

---

5. Select either *Fixed* or *Percent* from the Calculation Type drop-down list.
6. Click Save and Close.

## Example: Enabling a Labor Cost Per Unit Field

The following example shows how to enable a Non-Material Price flex field called Labor Cost Per Unit for several Agile PLM classes. You can follow these steps to configure other price flex fields for Product Cost Management.

### Enabling a Labor Cost Per Unit Field

1. Go to Data Settings > Classes.
2. One by one, take the following steps, followed by steps 3 through 9.
  - a. For Parts: double-click the Items > Parts class
  - b. For Documents: double-click the Items > Documents class
  - c. For Manufacturer Parts: double-click the Manufacturer Parts > Manufacturer parts class
  - d. For Published Prices: double-click the Prices > Published Prices class
  - e. For Quote Histories: double-click the Prices > Quote Histories class
  - f. For Sourcing Projects: double-click the Sourcing Projects > Sourcing projects class.
3. Go to User Interface Tabs tab.
4. Double-click Prices and go to Attributes: Prices tab.
5. Double-click Non-Material Price1.
6. Cut the text from the Name field and paste it in the Description field. This will help you identify the original attribute name.



7. In the Name field, type Labor Cost Per Unit.
8. Select Yes in the Visible list.
9. Click Save.

---

**Note** In all the above, if you want to use a specific price field (like Non-Material Price1), you have to use the same Non-Material Price1 field in all corresponding classes (Parts, Documents, Manufacturer Parts, Published Prices, Quote Histories & Sourcing Projects). You cannot use Non-Material Price1 to capture Labor Cost in Parts Class and Non-Material Price 2 to capture the same in Manufacturer Parts Class.

---

## Pushing Response Flex Fields from Project-Analysis into Published Prices & Quote Histories

RFQ responses contain a header area that can include several flex fields. If you enable any flex fields on the Responses tab of RFQs, you can map to Page Two fields in Published Prices & Quote Histories. When you publish the responses to the Item Master, the flex fields that you map will be updated.

### To map Response Flex fields in Project-Analysis tab to Page Two or Price Line fields in Published Prices & Quote Histories

1. Enable and configure any of the following flex fields in Sourcing Projects class. The same set of flex fields are also available in "Requests for Quote" class and these can be filled by the Suppliers when responding to RFQs..
2. Enable and configure similar flex fields (that is, of the same data type) listed in the tables below. Make sure the fields are configured consistently with their related Requests for Quote flex fields. Otherwise, the data transfer between Product Collaboration and Product Cost Management won't work. For more information, see "Tips for Configuring Flex Fields" above.

Class/Tab	Attributes
Sourcing Projects > Analysis > Analysis	resp Date (5) resp List (5) resp Money (10) resp MultiList (2) resp MultiText (2) resp Number (10) resp Text (10)

Class/Tab	Attributes
Items > Documents > Prices	Date (5) List (5) Money (5) MultiList (2) MultiText (2) Number (10) Text (10)
Items > Parts > Prices	
Manufacturer Parts > Prices	
Prices > Published Prices > Page Two	
Prices > Published Prices > Page Three	
Prices > Published Prices > Price Lines	
Prices > Quote Histories > Page Two	
Prices > Quote Histories > Page Three	
Prices > Quote Histories > Price Lines	

- Finally, enable and configure flex fields on the Sourcing Projects > Projects > Analysis > Analysis tab. Make sure you specify the Map Data To property. This establishes the mapping between Product Cost Management and Product Collaboration.

## Pushing Data in Flex Fields from Sourcing Project to Item Master

To publish data from Flex Fields in Sourcing Project to Item Master, you can use the Map Data To field. This field actually functions to “push” data to that location, and requires a value.

Class/Tab	Attributes	Push Data To
Sourcing Projects > Analysis > Analysis	respDate (5) respList (5) respMoney (10) respMultiList (2) respMultiText (2) respNumber (10) respText (10)	Prices.Price Lines fields Prices.Page Two fields Page Three fields

## Example: Mapping a Response Flex Field

The following example shows how to enable a Response Flex Field called Supplier Note in Sourcing Project so that it is mapped to "Published Price" or "Quote History" classes. You can follow these steps to configure other RFQ flex fields for Product Cost Management.

### Step 1: Enabling a Supplier Note field for the Responses tab of RFQs

1. Go to Data Settings > Classes.
2. Double-click the Requests for Quote > Request for quote class.
3. Click User Interface Tabs.
4. Double-click Responses.
5. Click Attributes: Responses.
6. Double-click resp MultiText 1.
7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, type Supplier Note.
9. In the Visible field, select Yes.
10. Click Save.

### Step 2: Enabling a Supplier Note Field for Published Prices

1. Go to Data Settings > Classes.
2. Double-click the Prices > Published Prices class.
3. Click User Interface Tabs.
4. Double-click Price Lines.
5. Click the Attributes: Price Lines tab.
6. Double-click MultiText01.
7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, type Supplier Note.
9. In the Visible field, select Yes.
10. Click Save.

### Step 3: Enabling a Supplier Note Field for Quote Histories

1. Go to Data Settings > Classes.
2. Double-click the Prices > Quote Histories class.
3. Click User Interface Tabs.
4. Double-click Price Lines.
5. Click the Attributes: Price Lines tab.
6. Double-click MultiText01.

7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, type Supplier Note.
9. In the Visible field, select Yes.
10. Click Save.

### **Step 4: Enabling a Supplier Note Field for Parts**

1. Go to Data Settings > Classes.
2. Double-click the Items > Parts class.
3. Click User Interface Tabs.
4. Double-click Prices.
5. Click the Attributes: Prices tab.
6. Double-click MultiText01.
7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, type Supplier Note.
9. In the Visible field, select Yes.
10. Click Save.

### **Step 5: Enabling a Supplier Note Field for Documents**

1. Go to Data Settings > Classes.
2. Double-click the Items > Documents class.
3. Click User Interface Tabs.
4. Double-click Prices.
5. Click the Attributes: Prices tab.
6. Double-click MultiText01.
7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, type Supplier Note.
9. In the Visible field, select Yes.
10. Click Save.

### **Step 6: Enabling a Supplier Note Field for Manufacturer Parts**

1. Go to Data Settings > Classes.
2. Double-click the Manufacturer Parts > Manufacturer parts class.
3. Click User Interface Tabs.
4. Double-click Prices.
5. Click the Attributes: Prices tab.

6. Double-click MultiText01.
7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, type Supplier Note.
9. In the Visible field, select Yes.
10. Click Save.

#### Step 7: Enabling a Supplier Note field for the Analysis tab of sourcing projects

1. Go to Data Settings > Classes.
2. Double-click the Sourcing Projects > Sourcing projects class.
3. Click User Interface Tabs.
4. Double-click Analysis.
5. Click the Attributes: Analysis tab.
6. Double-click resp MultiText 1.
7. Copy the text in the Name field and paste it into the Description field. This will help you identify the original attribute name.
8. In the Name field, type Supplier Note.
9. In the Visible field, select Yes.

In the Map Data To field, select "Published Prices.Price Lines.MultiText01". Even though the drop-down will list the fields from both Published Prices & Quote Histories, you can choose only one.

You can also map the above flex field to a Multi Text field in Page Two tab of "Published Prices" class. The above example maps it to the Price Lines tab of the "Published Prices" class.

---

Note	Although the field is named Map Data To, in this case it <i>pushes</i> data to the selected field when you publish responses to the Item Master.
------	--

---

10. Click Save.

## Configuring BOM Filters

This section explains how to set up the BOM filters. For more details on concepts and usage of BOM filters, see *Product Cost Management User Guide*. The "Working with Sourcing Projects" chapter contains a section, "Adding Items to a Project," that explains how to set up the BOM filter in Web Client.

#### Set up a Sourcing Project Class BOM attribute:

1. Go to Data Settings > Classes.
2. Double-click Sourcing projects class.
3. Go to User Interface Tabs tab and double-click Items in the list.
4. Go to Attributes: Items tab.
5. Double-click Filter in the Attributes name list.

6. Select Yes from the Visible drop-down list.
7. Rename the Filter for your purposes. For example: "Production BOM."

## Setting up Names of BOM Filters

To distinguish between BOM items that you will filter for import, you must first set up and name certain Attributes for each specific BOM that you plan to import.

For example, if you have two versions of the same BOM, one called "Production" and another called "Prototype," you would need to set up a list attribute for each BOM. It is suggested that you name the list attribute based on your use case scenario. You can use any existing attribute as a template; this example uses "BOM List 3" as a template.

---

**Note** BOM Filters are supported in the Parts class, but not in the Documents class.

**Note** A BOM Filter supports filtering on multiple BOM flex fields only. It supports only Text1-5, Numeric1-5, List1-5 that are defined in Item.BOM tab, besides Qty from the Item.BOM tab. It does not support filtering on date fields, multi list fields and multi text fields.

---

### Set up a Parts Class BOM attribute:

1. Go to Data Settings > Classes.
2. Double-click Parts class.
3. Go to User Interface Tabs tab and double-click BOM.
4. Go to Attributes: BOM tab.
5. From the list of attribute names, double-click the attribute you will use as a template. For example, "BOM List 3."
6. Copy the original attribute's name into the description field and rename the attribute according to your use case scenario, for example: "Prod Load."
7. In the Visible field, select Yes.
8. To the right of the List field, click the New List button to Create a new list. A *Create List* window pops up.
9. Name the list the same as the new attribute, and give a description. For example, name it "Prod Load" and give it the description, "Filter."
10. You may Enable or Disable the New List by making appropriate selection in Enabled drop-down list
11. Chose Yes or No from Cascade drop-down list to create a cascaded List .
  - a. If you select No for Cascade, the *List* window (the New List name window) appears along with the *Create a new list value* pop-up. Enter a name in Name field and click Add button, or click Add Another button to continue adding more list values.
  - b. You can also add the list values later. For more information on adding or configuring Lists, see [Lists](#) (on page 87).
  - c. If you select Yes for Cascade, the *List* window (the New List name window) appears. In the List tab, you will find the New List Name as the first item, denoting that it is the base value of the Cascade List. Click New button to add cascade list values under this.
  - d. The *Create a new list value* pops up. Enter a name in Name field and click Add button,

or click **Add Another** button to continue adding more list values. These list values appear as a cascaded under the New List name.

- e. You can add list values to these list values to get any level of cascaded lists. To do so, select a List Value in and click **New** button. Follow step 3 above.
- f. Click **Save** and **<close>** to return to BOM List 3.

12. Click **Save** and **<close>**

For detailed instructions on how to create a sourcing project using this new BOM filter, refer to the “Working with Projects” chapter in *Product Cost Management User Guide*.





# Configuring Product Portfolio Management

**This chapter includes the following:**

▪ PPM-specific Privileges .....	357
▪ Enabling Assign Action in User Groups.....	359
▪ Configuring Project Summary Display .....	359
▪ Configuring Timesheet Display.....	360
▪ Status Nodes .....	360
▪ Automatic Installation from PPM SmartRule.....	364
▪ Default Roles Assigned Automatically to Agile PPM Users .....	365
▪ UI Configuration Data .....	366
▪ Modify Privilege Mask Applied To Properties that Control Specific User Actions.....	368
▪ Notes about Privileges for Gantt Chart and Microsoft Project .....	372
▪ Setting Up Restricted Delete Privileges.....	373
▪ Settings Required for Menu Command: Actions > Change to Canceled.....	374
▪ Variances Displayed in the General Info Tab Summary Table.....	374
▪ Object Classes for Deliverables.....	376
▪ Enabling the Calculate Attributes.....	377
▪ Support for Microsoft Project Integration .....	378
▪ Transferring Microsoft Project Work Values to Agile PPM as Days Effort.....	379
▪ Using Custom Agile PPM Subclasses in Microsoft Project 2002 and 2003 .....	379
▪ Microsoft Project/Agile PPM Integration: MSPSyncMapping.properties File .....	380

Information about configuring settings for Product Portfolio Management is provided here.

## PPM-specific Privileges

The following topics provide some details about PPM-specific privileges.

### Create from Template Privilege

This privilege, enabled for the Program Administrator and Program Manager roles, allows the user to create a program from an existing template. Users who do not have either of the “Program” roles will also need to have the following privileges in order to use the Create from Template privilege:

- Read privilege for the template that is being accessed
- Create privilege to create subclasses in the template

### Microsoft Project Privilege

Depending on the AppliedTo property of a Microsoft Project privilege mask, the Microsoft Project privilege allows the user to perform specific tasks between Microsoft Project and Agile PPM. By default, this privilege mask is enabled for the Program Administrator and Program Manager roles.

This privilege contains five properties in the Applied To field.

- Launch in Edit Mode — launch a PPM project Microsoft Project in Edit mode
- Launch in Read Only — launch a PPM project Microsoft Project in Read Only mode
- Publish from MS Project — publish from Microsoft Project
- Save As XML–Edit — save PPM project data in XML in Edit mode
- Save As XML–Read Only — save PPM project data in XML in Read Only mode.

To enable these properties, move the required properties from the Choices list to the Selected list.

---

Note	Before PLM Rel. 9.2.2, the Modify privilege contained the capability to access MS Project, which is now broken out to the Microsoft Project privilege. In addition to this privilege, you must enable General Info.Lock User and General Info.Schedule Editor in the Modify privilege to access MS Project in PPM Gantt Chart.
------	--

---

## Update All Timesheets Privilege

This privilege introduced in 9.2.2.4, is enabled for the Timesheet Administrator role, and allows the user to administer all timesheets recorded in Agile PLM. With this privilege, a user can do the following:

- Search and view timesheets for other users.
- View all tasks for a selected user, then view and change timesheet data recorded for each task.

---

Note	This privilege overrides system privileges for viewing tasks. The user need not be a team member on the task in order to perform these actions.
------	---

---

## Adding Program Contents in Modify Privilege

---

Note	In PLM 9.2.2, the Relationships tab has been renamed to Content tab for PPM objects. However, in the Programs classes, the properties under Content tab are displayed under Attributes: Relationships tab.
------	--

---

You can add other objects or contents to an existing program such as Customers, File Folders and so on. To enable this privilege, two properties have been added – Content.Name and Content.Rule. The AppliedTo property of any Modify privilege mask can be tailored to permit the user to add content (that is, add relationships) or add a Content rule (that is, add a rule to a relationship) based on the Name and Rule attributes, respectively, being enabled in the AppliedTo property.

To enable the ability to add content (Name attribute) and content rules (Rule attribute), in the Modify privilege mask's AppliedTo property, move Content.Name and Content.Rule properties from the Choices list to the Selected list. These properties are displayed in the AppliedTo property list as Activity.Content.Name and Activity.Content.Rule, and as Gates.Content.Name and Gates.Content.Rule. (Note that in other classes, the format will read, for example, Substances.Relationships.Name.) See [AppliedTo Capability](#) on page 200.

## Enabling Assign Action in User Groups

Resource Pool owners can assign pending assignments to resources from Tools > Administration > User Groups > Assignments in Agile Web Client.

---

**Note** The User Groups > Assignments tab is not available for configuration in Java Client.

---

To enable the Assign action button in the User Groups > Assignments tab, a new property User groups.Assignments.Name has been added to the Modify User Groups privilege mask. From Modify User Groups privilege mask's AppliedTo property, move User groups.Assignments.Name from the Choices list to the Selected list. (AppliedTo is detailed in [AppliedTo Capability](#) on page 200.)

## Configuring Project Summary Display

You can configure the layout and widgets of the Summary page if you have the Administrator privilege with "PPM Summary Page Configuration" as an AppliedTo value. This configuration applies to all Activities across the Agile PLM system.

To configure the Summary page, go to Tools > Administration. Under Web Client Configuration, click Project Summary Configuration.

The Summary page offers a two-column view - one wide and one narrow. Each column contains a set of configurable widgets.

### To configure summary page widgets:

1. Click the Edit link that appears just below the Configure Wide Column or Configure Narrow Column headings. The data in the tables become editable.
2. In the Display Title column, edit the default title to a title of your choice.
3. In the Visible column, select Yes or No to define whether or not this widget should be visible on the summary page.
4. In the Display Order column, use sequential numbers to define the vertical display order for the widget. 1 for the widget that should appear first, 2 for the second and so on.
5. In the Configuration column, if you see an Edit link, further configuration is supported for the widget. Click Edit to open a dialog where you can define the values that you want displayed within the widget:
  - a. Within the dialog, multi-select the desired values from the Available Values list and move these to the Selected Values area, using the right arrow button. You can filter the list using the filter options available, for faster selection.
  - b. Arrange the selected values in the order that these should appear within the widget.
  - c. Click OK.
6. When you finish configuring all the widgets, click Save to save your settings, or click Cancel to revert to the default settings. Saved settings are immediately reflected on the Project Summary page.

## Configuring Timesheet Display

The Timesheet feature enables you to view records of actual time reported against all In Process programs in the system. Program and portfolio managers with appropriate privileges can view time transactions reported against a project or group of projects, in order to conduct audits across programs, business units, or other criteria.

The Timesheet tab is visible only if your user settings are configured appropriately.

### To display the Timesheet tab:

1. From the Tools menu, select My Settings.
2. Click User Profile.
3. In the Preferences tab, click Edit to make the fields editable.
4. Under Display Preferences, change the Show Timesheet option to Yes.

The Timesheet tab is now displayed next to My Assignments.

---

Note	When you change preference settings, you must log out and then log in again for the changes to become effective.
------	--

---

## Status Nodes

The Status nodes provide visibility to whether a project's targets in the areas of Schedule, Cost, Quality, and Resources are currently being met (the 1 value), currently not being met (the 2 value), or are seriously off the target (the 3 value).

---

Note	The Rollup Health Status attribute on the General Info tab of an activity object determines whether that activity object is included in the rollup. By default, statuses from leaf node activities (tasks with no children) roll up to higher levels in the project structure (Rollup Health Status = Yes). The user can determine which objects are excluded from the rollup by editing the Rollup Health Status attribute on the General Info tab to No. This enables the user to include or exclude a selected activity in the rollup.
------	---

---

## Changing the Status Names the End User Sees

In Agile PPM Web Client, the health statuses are attributes on General Info tab. They are also reported in the health status indicators in the upper right of the activity window. By default, these are named: Overall Status, Schedule Status, Cost Status, Resource Status, and Quality Status.

To change the labels or names that appear in Agile PLM Web Client, modify the names of the health status attributes on the General Info tab of Activities or Gates class.

For example, to change the name of the Activities object's Cost Status attribute to Accounting Status, change its name on the Classes node; see [Modifying Attributes](#) (on page 77). The new name, Accounting Status, appears on the Activities object's General Info tab; it also appears in the health status indicators in the upper right of the activity window.

## Modifying Status Node Settings

When you open one of the Status nodes (Schedule, Cost, Quality, or Resource), the appropriate Status window appears. The properties on the main table are Order (1, 2, or 3), Name, Description, and Enabled. The buttons are Create and Delete.

When you double-click anywhere in the row of a status table, the object opens to the General Information tab. You can edit the fields in this window as necessary.

---

**Note**      Quality and Resource status are not programmatically set by Agile PPM. These fields can be renamed and used for other status purposes, such as Risk. These are subjective ratings. Cost and Schedule status are always calculated according to the thresholds set. It is not possible to turn off this automatic calculation.

---

## Schedule Status

The Schedule Status window reports the status of the project regarding schedule.

---

**Note**      The Overdue Value can be either a positive number or a negative number.

---

The Overdue Value can be either days or a percentage of the duration.

### To set the Overdue Type (Days or Percentage):

1. In Agile Administrator, open the Schedule Status node under Settings | System Settings | Product Portfolio Management.  
The Schedule Status window opens with the General tab displayed on top.
2. On the General tab, in the Overdue Type drop-down list, select either Days or Percentage.
3. When you are finished, click Save.

### To modify the Schedule Status values:

1. In Agile Administrator, open the Schedule Status node under Settings | System Settings | Product Portfolio Management.  
The Schedule Status window opens with the General tab displayed.
2. Click the Status tab to display the schedule statuses.
3. Double-click the status row you want to modify. The schedule status window is displayed.
4. Make the desired modifications.

---

**Note**      It is important that you follow the guidelines explained in [Schedule Status Guidelines](#) (on page 361).

---

5. When you are finished, click Save.

## Schedule Status Guidelines

The following table shows the default Schedule Status settings (Overdue Type = Days).

Order	Name	Description	Overdue Value	Icon
1	On Track	On Track	0	Green
2	Needs Attention	Needs Attention	1	Yellow
3	Off Track	Off Track	5	Red

In order for the schedule status to evaluate correctly, follow these rules when setting the Overdue Value attributes:

- All three states (On Track, Needs Attention, and Off Track) *must* have a value for Day\_Overdue. A blank value is not valid, however, zero (0) is a valid value.
- The Overdue Value values must have ascending values that follow the order. That is, On Track (1) must have the lowest value, Needs Attention (2) must have a higher value than On Track, and Off Track (3) must have a higher value than Needs Attention.
- The above rules apply for both Overdue Type = Days and Overdue Type = Percentage.
- The following tables show some examples of valid Overdue Value settings:

Overdue Value settings, Days:

Order	Name	Overdue Value Days	Overdue Value Days	Overdue Value Days	Overdue Value Days
1	On Track	-10	-5	0	5
2	Needs Attention	-5	0	5	10
3	Off Track	0	5	10	15

Overdue Value settings, %

Order	Name	Overdue Value %	Overdue Value %	Overdue Value %
1	On Track	-150	-150	0
2	Needs Attention	-100	0	50
3	Off Track	0	75	100

## How Schedule Status is Determined

If the activity's workflow status is Not Started, Schedule Status is determined by comparing the current date against the calculation of the Scheduled Start Date and the Overdue Value.

If the activity's workflow status is In Process, Schedule Status is determined by comparing the current date against the calculation of the Scheduled End Date and the Overdue Value. The following examples illustrate how Needs Attention and Off Track statuses are determined:

Overdue Value Days	Overdue Value % of Duration	Task Duration	Calculation	Schedule Status changes when the current date is...
5		10	Scheduled End Date + 5	5 days after the scheduled end date
-5		10	Scheduled End Date - 5	5 days before the scheduled end date
0		10	Scheduled End Date	On the scheduled end date
5		2	Scheduled End Date + 5	5 days after the scheduled end date
-5		2	Scheduled End Date - 5	5 days before the scheduled end date (not dependent on duration)
	-150	10	$-150\% * 10 = -15$ days	15 days before the scheduled end date
	-100	10	$-100\% * 10 = -10$ days	10 days before the scheduled end date
	-50	10	$-50\% * 10 = -5$ days	5 days before the scheduled end date
	0	10	$0\% * 10 = 0$ days	On the scheduled end date
	50	10	$50\% * 10 = 5$ days	5 days after the scheduled end date
	100	10	$100\% * 10 = 10$ days	10 days after the scheduled end date
	150	10	$150\% * 10 = 15$ days	15 days after the scheduled end date

## Cost Status

The Cost Status window reports the status of the project regarding cost and budget. Total Cost is the sum of the four cost types: Labor Cost, Capital Expenses, Fixed Cost and Flex Cost. The Cost Status color indicator is based on comparing Total Budgeted Cost to the sum of Total Actual Cost and Total Estimated to Completion and determining the percentage over Total Budgeted Cost.

**Note** The Percentage value cannot be a negative number.

Order	Name	Description	Percentage	Icon
1	On Budget	On Budget	0	Green
2	Off Budget	Off Budget	5	Yellow
3	Over Budget	Over Budget	10	Red

## Quality Status

The Quality Status window reports the status of the project regarding issues of quality.

Order	Name	Description	Icon
1	Meets Quality	Meets Quality	Green
2	Below Quality	Below Quality	Yellow
3	Poor Quality	Poor Quality	Red

## Resource Status

The Resource Status window reports the status of the team, or users with similar skill sets. Resource status allows you to evaluate the assignment of resources to programs and to help manage employees' workloads.

Order	Name	Description	Icon
1	Staffed	Staffed	Green
2	Under Staffed	Under Staffed	Yellow
3	Not Staffed	Not Staffed	Red

## Automatic Installation from PPM SmartRule

Auto-Installs From PPM is a SmartRule that can be set to Allow, Disallow, or Warning. This SmartRule controls the automatic installation of Microsoft Project (2002 and 2003) DLLs into a user's system Registry. Installation of the DLLs enables seamless publishing using an Agile menu within Microsoft Project. Auto-Installs From PPM also controls the installation of Sun's JRE for the java-based Gantt Chart. The JRE is required to launch the Gantt Chart.

The default setting for Auto-Installs From PPM SmartRule is Allow.

Set this Auto-Installs From PPM SmartRule to Disallow if your company does not want any applications to be automatically installed.

---

<b>Note</b>	If end users do not have Administrator rights on their PCs, you should consider setting Auto-Installs From PPM to Disallow and have your IT organization load the DLLs and/or JRE.
-------------	--

---

If Auto-Installs From PPM is set to Allow and a user does not have Administrator rights on his PC, selecting the Gantt Chart or Microsoft Project buttons in Agile PPM will initiate the installation process but it will not successfully install. This will happen every time a user selects one of these buttons and will become a usability issue.

IT departments can do system-wide installations of the JRE or Microsoft Project DLLs, in which



case, the functionality of the Microsoft Project integration and Gantt Chart will be fully supported regardless of the setting of this SmartRule. Auto-Installs From PPM SmartRule governs only the automatic installation of the JRE or Microsoft Project DLLs; it does not govern the launch of these applications.

## Default Roles Assigned Automatically to Agile PPM Users

The Default Role node allows you to specify which Agile PLM roles are assigned automatically to users when a task is delegated to them or when a Microsoft Project, along with its users and roles, is published to Agile PLM.

---

**Note** Access to the Default Role node requires that the administrator user have PPM Default Role selected in the Applied To property of that user's Administrator privilege mask. For more information, see "Administrator Privilege and the AppliedTo Capability" on page 10-6 and "Modifying the AppliedTo Property" on page 10-26.

---

When you open the Default Role node, the Default Role window appears. It lists two Agile PPM roles:

- **Default MSP Synchronization Role** — Controls the role assigned to a user from a Microsoft Project that was published to Agile PLM. By default, the user is assigned the Program Team Member role.
- **Default Object Owner Role** — Controls the role assigned to a user when another user delegates a task to him. By default, the user is assigned the Program Manager role.

The Default Object Owner Role is also assigned to the object owner in the Team tab when an activity is created. When an activity is delegated, the role is assigned to the delegated owner only after the delegated owner accepts the delegation.

You can change the roles used for Microsoft Project synchronization or task delegation. By default, available roles you can choose are:

- Change Analyst
- Program Team Member
- Program Manager
- Resource Pool Owner
- Program Administrator

---

**Note** If you have modified the Agile PPM roles or defined additional roles for Agile PPM, the list of roles in the Default Role Role(s) lists may differ from the list above. For more information, see "How the Lists of Available Agile PPM Roles are Determined" below.

---

### To change default roles used for Microsoft Project synchronization and task delegation:

1. Under System Settings > Product Portfolio Management, double-click Default Role. The Default Role window opens.
2. Double-click the Default MSP Synchronization Role to open it.
3. Click the Role(s) list and select a role.

4. Click Save.
5. Click Close to close the window.
6. In the Default Role window, double-click the Default Object Owner Role to open it.
7. Click the Role(s) list and select a role.
8. Click Save.
9. Click Close to close the window.

## How the Lists of Available Agile PPM Roles are Determined

There are several actions in Agile PLM where the Agile administrator or the end user is required to select an Agile PPM role from a list. Agile PPM role-selection actions include:

- When the Agile administrator selects the Default MSP Synchronization Role or the Default Object Owner Role, as described above.
- When the end user adds team members or resources to the Team tab of an activity.


The Agile PPM roles that appear in these lists are roles assigned to the login user that include at least one privilege mask with an object type of activities or gates. For example, the Agile-supplied Change Analyst role includes the privilege mask Subscribe to Gates Class; therefore, the Change Analyst role appears in the list of available PPM roles. If you were to remove that privilege mask (thus removing all activity and gate privilege masks) from the Change Analyst role, the Change Analyst role would no longer appear on the list of available Agile PPM roles.

---

Note	End users do not need to have these PPM roles assigned at the system level (that is, in the Roles property of their User Profiles), as these roles are applied only on specific the Agile PPM objects.
------	--

---

## UI Configuration Data

In Web Client, a user can view details of a task from the Project Summary page, the My Assignments tab or the Content tab, using the  icon next to the task. The task editing dialog that opens when this icon is clicked allows the user to view and edit subclass details. As an administrator, you can define the primary fields that task owners are required to edit and design how these fields should display. Task owners can then edit task details without having to navigate to the task details.

To configure the display, you must first define and select each component that you want to display in the dialog, such as attribute groups, tables and action menus. Think of attribute groups, tables, and actions as the building blocks of the task editing dialog. These can be combined in different ways to form different layouts. All you have to do is select the components, and assemble them into specific layouts.

One layout can be associated to any one subclass.

### To configure a task editing dialog:

1. Navigate to System Settings > Product Portfolio Management.
2. Click UI Configuration Data. The UI Configuration window opens.

3. Configure the following:
  - Attribute Groups
  - Configure Tables
  - Configure Action Groups
4. Assign a layout.

**To configure an attribute group:**

1. Click Attribute Groups.
2. Provide a name for the group. For example, “Cost” or “Schedule”.
3. From the Available Attributes list, select the attributes that you want to display. You can use the drop-down list to filter the attributes by subclass. Make sure the Name field is in one of the attribute groups to ensure that it is in the header.
4. Use the forward arrow button to move the selected attributes to the Selected Attributes area. You can reorder the selected attributes using the arrow buttons.
5. Click Add to add the selected attributes to the dialog.

**To configure tables:**

1. Click Tables.
2. Choose a table and provide a display name for it. For example, “Relationships”.
3. From the Available Columns list, select the columns that you want to display.
4. Use the forward arrow button to move the selected columns to the Selected Columns area. You can reorder the selected columns using the arrow buttons.
5. Click Add to add the selected columns to the dialog.

**To configure Action Groups:**

1. Click Action Groups.
2. Provide a name for the group. For example, “Task Actions”.
3. From the Available Actions list, select the actions that you want to display for workflow sign-offs. For example, Approve, Reject, and Mark Complete.
  - a. To add a process extension to an action, click New. In the dialog that opens, specify the Action Name and then select a process extension to apply.
  - b. To change the name of a selected action, click Edit and enter a new name for the action in the dialog that opens.
  - c. To delete a selected action name, click Delete. You can only delete action names that you created.
4. Use the forward arrow button to move the selected actions to the Selected Actions area. You can reorder the selected actions using the arrow buttons.
5. Click Add to add the selected actions to the dialog.

**To assign a layout:**

1. Click Layout.
2. In the Define Layout For field, choose the object for which you want to assign a layout. For example, Program.

3. Select the desired attribute group, table and action group.
4. Use the forward arrow button to move your selections to the Form area. You can reorder the components using the arrow buttons.
5. Click Add to assign the layout for the specified object.

You can verify the results of your configuration actions in the Project Summary page.

## Accessing Gantt Charts

In Agile PLM 9.2, the Gantt base privilege was removed. The Gantt capability is now covered by Read Program Schedule and Modify Program Schedule privilege masks. For more information, see the section below.

## Modify Privilege Mask Applied To Properties that Control Specific User Actions

Agile PLM uses Modify privilege mask Applied To properties to determine and control certain specific user actions and capabilities in Agile PPM. For example, if a user has a role that includes a Modify privilege mask for activities and the Applied To property includes the Activities.Schedule.Name attribute, then that user is able to use the Add function on the Schedule tab.

Agile PLM roles and privilege masks allow you to define very specific and narrow Agile PPM user capabilities if required. For detailed information about privilege masks, see [Privileges and Privilege Masks](#) (on page 193).

The following table lists the Modify privilege mask Applied To properties and which PPM actions they control.

Note	This table uses <i>&lt;object&gt;</i> as a place holder for the class or subclass name in the Applied To attribute column. The actual class or subclass name in any privilege mask is determined by the reusable criteria specified in the privilege mask. (See <a href="#">Privilege Mask Components</a> on page 218.) If you view the example privilege masks mentioned in the Notes column, the Applied To properties will be appropriate for that specific privilege mask (for example, Activities.General Info.Lock User).	
------	---	--

Action or capability provided	Applied To attribute	Example Privilege Mask / notes
Object-level actions		
Lock or unlock programs Lock and Unlock	<i>&lt;object&gt;</i> .General Info.Lock User	Example - Modify Program Schedule

Action or capability provided	Applied To attribute	Example Privilege Mask / notes
Cancel Locked Program <b>Unlock</b> Allows user to cancel the locked condition of a program that was locked by a different user.	<object>.General Info.Locked From Program	Example - Cancel Lock Program
Edit the Gantt chart <b>Gantt Chart</b>	<object>.General Info.Lock User and <object>.General Info.Schedule Editor	Example - Modify Program Schedule (for Lock User) and Example - Read Program Schedule (for Schedule Editor). Note that the user requires modify privilege for <i>both</i> of these attributes in order to edit the Gantt chart.
Read the Gantt chart <b>Gantt Chart</b>	<object>.General Info.Schedule Editor  (and the user <b>does not</b> also have <object>.General Info.Lock User)	Example - Read Program Schedule If the user has Modify applied to General Info.Schedule Editor, but he lacks Modify applied to Lock User, he will be able to open and read the Gantt chart, but he will not be able to edit the Gantt chart
Save as XML <b>Microsoft® Project &gt; Save As XML</b>	<object>.General Info.Schedule Editor	Example - Read Program Schedule. Note that this is a Modify type privilege mask, not a Read type privilege mask. <b>Note: Save as XML and Launch in Edit Mode</b> set the Schedule Editor attribute to MSP. This disables the roll-up of dates in Agile PPM.
Launch in Microsoft Project in read-only mode <b>Microsoft® Project &gt; Launch as Read Only</b>	<object>.General Info.Schedule Editor	Example - Read Program Schedule. Note that this is a Modify type privilege mask, not a Read type privilege mask.
Launch in Microsoft Project in edit mode <b>Microsoft® Project &gt; Launch in Edit Mode</b>	<object>.General Info.Schedule Editor and <object>.General Info.Lock User	Example - Read Program Schedule. Note that this is a Modify type privilege mask, not a Read type privilege mask. and Example - Modify Program Schedule <b>Note: Save as XML and Launch in Edit Mode</b> set the Schedule Editor attribute to MSP. This disables the roll-up of dates in Agile PPM.

Action or capability provided	Applied To attribute	Example Privilege Mask / notes
Publish from Microsoft Project  <b>Microsoft® Project &gt; Publish From Microsoft® Project</b>	<i>&lt;object&gt;</i> .General Info.Lock User	Example - Modify Program Schedule
Substitute Resource <b>Actions &gt; Substitute Resource</b>	<i>&lt;object&gt;</i> .Team.Name	Example - Modify All Programs, Phases, Tasks and Gates.
Change Parent <b>Actions &gt; Change Parent</b>	<i>&lt;object&gt;</i> .Schedule.Name	Example - Add Programs, Example - Add Phases, Example - Add Tasks.
Change Archive Status <b>Actions &gt; Change Archive Status</b>	<i>&lt;object&gt;</i> .General Info.Archived	Example - Modify All Programs, Phases, Tasks and Gates.
Delegate Delegate an activity (you are the owner) to a different owner <b>Actions &gt; Delegate</b>	<i>&lt;object&gt;</i> .General Info.Delegated Owner	Example - Modify All Programs, Phases, Tasks and Gates.
Delete Delete the current object <b>Actions &gt; Delete</b>	Always requires a Delete privilege mask for the current object where the delete action is perin Agile PPM.  Requires Delete privileges for subordinate objects on the current object's <b>Schedule</b> tab.  If there is a parent object, Delete of the current object also requires the following:  •A Delete privilege mask for the parent object.  •A Modify privilege mask for the parent object: <i>&lt;parent object&gt;</i> .Schedule.Name	When the current PPM object is deleted in Agile PPM Web Client, all three privilege masks are required (if there is a parent ob  ▫ <b>Current object Delete privilege</b>  ▫ <b>Children objects Delete privileges</b>  ▫ <b>Parent object Delete privilege</b>  ▫ <b>Parent object Modify Scehdule.Name</b>
<b>Schedule tab actions</b>		
Add activities <b>Add button</b>	<i>&lt;object&gt;</i> .Schedule.Name	Example - Add Programs, Example - Add Phases, Example - Add Tasks.

Action or capability provided	Applied To attribute	Example Privilege Mask / notes
Delete activities Delete button	<object>.Schedule.Name for the current <b>Schedule</b> tab object.  Requires Delete privileges for the deleted object and the deleted object's subordinate objects	The user must have modify Schedule.Name privilege mask for the object where the Delete activities action (on the <b>Schedule</b> tab) is performed. Also requires Delete privileges for the deleted objects and their children.  Example - Add Programs, Example - Add Phases, Example - Add Tasks.  <b>Note:</b> Delete privileges for the current object are not required.
Edit > Dependencies	<object>. Dependencies Dependent Upon.Name for the object in <b>Schedule</b> tab row that is being edited.	Example - Modify All Programs, Phases, Tasks and Gates
Edit > Display Order	<object>.Schedule.Name	Example - Add Programs, Example - Add Phases, Example - Add Tasks.
Edit > Reschedule	<object>.General Info. Schedule Start Date  and  <object>.General Info. Schedule End Date	The user must have a modify privilege mask that allow him to modify the SchedStart Date and Schedule End Date of the object where the Reschedule action (on the <b>Schedule</b> tab) is performed.  Example - Modify All Programs, Phases, Tasks, and Gates
Edit > Add Team	<object>.Team.Name	Example - Add Programs, Example - Add Phases, Example - Add Tasks.
Create Baseline	<object>.Schedule.Name	Example - Add Programs, Example - Add Phases, Example - Add Tasks.
Remove Baseline	<object>.Schedule.Name	Example - Add Programs, Example - Add Phases, Example - Add Tasks.
Dependencies tab actions		
Add activities Add button	<object>.Schedule.Name	Example - Add Programs, Example - Add Phases, Example - Add Tasks.

Action or capability provided	Applied To attribute	Example Privilege Mask / notes
Add or remove dependencies Add button Remove button	<object>.Dependencies Dependent Upon.Name	Example - Modify All Programs, Phases, Tasks and Gates
Team tab actions		
Add team members Add button	<object>.Team.Name	Example - Modify All Programs, Phases, Tasks and Gates.  Modify privilege for attribute Team.Name allows the user <b>only</b> to add or to remove team members.  In order to edit the Team table, the user must have additional modify privileges for the specific Team table attributes; refer to the row below.
Edit team member Edit button	<object>.Team.%_Allocation <object>.Team.Actual_Hours <object>.Team.Assigned From <object>.Team.Roles	In order to edit the Team table, the user must also have a modify privilege mask with explicit Applied To properties for the speTeam table attributes he needs to edit, for example, <b>Actual Hours</b> .

## Notes about Privileges for Gantt Chart and Microsoft Project

The table above includes definitions of the Modify privilege masks necessary to grant users:

- The ability to open an Agile PPM activity in Gantt Chart and, therefore, edit that activity and its children, including creating new children.
- The ability to Launch in Microsoft Project an Agile PPM activity and, therefore, edit that activity and its children, including creating new children.

When activities are edited in Gantt or Microsoft Project, Agile Create privilege masks and Modify privilege masks pertaining to the editing of the contents of specific fields cannot be checked within the Gantt or Microsoft Project applications. For example, it is possible that a user may not be able to create a particular Agile PPM subclass when working in Agile PPM, but he will be able to create that subclass in Gantt or Microsoft Project. In a similar manner, a user may not be able to edit the content of specific Agile PPM object attributes when working in Agile PPM, but he will be able to edit those fields in Gantt or Microsoft Project.



**Caution** If you wish to precisely limit the create and modify attribute privileges of some users, then do not give those users the ability to edit in Gantt or Microsoft Project. Gantt and Microsoft Project edit capabilities are more appropriate for Agile PPM users requiring broad create and modify capabilities.

## Delete Object Privileges for Gantt Chart and Microsoft Project

When a user edits an Agile PPM program in the Gantt Chart or he uses Microsoft Project > Launch in Edit Mode to edit in Microsoft Project, he can perform many actions including deleting objects (activities or gates), changing the parent, changing dates or adding dependencies.

When the user updates his changes to the Agile PPM server (Update function in Gantt Chart, Agile > Publish to PPM in Microsoft Project), Agile PLM checks to ensure that the user has the appropriate delete privilege masks for all activities and gates that he deleted. If the user does not have the appropriate delete privilege mask for an object that he deleted in Gantt Chart or Microsoft Project, none of the modifications he made will be written to the Agile database. An error message informs the user that he does not have the necessary delete privileges.

Therefore, you can define mandated activities in Agile PPM, that is, activities that cannot be deleted from a program. This is enforced by configuring Delete privilege masks that do not allow users to delete mandated activities. See [Setting Up Restricted Delete Privileges](#) (on page 373).

## Setting Up Restricted Delete Privileges

The Agile-supplied Delete privileges masks are very broad, for example, Delete All Programs, Phases, and Gates allows the user to delete any object in the Programs base class, with no restriction. To create a restricted Delete privilege mask, create a reusable criteria that defines the objects the user will be allowed to delete, then use that criteria to create a Delete privilege mask. (For more information about reusable criteria, see [Criteria](#) (on page 107). For more information about privilege masks, see [Privileges and Privilege Masks](#) (on page 193).)

When a user modifies a PPM program in the Gantt Chart or in Microsoft Project, the restricted Delete privilege masks are applied when the user updates or publishes back to Agile PPM.

Here are some examples of how you might set up and use restricted Delete privilege masks:

- Create a specific subclass for mandated activities that you will not allow to be deleted. You can then create reusable criteria that either exclude the mandated subclass, or include all subclasses except the mandated subclass.

- Object Type: Activities  
General Info. Activities Type Not Equal to Mandated Task

Where Mandated Task is a subclass you created to use for tasks that cannot be deleted. This allows all other Activities subclasses to be deleted, but Mandated Tasks cannot be deleted.

- Create individual criteria and individual Delete privilege masks for each subclass, but do not create or assign a Delete privilege mask for the Mandated Task subclass. For example, you might create Delete privilege masks using the reusable criteria:

Object Type: Programs

Object Type: Phase

Object Type: Task

(No Delete privilege mask created for Mandated Task.)

- Define an object attribute that determines whether the task is mandated or not. This allows users to define mandated tasks on a case-by-case basis. This designation can be set up in a template and new programs copied from the template will carry over the value.

Once you have defined the attribute, you can create reusable criteria that evaluate the contents of that attribute. For example:

Page Two.List01 Not Equal to Mandated

Where Page Two.List01 is a list field that you have defined in order to set whether an activity is mandated or not. This also requires:

- You must define a list for the Page Two.List01 attribute, for example, list selections Mandated and Non-Mandated.  
  
See [Lists](#) (on page 87) and in particular [Creating Custom Lists and Adding to Lists](#) (on page 88).
- In order to limit who may edit the Page Two.List01 attribute, you must create and assign Modify privilege masks that allow and disallow the ability to change whether or not a task is mandated. Including Page Two.List01 in the Applied To property of a Modify privilege mask allows the user to change this attribute. Typically, you will allow very few users to change this attribute.

**Caution** If you plan to use restricted Delete privileges for Agile PPM, remove any broadly-defined Delete privilege masks from the Agile PPM roles.

Agile privilege masks are additive. If a user has a Delete privilege mask that restricts delete privileges for Mandated Task subclass objects, but he also has the Delete All Programs, Phases, and Gates privilege mask (which allows him to delete any object in the Programs base class), then the user will be able to delete Mandated Task subclass objects.

## Settings Required for Menu Command: Actions > Change to Canceled

The Actions > Change to Canceled menu command allows users to cancel the displayed program object and automatically cancel all its children (change workflow status to Canceled). In addition, users can also cancel leaf node objects by using the Change Status button.

Regardless of which method the user chooses, his ability to change the workflow status of a PPM object (including cancelling a PPM object) is determined both by the workflow status property Valid Manual Next Status setting and by the user's assigned Change Status privilege masks.

The Agile-supplied default Change Status privilege masks for PPM objects provide the ability to change statuses from any status to any other status. If you use custom Change Status privilege masks for PPM objects, please review them to verify that the end users will be able to perform a top-level cancellation. For more information see [Change Status](#) (on page 214) and [Manual Valid Next Status](#) (on page 134).

## Variances Displayed in the General Info Tab Summary

## Table

The following variance calculations appear in the summary table at the top of the General Info tab of Activity objects and Gate objects. Use the Classes node to make the variance calculations visible in the summary table by enabling the attributes. Work days indicates the variance in scheduled days of work. Calendar days indicates the variance according to days on the calendar. A four week variance would appear as 20 work days and 28 calendar days.

If Actual and Estimated date fields are blank, no variance calculations are performed for those attributes.

Use the Classes node to choose which variance calculations will be visible in the summary table by enabling or disabling the attributes. In addition, you can use the Applied To property of PPM object Read privilege masks to control which users can read these attributes.

Variance attribute	Difference between
Estimated Start Variance Work Days	Estimated Start Date - Scheduled Start date (in work days)
Estimated Duration Variance Work Days	Estimated Duration - Schedule Duration (in work days)
Estimated Finish Variance Work Days	Estimated Finish Date - Scheduled Finish date (in work days)
Estimated Start Variance Calendar Days	Estimated Start Date - Scheduled Start date (in calendar days)
Estimated Duration Variance Calendar Days	Estimated Duration - Schedule Duration (in calendar days)
Estimated Finish Variance Calendar Days	Estimated Finish Date - Scheduled Finish date (in calendar days)
Actual Start Variance Work Days	Actual Start Date - Scheduled Start date (in work days)
Actual Duration Variance Work Days	Actual Duration - Schedule Duration (in work days)
Actual Finish Variance Work Days	Actual Finish Date - Scheduled Finish date (in work days)
Actual Start Variance Calendar Days	Actual Start Date - Scheduled Start date (in calendar days)
Actual Duration Variance Calendar Days	Actual Duration - Schedule Duration (in calendar days)
Actual Finish Variance Calendar Days	Actual Finish Date - Scheduled Finish date (in calendar days)

## Object Classes for Deliverables

The objects that a user can specify as a deliverable are determined by several factors:

- If the appropriate Agile solution is installed at your site. For example, in order to select a Declaration, Agile PG&C must be installed at your site.
- Whether the user has the appropriate privileges to discover and read the object.

Class	Target Event Attribute	Notes	Deliverables tab table	Add by
Item base class	Lifecycle	Defined in Agile Administrator <b>Classes</b> node, <b>Lifecycle Phases</b> tab.  Controlled by the Agile change process.	Affected By	Search Create New
Changes base class	Workflow.Status	Target status list is dependent on the workflow that has been selected for the specified object.	Affected By Affects	Search Create New
Manufacturer Part class	Lifecycle	Defined in Agile Administrator <b>Classes</b> node, <b>Lifecycle Phases</b> tab.  Not controlled by the Agile change process.	Affected By	Search Create New
Manufacturer class	Lifecycle	Defined in Agile Administrator <b>Classes</b> node, <b>Lifecycle Phases</b> tab.  Not controlled by the Agile change process.	Affected By	Search Create New
File Folder base class	Lifecycle	Defined in Agile Administrator <b>Classes</b> node, <b>Lifecycle Phases</b> tab.  Not controlled by the Agile change process.	Affected By	Search Create New
PSR base class	Workflow.Status	Target status list is dependent on the workflow that has been selected for the specified object.	Affected By Affects	Search Create New
QCR base class	Workflow.Status	Target status is dependent on the workflow that has been selected for the specified object.	Affected By Affects	Search Create New

## Enabling the Calculate Attributes

By default, all costs are calculated. However, by enabling the General Info tab Calculate attributes, the end user can choose whether to use the calculated cost or a cost value that he enters. The Calculate attributes are list type attributes that use a Yes/No selection list. When the Calculate attributes are disabled (not visible), the default setting is Yes (calculate). Refer to the *Product Portfolio Management User Guide* for details on how costs are calculated.

With the exception of Labor costs, each of the cost fields shown in the table below has an associated Calculate attribute. You can enable all the Calculate attributes or only the Calculate attributes you want to use.

If the Calculate attribute is visible and the end user has the privilege to modify the attribute, he has the option to select Yes or No.

- Yes — When rolling up the costs of the current activity to its parent activity, use the calculated cost of the current activity's children.
- No — When rolling up the costs of the current activity to its parent activity, do not use the calculated cost, rather, use the cost entered in the cost field. In this case, there will be no rollups. Instead, cost will be calculated based on the values specified for the parent activity.

To use a Calculate attribute you must:

- Enable the appropriate Calculate attribute of the object's General Info tab. (Settings > Data Settings > Classes)
- Edit the appropriate Modify privilege masks by adding the Calculate attribute to the Applied To property of the privilege mask. (Settings > Privileges > Modify)

For example, in order to use the Yes/No selection list for Calculate Capital Cost - Budget on the General Info tab of Activities, the user must have a Modify privilege mask for Activities that includes Activity.General Info.Calculate Capital Cost - Budget in the Applied To property.

The following table shows the cost attributes, their associated Calculate attributes, and the Modify privilege mask attributes that must be added to the Modify privilege mask Applied To property.

General Info tab Cost attribute:	Enable the associated General Info tab Calculate attribute:	Add to the appropriate Modify privilege mask Applied To property:
Actual Labor Cost	Actual Labor Cost and Budgeted Labor Cost are always calculated.  Estimated Labor Cost to Completion can be edited on the <b>General Info</b> tab; it is not calculated.  No Calculate attributes are provided for labor costs.	(Not applicable)
Budgeted Labor Cost		

General Info tab Cost attribute:	Enable the associated General Info tab Calculate attribute:	Add to the appropriate Modify privilege mask Applied To property:
Estimated Labor Cost to Completion		
Actual Capital Cost	Calculate Capital Cost - Actual	<object>.General Info.Calculate Capital Cost - Actual
Budgeted Capital Cost	Calculate Capital Cost - Budget	<object>.General Info.Calculate Capital Cost - Budget
Estimated Capital Cost to Completion	Calculate Capital Cost - EAC	<object>.General Info. Calculate Capital Cost - EAC
Actual Fixed Cost	Calculate Fixed Cost - Actual	<object>.General Info.Calculate Fixed Cost - Actual
Budgeted Fixed Cost	Calculate Fixed Cost - Budget	<object>.General Info.Calculate Fixed Cost - Budget
Estimated Fixed Cost to Completion	Calculate Fixed Cost - EAC	<object>.General Info. Calculate Fixed Cost - EAC
Actual Flex Cost	Calculate Flex Cost - Actual	<object>.General Info.Calculate Flex Cost - Actual
Budgeted Flex Cost	Calculate Flex Cost - Budget	<object>.General Info.Calculate Flex Cost - Budget
Estimated Flex Cost to Completion	Calculate Flex Cost - EAC	<object>.General Info. Calculate Flex Cost - EAC

## Support for Microsoft Project Integration

**Note** In Agile PLM 9.2.1, integration with Microsoft Project 98 and 2000 project files is no longer supported. Microsoft has discontinued support for these versions. If users have Microsoft Project 98 or 2000 project files with which they would like to work, users must open the files in Microsoft Project 2002 or 2003 to automatically convert the project files to the appropriate format. For more information, select Help > Microsoft Project Help in the Microsoft Project 2002 or 2003 menu.

Integration with Microsoft Project 2002 and 2003 is supported. See [Automatic Installation from PPM SmartRule](#) (on page 364) for more information about automatic installation of the appropriate DLLs.

See also:

- [Modify Privilege Mask Applied To Properties that Control Specific User Actions](#) (on page 368) for information about modify privilege mask properties that control access to Microsoft Project integration features.
- [Transferring Microsoft Project Work Values to Agile PPM as Days Effort](#) (on page 379).
- [Using Custom Agile PPM Subclasses in Microsoft Project 2002 and 2003](#) (on page 379).
- [Microsoft Project/Agile PPM Integration: MSPSyncMapping.properties File](#) (on page 380).

## Transferring Microsoft Project Work Values to Agile PPM as Days Effort

In Agile, days effort is always calculated based on the % allocation and duration. Agile requires an allocation to a resource or resource pool in order for days effort to be populated. To handle the publishing of tasks from Microsoft Project, where work values are entered, you can set up a generic resource pool to hold the work/days effort values. If you set up a generic resource pool, users will notice that tasks which satisfy these conditions have a generic resource pool associated to them on the Team tab.

### To set up the global resource pool:

1. Enter the resource pool name in the MSPSyncMapping.properties file.
2. Restart the server.
3. Create the resource pool ensuring that:
  - a. You use the name you entered in the MSPSyncMapping.properties file.
  - b. The resource pool is a Global resource pool.

The resource pool must be created as Global in order to enable the mapping.

**Important** This mapping is ignored and work values are discarded if either of the following is true:

The resource pool name is configured in the properties file, but the resource pool does not exist (not created).

The resource pool name is configured in the properties file and the resource pool has been created, but it does not meet the criteria; it is not a Global resource pool.

## Using Custom Agile PPM Subclasses in Microsoft Project 2002 and 2003

If you have defined custom Agile PPM subclasses, users can specify those subclasses in Microsoft by using Microsoft Project column Text29.

**To enable the use of custom Agile PPM subclasses in Microsoft Project 2002 or 2003:**

1. In Microsoft Project, right-click on the column headers.
2. Select Insert Column.
3. Select Text29 for the field name. The default Agile PPM subclass names are displayed.
4. As you create new tasks and enter them, you can type in this field the name of any custom Agile PPM activity subclass. If you leave the field blank, the Agile PPM default subclasses are used.

---

**Note** The subclass name you enter must be spelled correctly; if the name is not spelled correctly, the out-of-box default subclass names will be displayed.

---

## Microsoft Project/Agile PPM Integration: MSPSyncMapping.properties File

The Agile-provided MSP/Agile PPM mapping file (MSPSyncMapping.properties on the Agile server) provides synchronization mapping between Agile PPM objects and Microsoft Project.

For Activities and Gates separate mapping is provided below.

Only TEXT and DATE EXTENDED ATTRIBUTES, DEADLINE attribute (task level attribute) are supported. They can be mapped to out-of-the-box TEXT, DATE FLEX FIELDS on PAGE TWO. Page Three attributes cannot be mapped.

The attribute mapping should be in the following format:

<key> = [<Mapping 1>],[<Mapping 2>],[<Mapping 3>],...[<Mapping n>]

where

- <key> represents the class for which the attribute mapping is defined. It can have following values only
  - "msp.pe.attribute.activities.map" for Activity class
  - "msp.pe.attribute.gates.map" for Gate class
- <Mapping 1>, <Mapping 2>, <Mapping 3>, ..., <Mapping n> represents one attribute mapping definition.

All individual attribute mapping definitions above should be in the following format i.e every <Mapping n>

<Field Name> | ExtendedAttribute.<Field Name> = PAGE\_TWO.<DB Column Name>]

where

- <Field Name> represents MSP attribute name with following notation
  - Use <Field Name> notation to specify MSP task level attributes (right now only Deadline is supported).
  - Use ExtendedAttribute.<Field Name> notation to specify MSP Extended attributes.
- <DB Column Name> represents the "PAGE\_TWO" table's column name in Agile database. This is available in the attribute property of the attribute in Java Client Administrator under



the Data Settings > Classes node.

For each extended attribute mapped from MSP side, you need to specify the field ID associated with it. The field IDs for each of MSP extended attributes used for mapping definition should be specified in the following format:

```
msp.attribute.ExtendedAttribute.<Field Name>.id = <Field ID>
```

where

- <Field Name> represent the MSP Extended Attribute's name.
- <Field ID> represents the unique integer(ID) defined in MSP that is associated with the extended attribute. After enabling the extended attribute in MSP, the field ID can be obtained from the Project Element's ExtendedAttributes tag in the .xml file.

---

Note	Any mismatch with the above specified FORMAT in mapping definition, the corresponding definition will be IGNORED and an error message will be printed in server console. NO USER EXCEPTION will be shown.
------	---

---

The sample format is given below and you need to extend this if you want to map more extended attributes from MSP.

```
msp.pe.attribute.activities.map=[ExtendedAttribute.Text1 = PAGE_TWO.TEXT11], \
[ExtendedAttribute.Date1 = PAGE_TWO.DATE01], \
[Deadline = PAGE_TWO.DATE02]
```

```
msp.pe.attribute.gates.map=[ExtendedAttribute.Text1 = PAGE_TWO.TEXT11], \
[ExtendedAttribute.Date1 = PAGE_TWO.DATE01], \
[Deadline = PAGE_TWO.DATE02]
```

```
msp.attribute.ExtendedAttribute.Text1.id = 188743731
```

```
msp.attribute.ExtendedAttribute.Date1.id = 188743945
```



# Configuring Agile Content Service

**This chapter includes the following:**

---

▪ About Agile Content Service.....	383
▪ How Agile Content Service Works.....	383
▪ Setting Up Agile Content Service .....	384
▪ Workflows for Transfer Orders.....	386
▪ Tracking Published Data.....	387
▪ Setting and Editing Destinations.....	387
▪ Setting and Editing Events.....	397
▪ Setting and Editing Filters.....	399
▪ Setting and Editing Subscribers.....	403
▪ Setting and Editing Package Services.....	406
▪ Setting and Editing Response Services.....	408
▪ Responses and Process Extensions .....	410
▪ Settings Required for Agile-To-Agile Publishing.....	410
▪ Security Considerations.....	415

This chapter contains information about configuring the settings for Agile Content Service.


## About Agile Content Service

Agile Content Service™ is an event-driven XML-based publishing service that makes the product record available to a wide variety of business applications and users, both internally and across the global manufacturing network. In addition to allowing employees and supply chain partners to publish the product record on demand, Agile Content Service can be configured to automatically publish the Item Master, BOM, and AML changes during any phase of the product lifecycle to multiple destinations, ensuring that everyone is working with up-to-the-minute information.

## How Agile Content Service Works


Every time Agile Content Service publishes product content, it produces a transfer order that keeps track of what, where, and when product content is transferred. Agile Content Service allows for destination-specific content, ensuring that external entities receive only the information to which they should have access. Roles and privilege masks can be configured to ensure that the right information is sent.

Agile PLM users can publish product content in real time with a content transfer order (CTO) or set up subscribers to automatically create automated transfer orders (ATO) based on a schedule or triggered by a workflow status change. Agile Content Service is easily configured and can support transfers to multiple destinations and transfer protocols, including a file, HTTP, HTTPS, FTP, JMS, or another Agile PLM system.

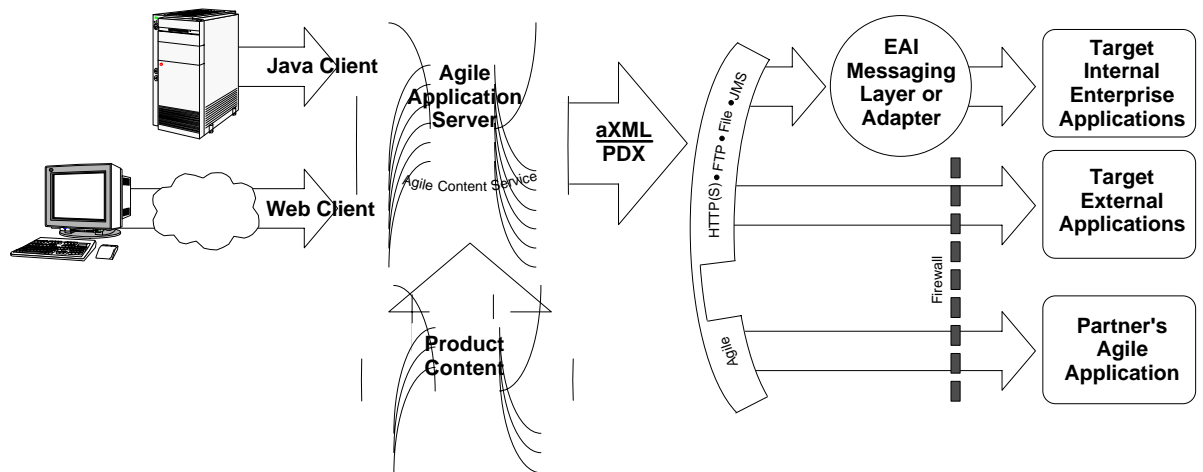

## Setting Up Agile Content Service

Before publishing content, Agile Content Service needs to know exactly what content must be transferred, as well as when it goes, where it goes, and a few other factors.

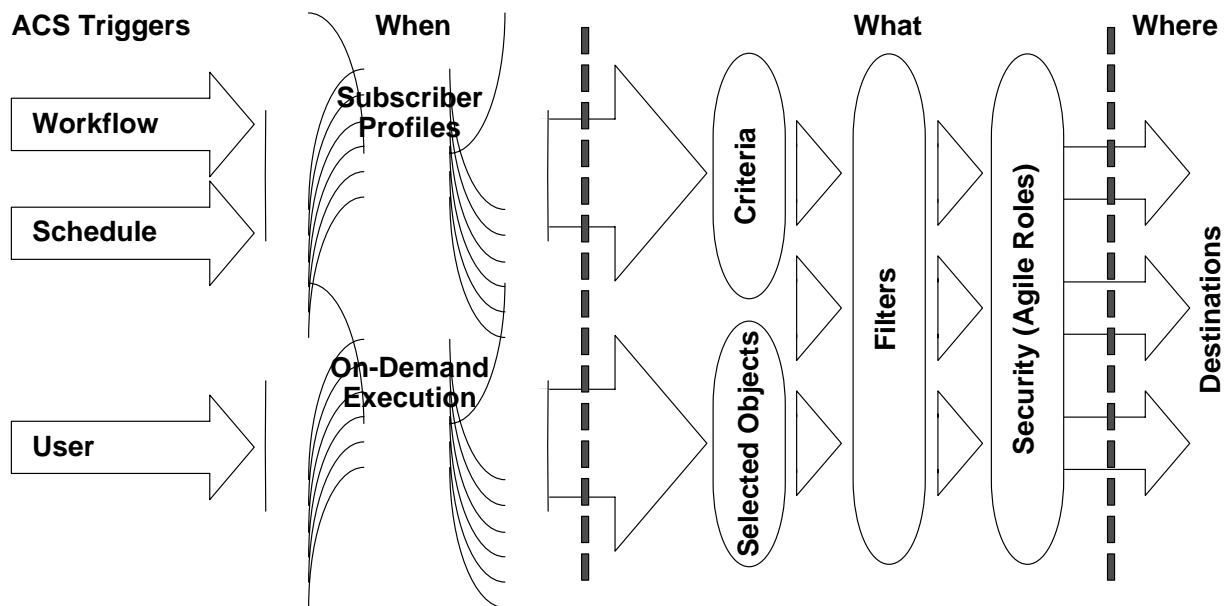

Agile Content Service consists of the following components:

▫ **Destinations (Where)**

Destinations define where to publish product content. Agile PLM provides a file, FTP, HTTP(S), JMS queue, and Agile system as destination types. Users can publish product content to any number of destinations across these destination types.

A file destination is useful when users publish to internal systems. FTP and HTTP(S) destinations are useful when users publish to external systems. A JMS queue destination type is useful when users publish to an EAI system. An Agile destination type is used to publish to a supply chain partner's Agile PLM system.

▫ **Events (When)**

Events define when to publish automated product content for an ATO. Events can be based either on a schedule or on an object's moving to a specified workflow status.

▫ **Filters (What)**

Filters determine what data elements to publish. Filters provide the ability to configure the data of the element that gets published. Agile Content Service provides default filters for all objects.

▫ **Criteria (What)**

For ATOs, criteria allow automated subscribers to determine what objects they should process. For CTOs, the user decides what objects to process by selecting them on the Selected Contents tab of the CTO.

▫ **Subscribers**

Subscribers are created by the Agile PLM administrator. All applications and external systems that need access to specific product content are defined as subscribers. Subscribers are defined by their configured destinations, filters, criteria, events, assigned roles, and ATO

creation data.

- **Package Services**

Package services contain settings used to create the package in the Agile PLM target system for Agile-to-Agile transfers. Package services are defined on the target Agile PLM system in an Agile-to-Agile transfer; an ACS Server license is not required to configure package services.

- **Response Services**

Response services define where automated responses are delivered. They are part of an acknowledgement by the remote recipient of the data. Response services are defined on the target Agile PLM system in an Agile-to-Agile transfer; an ACS Server license is not required to configure response services.

## Workflows for Transfer Orders

Agile PLM provides a default workflow for ATOs and a default workflow for CTOs. Because ATOs and CTOs use automated processes, certain restrictions apply to their workflows.

### Default ATOs Workflow

Because ATO processing is completely automated, the Default ATOs workflow is read-only and cannot be modified. Correct processing of ATOs cannot be ensured if you use a different workflow.

**Caution**    *Use only the Default ATOs workflow to process ATOs.*

### Default CTOs Workflow

Unlike the Default ATOs workflow, the Default CTOs workflow allows you to route CTOs for review. Agile strongly suggests that you use the Default CTOs workflow to process CTOs.

Any workflow used for CTOs must observe the following restrictions. Correct processing of CTOs cannot be ensured if the workflow you use does not observe these restrictions.

---

<b>Note</b>	When the CTO enters the Released type status, that is the signal to ACS that the CTO is ready to be processed. When a CTO enters the Released type status, ACS automatically finds the released CTO, automatically processes it, and automatically moves it to the Complete type status. Any alteration of the Released or Complete type statuses may prevent correct CTO processing.
-------------	---

---

- A CTO workflow may have only one Released type status.
- The workflow status immediately following the Released type status must be the Complete type status.
- The Released type status must not have any approvers. Therefore, do not modify this workflow status to automatically add approvers, and be sure that the Ad Hoc Approvers/Observers property for this status is set to No.

If you need a different CTO workflow, the best way to create one is to open the Default CTOs workflow and use Save As to create the new CTO workflow. In the new CTO workflow, do not alter the Released and Complete type statuses in any way. However, you may add as many Submit and

Review type statuses as you need and modify the settings of those statuses to suit your needs.

## Tracking Published Data

Completed transfer orders, both ATOs and CTOs, provide a record of what, where, and when product content is transferred and whether those transmissions were successful. This allows you to maintain an audit trail of all published product content data.

When you use ATOs to automatically publish product content data, Agile Content Service keeps track of what data has been transferred with ATOs. The next time an ATO publishes object data to the same destination, the Agile PLM system compares the object data specified for extraction on the new ATO against the ATO records of previously transferred data. An object that was previously transferred to that destination will not be transferred again.

In contrast, a CTO always publishes the specified data, regardless of whether it was transferred to that destination previously. If you need to republish data specified on an ATO, a simple method is to open the ATO, and use Save As to create a CTO. You can edit the Selected Content tab of the CTO to specify only the objects you want to republish.

## Setting and Editing Destinations

Destinations define which resources can accept the extracted content. These are managed from the Destinations node. With Agile Content Service, you can define the following destination protocols:

- Agile
- FTP
- File
- HTTP/HTTPS
- JMS Queue or Topic

You can now specify the filename extension at the Destination level. That is, any extract that goes to a given destination will use the specified file extension, if provided. If an extension is not provided, the default is based on the format of the extraction.

Users cannot create destinations. Destinations must be created and assigned by the administrator before a user can create a transfer order. When creating a destination, you can also test the connection to verify that the destination can be located.

The Status column in the Destinations window indicates the status of the last attempted transmission of data to this destination. When a destination is created or reset, the default status is Success, even though no transmission has occurred.

Agile PLM provides an example destination with the file protocol that saves the transfer file to the root directory of the application server. You can use this example destination when creating a subscriber or CTO, if the properties meet your company's needs.

## Agile Destinations

Agile Content Service can publish to another Agile PLM system. Agile Content Service creates a

package in the target system using Web services. After the package is accepted, the data can be directly imported from the Attachments tab of the package. Make sure to use aXML format if you want to directly import the data.


---

**Note** To create an Agile destination on your Agile PLM system, you need the following information about the target Agile PLM system: server URL (including the host name, the virtual path name, and the port number), the appropriate username and password to use on the target Agile PLM system, and the name of the package service to select on the target Agile PLM system. To obtain this information, you may need to contact the administrator of the target Agile PLM system.


---

For information about how to configure your Agile PLM system to receive data from another Agile PLM system, see [Setting and Editing Package Services](#) (on page 406). (For information about ACS settings for both source Agile PLM systems and target Agile PLM systems, see [Settings Required for Agile-To-Agile Publishing](#) (on page 410).)

### To create an Agile destination:

1. Under System Settings > Agile Content Service, double-click Destinations. The Destinations window appears.
2. Click . The Create Destination dialog box appears.
3. Type a name and a description of the destination in the Name and Description fields.
4. Select Agile from the Protocol list.
5. Select either Yes or No from the Response Expected list.

For information about how to configure your Agile PLM system to send responses from a destination, see [Setting and Editing Response Services](#) (on page 408).

6. Click the  button next to the Notification User field to display the list of available users. Select the users to be notified if a transfer failure occurs.
7. Select either HTTP or HTTPS from the Server URL drop-down list.
8. Type the URL and port of the target Agile PLM application server in the host and port fields, respectively. Type the virtual path name in the virtual path field, which is the last field.

---

**Note** The virtual path is determined when an Agile PLM system is installed. For example, if the URL used to log in to the Web Client on the target Agile Application Server is:

---

<http://www.clapton.com/Agile/PLMServlet>

9. Enter the URL information as shown above, where [www.clapton.com](http://www.clapton.com) is the host name, and Agile is the virtual path name. The field following the colon (:) is reserved for a port number. 80 is usually used for HTTP and 443 is usually used for HTTPS. If a port other than 80 or 443 is being used, the port will appear in the URL used to log in to the Agile Web Client. Omit PLMServlet, which is the application name. Contact the administrator of the target Agile PLM application server if you have questions about the correct URL to use.
10. Type the username and password of the target Agile PLM application server in the User Name and Password fields. Click Grab Package Services.

If the remote Agile PLM system can be properly contacted, the Package Service list is populated with the package services from the target Agile PLM server.



---

**Note** If the user's password in the target Agile PLM system changes, be sure to edit the destination with the new password.

---

11. Select the appropriate Package Service from the drop-down list.

---

**Note** You may need to contact the administrator of the target Agile PLM system to determine which package service you should select.

---

12. Edit the following destination parameters, if necessary:

- Filename Prefix (default is TO)
- File Number (default is 000001)
- Filename Extension

The name of the transfer order file consists of the Filename Prefix parameter followed by the File Number parameter with the extension of the Filename Extension parameter. The File Number parameter increments by one each time a file is transferred.

Check Enable User-defined Filename Extension to activate the Filename Extension field. Specify the filename extension, either .pdx or .xml. All files extracted with this destination have the same file extension. If no extension is specified, the default is based on the format of the extraction.

13. Click OK.

## FTP Destinations



You can publish data to an FTP site. Agile Content Service uses the user name and password, if set, to log in to the FTP server. You can also verify the connection to the site during creation to ensure access.

---

**Note** If a file with the same name already exists at the FTP site when the transfer order is published, it is overwritten.

---

### To create an FTP destination:

1. Under System Settings > Agile Content Service, double-click Destinations. The Destinations window appears.
2. Click . The Create Destination dialog box appears.
3. Type a name and a description of the destination in the Name and Description fields.
4. Select FTP from the Protocol list.
5. Click the  button next to the Notification User field to display the list of available users. Select the users to be notified if a transfer failure occurs.
6. Type the URL of the FTP site where the transfer order is sent, including port number, if needed, in the URL or Target Path field.

---

**Note** When entering the URL of the FTP site you do not need to enter <ftp://>.

---

7. Type the username and password of the FTP site, if needed, in the User Name and Password fields.
8. Edit the following destination parameters, if necessary:
  - Filename Prefix (default is TO)

- File Number (default is 000001)
- Filename Extension

The name of the transfer order file consists of the Filename Prefix parameter followed by the File Number parameter with the extension of the Filename Extension parameter. The File Number parameter increments by one each time a file is transferred.

Check Enable User-defined Filename Extension to activate the Filename Extension field. Specify the filename extension, either .pdx or .xml. All files extracted with this destination have the same file extension. If no extension is specified, the default is based on the format of the extraction.

9. Select Binary from the Transfer Mode list.
10. Click Test to verify the destination.

When testing the connection to the destination, temporary files are created in the destination location. You can delete these files after the connection is verified.

11. Click OK.

## File Destinations



You can publish data to a file system. Agile Content Service must have access to the fully qualified path where the file will be located for a successful transfer. Sufficient disk space must also be available to write the file to the destination. You can verify the connection to the path during creation to ensure access.

---

Note	If a file with the same name already exists at the destination when the Transfer Order is published, it is overwritten.
------	---

---

### To create a file destination:

1. Under System Settings > Agile Content Service, double-click Destinations. The Destinations window appears.
2. Click . The Create Destination dialog box appears.
3. Type a name and a description of the destination in the Name and Description fields.
4. Select File from the Protocol list.
5. Click the  button next to the Notification User field to display the list of available users. Select the users to be notified if a transfer failure occurs.
6. In the URL or Target Path field, type the fully qualified path where the transfer order is to be located.

---

Note	You can specify any directory on your network to which the Agile Application Server can write successfully.
------	---

---

The target path you specify is located on the computer on which the Agile PLM application is installed. It is *not* located on the logged-on user's computer. For example, if you specify C:\temp the transfer file will be written to the directory named temp on the C drive of the computer where the Agile PLM application is installed. The transfer file will *not* be written to the C:\temp directory of your computer.

Solaris: File destinations can be located in the /opt/Agile folder and its subfolders. Users may not have write privileges to other folders. Remember to use slashes (/) instead of backslashes

(\) in the path.

7. Edit the following destination parameters, if necessary:

- Filename Prefix (default is TO)
- File Number (default is 000001)
- Filename Extension

The name of the transfer order file consists of the Filename Prefix parameter followed by the File Number parameter with the extension of the Filename Extension parameter. The File Number parameter increments by one each time a file is transferred.


Check Enable User-defined Filename Extension to activate the Filename Extension field. Specify the filename extension, either .pdx or .axml. All files extracted with this destination have the same file extension. If no extension is specified, the default is based on the format of the extraction.

8. Click Test to verify the destination.
9. Click OK.

## HTTP and HTTPS Destinations


Agile Content Service can publish data to an HTTP server using the POST method. The complete URL entered in the URL or Target Path field gives the location of the server.

### To create an HTTP or HTTPS destination:

1. Under System Settings > Agile Content Service, double-click Destinations. The Destinations window appears.
2. Click . The Create Destination dialog box appears.
3. Type a name and a description of the destination in the Name and Description fields.
4. Select HTTP or HTTPS from the Protocol list.
5. Select either Yes or No from the Response Expected list.

If Yes is selected, the status of any Transfer Order subscribed with this destination is not changed to Complete until a Success response is returned from this destination. If a Success response is not received, no additional Transfer Orders are sent to the destination.

For information about how to configure your Agile PLM system to send responses from a destination, see [Setting and Editing Response Services](#) (on page 408).

6. Click the  button next to the Notification User field to display the list of available users. Select the users to be notified if a transfer failure occurs.
7. Type the URL of the HTTP(S) site where the transfer order is to be sent in the URL or Target Path field.

---

**Note** When entering the URL, you do not need to enter http:// or https://.

---

8. In the Request File Field field, type the name to use for the MIME part (i.e., section) which will contain the file data.  
(If you need information about how the HTTP POST is constructed, contact Agile Support.)
9. Edit the following destination parameters, if necessary:
  - Filename Prefix (default is TO)

- File Number (default is 000001)
- Filename Extension


The name of the transfer order file consists of the Filename Prefix parameter followed by the File Number parameter with the extension of the Filename Extension parameter. The File Number parameter increments by one each time a file is transferred.

Check Enable User-defined Filename Extension to activate the Filename Extension field. Specify the filename extension, either .pdx or .axml. All files extracted with this destination have the same file extension. If no extension is specified, the default is based on the format of the extraction.

---

**Note** You cannot remove these parameters.

---

10. Click the  button next to the Additional Parameters field to display a dialog box. Click the Add button to enter any additional name/value parameter pairs needed when the URL is submitted. Click OK.

These parameters will be included as named parts of the generated MIME message.

11. Click Test to verify the destination.
12. Click OK.

## Sample HTTP Destination

The following example HTTP destination illustrates how the destination settings are used to construct the HTTP POST.

Destination parameter	Setting
Name	HTTP 1
Description	Test HTTP destination
Protocol	HTTP
Notification User	
URL or Target Path Http:	localhost:9522
Request File Field	ACS File Data
Filename Prefix	TO
File Number	00001
Additional Parameters	foo=bar

```
POST / HTTP/1.1
Content-Length: 7414
Content-Type: multipart/form-data; boundary=-----AlQiUnIdLaEvS-f2a7b238
Cache-Control: no-cache
Pragma: no-cache
User-Agent: Java/1.4.2
Host: localhost
Accept: text/html, image/gif, image/jpeg, *; q=.2, */*; q=.2
Connection: keep-alive

-----AlQiUnIdLaEvS-f2a7b238
content-disposition: form-data; name="foo"

bar
-----AlQiUnIdLaEvS-f2a7b238
content-disposition: form-data; name="ACS File Data"; filename="TO00001.AXML"
Content-type: Application/Octet-stream;
Content-Transfer-Encoding: binary

...

-----AlQiUnIdLaEvS-f2a7b238--
```

## JMS Destinations

Agile Content Service can publish data to Java Messaging Service (JMS). The TIBCO Enterprise™ for JMS is the only JMS queue or topic currently supported by Agile Content Service.


Before configuring the JMS destination, you may need to make some modifications to the JMS installation to connect with Agile Content Service. For details, see the Agile PLM installation guide for the appropriate application server.

### To create a JMS destination:

---

Note	You can perform either JMS queue processing or JMS topic processing, depending on the settings of the Connection Factory and Destination Name parameters of the JMS destination. See step 8 and step 10 below.
------	--


---

1. Under System Settings > Agile Content Service, double-click Destinations. The Destinations window appears.
2. Click . The Create Destination dialog box appears.
3. Type a name and a description of the destination in the Name and Description fields.
4. Select JMS from the Protocol list.

5. Select either Yes or No from the Response Expected list.

If Yes is selected, the status of any Transfer Order subscribed with this destination is not changed to Complete until a Success response is returned from this destination. If a Success response is not received, no additional Transfer Orders are sent to the destination.

For information about how to configure your Agile PLM system to send responses from a destination, see [Setting and Editing Response Services](#) (on page 408).

6. Click the  button next to the Notification User field to display the list of available users. Select the users to be notified if a transfer failure occurs.

Note	For the parameters Provider Context Factory, Connection Factory, and Default Provider URL (in step 7, step 8, and step 9 below), the Agile PLM system fills in the fields with server-specific defaults. For example, if your Agile PLM system is running on an Oracle application server, Oracle defaults are used. Verify whether these defaults are correct for your Agile PLM installation and make any needed modifications.
------	---

7. Type the name of the context factory class of the JMS server in the Provider Context Factory field. The name of the context factory class should be in a format similar to the following example (which is the proper value to use for TIBCO):

`com.tibco.tibjms.naming.TibjmsInitialContextFactory`

8. In the Connection Factory field, enter the name of the connection factory that will be obtained from JNDI tree. This is the name under which the JMS connection factory is registered. Whether queue processing or topic processing is used is determined by the type of connection factory named in the Connection Factory field.

For example, the default TIBCO installation provides the following two sample connection factories:

`QueueConnectionFactory` (for queue processing)

`TopicConnectionFactory` (for topic processing)

9. Type the URL, including the address and port, of the host in the Default Provider URL field. The default value that appears in this field should be valid for the application server's built-in JMS provider. Consult your JMS documentation for more information.

For TIBCO, the URL should be in a format similar to the following example:

`tibjmsnaming://JMS_ServerName:7222`


10. Type the name of the queue or topic in the Destination Name field. The name of the queue or topic depends on how you have configured your JMS server. Consult your JMS documentation for information about creating and configuring queues and topics.

For example, TIBCO provides the following sample queue and topic:

`queue.sample`

`topic.sample`

11. Type the username and password needed to access the queue in the User Name and Password fields.

12. Click the  button next to the Additional Parameters field to display a dialog box. Click the Add button to enter any additional name/value parameter pairs. Click OK.

---

**Note** These parameters are passed as JMS header properties when delivering content to the JMS destination.

---

13. Click Test to verify the destination.

14. Click OK.

## JMS Message Properties

Messages sent to JMS destinations contain the following three components:

- message header—used for message identification
- properties—contain application-specific fields
- body—holds the content of the message.

ACS adds the following properties to its JMS messages:

Property Name	Property Value
ClientName	"Agile Content Service"
ServerName	"Agile Product Lifecycle Management"
ServerVersion	The specific Agile server version
AgileRecordLocator	The key used to identify the <b>Where Sent</b> row from the transfer order
TransmissionTimestamp	The timestamp when the JMS message was transmitted displayed as a long number representing the number of milliseconds since January 1, 1970, 00:00:00 GMT.
AgileTransferObjectNumber	The transfer order number
AgileTransferObjectSelectedContentNumbers	A semicolon delimited list of the object name or number from the <b>Selected Content</b> tab. If the object is an item, then the change number is noted in parenthesis. For example, if the <b>Selected Content</b> tab for the transfer order contains change C1 and item P1 at revision A C2, then this property value would be "C1; P1(C2)".
AgileTransferObjectSelectedContentIdentifiers	A semicolon delimited list of the object identifiers from the <b>Selected Content</b> tab. If the object is an item, then the change ID is appended following a colon. For example, if the <b>Selected Content</b> tab for the transfer order contains change C1 with ID 6001 and item P1 with ID 6002 at revision A C2 with ID 6003, then this property value would be "6001;6002;6003".

## Editing Destinations

You can edit all of the parameters of the destination, except Protocol. Any future Transfer Orders

referencing the edited destination use the updated settings.

You cannot edit a destination if it is referenced by an enabled subscriber. You must disable the subscriber before any changes can be made to the destination. See [Enabling and Disabling Subscribers](#) (on page 405) for more information.

**To edit a destination:**

1. Under System Settings > Agile Content Service, double-click Destinations. The Destinations window appears.
2. Double-click the name of the destination you want to edit.
3. Edit the General Information tab of the destination to make changes to the necessary fields.
4. Click Save and Close.


## Resetting Destinations

If delivery to a destination fails, the failure appears on the Where Sent tab of the transfer order and in the Transmission Status column on the Destinations window. The Where Sent tab of the transfer order indicates the transmission status and displays an error message in the Transmission Notes column.

On a destination window, the History tab of the destination displays details indicating which transfer order caused the failure. After you make any necessary changes to the transfer order or the destination to correct the problem, you can reset the destination to attempt delivery again.

Once a destination has failed, no other transfer orders can be sent to that destination until it has been reset. Transfer orders for that destination are queued in the order they were scheduled to be transmitted. The Transmission Notes column indicates that the transfer order is waiting for another destination. Once the destination is reset, the transfer orders are transmitted according to their order in the queue.


**To reset a destination:**

1. Under System Settings > Agile Content Service, double-click Destinations. The Destinations window appears.
2. Select the destination to reset.
3. Click .

## Deleting Destinations

Destinations can be deleted only if they are not currently assigned to a transfer order or subscriber.

**To delete a destination:**

1. Under System Settings > Agile Content Service, double-click Destinations. The Destinations window appears.
2. Select the destination you want to delete.
3. Click .



## Setting and Editing Events

Events determine when content is transferred to a destination. These are handled from the Events node.



Events can be based either on a schedule or on an object's moving to a specified workflow status. For example, if you wanted to query for objects matching a specific definition every night at midnight, you would create a scheduled event. Or if you wanted to watch for all change orders moving to a Released status, you would create a workflow event.

### Scheduled Events

Scheduled events are repeated after a specified period of time has elapsed, or at a specific time hourly, daily, or weekly. When a scheduled event is processed, all Agile PLM objects that meet the definition specified in the subscriber that have not been processed are extracted.

Agile PLM provides an example scheduled event that is set to trigger at midnight on Saturday and Sunday. This event can be used when creating a subscriber if the schedule properties meet your company's needs. (For information about subscribers, see [Setting and Editing Subscribers](#) (on page 403).)

#### To create a scheduled event:

1. Under System Settings > Agile Content Service, double-click Events. The Events window appears.
2. Click . The Create Event dialog box appears.
3. Type a name and a description of the event in the specified fields.
4. Select Scheduled from the Event Type list.
5. Click  in the Frequency field to schedule the event.
6. Review the following schedule properties and change them, if necessary.

The default setting is Every X hours Y Minutes. If you accept this default, you must select a time interval.

Setting	Action
Once A Day	Automatically runs the extraction once a day at the designated start time.
Every X Hours Y Minutes	Specifies the time interval between extractions, calculated from the Starting At time: <ul style="list-style-type: none"> <li>▫ If the previous extraction is not finished, the next extraction follows after the previous extraction is complete.</li> <li>▫ The minimum time is 0 hours, 5 minutes: the maximum time for each field is 11 hours and 59 minutes.</li> </ul>
Starting At	Specifies an absolute time to start checking for subscriber criteria. If the starting time and ending time are the same, the subscriber criteria is checked for 24 hours.
Ending At	Specifies an absolute time to stop checking for subscriber criteria.
Days	Specifies the days to process extractions according to the hourly schedule.

Click OK.

## Workflow Events

Workflow events enable subscribers to publish data based on a status change of an object. When the workflow status of an object changes and a subscriber is configured for that particular change, the data is published. A subscriber cannot act on the first status of a workflow, such as Pending.

Agile PLM provides an example workflow event that is set to trigger when change orders are released. This event can be used when you create a subscriber if the workflow properties meet your company's needs.


---

Note	Only the object controlled by the workflow is extracted. For example, the Example Workflow Event uses the Default Change Orders workflow and the Released status. The triggering event is when any routable object using the Default Change Orders workflow makes a status transition into the Released status. The routable object and its associated objects (for example, affected items) and attachments are extracted and published.
------	---

---

Any changes to an object after Agile Content Service is triggered to process it, but before the extraction process begins, are reflected in the extracted content. For example, if a subscriber is configured to publish an ECO at the Review status, but the ECO is immediately promoted to the Released status, then the extracted status for the ECO may be Released.

### To create a workflow event:

1. Under System Settings > Agile Content Service, double-click Events. The Events window appears.
2. Click . The Create Event dialog box appears.
3. Type a name and a description of the event in the specified fields.
4. Select Workflow from the Event Type list.
5. Select a workflow from the Workflow list.
6. In the Workflow Status field, select a status from the list of available values based on the selected workflow.
7. Click OK.


## Editing Events

You cannot change the event type after the event is created, but you can change the Frequency field in a scheduled event and the type of workflow in a workflow event.

You cannot edit an event if it is referenced by an enabled subscriber. You must disable the subscriber before any changes can be made to the event. See [Enabling and Disabling Subscribers](#) (on page 405) for more information.

### To edit a scheduled event:

1. Under System Settings > Agile Content Service, double-click Events. The Events window appears.
2. Double-click the scheduled event you want to edit.

3. Edit the General Information tab of the event.
4. Make changes to the Name and Description fields, if necessary.
5. Click the  button next to the Frequency field.
6. Make the necessary changes to the schedule.
7. Click OK.
8. Click Save.


#### To edit a workflow event:

1. Under System Settings > Agile Content Service, double-click Events. The Events window appears.
2. Double-click the workflow event you want to edit.
3. Edit the General Information tab of the event.
4. Make changes to the Name and Description fields, if necessary.
5. Select a different workflow from the Workflow list, if necessary.
6. In the Workflow Status field, select a different workflow status, if necessary.
7. Click Save.

## Deleting Events

You can delete an event only if it is not assigned to a Subscriber.

#### To delete an event:

1. Under System Settings > Agile Content Service, double-click Events. The Events window appears.
2. Select the event you want to delete.
3. Click .

## Setting and Editing Filters

Filters define what content is published in the transfer order. These are managed from the Filters node.

---

**Note** Filters that you save in the Agile Content Service node are also available for use in the Agile PLM Export wizard. For more information, see the *Agile PLM Import & Export Guide*.

---

Filters are limited to windows within base classes. If a filter for a specific class makes a tab visible that a subclass does not have visible, the tab is omitted from the extracted data. For example, the Page Three tab of an ECO is not visible, but the filter for the Change Orders class allows you to extract Page Three tabs. When an ECO is extracted using this filter, the data on Page Three is skipped because it is not visible on the subclass.

You can have multiple filters for the same base classes, but with different filter names. Agile Content Service provides default filters for the following classes. (Object classes that are not included in this list are not supported by Agile Content Service.)

- Changes

- Change Orders
- Change Requests
- Deviations
- Manufacturer Orders
- Price Change Orders
- Sites Change Orders
- Stop Ships
- Declarations
  - Homogeneous Materials Declarations
  - IPC 1752-1 Declarations
  - IPC 1752-2 Declarations
  - JGP Declarations
  - Part Declarations
  - Supplier Declarations of Conformance
  - Substance Declarations
- Discussions
- Items
  - Parts
  - Documentation
- Manufacturers
- Manufacturer Parts
- Packages
- Part Groups
- Prices
  - Published Prices
  - Quote Histories
- Product Service Requests
  - Problem Reports
  - Non-Conformance Reports
- Programs
  - Activities
  - Gates
- Quality Change Requests
  - Audits
  - Corrective and Preventive Actions
- Specifications

- Substances
  - Substances
  - Substance Groups
  - Subparts
  - Materials
- Suppliers
- Transfer Orders
  - Content Transfer Orders
- Users
- User Groups



You can use any of the default filters when creating a subscriber or CTO if the properties meet your company's needs, or use them as templates when creating new filters.

---

**Note** A filter for ATO objects is not needed. To extract data about ATO objects to aXML files, specify a role that includes privilege masks that allow a user to view ATO objects. When the selected role allows access to ATO objects, data about the ATO object itself is extracted and included in the aXML file. This information can be used to troubleshoot delivery issues.

---

#### To create a filter:

1. Under System Settings > Agile Content Service, double-click Filters. The Filters window appears.
2. Click . The Create Filter dialog box appears.
3. Type a name and a description of the filter in the specified fields.
4. Select an object class or base class from the Filter Object Type list.
5. Click the  button next to the Viewable Tabs field to display the list of available tabs based on the selected class


---

**Note** The first tab (Title Block, General Information, or Cover Page) is required for every filter and is already selected for each object type.

---

6. Select any additional tabs you want in the filter.
7. Click OK.

Depending on which class you select and the tabs that are viewable in that class, the tab options displayed and available in the lower part of the Create Filter dialog box are updated.

8. Click the  button to display the drop-down list of available tab filter options.
  - a. Select one of the following options from the BOM Options list:

---

**Note** This field is available only for classes with a BOM tab selected in the Viewable Tabs field for items or item-associated classes.

---

- Tab Only: extracts only the displayed table values.
  - Tab and Items: you provide a numeric value to indicate the number of levels to be extracted from the BOM, or you can check a box to indicate all levels.
- b. Select one of the following options from the Attachments Options list:

- 
- Note This field is available only for classes with an Attachments tab selected in the Viewable Tabs field.
- 
- Tab Only: only the Attachment information is packaged with the extracted data.
  - Tab and Files: all attachments are packaged with the extracted data.
- c. Select one of the following options from the Affected Items Options list:
- 
- Note This field is available only for classes with an Affected Items tab selected in the Viewable Tabs field for changes or change-associated classes.
- 
- Tab Only: only the Affected Items information is packaged with the extracted data (includes redline BOM and AML redline data).
  - Tab and Items: all items are packaged with the extracted data.
- d. Select one of the following options from the AML Options list:
- 
- Note This field is available only for classes with a Manufacturers tab selected in the Viewable Tabs field for items or item-associated classes.
- 
- Tab Only: only the manufacturer information is packaged with the extracted data.
  - Tab and Manufacturer Parts: all AML tab and manufacturer parts information is packaged with the extracted data.
- e. Select one of the following options from the General Info Options list:
- 
- Note This field is available only for the Manufacturer Part class.
- 
- Tab Only: only the manufacturer information is packaged with the extracted data.
  - Tab and Manufacturer: all manufacturers are packaged with the extracted data.
- f. Select one of the following options from the Affected Prices Options list:
- 
- Note This field is available only for the Prices class or price-associated classes.
- 
- Tab Only: only the price information is packaged with the extracted data.
  - Tab and Prices: all prices are packaged with the extracted data.
9. Click OK.

## Editing Filters

The contents of a filter can be changed if the filter is not assigned to a transfer order or not referenced by an enabled subscriber.

If the filter is assigned to a transfer order, it can be edited when the transfer order is completed. If the filter is referenced by an enabled subscriber, you must disable the subscriber to edit the filter. See [Enabling and Disabling Subscribers](#) (on page 405) for more information.

### To edit a filter:

1. Under System Settings > Agile Content Service, double-click Filters. The Filters window appears.
2. Double-click the name of the filter you want to edit.
3. Edit the Name and Description field on the General Information tab.
4. Make changes to other filter details on the Filter tab.

- 
- Note** If you selected the Affected Items tab when you created your filter, you can choose to send only the BOM and AML redline changes from the Redline changes only drop-down list on the Filter tab.
- Note** If you selected the Attachments tab along with the Tab and Files attachment option when you created your filter, you can choose files of only specific types to be included during export by entering a comma-separated list of file extensions in the Include File Extensions field.
- 

5. Click Save.


When you edit a filter, if the attachment option is Tab and Files, you can set the Include File Extensions field, which lets you indicate the file extensions that should be included in the extract. If an extension is not specified, then all extensions are included; if an extension is specified, then only files with the indicated extension(s) are included.

For example, if you specify .doc as the extension (note that the period isn't required), and a part that you are extracting has both a .doc and a .gif file attached, only the .doc file will be included in the extract. This option is not available when a filter is created, just when a filter is being edited.

## Deleting Filters

Filters can be deleted only if they are not currently assigned to an existing transfer order or subscriber.

### To delete a filter:


1. Under System Settings > Agile Content Service, double-click Filters. The Filters window appears.
2. Select the filter you want to delete.
3. Click .

## Setting and Editing Subscribers

After you configure events, filters, destinations, roles, and criteria, you can create subscribers to publish data automatically when all of the subscriber requirements are met. A subscriber is associated with only one event and criteria, but can contain multiple destinations, filters, and roles. These are managed from the Subscribers node.

Agile PLM provides an example scheduled subscriber and an example workflow subscriber. The example subscribers incorporate the other Agile Content Service example settings as a template you can use when creating a subscriber to match your company's requirements.

### To create a subscriber:

1. Under System Settings > Agile Content Service, double-click Subscribers. The Subscribers window appears.
2. Click . The Create Subscriber dialog box appears.
3. Type a name and a description of the subscriber in the Name and Description fields.
4. Select the subclass from the Subclass list.

This is the ATO subclass Agile Content Service generates when an event occurs that matches

all the properties of this subscriber.

5. Select the Default ATOs workflow from the *Workflow list*.

For more information about workflows, see *Getting Started with Agile PLM*.

6. Select ATO Number from the AutoNumber list to select an autonumber source for the selected subclass.



The default autonumber source is ATO Number. For more information about autonumbers, see Chapter 5, "Autonumbers." Because ATOs are processed automatically, an autonumber source is required.

7. Select the object that should be processed by selecting an available criteria from the Criteria list. For more information about criteria and how to create a new criteria, see Chapter 6, "Criteria."

---

**Note** If you are creating a scheduled event subscriber, be sure to define your criteria as specifically as possible, to avoid receiving unwanted data in your transfer order. For example, "All Change Orders released after 8/18/2003" returns a specific group of change orders, unlike "All Change Orders" which returns every change order in your system.

---

8. Select the event specific to this subscriber from the Event list.
9. Click OK. The window of the new subscriber appears.
10. Select Yes or No from the Include Modified Objects drop-down list. (Scheduled Subscribers only)  
If yes, new and modified objects since the last processing of the subscriber are published. If no, only objects that have been created since the initial processing of the subscriber and meet the Criteria specified by the subscriber are published.
11. Click the Subscriber Details tab to add destinations, filters, and roles, and to select the transfer file format.
12. Click  to display the Subscriber Detail dialog box.
13. Click  to select values for the Destinations, Filters, and Roles fields from the lists of options available for this subscriber. Roles are applied to further fine-tune or define the data extraction. For more information about roles, see Chapter 9, "Roles,".
14. Select the file type of the transfer file, PDX or aXML, from the Data Format drop-down list.

Product Definition Exchange (PDX) packages contain product content, such as item or change details, plus BOM data, manufacturer information, drawings, and other attached files. PDX packages are based on an industry-standard format for encoding structured data in an XML format. This standard provides an application-independent way to describe product content. PDX does not support all the object types supported by Agile Content Service.

The Agile Extensible Markup Language (aXML) format is an XML representation of Agile PLM's business schema. aXML contains all product content managed in Agile PLM including items, change details, manufacturer information, problem reports, cost, drawings, and other files. aXML does support all object types supported by Agile Content Service. An aXML file is a ZIP file, which includes the XML representation of the Agile PLM content and the associated attachments.

15. Select the language to use from the Language drop-down list.

The language setting does not affect or translate data in the transfer file; it does determine which language is used to label object attributes, for example, field and column names.




16. Select a site to use from the Site drop-down list.

The site setting further defines the data extraction. For example, if you select the Hong Kong site, only BOM information visible for the Hong Kong site will be extracted.

17. Click Save.

The destination detail is displayed in a row on the Subscriber Details tab.

18. For each detail row you want to add, click  to display the Subscriber Detail dialog box. Follow the instructions in step 13 through step 17 above.

## Validating Subscribers

After you have created your subscriber, you should review the settings to ensure a successful transfer. Review at least the following settings:

- Destination — Make sure this setting points to the correct location and the connection has been verified. Make sure that the appropriate personnel are designated for notification.
- Event — If it is a scheduled event, make sure the proper schedule is set. If it is a workflow event, make sure it is set to the proper workflow and status.
- Filter — Make sure there is a filter for each object you want to transfer.
- Roles — Make sure the correct fields are being extracted.



If the criteria, events, and filters are not well defined for a subscriber, Agile Content Service may not trigger the ATO or you may not receive the expected results in the ATO.

## Enabling and Disabling Subscribers

When a subscriber is created, it is disabled by default. This allows all fields of the subscriber to be changed before it is used. You must enable a subscriber before it is recognized by the Agile Content Service.

When a subscriber is enabled, you cannot edit its subscriber details and you cannot edit any of its referenced destinations, events, or filters. If any of these settings require changes, you must disable the subscriber.

### To enable or disable a Subscriber:

1. Under System Settings > Agile Content Service, double-click Subscribers. The Subscribers window appears.
2. Select the subscriber you want to enable or disable.
3. Click Enable  or Disable .


## Deleting Subscribers

Subscribers can be deleted only if they are disabled and not currently assigned to any transfer order objects.

### To delete a subscriber:

1. Under System Settings > Agile Content Service, double-click Subscribers. The Subscribers window

appears.

2. Select the subscriber you want to delete.
3. Click .

## Setting and Editing Package Services

---

**Note** For Agile-to-Agile publishing, you must create package services on the target Agile PLM system; package services are not needed on the source Agile PLM system. For a summary of the Agile-to-Agile communication configuration tasks required on both the source Agile PLM system and the target Agile PLM system, see [Settings Required for Agile-To-Agile Publishing](#) (on page 410).

---

Package services are used to define what Package subclass, autonumber source, and workflow are used when content is received from a remote system through an Agile destination. When you enable Agile-to-Agile communication, you must configure the target Agile PLM system to properly create the package object using the correct autonumber source and route it to the correct program manager. You can configure multiple package services on a target Agile PLM system if you wish to treat data from each source in a specific manner. However, it is not necessary to create a package service for each source; several sources can use the same package service.

The following modifications or settings are also required for you to successfully define and use package services:

- The following package object fields must be visible on the Cover Page tab of the Package object class:
  - Response Expected
  - Source GUID
  - XFER Order Locator
- Create or identify a user who has a role that provides the ability to create, modify, and delete package objects and the ability to change the status of the package object to the required workflow status. You must provide this user's username and password to the administrator of the source Agile PLM system; it is needed to define a destination on the source Agile PLM system (see [Setting and Editing Destinations](#) (on page 387)). If the package service moves the package object to the Submit status, then the privilege masks in the default Partner role are sufficient if you modify the Modify Pending Package privilege mask by adding the following fields to the Selected list in the Applied To property:
  - Packages.Cover Page.Program Manager
  - Packages.Cover Page.Response Expected
  - Packages.Cover Page.Source GUID
  - Packages.Cover Page.XFER Order Locator


If you do not want to modify this privilege mask, use the Partner role and privilege masks as a guide to create the necessary role.

---

**Note** Verify that the package service will work successfully with the package object configuration, package workflow settings, and login user role. For information, see [Verifying Agile-to-Agile Publishing](#) (on page 413).

---

**To create a package service:**

1. Under System Settings > Agile Content Service, double-click Package Services. The Package Services window appears.
2. Click . The Create Package Service dialog box appears.
3. Type a name and a description of the subscriber in the Name and Description fields.
4. Select Package from the Subclass list.

---

**Note** If you have defined a specific package subclass for use in package services, select that subclass from the list.

---

5. Select Package Number as the autonumber from the Number Source list.
6. Select Default Packages from the Workflow list.

---

**Note** If you have defined a specific package workflow for use in package services, select that workflow from the list.

---

7. Select a workflow status from the Workflow Status drop-down list.

Agile recommends using the Submitted workflow status to ensure that the receiving program manager is notified about the package.

When an Agile-to-Agile transfer occurs, the package object is created on the target Agile PLM system and the package workflow status is set to the status specified in the Workflow Status field of the package service.

---

**Note** When creating a package service with a target package workflow status other than Pending, make sure the target workflow allows changes directly from the Pending status to the status to be used (determined by the Manual Valid Next Status property for the Pending status if the status to be used is not the next status after Pending in the workflow). Also make sure that the logged-in user specified in the target Agile PLM system destination has the privilege to make the change (Change Status (CS) privileges for packages) in the target Agile PLM system.

---

8. Click OK.

## Editing Package Services

You can edit all of the parameters of the package service except the Subclass field.

**To edit a package service:**

1. Under System Settings > Agile Content Service, double-click Package Services. The Package Services window appears.
2. Double-click the package service you want to edit.
3. Edit the General Information tab of the service to make the necessary changes.
4. Click Save and Close.

**Deleting Package Services**

You can delete a package service at any time. Because a package service does not restrict or define other ACS settings and does not have relationships with database objects, your ability to


delete it is not restricted.

---

Note	If a source Agile PLM system attempts to deliver content to a deleted package service, the content transfer will fail.
------	--

---

**To delete a package service:**

1. Under System Settings > Agile Content Service, double-click Package Services. The Package Services window appears.
2. Select the package service you want to delete.
3. Click .

## Setting and Editing Response Services

A remote target Agile PLM system, HTTP/S destination, or JMS destination can relay an accept or reject message back to the source Agile PLM system after the expected data is received. These messages are called responses. Responses are recorded in the Response column of the Where Sent tab (on transfer orders in the source Agile PLM system) of the transfer order corresponding to the responding destination. An Agile PLM target system makes use of a response service and pre-built process extensions to respond to the source Agile PLM system. Process extensions are used to determine what package workflow state should initiate a response, and the response service is used to define how and where to respond.

To define a response service, you must enable the process extensions and define their Initiate From property from the Process Extension node and you must define, from the Workflows node, which package workflow status initiates a response. See [Process Extensions](#) (on page 94). Where the response is sent is managed from the Response Services node.

---


Note	Package Services and Response Services are defined on an Agile PLM system that receives Agile-to-Agile data. (See <a href="#">Settings Required for Agile-To-Agile Publishing</a> (on page 410).)
------	---

---

The Global Unique ID (GUID) attribute in a response service definition is a non-editable text field that uniquely defines the source Agile PLM server. It is used to determine how to respond to the package sender. The target system looks up the GUID and locates the corresponding response service. That response service has all the information needed to contact the package sender, such as username, password, protocol, and host.

When you create a new response service, the GUID from the source Agile PLM system is retrieved automatically. After the values for server, port, protocol, and context are set, the source Agile PLM system is contacted. If the contact is successful, the GUID is retrieved and the response service's GUID property is set automatically.

**To create a response service:**

1. Under System Settings > Agile Content Service, double-click Response Services. The Response Services window appears.
2. Click . The Create Response Service dialog box appears.
3. Type a name and a description of the destination in the Name and Description fields.

4. Select HTTP or HTTPS from the Server URL drop-down list.
5. Type the URL and port of the target Agile PLM application server in the host and port fields, respectively. Type the virtual path name in the virtual path field, which is the last field.

---

**Note** The virtual path is determined when an Agile PLM system is installed. For example, if the URL used to log in to the Web Client on the target Agile PLM application server is:

---

<http://www.clapton.com/Agile/PLMServlet>

6. Enter the URL information as shown above, where [www.clapton.com](http://www.clapton.com) is the host name, and Agile is the virtual path name. The field following the colon (:) is reserved for a port number. 80 is usually used for HTTP, and 443 is usually used for HTTPS. If a port other than 80 or 443 is being used, the port will appear in the URL used to log in to the Agile Web Client. Omit PLMServlet, which is the application name. Contact the administrator of the target Agile PLM application server if you have questions about the correct URL to use.
7. Type the username and password of the source Agile PLM application server in the Username and Password fields.
8. Click Retrieve GUID to verify the destination.  
If the destination is verified, the GUID field is completed automatically.
9. Click OK.

## Editing Response Services

You can edit all of the parameters of the response service.

### To edit a response service:

1. Under System Settings > Agile Content Service, double-click Response Services. The Response Services window appears.
2. Double-click the response service you want to edit.
3. Edit the General Information tab make the necessary changes.

---

**Note** If you change the Server URL, Username, or Password field, click Retrieve Response Service to automatically verify and update the GUID field.

---

4. Click Save and Close.

## Deleting Response Services

You can delete a response service at any time. Because a response service is neither enabled nor disabled, your ability to delete it is not restricted.

---

**Note** If you delete a response service, your target Agile PLM system will no longer be able to respond to the referenced source Agile PLM system.

---

### To delete a response:

1. Under System Settings > Agile Content Service, double-click Response Services. The Response Services window appears.
2. Select the response you want to delete.

3. Click .

# Responses and Process Extensions


The reject and accept responses are generated by process extensions. Agile PLM provides two process extensions that you can use to send an accept or reject response to the source Agile PLM system. To use the Agile-supplied process extensions successfully you must do the following:

- From the Classes node, on the Package base class Process Extensions tab, you must assign the accept and reject process extensions to list them on this tab.
- From the Process Extensions node, you must enable the accept and reject process extensions.
- From the Process Extensions node, you must open the two process extensions and modify the Initiate From field on the process extension General Information tab. Select either Workflow State (to initiate the process extension upon entering a specific workflow status) or Actions Menu (to manually initiate the process extension from the Actions menu. You can select both, if they meet your needs. (The Tools Menu selection is not appropriate for transfer responses.)
- From the Workflows node, you must modify the workflow for the Package subclass specified in the package service.

[Process Extensions](#) (on page 94) explains in detail how to select and enable process extensions and how to modify the appropriate workflow.

# Settings Required for Agile-To-Agile Publishing


To successfully publish content data from a source Agile PLM system to another target Agile PLM system, the appropriate Agile Content Service settings and process extension settings must be defined. The same settings are *not* required for both the source and target system. The following two diagrams and tables summarize the settings required when the source Agile PLM system does not request a response and the settings required when the source Agile PLM system does request a response.

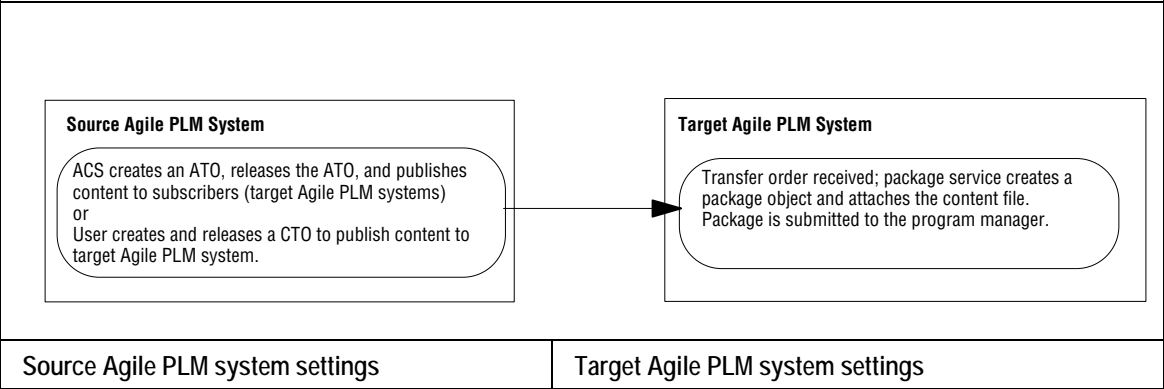

Define the required Agile destinations. (See <a href="#">Setting and Editing Destinations</a> (on page 387).)	Define the package service, which specifies what Package subclass, autonumber source, workflow, and workflow status (typically Submitted) to use when receiving content in an Agile-to-Agile transfer. (See <a href="#">Setting and Editing Package Services</a> (on page 406).)
Define the required event. (See <a href="#">Setting and Editing Events</a> (on page 397).)	
Define the required criteria or use Agile-supplied criteria. (See <a href="#">Criteria</a> (on page 107).)	
Define the required filters or use Agile-supplied filters. (See <a href="#">Setting and Editing Filters</a> (on page 399).)	
Define the required roles or use Agile-supplied roles. (See <a href="#">Roles</a> (on page 173).)	
Define the subscriber, specifying the event, criteria, destinations, roles, and filters you have previously defined. (See <a href="#">Setting and Editing Subscribers</a> (on page 403).)	

When the source Agile PLM system requests a response, the target Agile PLM system must also have response services defined, which also requires settings for process extensions and package object workflows. See the following diagram and table.

For details about the required settings, refer to the following table and the sections and chapters listed below.

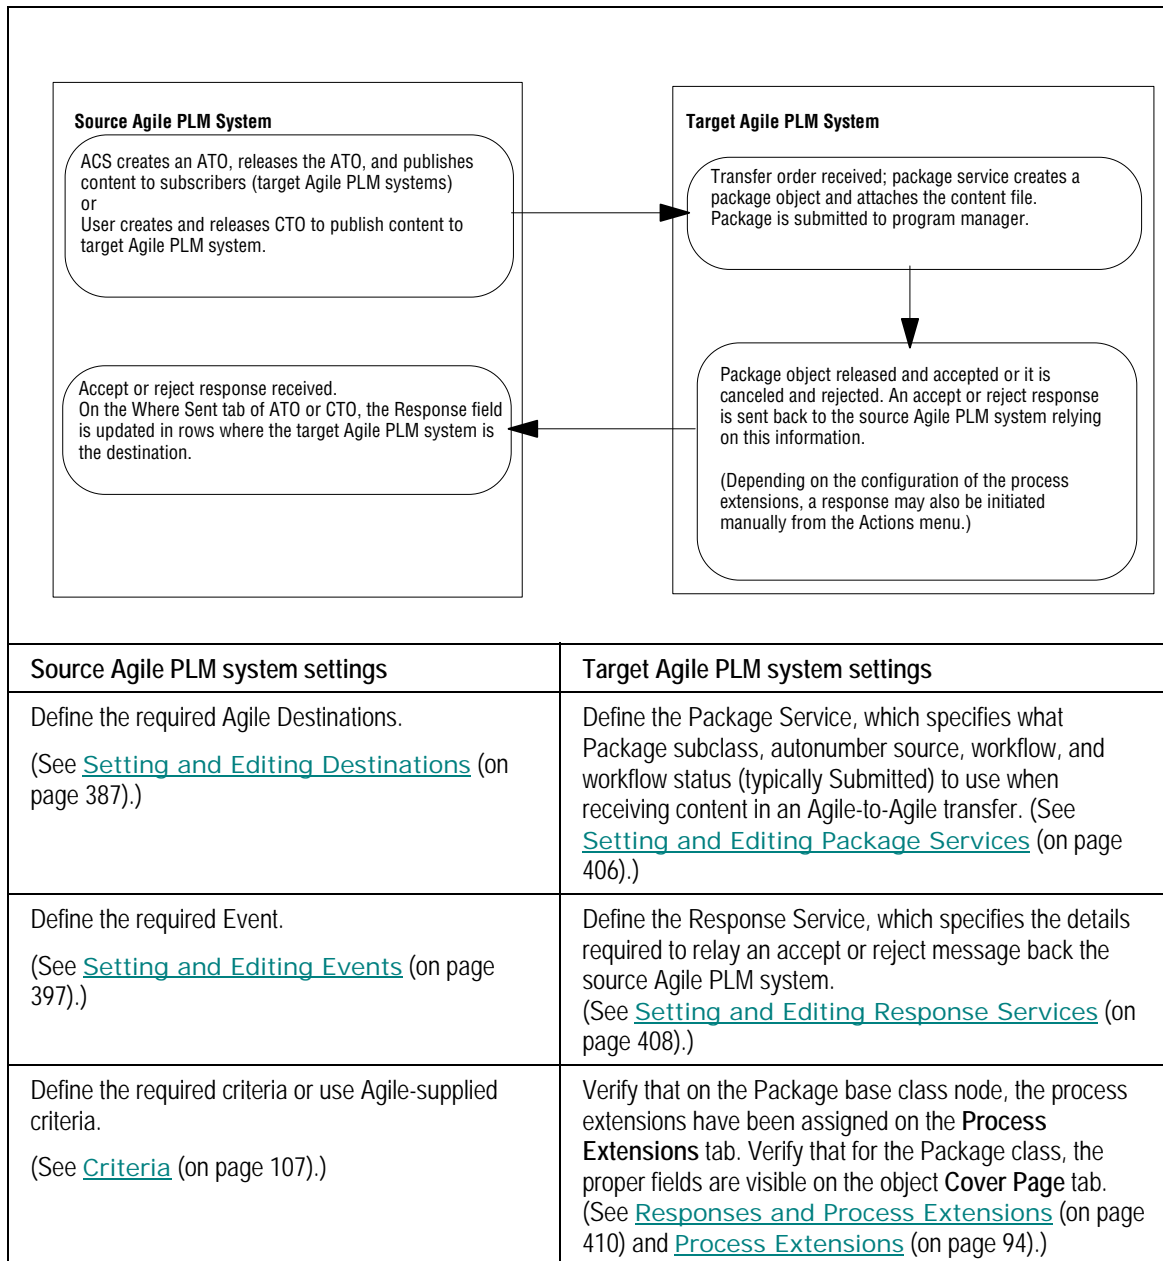



<p>Define the required filters or use Agile-supplied filters.</p> <p>(See <a href="#">Setting and Editing Filters</a> (on page 399).)</p>	<p>Verify that the Accept Package Response and Reject Package Response process extensions are properly configured:</p> <ul style="list-style-type: none"> <li>▫ The process extensions must be enabled.</li> <li>▫ To automatically initiate the process extension, Workflow State must be included in the process extension <b>Initiate From</b> field.</li> <li>▫ To manually initiate the process extension, Actions Menu must be included in the process extension <b>Initiate From</b> field.</li> </ul> <p>(See <a href="#">Process Extensions</a> (on page 94).)</p>
<p>Define the required roles or use Agile-supplied roles.</p> <p>(See <a href="#">Roles</a> (on page 173).)</p>	
<p>Define the Subscriber, specifying the event, criteria, destinations, roles, and filters you have previously defined. (See <a href="#">Setting and Editing Subscribers</a> (on page 403).)</p>	<p>Modify the package workflow status criteria to specify the statuses at which an accept and reject response will be initiated, typically the Released and Canceled statuses. (See <a href="#">Process Extensions</a> (on page 94).)</p>

## Verifying Agile-to-Agile Publishing

Before you attempt an Agile-to-Agile transfer, you can perform the following simple test which verifies that the login user on the target Agile PLM system can perform the actions specified in the package service. This test verifies that the package object and workflow are configured correctly, and that the login user has the necessary privileges. Perform the steps in the order given.

### To verify the package service, package object, package workflow and login user settings:

1. Log in to the target Agile PLM system using the username and password specified in the destination (on the source Agile PLM system) for this target Agile PLM system. (See [Setting and Editing Destinations](#) (on page 387).)

Note	If a user on the source Agile PLM system (for example, the administrator of the source Agile PLM system) logs in to the target Agile PLM system and performs this test, you will also verify that the source Agile PLM system can log in automatically from outside the target Agile PLM system firewall. However, a user on the target Agile PLM system can also perform this test and verify that the package object and workflow configuration and login user privileges are correct.
------	--

2. Create a package object. Use the package subclass specified in the target Agile PLM system package service.
3. Delete the package object. This verifies that the user has the necessary privilege to delete the package object.

4. Create another package object. Use the package subclass specified in the target Agile PLM system package service.
5. On the Cover Page tab of the package object, verify that the following fields are available for modifying. You should be able to enter text or make a selection from a drop-down list or dialog box.
  - Originator (Select a different user.)
  - Date Originated (Select a different date.)
  - Description (Enter text.)
  - Workflow (Select the workflow specified in the target Agile PLM system package service.)
  - Modify the following three fields. In an Agile-to-Agile content transfer, these fields are filled in automatically; however, for the content transfer to be successful, the fields must be both visible on the Cover Page tab and available for modifying. If you can modify these fields manually, you have verified that the login user has the necessary privilege masks for these fields, and, therefore, the fields can be successfully filled in automatically during an Agile-to-Agile transfer.
  - Response Expected (Select a setting from the drop-down list.)
  - Source GUID (Enter text.)
  - XFER Order Locator (Enter text.)
6. Click Save.
7. Click the Attachments tab to display it.
8. Verify that the login user can attach a file to the package object.

Choose Add | Files and add a file to the Attachments tab. Use any file type; a simple text file is sufficient.
9. Click the Workflow tab to display it.
10. Verify that the login user can change the workflow status of the package object to the workflow status specified in the package service.

On the workflow flowchart, click the workflow status specified in the package service. (See [Setting and Editing Package Services](#) (on page 406).)

For example, if the package service specifies the Review status, you should be able to click that status box in the flowchart and change the workflow status of the package object. If the Review status is not available and clickable, verify that the workflow you are using allows a change in status from the Pending status directly to the Review status. This is determined by the Manual Valid Next Status property of the Pending status. Also verify that the role of the login user has the appropriate privilege to change the status from Pending to Review. Refer to the following table for more details.

Note	The Default Packages workflow and the Agile-supplied Partner role (modified as explained in <a href="#">Setting and Editing Package Services</a> (on page 406)) allow the login user to move a package from the Pending status directly to the Submit status. If you are using the Default Packages workflow and the Partner role, and, in the package service, you selected a workflow status other than Submit, you must make the appropriate modifications to the package workflow and login user role.
------	--

If you can perform the preceding steps successfully, the login user can create a package object,

modify specific fields, attach a file, and move the package object to the specified workflow status. These are the same actions specified in the package service.

Problem	Possible cause	Solution
In the source Agile PLM system, on the <b>Where Sent</b> tab of the ATO, the error "Insufficient Privilege" appears.	The target Agile PLM system user specified as the login user in the Agile PLM source system destination does not have the necessary privileges to either create a package object in the target system or does not have the necessary privileges to move the package object to the specified workflow status.	In the target Agile PLM system, modify the role of the login user to one that has the necessary privileges. See <a href="#">Setting and Editing Response Services</a> (on page 408).
In the target Agile PLM system, the package object is created, but does not move to the correct workflow status; the error "Insufficient Privilege" appears.	If the login user on the target Agile PLM system has the necessary privileges (see row above), then the package workflow on the target system may not allow the package to move directly to the workflow status specified in the package service.	If the login user has the necessary change status privileges (see row above), verify that the package workflow (on the target system) you are using allows a status change directly from the Pending type status to the status specified in the package service. This is determined in the workflow by the Manual Valid Next Status property for the Pending status. Refer to the note in step 7 under "Setting and Editing Response Services" for more details.
Duplicate package objects appear on the target Agile PLM system.	If the package object on the target system cannot be moved to the workflow status specified in the package service (for any reason, including, but not limited to, insufficient login user privileges), the target Agile PLM system attempts to delete the package object. If the login user does not have the appropriate Delete privilege mask, this may fail, and thus it is possible to have duplicate package objects.	In the target Agile PLM system, verify that the login user has a role that includes a Delete privilege mask for package objects. If not, modify the role or assign an appropriate role. Also verify that the login user has a role with the necessary privileges to move the package object to the workflow status specified in the package service. See <a href="#">Setting and Editing Response Services</a> (on page 408).

## Security Considerations

Roles and privileges play an important part in limiting and defining the Agile PLM content that is extracted by a transfer order.

### Content Transfer Order Originator Field

The Originator field on the Cover Page tab of a CTO is an important component of the security safeguards for CTOs. The roles and site assignments of the user who is specified in the Originator field are used to further define the data that is extracted. In ATOs, the roles used to extract data are defined in the subscriber. In contrast, for CTOs, the roles used to extract data are defined by the

roles of the user specified in the Originator field.

For example, if the originator user does not have the necessary privileges to view items assigned to the Libra product line, when BOM items are extracted, any Libra product line items will not be extracted.

In a similar manner, if the originator user is not assigned to the Hong Kong site, Hong Kong BOM data will not be extracted, even if Hong Kong is selected in the Site column on the Destinations tab.

By default, when a CTO is created, the Originator field is populated with the name of the creator of the CTO. Using the Agile-supplied Content Manager role, the content manager user is able to select a different user in the Originator field and also release the CTO, thus publishing product content that the content manager cannot access. Before assigning the Content Manager role to users, determine whether this ability meets your company's needs.

If you do not want the originator of a CTO to publish data he cannot access, one way is to modify the existing Content Manager role, or to create a similar role that includes a Change Status privilege mask for CTOs with a criteria that forces the user who changes the status of a CTO to be the user whose name is in the Originator field of the CTO (Cover Page.Originator Equal to \$USER). If you create and assign a role with this restricted privilege mask, the user listed in the Originator field of the CTO (by default, the creator of the CTO) must also be the user who changes the status and releases the CTO.

If you create additional roles and privilege masks for CTO objects, keep this powerful security feature in mind. If you allow a user to both modify the Originator field and release the CTO, this makes it possible for the creator of a CTO to specify a user with more powerful roles than the creator user has, which may violate your company's security objectives.

## Using Agile PLM Roles to Define Destination-Specific Content in Automated Transfer Orders

When you define a subscriber, the roles you specify for each destination on the Subscriber Details tab (in conjunction with the specified Filters and Subscriber Sites settings for each destination) determine exactly what product content is extracted. The flexibility of Agile PLM roles, privilege masks, and criteria allows you to create, if needed, roles for each destination. Agile PLM Discovery and Read privilege masks determine which objects can be extracted. The Applied To property of these privilege masks determines which object tabs and fields can be extracted. You can specify individual fields in the Applied To property of the privilege mask, thus defining, field by field, the specific product content that can be extracted.

For more information about roles, privilege masks, and criteria see Chapter 9, "Roles," Chapter 10, "Privileges and Privilege Masks," and Chapter 6, "Criteria."

# Configuring Product Governance & Compliance

**This chapter includes the following:**

---

▪ Configuring Agile PG&C .....	417
▪ Checklists for Configuring the PG&C Solution.....	420
▪ Declarations Classes in Brief.....	422
▪ Integrated Components for PG&C.....	423
▪ Administrator Nodes for PG&C-specific Settings.....	427
▪ Configuring the PG&C Classes .....	433
▪ Defining PG&C Users – Roles and Privileges in PG&C .....	440
▪ Using the Declarations Workflow in RFIs .....	442


This chapter contains information about configuring the Product Governance & Compliance solution.

## Configuring Agile PG&C

This chapter provides an overview of settings in Administrator that are required to configure PG&C. You may find the *PG&C User Guide* useful in configuring PG&C for end-users: it describes the PG&C business objects, compositions and the Bill Of Substances (BOS), how the configured PG&C solution works (for example, the automated compliance rollups), and other important components and concepts that inform the Agile PG&C compliance process.

This chapter assumes that PG&C is being configured for the first time; the checklists and this chapter do not attempt to document adjustments that must be made to an upgraded PLM installation. See the ReadMe for this release and your Oracle Consulting – Agile Practice consultant.

For upgrading Agile PLM customers, Appendix A, “Changes to PG&C Objects, Roles, and Privileges in an Upgraded Database,” is indispensable. It tells you new attributes for each release of PG&C.

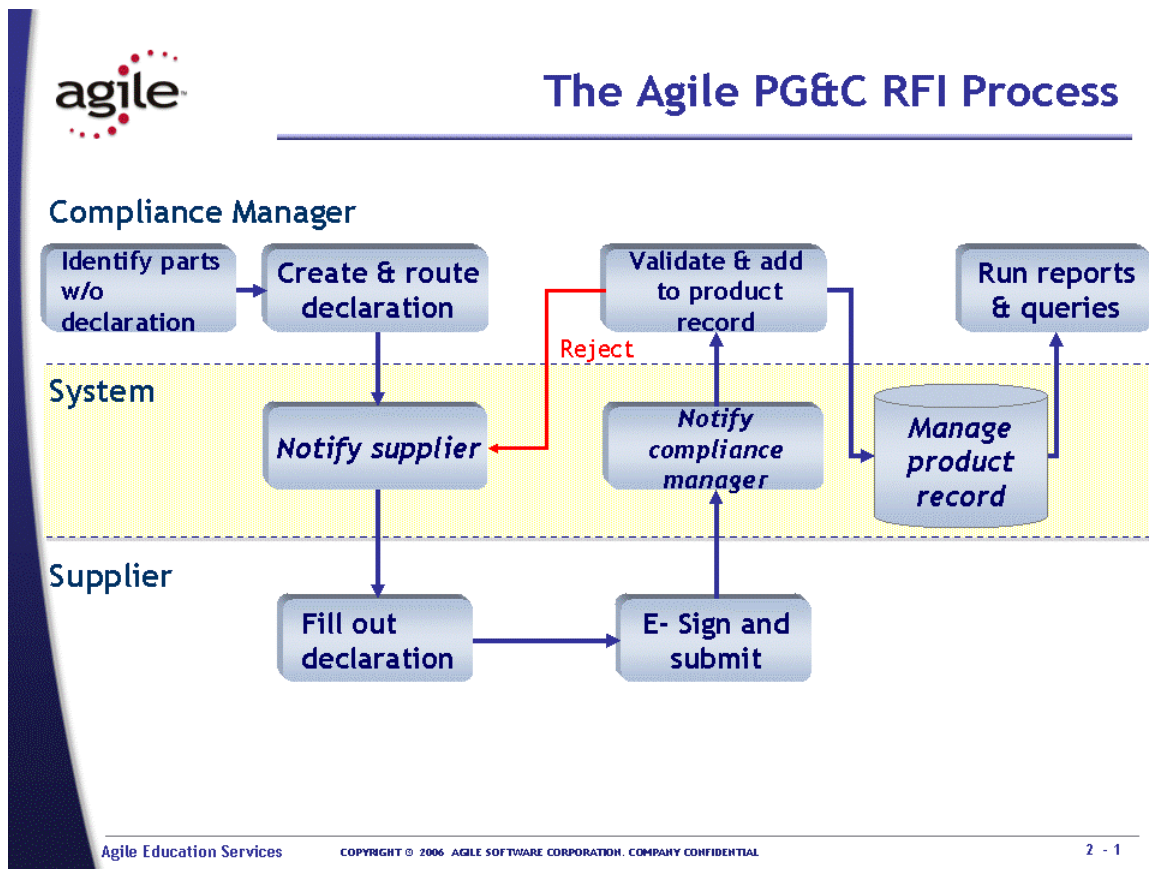

## Added to Agile PG&C Rel. 9.2.2.4

Features added to Agile PG&C in PLM Rel. 9.2.2.4 include:

- the system's ability to "re-use" compositions based on specifications and per supplier
- the system's ability to re-use exemptions in compliance rollups
- the user's ability to exclude a composition from compliance rollups when its compliance is not needed
- "Calculated Compliance" can be set externally – this is mentioned in several places in *PG&C User Guide* (for example, Affected Parts Tabs); technical details are available in *Agile SDK Developer's Guide*
- a new icon for Pending Declarations
- BI Publisher has been incorporated into Agile PLM for defining report layouts and output formats – see [Report Template](#) (on page 26).

The first five bulleted items above are documented in *PG&C User Guide* and you can find precise locations in that volume's "Added to PG&C in Rel. 9.2.2.4."

## Added to Agile PG&C Rel. 9.2.2.2

Features added to Agile PG&C in PLM Rel. 9.2.2.2 include:

- Substance editing – lets you add, remove, and edit substances directly in (unpublished) declarations; see Substance Editing
- Compliance state "Not Applicable" – this labels a part/PG so it is not evaluated by the system for compliance; see Compliance States
- Activate compositions that have been archived – the user can decide that an archived, Inactive composition should be reinstated as Active; see [Inactivating and Reactivating Compositions](#) (on page 435)
- Support of IPC version 1.1 – see IPC Formats Supported in this Release

## Added to PG&C in PLM Release 9.2.2.1

Features added to Agile PG&C in PLM Rel. 9.2.2.1 include:

- Specification Mapping – permits the user to see Result Compliance on a spec-by-spec basis on the PageTwo of Parts, Documents, and Manufacturer Parts. The node in Administrator (System Settings > PG&C folder) is documented in this chapter. The feature is also described for the end-user in *PG&C User Guide*, "Parts and Part Groups."
- Bulk Specification Removal – not controlled by Admin setting or node. For more information, see *PG&C User Guide*, "Parts and Part Groups" chapter.

## Added to PG&C in PLM Release 9.2.2

Features added to Agile PG&C in PLM Rel. 9.2.2 include:

- Substance Aliasing for Substances and Substance Groups classes;
- Support for Intentionally Added flag on Substances data on Specifications, Declarations, Items, Manufacturer Parts, and Part Groups;
- Full Material Disclosure – in Substance and Homogeneous Material Compositions – is supported by:
  - Mass Disclosure types are Fully Disclosed, Partially Disclosed, and Undisclosed;
  - Unreported (System) substance in Partially Disclosed compositions;
  - Administrator: Compliance Rollup setting called Mass Tolerance Percentage;
- Import Compositions, Bill of Substances, Specifications, and Suppliers to Items based on Change Number;
- Import of "local substances" into Declaration;
- Support of IPC version 1.02.

A complete list of new attributes in Rel. 9.2.2 is found in [Changes to PG&C Objects, Roles, and Privileges in an Upgraded Database](#) (on page 451).



## Checklists for Configuring the PG&C Solution

Use the following checklists to configure Agile PLM server settings for PG&C. Again, the PG&C User Guide can be quite useful to "fill in" aspects of the configuration as it will be experienced by the end-user.

### PG&C "infrastructure"

- Configure Administrator Privilege — Make sure you can see UOM node and the Product Governance & Compliance node folder, both of which are under System Settings. If there are missing elements, configure the Administrator privilege. For more information, see [Administrator Privilege and the AppliedTo Capability](#) (on page 201).
- Be aware of the log.xml file (established at Install time) and the added ComplianceRollup.log — It is likely that you do not need to configure this, as it should be enabled out-of-the-box; however, the location changed for PLM 9.2.2: see [ComplianceRollup.log in Log.xml File](#) (on page 423).
- Ensure that the Microsoft Excel-based Client has been properly installed — Your company may want to use the integrated Microsoft Excel-based Client, which facilitates the process of your suppliers completing certain declarations. See [Ensure that the Microsoft Excel-based Client has been properly Installed](#) (on page 424).
- Configure process extensions — There are eight out-of-box process extensions that apply to PG&C. Assign the PG&C extensions to the proper class, as described in [Integrated Components for PG&C](#) (on page 423); also see [Process Extensions](#) (on page 94).
- Change the names of the compliance states, as needed — You can change the names of the five compliance states to fit the requirements of your company. See [Renaming Compliance States](#) (on page 430).

### PG&C-specific Nodes

- Configure the PG&C nodes in Administrator — These are:
  - System Settings > UOM node – see [Setting Unit Of Measure](#) (on page 427)
  - System Settings > Product Governance & Compliance node folder, which in turn includes:
    - Signoff Message node – see [Setting Your Signoff Message](#) (on page 427)
    - Compliance Rollup Scheduling node – see [Scheduling Compliance Rollups](#) (on page 427)
    - Compliance Rollup Rule-Setting node – see [AML Rollup and Composition Rollup Rules](#) (on page 428), [Treat Exempt as Compliant in BOM Rollup Rule](#) (on page 428), and [Mass Tolerance Percentage Setting](#) (on page 428)
    - Supplier Declaration Process Extensions node folder – see [Supplier Declaration Process Extensions](#) (on page 431)
    - Specification Mapping – see [Specification Mapping](#) on page 432

### PG&C-specific Classes

- Configure the PG&C-related classes – Substances, Specifications, Parts/Documents, Manufacturer Parts, Part Groups, and Declarations classes — see [Declarations Classes in Brief](#) (on page 422) and



[Configuring the PG&C Classes](#) (on page 433); the items listed below are discussed in the latter section.

- Configure the Child Level attribute — The Child Level attribute is required for substances and weights rollups to execute properly in Excel. Other attributes in Items and Manufacturer Parts must also be enabled. See [Items and Manufacturer Parts: Substances and Weights Rollups and the Child Level Attribute](#) (on page 434).
- Configure the Composition Type attribute — The Composition Type attribute is required in a part or part group for a composition to be imported into the part. It must be set to Visible and Required, and users must be able to Read (privilege) it to ensure the View Substances link is enabled on the Compositions table in items, manuparts, and part groups. See [Parts and Part Groups: Composition Type](#) (on page 436).
- Use the “mapping feature” to configure flex fields — Mapping of attributes is required for some Page Two / Page Three attributes in parts and part families so they will distribute changed values on published declarations that are associated with those parts. See [Parts and Part Groups: Mapping Feature](#) (on page 437).
- Add applicable exempted substances to specifications from the Exemptions list (Lists node) — Exemptions field on General Info of a specification can be populated with substances selected from the Exemptions list.
- Configure the Part Groups class and create part families — If your company has purchased both Product Cost Management (PCM) and PG&C solutions, you must decide how to configure the Part Groups class. See [Part Groups: Configuring Part Families](#) (on page 439).
- Configure SmartRules — If you have both PG&C and PCM solutions, you must also properly configure the Force Commodity and Part Family to be Identical [SmartRule](#) (on page 439).

---

Note Please note that PG&C does not support compliance rollup of "recursive BOMs" (a BOM in which a subassembly "names itself" in its own BOM). To avoid recursive BOMs, set the SmartRule "BOM Multi-Level Recursion" to Disallow.

---

## PG&C Users and Workflow

- Define PG&C users and assign them appropriate roles — Define those users within your company who will create and manage compliance projects, RFIs, and the PG&C objects. Add users to Compliance Searches and Reports (detailed in *PG&C User Guide*). Assign those users appropriate roles; see [Defining PG&C Users – Roles and Privileges in PG&C](#) (on page 440). For information about setting up new users, see [Users and User Groups](#) on page 149.

---

Note Be sure to understand how to enable users to archive compositions, and the hazard of assigning the appropriate privilege to too many users. See [Items and Manufacturer Parts: Inactivating and Re-activating Compositions](#) (on page 435).

---

- Configure the Declaration default workflow — See [Using the Declarations Workflow in RFIs](#) (on page 442).

The My Open Declarations criteria must be changed to permit suppliers receiving custom workflows. See [Deploying Custom Workflows in PG&C](#) (on page 442).

## Suppliers

- Define a PG&C Supplier subclass and create PG&C supplier firms — Before you define specific supplier firms, examine the “out-of-box” Supplier subclasses. These were tailored for RFQs and the sourcing process (PCM). Note, for instance, that these objects all have a Commodities tab, which is the PCM-related subclass of the Part Groups class, instead of a Part Families tab. You might rename and reconfigure one of the existing Supplier subclasses; or, you might create “compliance-oriented” subclass(es) of Suppliers that pertain to your compliance requirements more specifically.

---

Note	Unless you define the Supplier field for a class of declaration (or all declarations) as ‘Not Required’, an Active supplier must be named by the user who creates a declaration. Currently it is not required that the supplier be a Web Supplier (that is, in Supplier object, Web Supplier field = Yes; when Web Supplier field = No, the supplier is called “non-Web Supplier”); PLM allows declarations to name either kind of supplier, but a Web Supplier must have at least one associated “Default Declaration Recipient”, while a non-Web Supplier may be named in the declaration with no associated default declaration recipients.
------	--

---

For more information about creating and managing suppliers, see the *PG&C User Guide*, Chapter 9, “Managing Your Suppliers. You may also want to refer to [Supplier Groups](#) (on page 170).

- Populate supplier firms with Default Declaration Recipients — Most important is deciding which Restricted supplier users will work in Agile Web Client (standard user interface) and which in the “Basic mode” of Web Client (a modified interface for supplier users). The simplified version of Web Client is seen by Restricted users whose Response Edit Mode user preference is set to Basic. If the Response Edit Mode user preference is set to Advanced Table Edit or Advanced Wizard Edit, that user will see full Web Client.

---

Note	When you create default declaration recipients, decide whether their Approval Password can be the same as their Login Password.
------	---

---

## Declarations Classes in Brief

The PG&C business classes – Substances, Specifications, Part Groups, Declarations – are described fully in the *PG&C User Guide*. This overview of the Declarations classes is for the administrator’s reference.

A declaration is the main object of record in the PG&C solution. Declarations keep track of all the substances and materials that are contained in parts and part groups. When a declaration is released, the information gathered from it is published to the product record, thereby updating the composition data contained by the declaration.

The Declarations base class has seven default classes of declarations, each with a single child subclass. The following table defines the kinds of declarations in PG&C.

Declaration class	Definition	Specification type
<b>Substance Declarations</b>	The supplier is requested to provide compliance information for each substance within the specification.	must be part-level spec
<b>Homogeneous Material Declarations</b>	The supplier is requested to provide a complete BOS breakdown of the part and provide compliance information at the homogeneous material level.	must be homogeneous-level spec
<b>Part Declarations</b>	Receive part-level compliance information as well as other composition information (manufacturing parameters).	can add any type of spec
<b>JGPSSI Declarations</b>	The supplier is requested to provide compliance information (weights) according to the JGP standard.  There is now a fully supported Japanese version of the JGPSSI template for creating JGPSSI Declarations; see your administrator.	must be part-level spec
<b>Supplier Declarations of Conformance</b>	A questionnaire to assess supplier compliance with specifications from customers and government agencies. The survey addresses compliance at a general company level. Can be used for CSR type declarations.	can add any type of spec
<b>IPC 1752-1 Declarations</b>	A Joint Industry Guide (JIG) substance declaration for electronic products.	specs should be part level
<b>IPC 1752-2 Declarations</b>	A Joint Industry Guide (JIG) homogeneous-material declaration for electronic products.	specs should be homogeneous-level

---

**Note** Substances and substance groups are pre-populated only in Substance Declarations. (In PLM 9.2, substances were also pre-populated in JGPSSI Declarations, but this has been removed.)

---

## Integrated Components for PG&C

This section provides information about configuring process extensions and other integrated components in PG&C. In some cases, the components may have been integrated during installation, as noted below.

### ComplianceRollup.log in Log.xml File

A log called ComplianceRollup.log is a component of the log.xml file, which is established at Install time. Note that they are stored in locations that are different than in PLM 9.2.1.x. You can change these locations as required.

Log.xml is found in <AgileInstallFolder> \ AgileDomain \ config

ComplianceRollup.log is enabled out-of-the-box; whenever a scheduled compliance rollup is started, this log session is written to:

- In OAS environment: <OracleInstallFolder> \j2ee \home \log
- In WebLogic environment: <AgileInstallFolder> \AgileDomain \log

Both the “one-time” special log for the Compliance Migration Task (for PG&C upgrade, see [Compliance Rollup Task](#) on page 294 and [Compliance Migration Task and Mass Tolerance Percentage](#) on page 452) and the log of the nightly scheduled rollup are captured in this log.

Information written to this log can be set to one of these two log types: Info[rmation], or most complete information, or Error, or information about errors only. Also, it can be turned off.

Once a rollup is triggered, the log session is ongoing. The Info setting reports on such factors as how many parts are present in the rollup, how many parts have been processed, and how many there are still to run.

More specifically, the contents of ComplianceRollup.log are as follows (“flagged” refers to an object’s Need Compliance Check attribute changing from No to Yes and therefore being examined by the system for compliance during rollup):

Part 1: a. Latest Released Shippable Items; b. Pending Shippable Items

Part 2: a. Flagged Part Groups; b. Flagged Items; c. Flagged Manufacturer Parts

For each part of the rollup, the Compliance Rollup log includes: Process Log—every 1000 parts; Large BOM info; and, Causes of rollup failure.

---

Note      The AXML schema has been changed from <http://support.agile.com/misc/axml/2006/03/> to

Note      <http://support.agile.com/misc/axml/2007/03/>

---

## **Ensure that the Microsoft Excel-based Client has been properly Installed**

Although installation of Agile PLM may have been successful overall, it is recommended that you confirm the results of this particular component so your users do not encounter problems later. Depending on the brand of your company’s application servers, Agile PLM was installed using one of the following installation guides:

- *Installing Agile PLM with Oracle Application Server*
- *Installing Agile PLM with WebLogic Server*
- *Installing Agile PLM with IBM Websphere Application Server*

Referring to the appropriate installation guide, review the chapter “Configuring the Microsoft Excel-based Client for PG&C.” Agile’s integration of Microsoft Excel with the PG&C solution is, first, in support of JGPSSI manufacturing regulations; it facilitates your suppliers completing a JGPSSI declaration. You may also want to explore the possibilities of creating in-house templates in Excel for use by your users and suppliers.

There is now a fully supported Japanese version of the Substances and Weights template.

Localized versions of the Substances and Weights template are supported in Simplified Chinese, French, and German. Additionally, there is now a fully supported Japanese version of the JGPSSI template.

**Important** The new Japanese-language templates are only available to customers who have purchased the Japanese Server License. Localized versions also need appropriate License Key.

Changes to the Excel-related process extensions are detailed in the above-referenced “Excel” chapter in the installation guides.

Also, the administrator must set users’ Language and Encode user preferences to the appropriate setting to work in that language in the Agile clients’ user interfaces.

## Configure Process Extensions for PG&C

The out-of-box process extensions specific to PG&C are listed below. One – Rollup in Excel – applies to Items only; the others apply to the various Declarations classes. These special export and import commands let suppliers integrate data in declaration requests with other Agile PLM systems or complete the requests in other clients, such as Microsoft Excel or Adobe Reader.

Each process extension must be assigned to the appropriate classes. This likely has been done during installation; if it has not been done, see [Process Extensions](#) (on page 94), especially [Assigning Process Extensions to Classes](#) (on page 97). In other words, you must verify the URLs on the process extensions under Data Settings > Process Extensions: the server name on these URL-based process extensions should match the server name on the login URL; if the application server is pointed to a different database, you must configure these URLs manually (as follows).

**To manually configure the Rollup in Excel, Import aXML, and Export aXML process extensions, set these values:**

For `<http>://<server>.<domain>.com:<port>/<virtual_path>/`

- `<http>` should be replaced by "https" if SSL has been enabled
- `<server>` is the name of the server
- `<domain>` is the fully qualified domain
- `<port>` is the port number of the Web server (if port 80 is used, you can omit the port)
- `<virtual_path>` is the application server virtual path; the default is "Agile".

Below are examples for Export aXML and ImportaXML:

Export AXML:

<http://pgcdemo.agile.agilesoft.com:8888/Agile/MDOServlet?action=getData&filetype=AXML&internalurl=true&height=220&width=365>

Import AXML:

<http://pgcdemo.agile.agilesoft.com:8888/Agile/default/MDOImportPX.jsp?filetype=AXML&internalurl=true&height=190&width=350>

You may need to work with an Oracle Consulting – Agile Practice representative or with Oracle | Agile Support to effectively configure the PG&C process extensions: see the Preface of this guide.

---

**Note**     [Supplier Declaration Process Extensions](#) (on page 431) presents another aspect of process-extension configuration, namely, selecting which ones are visible to suppliers in their declaration requests.

---

Process Extension	Assign To
Rollup in Excel	Parts class Documents class
Open in Excel Import JGPSSI Export JGPSSI	JGPSSI Declarations class
Import aXML Export aXML Although these two PXes are assigned to these 3 classes of declarations out of the box, they can be assigned to the other declaration classes.	Homogeneous Materials Declarations class Part Declarations class Substance Declarations class
Import IPC XML Export IPC XML	IPC 1752-1 Declarations class IPC 1752-2 Declarations class

---

**Note**     Open in Excel can be added to any Declarations class, but it requires developing a custom Excel template and integrating it with Agile PLM using the Excel Integration Framework.

---

The data format for these export and import commands is predefined by the Agile XML (aXML) format, the JGPSSI template, and the IPC 1752-1 and -2 forms. You must work in [Agile Content Service](#) (see "Configuring Agile Content Service" on page 383) or Agile Integration Services (AIS, see *AIS Developer Guide*) to configure your system to export and import aXML files. Note that these process extensions, as well as PG&C in general, all function without either ACS or AIS server licenses.

## Configuring the Substances and Weights Rollups in Excel Integration

Users can use Microsoft Excel to perform analysis of the Bill of Substances (BOS) information for an assembly. Using the Rollup in Excel and Run Scenario process extensions, the integrated Excel spreadsheet can roll up the substances and weights for the assembly. Here is a short checklist about the Rollup in Excel process extension:

- Rollup in Excel process extension is not enabled by default.
- Rollup in Excel process extension must be assigned to the Parts class and the Documents class. (Note that this PX may not work correctly for Documents class before Rel. 9.2.1.3.)
- Ensure that the Rollup in Excel process extension Initiate from is set to Action Menu.
- Ensure that the systemwide Preference "Allow Download of Productivity Components" is enabled.

## Administrator Nodes for PG&C-specific Settings

This section describes configuring the following nodes:

- System Settings > UOM node
- System Settings > Product Governance & Compliance node folder, which in turn includes:
  - Signoff Message node — configure the signoff message that your suppliers will (electronically) sign
  - Compliance Rollup Scheduling node — configure Rollup Time and Recurrence Pattern
  - Compliance Rollup Rule-Setting node — configure the AML Rollup rule, Composition Rollup rule, Treat Exempt as Compliant in BOM Rollup rule, and Mass Tolerance Percentage setting
  - Supplier Declaration Process Extensions node folder — for each class in the Declarations base class, configure which process extensions will appear in the declaration requests to your information suppliers.
  - Specification Mapping — for Parts, Documents, and Manufacturer Parts classes, configure a mapping between each specification and a PageTwo field that displays the Result Compliance for the part-spec combination

### Setting Unit Of Measure (UOM)

The UOM node allows you to define different units of measure for use in Agile PLM. Units of measure are important in the PG&C solution with so much emphasis on the weight or quantity of restricted substances contained in your products. Please see [Unit of Measure \(UOM\)](#) (on page 258) for more information.

### Setting Your Signoff Message

The Signoff Message node provides a legal disclaimer that is configured at your site. The message field allows an unlimited number of characters. The signoff message is visible to each supplier who receives a declaration from a compliance manager at your company. The supplier “signs” and returns the declaration to the compliance manager. The text should affirm that the information tendered by the supplier is true, and that the supplier is responsible for any mis-statements in the returned declaration.

---

**Note** Although the supplier would likely sign off any declaration only once, the rule is that the supplier must sign off for any status he changes in a workflow. This could be a factor to consider if you create a custom declaration workflow in which the supplier is expected to change more than one status. Although that possibility has been restricted through Rel. 9.2.1.x, as of Rel. 9.2.2 suppliers can respond to custom declaration workflows, not just the default Declarations Workflow. See [Deploying Custom Workflows in PG&C](#) (on page 442).

---

### Scheduling Compliance Rollups

This node allows you to manage the start time and periods for a recurring, scheduled rollup to be executed by the system. This will roll up any items marked as Shippable Items, as well as all parts/part groups that have specifications where the Need Compliance Check attribute has switched

to Yes.

For rollup scheduling to function, the Compliance Rollup Task in Server Settings > Task Configuration must be enabled. See [Task Configuration](#) (on page 294, on page 294).

The Rollup Time settings let you set a start time (Hour:Minute) for your regular rollup. The Recurrence Pattern settings let you select a daily (or nightly) or weekly regular rollup schedule.

## Setting Compliance Rollup Rules

This node sets rules that operate during compliance rollups, whether they are started manually or automatically.

### AML Rollup and Composition Rollup Rules

The AML Rollup and Composition Rollup rules let you select Relaxed or Strict for these two types of compliance rollup. The default for both these rules is Strict, or “worst” case. This means that all present elements must be compliant. The Relaxed setting (“best” case) means that only one element present must be compliant. (“Relaxed/strict” is also known as “best/worst.”) Compliance rollups are documented in Chapter 10 of *PG&C User Guide*.

- AML Rollup sets the best/worst guideline on how the compliance of an item is determined, based on compliance of the manufacturer parts associated with the item. For instance, if there are two manufacturer parts in an item, the Strict setting means that the item will be compliant only if both manufacturer parts are compliant. The Relaxed setting means that the item can be compliant as long as just one manufacturer part is compliant.
- Composition Rollup sets the best/worst guideline on how the compliance of a part or part family is determined, based on compliance of the compositions of the part/PG, which implies the presence of suppliers. So, if four suppliers are represented on a part's compositions, the Strict setting means all four suppliers have to declare the part is compliant for the composition rollup to result in the Compliant state.

A rollup rule governs the special use of the Exempt compliance state.

### Treat Exempt as Compliant in BOM Rollup Rule

Treat Exempt as Compliant in BOM Rollup is a Yes/No setting (No is the default) that permits a company to declare a BOM (that is, an assembly or product) as Compliant even if some components are flagged Exempt.

Because Exempt is one of the ‘non-compliant’ compliance states, a part that is declared Exempt can render the entire assembly Exempt. By setting this rule to Yes, once a part is Exempt, the rule prevents “Exempt” from rolling all the way to the top of the assembly.

Of course, other parts in the assembly may have more serious non-compliance problems, so this setting does not bypass those states being rolled up.

Also note that the ability of the administrator to change the names of default compliance states makes it possible to change Compliant to, for example, “Compliant with possible Exemption.”

### Mass Tolerance Percentage Setting

Mass Tolerance Percentage (MTP) is used to determine if a composition can be considered “fully



disclosed” despite a slight discrepancy. (Although it is located in Compliance Rollup Rules subnode, because this value does not govern outcomes of compliance rollups in the same way that the other rules do, we tend to refer to Mass Tolerance Pct. as a setting.) The MTP setting enables the system to determine the disclosure type of the composition, and whether an “Unreported” substance needs to be added to a composition (more detail is given below after other concepts are introduced).

Mass Tolerance Percentage facilitates error correction, so the setting will likely be quite small, for example, perhaps 0.1%. The default is 0%, which is equivalent to “no tolerance” of any discrepancy. The discrepancy can be set to a maximum of 5%; the system will not accept a value greater than 5%. Values can be expressed in decimals to an unlimited place.

The concept of mass tolerance works with other features introduced in Rel. 9.2.2, including mass disclosure and the use of the “Unreported (System)” substance. These topics are given in brief below, even though the administrator does not have to configure them; for more information, see the *PG&C User Guide*.

**Caution** The Mass Tolerance Pct. setting and the “Unreported (System)” substance feature are used expressly to account for small discrepancies between part mass and substance mass. They are *not* to be used to “hide” a portion of substances in a declaration that could be thought of as a proprietary formula (or “recipe”) in a manufacturer’s product. This will be a part of a future release of PG&C, but proprietary hiding is *not* supported in Rel. 9.2.2.

### ***How System Uses Mass Tolerance Percentage***

For example, let Mass Tolerance Percentage be set to 1% and part P1’s mass is 90 g. The composition will be identified as Fully Disclosed as long as the sum of its materials (the Bill Of Substances mass) is at least 89.1 (because 1% of 90 is 0.9). (This is a simplification to illustrate MTP: for the composition to be considered Fully Disclosed by the system, it would also check the substances under each material, not just the material weight, as mentioned here.)

Mass Tolerance Percentage is used only when the sum of the substances’ mass is lower than the immediate parent’s mass, whether for a substance composition or for a homogeneous material composition.

When the sum of substances’ mass is higher than the parent’s mass, the system automatically considers the composition as Fully Disclosed.

Note that in homogeneous material compositions, MPT is actually used twice:

- First, when the sum of materials (parents of substances) is less than the part mass. In this case, when the difference is greater than the MTP value, the composition becomes Partially Disclosed (there is no “Unreported Material”).
- Second, when the sum of substances’ mass is less than the material (or subpart) mass. In this case, if the difference is within the MTP value, no unreported substance is added; if the difference is greater than the MTP value, the system adds the “unreported substance” to accommodate the difference in mass under that material or subpart.

The MTP setting operates “going forward” upon any composition that is calculated by a user from the time it is set in Administrator. When you change the MTP value, the system gives this warning: “Changing the “Mass Tolerance Percentage” value does not automatically affect previously calculated rollup results for existing compositions. If you want to recalculate the rollup result for an existing composition, run “Calculate Compliance” on its declaration. Click Yes to change the value.”

If your company is upgrading to PLM 9.2.2, be sure to see [Compliance Migration Task and Mass Tolerance Percentage](#) (on page 452).

## Mass Disclosure – Full, Partial, and No Disclosure – and Unreported Substances

The Admin List “Mass Disclosure” has three values: Fully Disclosed, Partially Disclosed, and Undisclosed. The correct value is generated by the system during composition rollups. The attribute is found on the Composition tab of parts and part groups, and on the Part/PG tabs of declarations.

- Full Disclosure or Fully Disclosed composition:
  - A Substance composition is considered to be Fully Disclosed if the difference between the part’s mass and the sum of the masses of all the substances is less than or equal to the Mass Tolerance Percentage setting.
  - A Homogeneous Material composition is Fully Disclosed if this two-step process is satisfied: (1) The difference between each material’s mass (that is, the immediate parent of the substances) and the sum of mass of the substances under that material is less than or equal to the Mass Tolerance Percentage setting; and, (2) The difference between the part’s mass and the sum of mass of the parents of the substances should be within the Mass Tolerance Percentage.
- Partial Disclosure or Partially Disclosed composition: The difference is more than the Mass Tolerance Percentage, in which case an “Unreported” substance is added by the system to fill in the missing mass.
- No Disclosure or Undisclosed composition: If the mass is missing for the part, substance, or the immediate parent of the substances, it is considered an Undisclosed composition.

So, if the part and all the substances/materials have masses, and the sum of their masses does not match exactly, the system checks whether the sum of the material masses falls within the tolerance (%) of the part’s mass.

### Unreported Substances in Partially Disclosed Compositions

PLM Release 9.2.2 also adds a system-generated entity or object that “fills in” the unaccounted difference between the total mass of the part or assembly and the sum of all its constituent substances. The name in the application is “Unreported (System)” and it can simply be referred to as “unreported substance.” The unreported substance is searchable in the application; the user can edit any field in the PageOne or PageTwo of unreported substance, except the name. But the user cannot delete the unreported substance. Its presence in a composition is inferred when compliance rollups mark a composition as Compliant but the weights of the part and its substances do not match.

---

Note	An unreported substance should not be added manually by a user; that is, the purpose of the unreported substance is circumvented if an object called “Unreported Substance” or the like is created and used as a “filler” – the system should be allowed to work its calculations and create the entity as needed.
------	--

---

## Renaming Compliance States

Compliance states, compliance rollups, and the business logic at work in rollups are fully described in the *PG&C User Guide* (Chapter 10). The default compliance states are Not Applicable, Compliant, Exempt, Waived, Missing Info, and Non-Compliant, the latter four all being ‘non-compliant’ compliance states.

You are able to change the names of compliance states to fit the requirements of your company. However, you cannot add or remove compliance states, nor change their essential meaning. For example, you might change Compliant to Accepted, and Non-compliant to Rejected. Assigning names that are not consistent with the meaning of the original name could compromise the reliability of compliance rollups.

There are three Administrator lists for compliance states (Data Settings > Lists). When a compliance state's name is changed in the lists (below), it is changed in all existing business objects. It is recommended that name changes be made across all three lists, for consistency and users' clarity. The lists are:

- Part Compliance List
- Calculated Compliance List
- Declared Compliance List

**Important** Besides making these lists consistent, you must also adjust any process extensions that use the original names in Declared Compliance field. Also, if you are using the Microsoft Excel-based client, you must make Excel style sheets consistent.

For more information about the Administrator lists, see [Lists](#) (on page 87).

## Supplier Declaration Process Extensions

Under the Product Governance & Compliance node folder is a node folder called Supplier Declaration Process Extensions. This subnode is not the locale for configuring process extensions (see [Process Extensions](#) (on page 94)). In the present subnode, you set which process extensions are visible for each type of declaration request that your Restricted supplier-users receive. This pertains to the "Basic supplier interface," that is, the simplified version of Web Client that is seen by Restricted users whose Response Edit Mode user preference is set to Basic.

For example, if your PG&C solution does not use aXML, you may remove the Export aXML and Import aXML process extensions from all declarations so they are not potentially confusing to your suppliers.

**Important** In the Selected field, the first-listed process extension will appear in each declaration (of that type) as a live link next to the declaration's name on the home page of the Basic supplier. The other "Selected" process extensions appear when the Default Declaration Recipient opens the declaration itself.

Note that if a process extension is disabled in the Process Extensions node, its name still appears in the Supplier Declaration Process Extensions subnodes. These subnodes configure what Restricted supplier-users potentially see: all Restricted users do not see those process extensions that you leave in the Choices fields in these subnodes. Neither the supplier-users nor your users ever see disabled process extensions.

**Note** While it would not make sense to assign the "JGPSSI" process extensions to the "non-JGPSSI" classes of declarations, you can assign the "aXML" process extensions to the JGPSSI Declarations class, depending on your anticipation of what method your suppliers might use (in fact, the "aXML" process extensions can be applied to all the declaration classes). However, there are already three process extensions available to complete JGPSSI-based RFIs, and they are much simpler than working with aXML files, so it is generally not necessary to add the aXML process extensions to the JGPSSI Declarations class.

**To configure a class of declarations with process extensions:**

1. Open System Settings > Product Governance & Compliance > Supplier Declaration Process Extensions node folders.
2. Double-click one of the Declarations classes. The Choices–Selected dialog appears.
3. Use the Move Right and Move Left arrows to move process extensions to Choices or to Selected.
4. Use the Move Up and Move Down arrows to set the order of the process extensions that are in the Selected field.
5. Click Save. The first process extension in the Selected field automatically appears for those type of declarations as a live link in the Basic supplier interface. So, if Open in Excel is first in the Selected field for JGPSSI Declarations, when a Restricted supplier opens a JGPSSI Declaration, he can click a link that says Open in Excel, and the system opens Microsoft Excel and the JGPSSI template for that declaration.

## Specification Mapping

Specification Mapping is a new subnode in the PG&C node folder, provided so the administrator can set up a mapping between each specification and (for Parts, Documents, or Manufacturer Parts class) a PageTwo field that displays the Result Compliance for the part-spec combination. This mapping simply allows users to see the Result Compliance for a specification on the PageTwo of the part, rather than forcing them to go to the Compliance tab > Specifications table.

For each specification in the PG&C system, the administrator can choose an attribute (or creates a user-defined flex field) of List type on PageTwo (of Parts class or Documents class or Manufacturer Parts class), in which its value is copied from the Result Compliance field (Compliance tab > Specifications table > Result Compliance).

You can map the same specification to different Pg2 attribute for different classes.

Then, when a part is rolled up for compliance, and therefore has a value (a compliance state) in the Result Compliance field on its Specifications table, that value is also copied to the mapped attribute on Pg2 of the part. More specifically, the Result Compliance (RC) value of the specification is copied to the mapped PageTwo field if any one of the following events occurs:

- a rollup is done on the Latest Released rev (LRR) of a part or document;
- a rollup is done on on a manufacturer part;
- a rollup is done on a BOM: if a child is the LRR, its RC value is copied to the child's PageTwo field; or,
- a rollup is done on an item that is associated with a manufacturer part: the RC value of the mfr. part is copied to the mfr. part's PageTwo field.

**To map a specification to a PageTwo field (within Items or Manufacturer Parts):**

1. Double-click the Specification Mapping node, the page opens. You will see listed all the specifications entered in your PG&C solution.
2. Select a row for a spec, and select Parts, Documents, or Manufacturer Parts tab (since the mapping can be different for each of these classes).

3. Click the Edit Selected Mapping button. The Update PGC Spec Mapping dialog appears.
4. The Specification field has been selected, and so cannot be changed in the dialog. For the Attribute field, use the drop-down list to select the name of the attribute that you want mapped. (They appear because they are already mapped to the Result Compliance list. Details of the mapping are listed below.)
5. Click OK. Now the row for the spec you selected (for Parts, Documents, or Mfr.Parts) also shows the Attribute you selected.
6. Later, when the part (item Latest Released rev, or mfr. part) has gone through a compliance rollup, that value will appear in the mapped attribute on PageTwo of the part.

**For a PageTwo attribute to appear in the Attribute drop-down list of the Update PGC Spec Mapping dialog, all of the following must be true:**

- a. It must be a List attribute
- b. It must be enabled (Visible = Yes)
- c. It must point to the Administrator List "Calculated Compliance"

Note that the fields Result Compliance and Calculated Compliance both point to the "Calculated Compliance" Admin List.

## Notes on Changed Mappings and System Cleanup

You can edit the mappings in the node. Changed mappings affect future rollups; objects that might be affected by the changed mapping do not change if they are not rolled up.

Every time you change the mapped attribute to a new mapping, the system removes the previous mapped attribute and also "erases" the old values from the Pg2 field. Also, if you change the attribute to point to a different list (not Calculated Compliance List), the system removes the mapping and also "erases" the old values from the Pg2 field.

A potential inconsistency can occur if the end-user were to manually change the value in the (mapped) Pg2 field, this change would not be read back to the Specifications table. If this is a concern, the solution is to turn off Modify privilege for the Pg2 field.

The copying of Result Compliance to a Part's Pg2 happens only for the LRR of the part, since Pg2 is always applicable to LRR. So, if the rollup changes the RC of a previously Released rev (or a Pending rev), that value is not copied to the mapped Pg2 field. Similarly, if that Pg2 field is enabled in the item BOM tab, it only displays the value corresponding to the LRR of the item.

When a specification is removed from the system, you do not need to do "cleanup" on the classes. "Cleanup" is automatic the next time you open the Specification Mapping node in Java Client.

## Configuring the PG&C Classes

This chapter gives an overview to configuring the PG&C solution, with specific instructions that the administrator may find useful. This chapter does not provide a comprehensive description on how to fully configure the PG&C solution; more information about configuring Classes, Users, and Roles, for example, are found elsewhere in this Administrator Guide. You may also find it helpful to refer to the *PG&C User Guide* for more information about the use of the Declarations, Specifications, Part Groups, and Substances business objects.

When you customize a PG&C-related class, all its subclasses are affected. Items and Manufacturer Parts are already likely involved in the Product Collaboration solution for your company, so you must be careful when working at the class level of these business objects. Similarly, the Part Groups class may be involved with the Product Cost Management solution as well as PG&C (this is addressed in [Part Groups: Configuring Part Families](#) (on page 439)). You can configure Items, Manufacturer Parts, and Part Groups tab attributes to pull values from other parts and part groups.

## **Overall Compliance / Summary Compliance in PG&C Business Objects**

This clarifies the presence of an attribute that is named slightly differently in different objects and tabs.

Overall Compliance indicates the compliance state of the part using the worst-case scenario and matched across all specifications associated with the part. This attribute is found on these objects:

Items > Title Block tab > Overall Compliance

Manufacturer Parts and Part Groups > General Info tab > Overall Compliance

The Overall Compliance attribute also reads through to these objects, although in these cases it is named "Summary Compliance". It should be enabled in these tabs as well as those listed above:

Items base class (Parts and Documents) > BOM tab and Manufacturers tab > Summary Compliance

Changes base class (ECOs, MCOs, etc.) > Affected Items tab > Summary Compliance

## **Items and Manufacturer Parts: Substances and Weights Rollups and the Child Level Attribute**

For Substances and Weights rollups to be successfully calculated, the system must be clear about both the BOM (levels of subassemblies and parts) and the BOS (Bill of Substances, levels of substances contained in parts; the Bill of Substances is described in the *PG&C User Guide*). The Child Level attribute being enabled (set to Visible) promotes both system clarity and user clarity about substances in the levels of the Bill of Substances.

Particularly for running rollups through the Microsoft Excel-based Client, it is important that the administrator enable the following attributes in Parts, Documents, and Manufacturer Parts classes (Part Groups do not use the Excel integration and so do not need to be considered).

- Items and Manufacturer Parts > Compliance tab > Composition table > attributes: Specification Name, Declaration Name, Declared Weight, Supplier
- Items and Manufacturer Parts > Compliance tab > Substances table > attributes: Child Level, Substance Name, Substance Type, Mass, Declared PPM, CAS Number, Conversion Factor
- Items > BOM tab > attributes: Item Number, Item Description, Item Rev, Quantity
- Items > Manufacturers tab > attributes: Mfr. Part Number, Mfr. Part Description, Manufacturer Name

All of these attributes need to be enabled, that is, the Enabled property set to Yes.

## Specifications: Adding Exemptions

When you or a compliance manager creates a new specification, it can be associated with substances of concern to the regulatory agency. To add exemptions to a specification (Exemptions field on General Info of the specification), first add exempted substances to the Exemptions list; then they are available for selection by the user who creates the specification object. See [Lists](#) (on page 87).

---

**Note** It is a best practice to add exemptions with a “Spec Name” added to each item, facilitating the process when the user selects appropriate exemptions. For example, all the RoHS-related exemptions in the global Exemptions list might begin with “RoHS-”.

---

that there are also Exemptions fields in declarations (on the <Parts/PGs> tab and on a declaration's <Parts/PGs> Substances table). The values a user sees for Exemptions in a declaration comes from the associated specification.

## Declarations: Length of Declaration Name

To avoid potential problems opening declarations with long names, you should restrict declaration names to less than 50 characters for every class that you are enabling the Microsoft Excel-based client. You can do this by making autonumbers required (assuming that each number in the autonumber sequence is less than 50 characters) or by adjusting the maximum length of the Cover Page > Reference Number attribute.

## Items: Need Compliance Check Attribute Removed

The Need Compliance Check field is no longer *visible* on items; however, the system still recognizes it and reacts to it in items during rollups. (It remains visible on manufacturer parts and part groups Compliance tab > Specifications table.) The reason for this has to do with items being so central to the Product Collaboration solution. PC-specific change orders means that the Need Compliance Check value (Yes or No) may not reflect the actual compliance state consistently: even if the field is No, the system should run the rollup since a non-PG&C-related change to the item might affect its compliance.

## Parts and Part Groups: Elapsed Time since Last Rollup Attribute Added

Elapsed Time since Last Rollup field indicates how long it has been since the previous compliance calculation was done. You do not need to configure this field. You may assist your users by pointing it out on the Compliance tab of parts and part groups, and its use may influence your settings for rollups and the objects involved.

## Items and Manufacturer Parts: Inactivating and Re-activating Compositions

The Archive button is on the Specifications table of items and manufacturer parts. This button is enabled only if the user has the proper Modify privilege for the Declared Compliance attribute on the Compliance tab > Specifications table for that part.

The use case for the Archive button considers the possibility that non-compliant declarations, when published, could render an entire top-level assembly in the Non-Compliant state. You want to



enable those users who have the authority to decide not to buy non-compliant parts to remove offending compositions from the product record. When the Archive button is used and the composition is inactivated, that is, removed from Active status, those assemblies containing that part now have a better chance of being in compliance.

However, it is possible that a mistake has been made, and to decide that an archived, Inactive composition should be reinstated as Active. This can be done by clicking the Historical link on the Compositions table, selecting the composition (select the row), and clicking the Activate button. Reactivation of compositions also applies only to items and manufacturer parts.

When the system activates a composition, it automatically archives any "matching" Active compositions (compositions with the same supplier and specification). If there are compositions with the same specification and same supplier for one item, so that one composition is in the Active table and one is in the Historical table, when you click Activate from the Historical table, the system automatically archives the active composition. This is consistent with established behavior of the system when importing compositions. Note that, on the item's or mfr.part's History tab, both the Activate and Archive actions are recorded.

Note	Both the archiving (inactivating) and (re-)activating process cause the Need Compliance Check field to re-set to Yes. While that change is visible in manufacturer parts, the field is not visible in items. Moreover, the Archive and Activate action may change the compliance states for all specifications on the part or assembly. The best practice is, whenever you change a composition's Inactive or Active state, do a compliance rollup on the part or related assemblies.
------	---

## Parts and Part Groups: Composition Type

The Composition Type attribute is essential to a user's ability to import compositions and substances into parts or part groups (see next topic). When a declaration is published, this field has a value that corresponds to the type of the declaration. If the composition is imported to a manufacturer part, it is "marked" as one of these three types:

Composition Type has this value...	...if the composition came from this type of declaration:
Part Composition	Part Declaration
Substance Composition	Substance Declaration, JGPSSI Declaration, IPC 1752-1 Declaration
Homogeneous Material Composition	Homogeneous Material Declaration, IPC 1752-2 Declaration

Also, when running a compliance rollup against a specification that has no composition, the system looks at any compositions with no spec that are of the same Composition Type as the specification's Validation Level.

Composition Type is a List attribute (Admin > Data Settings > Lists), with these entries:

- Part Composition
- Substance Composition
- Homogeneous Material Composition.



You must ensure that Classes > <Parts/PGs> classes > User Interface Tabs > Compliance tab > Composition table > Composition Type attribute is visible (Visible = Yes) and required (Required = Yes). Then, ensure that the attribute is included in the AppliedTo property of the appropriate Read and Modify privilege masks (that is, Read Mfr Parts, Read Items, and so forth). There is no default value for Composition Type. See [AppliedTo Capability](#) on page 200.

For compositions published from declarations, the system will determine the composition type based on declaration class. For the compositions that are being imported into parts, the user must specify the Composition Type.

## Items and Mfr. Parts: Importing Compositions and Substances

PG&C enables users to import compositions and substances into items and manufacturer parts (using Compliance tab > Compositions table). Users can also import specifications (Compliance tab > Specifications table) and suppliers (Suppliers tab) into items, manufacturer parts, and part groups.

If your company uses Part Miner or Total Parts Plus to download substance information, Agile Product Interchange can be used to pull data from these content providers. Agile PI creates the necessary aXML file (Agile XML) and then imports it into the PLM system.

If your company does not use Part Miner or TPP, you will still need to create aXML-format files with composition and composition substances. Then Agile Import is used to import the compositions and composition substances into the system.

Users who need to import PG&C data must be assigned Create, Discover, Read, and Modify privileges for each kind of PG&C object including items and manufacturer parts.

You may consult these Agile documents:

- Importing compositions for the user: *PG&C User Guide*, Chapter 8, “Importing and Exporting Data in PG&C”
- Using the Import and Export tools: *Import and Export Guide*
- Using Product Interchange: *Product Interchange Administrator Guide* and *Product Interchange User Guide*.

---

Note	Contact the Oracle Consulting – Agile Practice for information about Agile XML (aXML) format and to refine your import procedures.
------	--

---

## Parts and Part Groups: Mapping Feature

Mapping of attributes is required for some Page Two/Page Three attributes in parts (items or manufacturer parts) and part groups so they will distribute changed values on published declarations that are associated with those parts.

For example, let us map some attribute of a part's Compliance tab:

Part > Compliance tab > Composition table attribute > Date02 field

is mapped to

Part > Page Two > Date05.

This can be enabled on PageTwo (class level) or PageThree (subclass level). The crucial attribute is Map Data To. When this part is added to a declaration, the system pulls the Date02 field's value into

Declaration > Items tab > Date05.

Assuming that you have enabled and mapped Part > PageTwo > Date05 and Part > Compliance > Composition > Date02, these two things are true:

1. If you enabled Declaration > Items tab > Part (link) > PageTwo tab > Date02 attribute, then the value from Part > PageTwo > Date02 is pulled into this attribute; however, you cannot edit this attribute since it is a "read-through" attribute.
2. If you enabled Declaration > Items > Part (link) > PageTwo > Date02 (which corresponds to Part > Compliance > Composition > Date02), then you can edit this attribute and the value is published back to Part > Page Two > Date05.

Now let us say the supplier alters the Date02 field while completing the declaration. When the declaration is returned, released, and the data is published to the system, this new value automatically carries over to

Part > Page Two > Date05.

that the mapping works two ways: when adding this item to the declaration, the system pulls the value from the item's Page Two / Page Three into the declaration's <Parts/PG> table onto the mapped attribute.

## Use Case

Here is a use case: in PG&C there are six Declarations classes that hold compositions (only Supplier Declarations of Conformance do not). Let a List field called List01 be enabled in Parts > Compliance > Composition and be mapped to Parts > Page Two. Be aware that there is a corresponding List01 field in Declaration > Items tab, and that the mapping must be set up in all six classes of Declarations. So, if Parts > Compliance > Composition > List01 is set to point to Continents list, List01 in all of Declaration > Items tab should point to Continents list.

## Enabling the Mapping Feature

**To enable mapping for a given part/part group:**

1. For any part, enable some attributes on PageTwo (class level) or PageThree (subclass level).
2. On the part's Compliance tab, enable some attributes on the Composition table.
3. Map the respective fields:  
Compliance tab > Composition table > flex fields to PageTwo / PageThree attributes.
4. Enable the respective fields in the parts and part families' tables of an associated declaration.
5. As pointed out in the use case above, when mapping list/multilist attributes, the corresponding list/multilist attributes in the following should all point to the same list:
  - Part or Part Group > Compliance tab > Composition table
  - Part or Part Group > Page Two/Page Three tab, and
  - Declaration > Items, Manufacturer Parts, or Part Groups tab

For example, if you want the supplier to be able to edit a list attribute that points to "countries"

and also want the value to be copied into Page2/Page3 when the Declaration is released, make sure all the list attributes in the tabs listed above point to the “Countries” list.

When multiple declarations regarding the same part are sent to different suppliers, the rule in Agile is “Latest Released Wins.” This means that the value of a mapped attribute can change if later declarations dictate it. If the new declaration did not have a value on one of the mapped attributes, when it is released, the value on the item’s Page Two / Page Three mapped attribute is not removed.

## Part Groups: Configuring Part Families

Objects from the Part Groups base class and Part Groups class are used for two purposes in Agile PLM, as reflected by the default subclasses: Part Family and Commodity. Because of its relationship to parts and manufacturer parts, the Part Groups class is licensed by the Product Collaboration server license; however, objects from the Part Groups class are more often used in the PG&C and Product Cost Management (PCM) solutions.

If your company purchased both PG&C and PCM, you can set part families and commodities to behave identically – the default setting – or differently. If you want to use different business rules for PCM commodities and PG&C part families, you have to complete the steps in the task below.

---

**Note** These configuration steps apply only if your company has purchased *both* the PG&C and PCM solutions. Otherwise, you can ignore this section.

---

In the PG&C solution, part families allow compliance managers and suppliers to quickly categorize parts, and are used to collect compliance information on restricted substances for groups or “families” of parts. In the PCM solution, commodities are used to categorize parts for product sourcing. It is important for you to define the part families in your system because RFI responses can be disseminated by the part families that suppliers offer.

**Caution** If the Part Groups class is disabled, you must hide the Part Groups tab in each Declarations class, or the Microsoft Excel-based Client will not properly work for those declarations. Go to Classes > each Declarations class > User-Interface Tabs > Part Groups and set Visible property to No.

## Force Commodity and Part Family to be Identical SmartRule

The Force Commodity and Part Family to be Identical SmartRule can be set to Yes or No (“Force/Identical SmartRule”). The setting has no impact if your company does not own both PG&C and PCM. Assuming your company owns both these solutions, you must decide how your company will use objects from the Part Groups class. You will then make the Make Available As attribute visible or not.

If the Force/Identical SmartRule is set to No, the Make Available As attribute could be visible if there are reasons for your users to be able to choose what kind of commodity they create. If the Force/Identical SmartRule is set to Yes, it is unlikely you would make the Make Available As attribute visible.

## Make Available As Attribute

With the Make Available As attribute visible (and assuming the Force/Identical SmartRule is set to No), users that create an object from the Part Groups class will be prompted to choose whether to make the Part Group object available in one of these three formats:

- Commodity and Part Family (the default) — The part group object is used for collecting parts with similar substances in a compliance context (PG&C) *and* for collecting similar parts in a sourcing context (PCM).

Note	When the Force/Identical SmartRule is set to Yes (that is, the two solutions share the Part Groups class), and a user updates both the Item.Commodity and Item.Part Family attributes, the user must enter the same value for both the Commodity and Part Family attributes. If the values are different, the Agile system ignores the Part Family attribute.
------	---

- Commodity Only — The part group object is used for collecting similar parts in a sourcing context. Only items can be added to the Contents tab. In this configuration, the commodity object cannot be used in declarations.
- Part Family Only — The part group object is used for collecting parts with similar substances in a compliance context. Both items and manufacturer parts can be added to the Contents tab.

**To make part group objects behave differently for PCM and PG&C:**

1. Under System Settings, double-click the SmartRules node. The SmartRules window appears.
2. In “Force Commodities and Part Families to be Identical,” select No, and click Save.
3. Under Data & Workflow Settings, double-click the Classes node. The Classes window appears.
4. Open the Part Groups > Part Groups class, and click the User Interface Tabs tab.
5. Double-click General Info to open it, and then click the Attributes: General Info tab.
6. Double-click the Make Available As attribute. The Make Available As attribute is available only if you have a PG&C license.
7. For Visible, select Yes.
8. For Default Value, you may decide to select one of the options as the default that users will see when they create new commodities – a user can always select any of the three options, no matter which one was selected as the “default.”
9. Click Save.

## Defining PG&C Users – Roles and Privileges in PG&C

**Important** If your company has used PG&C and is upgrading to a new release of PLM, you must ensure that your roles and privileges are completely updated. This will involve manually adding new attributes. See [Changes to PG&C Objects, Roles, and Privileges in an Upgraded Database](#) (on page 451).

**Important** If your company is upgrading to a new release of PLM *but* it has never used PG&C before, new attributes are included in the PG&C classes and related privileges; however, in this same case, note that you still need to manually update the Product Collaboration-related classes and privileges to include the attributes introduced by PG&C on PC objects.

A privilege called Import is required for users to work in Agile Import. This privilege must be added to existing roles and certain “restricted” roles. (See Appendix A.) Because the restricted roles cannot be changed in Java Client, please contact Oracle | Agile Support.

---

**Note** Be sure to review the section "Setting Privileges for PG&C Objects" in the PG&C configuration chapter in *Installing Agile PLM with OAS / WebLogic*.

---

## Adding Users to Compliance Manager Lists and Compliance Searches

As you configure users for PG&C, remember to consider these two items: users who will work in the capacity of Compliance Manager must have Compliance Manager List selected in their Lists user property; this results in those names appearing in the drop-down list when a user creates a declaration. Also, users must have Compliance Searches selected in their Searches user property to see the folder of compliance searches in Web Client.

There are two out-of-box roles that are specific to PG&C:

- **Compliance Manager (buyer side)** — Provides privileges needed to create and manage PG&C objects and run PG&C reports. This role also has read-only access to parts (items and manufacturer parts). Compliance managers are responsible for routing declarations to suppliers.

---

**Note** When a user creates a declaration and selects a compliance manager, the values on these attributes are added immediately: Title, Phone, email, and Fax.

---

The Compliance Manager role has been enhanced to permit configuring the AppliedTo fields in the Read and Modify privileges. This pertains to the Supplier Read Items privilege discussed below.

- **(Restricted) Material Provider (supplier side)** — Provides privileges needed to create, modify, and complete declarations, as well as read all other types of PG&C objects. This role is typically assigned to supplier users, who have restricted access to the Agile PLM system.

---

**Note** The (Restricted) Material Provider role had the (Restricted) Read Items privilege mask; it has been replaced by the Supplier Read Items privilege mask.

---

**Caution** It is possible to remove the (Restricted) Material Provider role from the Modify My Open Declarations privilege mask (Where Used tab), and then it is not possible to restore it, which would be a bad situation. Should this happen, you would start with the Example Roles to save the Material Provider role to a new instance, which will contain the Modify My Open Declarations privilege mask.

**Important** If you have upgraded your PG&C system to Rel. 9.2.2.4, you will need to manually modify a specific privilege mask in two specific roles. You must add the new Default Declaration Recipient attribute to the AppliedTo field in the privilege mask, as follows:

**Important** To Compliance Manager role, Read Supplier privilege mask: add "Suppliers.General Info.Default Declaration Recipient" to the AppliedTo list;

**Important** To (Restricted) Material Provider role, (Restricted) Read My Supplier Profile privilege mask: add "Suppliers.General Info.Default Declaration Recipient" to the AppliedTo list.

## Supplier Read Items Privilege

A new privilege called Supplier Read Items has been added to the following restricted roles: Material Provider, RFQ Responder, and Supplier Manager. You can decide what attributes are enabled for the supplier to see. Previously, the Restricted Read Item privilege was part of these

roles, which lacked control over some kinds of information.

## Using the Declarations Workflow in RFIs

The Request For Information (RFI) process is initiated by a compliance manager, that is, an Agile user who has been assigned the Compliance Manager role. This user creates a new declaration, or modifies an existing declaration, to specify the components for a parts assembly.

The following table shows how the RFI process unfolds via the default Declarations workflow.

Status	Action
Pending	<ul style="list-style-type: none"><li>▫ <b>Compliance Manager</b> creates a new declaration or modifies an existing declaration and adds new items, manufacturer parts, or commodities</li><li>▫ Adds specifications to the declaration</li><li>▫ Invites the Supplier of those parts to confirm that they comply with the specified regulations</li></ul>
Open to Supplier	<ul style="list-style-type: none"><li>▫ The <b>supplier</b> is at the supplier firm, and is an Agile user who has been assigned the <b>(Restricted) Material Provider</b> role</li><li>▫ Supplier confirms or denies that those parts comply with regulations</li><li>▫ Supplier may also suggest alternative parts that do comply, or comply better</li><li>▫ Electronically “signs” and returns the declaration to the compliance manager</li></ul>
Submit to Manager	Compliance Manager verifies the contents of the declaration have been completed by the supplier, and he routes the declarations to approvers and observers
Review	Approvers and observers approve or reject the declaration
Released	By moving the workflow to Released status, compliance manager publishes the materials into the product records. Once published, the materials are visible on the <b>Item</b> tab, <b>Composition</b> tab, and the <b>Manufacturer Part Composition</b> tab
Implemented	Compliance Manager changes the status of the declaration to Implemented once it is manufactured and disseminated in the field.

The declaration lists the parts in a product assembly and shows the substances and materials that are contained in those parts. It is linked to one or more specifications, which may restrict how much of a particular substance that product assembly may contain. A declaration is always sent to only one supplier.

When the declaration is returned to the compliance manager, reviewed for verification, and released, the data in the declaration is published to the rest of the system. Unlike other Agile Changes (that is, routable objects that move through workflows), a declaration cannot be unreleased. It can, however, be moved to a previous status without affecting any of the contents.

## Deploying Custom Workflows in PG&C

Whereas suppliers have previously been able to access only the default Declarations workflow, PG&C permits suppliers to access custom declarations, as long as they are properly set up. To permit access to custom workflows, you must change My Open Declarations from this:

Declarations Cover Page.Status Equal To Default Declarations.Open To Supplier AND  
Cover Page.Supplier Equal To \$USERORG

to this:

(Declarations Cover Page.Status Equal To Default Declarations.Open To Supplier OR  
Cover Page.Status Equal To Custom workflow <Name>.Open To Supplier) AND  
Cover Page.Supplier Equal To \$USERORG

## **Declaration Notifications**

Declaration notifications behave like Changes in Agile. When a declaration is sent to the supplier, the default recipient in the Suppliers tab is notified (of course, depending on the supplier user being correctly configured). When the declaration is returned to the buyer, the compliance manager is notified.

Other PG&C objects support notifications similarly to objects in Product Collaboration.





# Configuring Single Sign-On

**This Appendix includes the following:**

---

- Overview of Single Sign-On in PLM ..... 445
- Configuring and Deploying SSO with Windows NTLM ..... 446

PLM Release 9.2.2.4 introduces the possibility of integrating aspects of your PLM system with Single Sign-On (SSO) capability. The PLM releases following 9.2.2.4 also include the SSO capability.

## Overview of Single Sign-On in PLM

With SSO configured and enabled for your PLM system, a user that has signed in to the system once (for instance, through the corporate portal) is not prompted again by a "login" dialog in such cases as:

- Launching Web Client
- Clicking on a URL for an email notification
- When a customer's supplier launches the Microsoft Excel-based Solution from a Declaration
- When Web Client times out.


---

Note	SSO is a Web-based solution that can be enabled only for Agile Web Client. SSO cannot be configured or applied from Java Client, Administrator module in Java Client, or the Agile SDK.
------	---

---

Single Sign-on integrates with the centralized security management, other business and training applications, and improves user productivity in Agile Web Client environment.


The sections below give a general overview to Single Sign-On in Agile PLM, followed by steps to configure and deploy SSO with Windows NTLM.

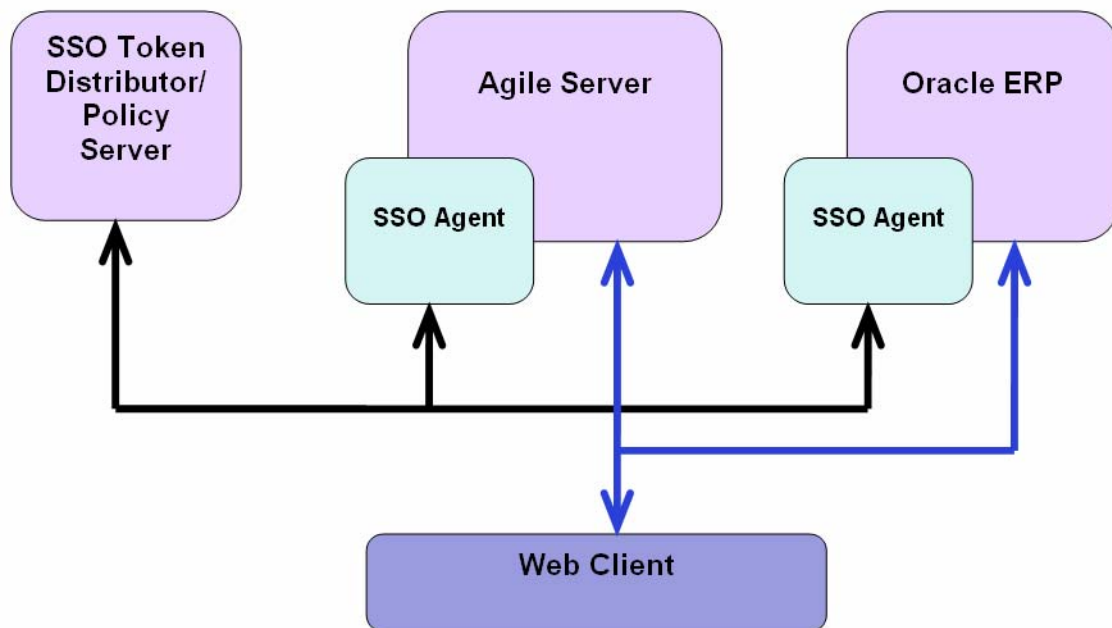

## Configuring and Deploying SSO with Windows NTLM

The following sections outline the steps to configure and deploy NTLM for Single sign-on capability.

### SSO NTLM Authentication

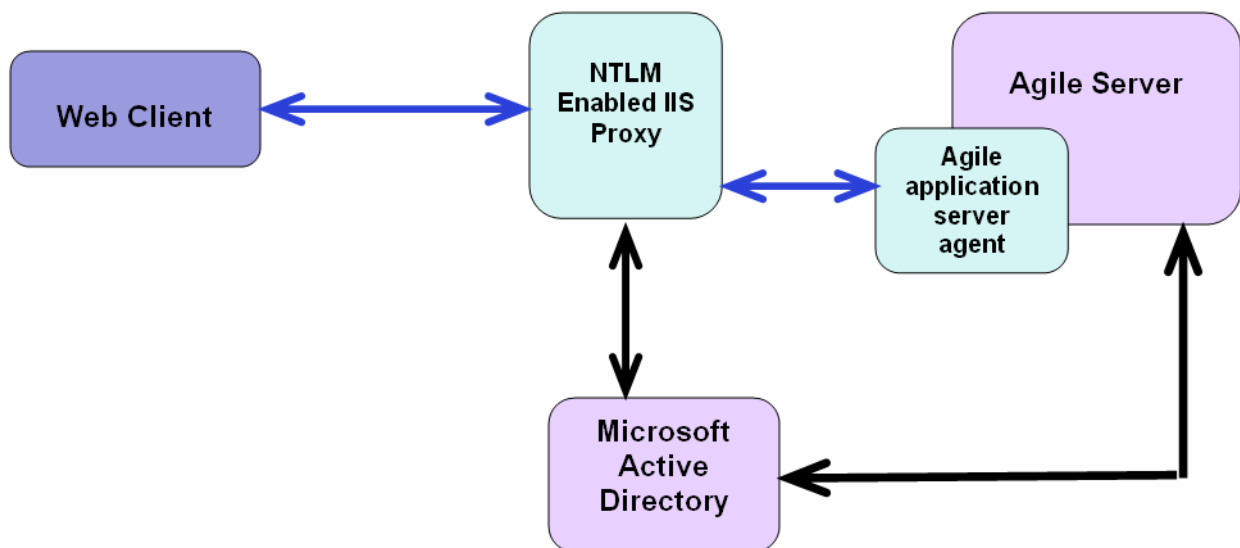

## Configure SSO for Windows NTLM

Microsoft Windows NTLM has been certified for PLM Rel. 9.2.2.4, and is therefore recommended for SSO deployment (over other third-party software). Please discuss your company's needs with your Oracle Consulting – Agile Practice representative.

### Configure IIS Proxy

These are the steps to configure Windows NTLM for Single sign-on with Internet Information Services (IIS) as proxy server.

---

Note	The prerequisite for this configuration is that the Windows server on which IIS is running has been joined to a Windows domain. "Microsoft Active Directory" is the name of the Windows Domain controller since Windows 2000.
------	---

---

1. In Windows 2003, choose Start > Settings > Administrative Tools > IIS Manager.
2. Select local computer, right-click and choose Web Sites > Default Web Site.
3. Select Directory Security tab.
4. Click Edit.
5. Uncheck Enable anonymous access, check Integrated Windows authentication, and click Apply.
6. Restart IIS service.

### Configure PLM for NTLM

To configure your PLM system for SSO with NTLM, please perform these operations.

#### A. Edit this file:

**\$ORA\_HOME/j2ee/home/config/jazn.xml.**

- Comment out the following elements:

```
<!--property name="idm.authentication.name" value="JavaSSO" />
<property name="idm.token.assertter.class"
value="oracle.security.jazn.sso.SSOCookieTokenAsserter" />
<property name="idm.token.collector.class"
value="oracle.security.jazn.sso.SSOCookieTokenCollector" />
<property name="idm.token.type" value="HTTP_COOKIE" />
<property name="idm.token.collector.cookie.1"
value="ORA_OC4J_SSO" /-->
```

- Add the following elements:

```
<property name="idm.authentication.name" value="AgilePLM-SSO" />
<property name="idm.token.assertter.class"
value="com.agile.admin.security.oracle.TokenAsserterImpl" />
<property name="idm.token.collector.class"
```

```

value="com.agile.admin.security.oracle.TokenCollectorImpl" />
<property name="idm.token.type" value="HTTP_REQUEST" />
<!-- SSO Type, can be one of following values: SECURE-PROXY,
SITEMINDER, NTLM /-->
<property name="agile.security.sso.interceptor.type"
value="SECURE-PROXY" />

```

#### B. Edit this file:

**\$ORA\_HOME/j2ee/home/application-deployments/Agile/orion-application.xml.**

- Add this element:

```
<jazn-web-app auth-method="CUSTOM_AUTH" />
```

#### C. Restart Agile.

## Deploy NTLM

The following are possible SSO deployment scenarios with NTLM, one for secure proxy and one for transparent or no proxy.

### With Secure Proxy

With this deployment, authentication takes place on the proxy server, so it is recommended for those companies that use a proxy server.

#### Request flow with this deployment:

1. User launches browser to access Agile PLM (for example, <http://agileplm.xyz.com/Agile/PLMServlet>).
2. The NTLM-enabled IIS server challenges the browser for credentials.
3. After a successful NTLM handshake, the request reaches Agile Application Server (AAS) agent with user information.

NTLM is a connection-based authentication protocol. For each new socket connection between client and server (or proxy), it has to exchange credentials by sending and responding to HTTP requests and responses.

4. The AAS agent passes the user information to the application server security framework.
5. The user will be allowed to access Agile applications.

This authentication happens whenever the client sends an HTTP POST request; therefore, authentication can re-occur even during an established user session.

### With Transparent Proxy or No Proxy

#### Request flow with this deployment:

1. User launches browser to access Agile (for example, <http://agileplm.xyz.com/Agile/PLMServlet>).
2. The Agile Application Server (AAS) agent installed on server challenges the browser for credentials.
3. After a successful NTLM handshake, the AAS agent passes the user information to the

application server security framework.

4. The user will be allowed to access Agile applications.



# Changes to PG&C Objects, Roles, and Privileges in an Upgraded Database

**This Appendix includes the following:**

---

▪ Upgrading PG&C Business Objects, Roles, and Privilege Masks.....	451
▪ Attributes to be Added to PG&C Classes (Rel. 9.2.2.4) .....	451
▪ Upgrading PG&C (Rel. 9.2.2) .....	452
▪ Attributes to be Added to PG&C Business Objects (Rel. 9.2.2) .....	454
▪ Upgrading PG&C (Rel. 9.2.1.3) .....	456
▪ Attributes to be Added to PG&C Business Objects (Rel. 9.2.1) .....	456
▪ Privilege Masks to be Added to Compliance Manager Role (Rel. 9.2) .....	457
▪ Attributes to be Added to Read Privilege Masks, by Base Class (Rel. 9.2).....	457
▪ Attributes to be Added to Modify Privilege Masks, by Base Class (Rel. 9.2).....	464

## Upgrading PG&C Business Objects, Roles, and Privilege Masks

When you upgrade your Agile PLM database, scripts in the database upgrade tool (AUT) check to see if any PG&C-related data already exists in the system from a previous release. If your company is upgrading its Agile PLM configuration but did not previously own the PG&C solution, all PG&C attributes introduced in the current release are automatically added to your database.

However, any existing Agile PLM roles and privilege masks that your company uses are not automatically updated by the upgrade scripts.

For instance, privileges and attributes that were added in the 9.2.2 release (if you used PG&C in 9.2.1) are not added to existing roles during upgrade. You must add them manually in Java Client.

Agile PLM includes a number of “example roles” that you can use to modify your own roles (Java Client > Admin > Examples node folder > Example Roles). Example roles are read-only and cannot be modified. However, you can use Save As to make a copy of an example role and modify the copied role.

Example roles include example privilege masks (Examples > Example Privileges). When you use Save As to create a copy of an example role, the system populates the new role with the privilege masks.

Note that the PC-related privileges still need to be updated manually.

## Attributes to be Added to PG&C Classes (Rel. 9.2.2.4)

**Declarations > Items [and] Manufacturer Parts [and] Part Groups;**

**Items > Compliance tab > Compositions table;  
Manufacturer Parts > Compliance tab > Compositions table; and,  
Part Groups > Compliance tab > Compositions table**

Exclude from Compliance Check

**Items > BOM [and] Manufacturers tabs**

Pending Declarations (new icon)

**Change Orders > Affected Items tab, and  
Manufacturer Orders > Affected Items tab**

Pending Declarations (Image)

**Suppliers > General Info tab**

Default Declaration Recipient

## Upgrading PG&C (Rel. 9.2.2)

The most important part of upgrading from an earlier version of PG&C to PLM Release 9.2.2 is running the Compliance Migration Task.

### Compliance Migration Task and Mass Tolerance Percentage

For customers who used PG&C before Rel. 9.2.2, the Compliance Migration Task must be enabled and run once; then this task can be disabled and is not needed. It is very important that this task is run to complete the data migration for legacy compositions; otherwise, rollup results may be unreliable.

However, before running this task, you must set the error tolerance for substances in compositions, as this setting gives value to the levels of disclosure.

1. Set a reasonable [Mass Tolerance Percentage](#) (on page 428).
2. Then run [Compliance Migration Task](#) on page 452.

So, for step 1, please read the description of Mass Tolerance Percentage setting and think about a reasonable level of tolerance for your company's legacy compositions. This will apply to the compositions when the system runs the Compliance Migration Task.

You may change the Mass Tolerance Percentage value later on, but that value will apply only to future compositions; to evaluate legacy declarations and the compositions they delineate after Mass Tolerance Percentage is changed, you would have to check the compliance of individual declarations, manually, one by one.

---

Note	If the weights of Items or Manufacturer Parts came through the association of a Part Group with a Conversion Factor of 1, the masses do not account for the conversion factor. If you run in to this problem, please contact Oracle Consulting – Agile Practice for a solution.
------	---

---



For step 2, the Compliance Migration task does these tasks:

Part 1: Performs rollup for all declarations and manually imported mfr. part compositions;

Part 2: Performs the Full Material Disclosure check for all legacy compositions whose Mass Disclosure Type are not set, sorting them into three categories: Fully Disclosed, Partially Disclosed, or Undisclosed.

## **Known Issue with Part Group and Conversion Factor**

This issue has been fixed for Rel.9.2.2, but still must be dealt with by upgrade customers: it is *not* resolved by the 9.2.2 Upgrade, nor the Compliance Migration task mentioned above.

If the composition of Items or Manufacturer Parts was copied from a Part Group, and the Conversion Factor is not equal to 1, the mass on the copied composition does not account for the conversion factor. If you run in to this problem, contact your Oracle Consulting – Agile Practice representative for a solution.

To describe the issue more fully: if a part has been added to a part group that already has compositions published to it *and* if the conversion factor is greater than 1, the system can fail to take the conversion factor into account when the mass is copied from the part group to associated items or manufacturer parts. If the conversion factor is 1 (or less than 1), which is most frequently the case, there is no issue; but if the conversion factor is, for example, 2 and the part group's mass is 10 g, the system can copy the associated part's mass as 10 g when it should be  $2 \times 10 \text{ g} = 20 \text{ g}$ .

This is mentioned so you will review the data in returned declarations (before publication) to ensure mass of parts is being correctly copied. Manual entry of data may be required.

## **Composition Type and Legacy Compositions**

When upgrading to PLM 9.2.2, the Composition Type for existing (legacy) compositions must be identified. During the migration, if the composition is identified as "re-usable," the Result Compliance of the composition may change from Missing Info to a better value such as Exempt or Compliant. Later, when the user manually runs Calculate Compliance on an assembly or a scheduled rollup evaluates the assembly, rollup results can change.

If a composition without specification is identified as re-usable, if there are other compositions (with specification) that are re-usable, the system tries to use all of the re-usable compositions to calculate compliance of the specification. In this case, if the Composition Rollup Rule (see page 18-8) is set to Strict, then all the re-usable compositions must be Compliant in order to make the spec "compliant". (This contrasts with the "All Spec" compositions in Rel. 9.2.1, which is detailed in *PG&C User Guide*.)

## Attributes to be Added to PG&C Business Objects (Rel. 9.2.2)

### Substances > General Info tab

Alias

### Declarations > Cover Page tab

Has Invalid Substance

Need Rollup

### Declarations > Items / Manufacturer Parts / Part Groups tabs

Mass Disclosure

### Declarations > Item Composition / Manufacturer Part Composition / Part Group Composition tables

User-entered CAS number

Intentionally Added

Calculated Mass

Result PPM

Result Mass

Spec Intentionally Added

### Specification > Substances tab

Disallow Intentionally Adding

### Items / Manufacturer Parts / Part Groups

The attributes below apply to the several “parts” classes and are organized by tabs:

#### ***Compositions tab***

Mass Disclosure

#### ***Substances tab***

User-entered CAS number

Intentionally Added

Calculated Mass

Result PPM

Result Mass

Spec Intentionally Added

Source (for Item object only)

***BOM tab (for Item Object only)***

Summary Compliance

Change Object

***Affected Items tab***

Summary Compliance

## **Default Read / Modify Privileges**

### **Read Privileges**

All of the new (9.2.2) attributes that are listed *above* must be added to the privilege masks *below* for the corresponding Agile class. For example, Read Items and (Restricted) Read Items need to have added all the attributes listed in “Items / Manufacturer Parts / Part Groups” above.

Read Items

(Restricted) Read Items

Read Mfr Parts

(Restricted) Read Mfr Parts

Read Part Groups

(Restricted) Read Part Groups

Read Specifications

Read Substances

Read Declarations

Read My Open and Submitted Declarations

Read Supplier Created Declarations

### **Modify Privileges**

New (9.2.2) attributes that are listed below must be added to the named privilege masks.

Modify All Items: User-entered CAS number, Intentionally Added, Source

Modify Preliminary Items: User-entered CAS number, Intentionally Added, Source

Modify Released Items: User-entered CAS number, Intentionally Added, Source

Modify Mfr Parts: User-entered CAS number, Intentionally Added, Source

Modify Substances: Alias

Modify Specifications: Disallow Intentionally Adding

Modify Declarations: User-entered CAS number, Intentionally Added

Modify My Open Declarations: User-entered CAS number, Intentionally Added

Modify Supplier Created Declarations: User-entered CAS number, Intentionally Added

## **Upgrading PG&C (Rel. 9.2.1.3)**

Upgrade customers need to manually add the new Import privilege to the roles that they created and to any user who will need to use Agile Import. The (Restricted) Material Provider role cannot be changed in Java Client, so you must contact Agile Support.

## **Attributes to be Added to PG&C Business Objects (Rel. 9.2.1)**

### **Declarations – Cover Page**

Compliance Manager Title

Compliance Manager Phone

Compliance Manager Email

Compliance Manager Fax

Supplier DUNs Number

Supplier Address

Supplier Contact Title

Supplier Contact Phone

Supplier Contact Email

Supplier Contact Fax

Supplier Contact Name

## **Items – Compliance Tab – Composition Table**

Source

Composition Type

Date submitted by Supplier

Date Released

## **Manufacturer Parts – Compliance Tab – Composition Table**

Source

Composition Type

Date submitted by Supplier

Date Released

## **Part Groups – Compliance Tab – Composition Table**

Source

Composition Type

Date submitted by Supplier

Date Released

## **Privilege Masks to be Added to Compliance Manager Role (Rel. 9.2)**

Export

Read Items

Read Mfr Parts

Read Suppliers

## **Attributes to be Added to Read Privilege Masks, by Base**

# Class (Rel. 9.2)

## Substances

Substances.Compositions.Conversion Factor

Substances.General Info.Base Substance

## Specifications

Specifications.General Info.Exemptions

Specifications.General Info.Validation Type

## Part Groups

Part Groups.Compositions.Calculated Compliance

Part Groups.Compositions.Composition

Part Groups.Compositions.Declaration Type

Part Groups.Compositions.Declared Compliance

Part Groups.Compositions.Declared Weight

Part Groups.Compositions.Effective From Date

Part Groups.Compositions.Exemption Expiration Date

Part Groups.Compositions.Exemptions

Part Groups.Compositions.Result Compliance

Part Groups.Compositions.Specification

Part Groups.Compositions.Supplier

Part Groups.Compositions.Type (Image)

Part Groups.Part Family Title Block.Compliance Calculated Date

Part Groups.Part Family Title Block.Overall Compliance

Part Groups.Specifications.Calculated Compliance

Part Groups.Specifications.Declared Compliance

Part Groups.Specifications.Description

Part Groups.Specifications.Exemption Expiration Date

Part Groups.Specifications.Exemptions

Part Groups.Specifications.Jurisdictions

Part Groups.Specifications.Lifecycle Phase  
Part Groups.Specifications.Need Compliance Check  
Part Groups.Specifications.Result Compliance  
Part Groups.Specifications.Specification  
Part Groups.Specifications.Specification Type  
Part Groups.Specifications.Type (Image)  
Part Groups.Specifications.Validation Type  
Part Groups.Substances.Calculated Compliance  
Part Groups.Substances.Calculated PPM  
Part Groups.Substances.Child Level  
Part Groups.Substances.Conversion Factor  
Part Groups.Substances.Exemption Expiration Date  
Part Groups.Substances.Exemptions  
Part Groups.Substances.Reporting  
Part Groups.Substances.Result Compliance  
Part Groups.Substances.Specification  
Part Groups.Substances.Threshold Mass PPM

## **Declarations**

Declarations.Item Composition.Calculated Compliance  
Declarations.Item Composition.Calculated PPM  
Declarations.Item Composition.Child Level  
Declarations.Item Composition.Conversion Factor  
Declarations.Item Composition.Exemption Expiration Date  
Declarations.Item Composition.Exemptions  
Declarations.Item Composition.Result Compliance  
Declarations.Item Composition.Specification  
Declarations.Items.Calculated Compliance

Declarations.Items.Declared Compliance  
Declarations.Items.Effective From Date  
Declarations.Items.Exemption Expiration Date  
Declarations.Items.Exemptions  
Declarations.Items.Result Compliance  
Declarations.Items.Specification  
Declarations.Manufacturer Part Composition.Calculated Compliance  
Declarations.Manufacturer Part Composition.Calculated PPM  
Declarations.Manufacturer Part Composition.Child Level  
Declarations.Manufacturer Part Composition.Conversion Factor  
Declarations.Manufacturer Part Composition.Exemption Expiration Date  
Declarations.Manufacturer Part Composition.Exemptions  
Declarations.Manufacturer Part Composition.Result Compliance  
Declarations.Manufacturer Part Composition.Specification  
Declarations.Manufacturer Parts.Calculated Compliance  
Declarations.Manufacturer Parts.Declared Compliance  
Declarations.Manufacturer Parts.Effective From Date  
Declarations.Manufacturer Parts.Exemption Expiration Date  
Declarations.Manufacturer Parts.Exemptions  
Declarations.Manufacturer Parts.Result Compliance  
Declarations.Manufacturer Parts.Specification  
Declarations.Part Group Composition.Calculated Compliance  
Declarations.Part Group Composition.Calculated PPM  
Declarations.Part Group Composition.Child Level  
Declarations.Part Group Composition.Conversion Factor  
Declarations.Part Group Composition.Exemption Expiration Date  
Declarations.Part Group Composition.Exemptions  
Declarations.Part Group Composition.Result Compliance  
Declarations.Part Group Composition.Specification  
Declarations.Part Groups.Calculated Compliance



Declarations.Part Groups.Declared Compliance  
Declarations.Part Groups.Effective From Date  
Declarations.Part Groups.Exemption Expiration Date  
Declarations.Part Groups.Exemptions  
Declarations.Part Groups.Result Compliance  
Declarations.Part Groups.Specification  
Declarations.References.Description  
Declarations.Relationships - Affected By.Type (Image)  
Declarations.Relationships - Affects.Criteria Met  
Declarations.Relationships - Affects.Current Status  
Declarations.Relationships - Affects.Description  
Declarations.Relationships - Affects.Event  
Declarations.Relationships - Affects.Notes  
Declarations.Relationships - Affects.Number  
Declarations.Relationships - Affects.Result  
Declarations.Relationships - Affects.Type (Image)

## **Items**

Items.Compositions.Calculated Compliance  
Items.Compositions.Composition  
Items.Compositions.Declaration Description  
Items.Compositions.Declaration Lifecycle Phase  
Items.Compositions.Declaration Type  
Items.Compositions.Declared Compliance  
Items.Compositions.Declared Weight  
Items.Compositions.Effective From Date  
Items.Compositions.Exemption Expiration Date  
Items.Compositions.Exemptions

Items.Compositions.Result Compliance  
Items.Compositions.Specification  
Items.Compositions.Supplier  
Items.Manufacturers.Summary Compliance  
Items.Specifications.Calculated Compliance  
Items.Specifications.Declared Compliance  
Items.Specifications.Description  
Items.Specifications.Exemption Expiration Date  
Items.Specifications.Exemptions  
Items.Specifications.Jurisdictions  
Items.Specifications.Lifecycle Phase  
Items.Specifications.Need Compliance Check  
Items.Specifications.Result Compliance  
Items.Specifications.Specification  
Items.Specifications.Specification Type  
Items.Specifications.Validation Type  
Items.Substances.CAS Number  
Items.Substances.Calculated Compliance  
Items.Substances.Calculated PPM  
Items.Substances.Child Level  
Items.Substances.Conversion Factor  
Items.Substances.Declaration  
Items.Substances.Declared Compliance  
Items.Substances.Declared PPM  
Items.Substances.Exemption Expiration Date  
Items.Substances.Exemptions  
Items.Substances.Lifecycle Phase  
Items.Substances.Mass  
Items.Substances.Reporting  
Items.Substances.Result Compliance

Items.Substances.Specification  
Items.Substances.Substance Name  
Items.Substances.Substance Type  
Items.Substances.Threshold Mass PPM  
Items.Substances.Type (Image)  
Items.Suppliers.Lifecycle Phase  
Items.Substances.Substance Type  
Items.Substances.Supplier  
Items.Suppliers.Site  
Items.Suppliers.Supplier  
Items.Suppliers.Type (Image)  
Items.Title Block.Compliance Calculated Date  
Items.Title Block.Exclude from Rollup  
Items.Title Block.Overall Compliance  
Items.Title Block.Shippable Item

## **Mfr Parts**

Manufacturer parts.Specifications.Declared Compliance  
Manufacturer parts.Compositions.Declared Compliance  
Manufacturer parts.Compositions.Declared Weight  
Manufacturer parts.Specifications.Description  
Manufacturer parts.Compositions.Effective From Date  
Manufacturer parts.Specifications.Exemption Expiration Date  
Manufacturer parts.Compositions.Exemption Expiration Date  
Manufacturer parts.Substances.Exemption Expiration Date  
Manufacturer parts.Specifications.Exemptions  
Manufacturer parts.Compositions.Exemptions  
Manufacturer parts.Substances.Exemptions

Manufacturer parts.Specifications.Jurisdictions  
Manufacturer parts.Specifications.Lifecycle Phase  
Manufacturer parts.Specifications.Need Compliance Check  
Manufacturer parts.Specifications.Result Compliance  
Manufacturer parts.Compositions.Result Compliance  
Manufacturer parts.Substances.Result Compliance  
Manufacturer parts.Specifications.Specification  
Manufacturer parts.Compositions.Specification  
Manufacturer parts.Substances.Specification  
Manufacturer parts.Compositions.Supplier  
Manufacturer parts.Specifications.Specification Type  
Manufacturer parts.Specifications.Type (Image)  
Manufacturer parts.Compositions.Type (Image)  
Manufacturer parts.Specifications.Validation Type  
Manufacturer parts.Compositions.Declaration Type  
Manufacturer parts.General Info.Compliance Calculated Date  
Manufacturer parts.General Info.Overall Compliance  
Manufacturer parts.Substances.Child Level  
Manufacturer parts.Substances.Threshold Mass PPM

## **Attributes to be Added to Modify Privilege Masks, by Base Class (Rel. 9.2)**

### **Modify Declarations**

Declarations.Item Composition.CAS number  
Declarations.Item Composition.Conversion Factor  
Declarations.Item Composition.Exemption Expiration Date  
Declarations.Item Composition.Exemptions  
Declarations.Item Composition.Substance Name

Declarations.Item Composition.Substance Type  
Declarations.Items.Declared Compliance  
Declarations.Items.Effective From Date  
Declarations.Items.Exemption Expiration Date  
Declarations.Items.Exemptions  
Declarations.Items.Item Rev  
Declarations.Items.Specification  
Declarations.Manufacturer Part Composition.CAS Number  
Declarations.Manufacturer Part Composition.Conversion Factor  
Declarations.Manufacturer Part Composition.Exemption Expiration Date  
Declarations.Manufacturer Part Composition.Exemptions  
Declarations.Manufacturer Part Composition.Substance Name  
Declarations.Manufacturer Part Composition.Substance Type  
Declarations.Manufacturer Parts.Declared Compliance  
Declarations.Manufacturer Parts.Effective From Date  
Declarations.Manufacturer Parts.Exemption Expiration Date  
Declarations.Manufacturer Parts.Exemptions  
Declarations.Manufacturer Parts.Mfr Name  
Declarations.Manufacturer Parts.Specification  
Declarations.Manufacturer Part Composition.CAS Number  
Declarations.Part Group Composition.Conversion Factor  
Declarations.Part Group Composition.Exemption Expiration Date  
Declarations.Part Group Composition.Exemptions  
Declarations.Part Group Composition.Substance Name  
Declarations.Part Group Composition.Substance Type  
Declarations.Part Groups.Declared Compliance  
Declarations.Part Groups.Effective From Date  
Declarations.Part Groups.Exemption Expiration Date

Declarations.Part Groups.Exemptions  
Declarations.Part Groups.Mfr Name  
Declarations.Part Groups.Specification  
Declarations.References.Notes  
Declarations.References.Number  
Declarations.Relationships-Affected By.Event  
Declarations.Relationships-Affected By.Notes  
Declarations.Relationships-Affected By.Number  
Declarations.Relationships-Affected By.Result  
Declarations.Relationships-Affects.Event  
Declarations.Relationships-Affects.Notes  
Declarations.Relationships-Affects.Number  
Declarations.Relationships-Affects.Result  
Declarations.Declaration Specification.Is Compliant  
Declarations.Declaration Specification.Specification

## **Modify Mfr.Parts**

Manufacturer Parts.Specifications.Declared Compliance  
Manufacturer Parts.Substances.Declared Compliance  
Manufacturer Parts.Substances.Declared PPM  
Manufacturer Parts.Specifications.Exemption Expiration Date  
Manufacturer Parts.Specifications.Exemptions  
Manufacturer Parts.Substances.Mass  
Manufacturer Parts.Specifications.Specification

## **Modify My Open Declarations**

Declarations.Cover Page.Compliance Manager  
Declarations.Cover Page.Description  
Declarations.Cover Page.Due Date  
Declarations.Cover Page.Name  
Declarations.Cover Page.Workflow

Declarations.Item Composition.CAS Number  
Declarations.Item Composition.Conversion Factor  
Declarations.Item Composition.Exemption Expiration Date  
Declarations.Item Composition.Exemptions  
Declarations.Item Composition.Substance Name  
Declarations.Item Composition.Substance Type  
Declarations.Items.Declared Compliance  
Declarations.Items.Effective From Date  
Declarations.Items.Exemption Expiration Date  
Declarations.Items.Exemptions  
Declarations.Items.Specification  
Declarations.Items.Text10  
Declarations.Manufacturer Part Composition.CAS Number  
Declarations.Manufacturer Part Composition.Conversion Factor  
Declarations.Manufacturer Part Composition.Exemption Expiration Date  
Declarations.Manufacturer Part Composition.Exemptions  
Declarations.Manufacturer Part Composition.Substance Name  
Declarations.Manufacturer Part Composition.Substance Type  
Declarations.Manufacturer Parts.Declared Compliance  
Declarations.Manufacturer Parts.Effective From Date  
Declarations.Manufacturer Parts.Exemption Expiration Date  
Declarations.Manufacturer Parts.Exemptions  
Declarations.Manufacturer Parts.Mfr Name  
Declarations.Manufacturer Parts.Specification  
Declarations.Manufacturer Parts.Text10  
Declarations.Part Group Composition.CAS Number  
Declarations.Part Group Composition.Conversion Factor  
Declarations.Part Group Composition.Description

Declarations.Part Group Composition.Exemption Expiration Date

Declarations.Part Group Composition.Exemptions

Declarations.Part Group Composition.Substance Name

Declarations.Part Group Composition.Substance Type

Declarations.Part Groups.Declared Compliance

Declarations.Part Groups.Effective From Date

Declarations.Part Groups.Exemption Expiration Date

Declarations.Part Groups.Exemptions

Declarations.Part Groups.Mfr Name

Declarations.Part Groups.Specification

Declaration.Declaration Specification.Is Compliant

Declaration.Declaration Specification.Specification

## **Modify Preliminary Items**

Items.Specifications.Declared Compliance

Items.Specifications.Exemptions Expiration Date

Items.Specifications.Exemptions

Items.Specifications.Specification

Items.Substances.Declared Compliance

Items.Substances.Declared PPM

Items.Substances.Mass

## **Modify Released Items**

Items.Specifications.Declared Compliance

Items.Specifications.Exemptions Expiration Date

Items.Specifications.Exemptions

Items.Specifications.Specification

Items.Substances.Declared Compliance

Items.Substances.Declared PPM

Items.Substances.Mass



## Modify Specifications

None

## Modify Substances

Substances.Attachments.Attachment Type

Substances.Attachments.File Description

Substances.Attachments.Filename

Substances.Attachments.Folder Description

Substances.Attachments.Folder Version

Substances.Attachments.Notes

Substances.Compositions.Conversion Factor

Substances.Compositions.Name

Substances.General Info.Base Substance

Substances.General Info.CAS Number

Substances.General Info.Description

Substances.General Info.Lifecycle Phase

Substances.General Info.Name

