

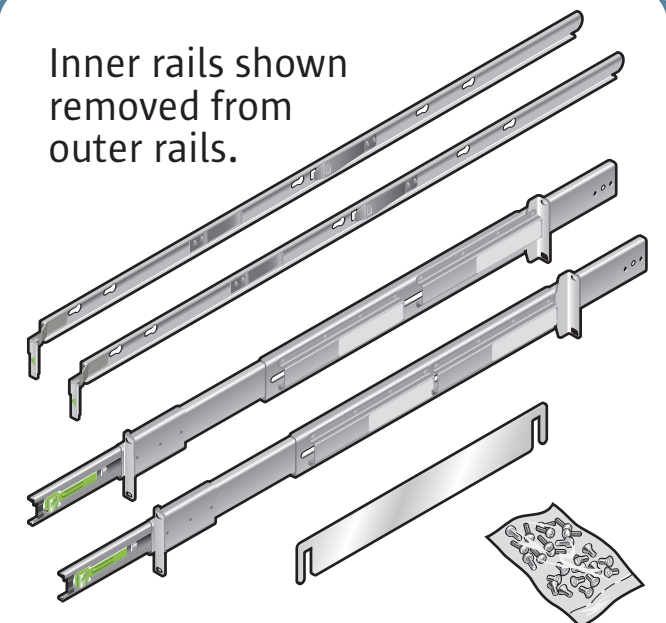
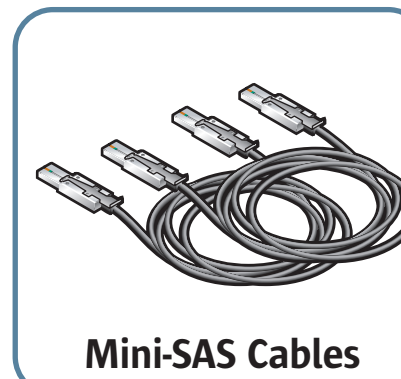
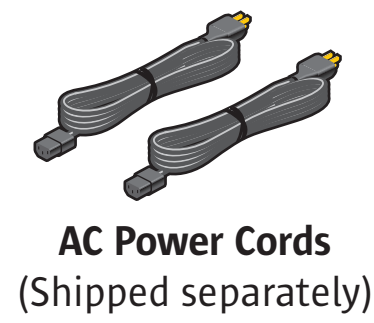


SUN STORAGE J4500 ARRAY SETUP

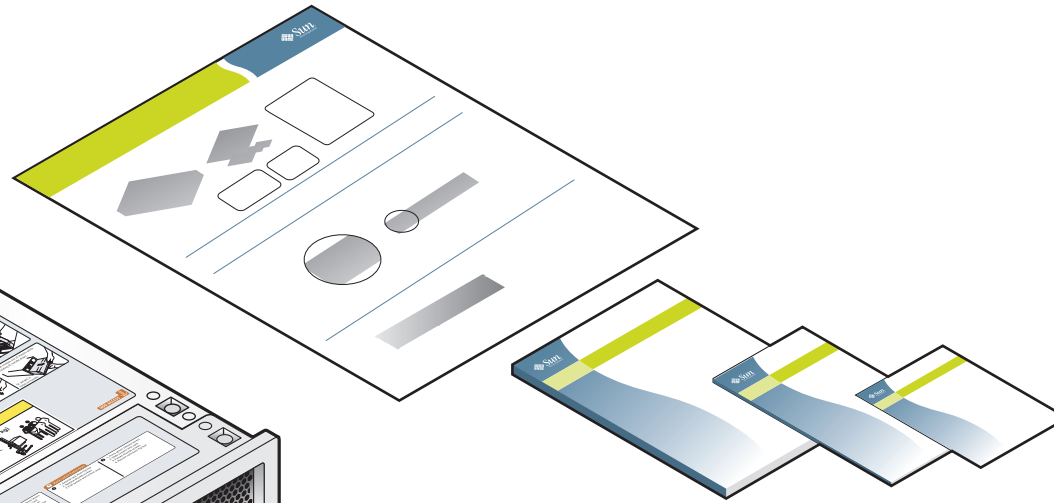

CONTENTS

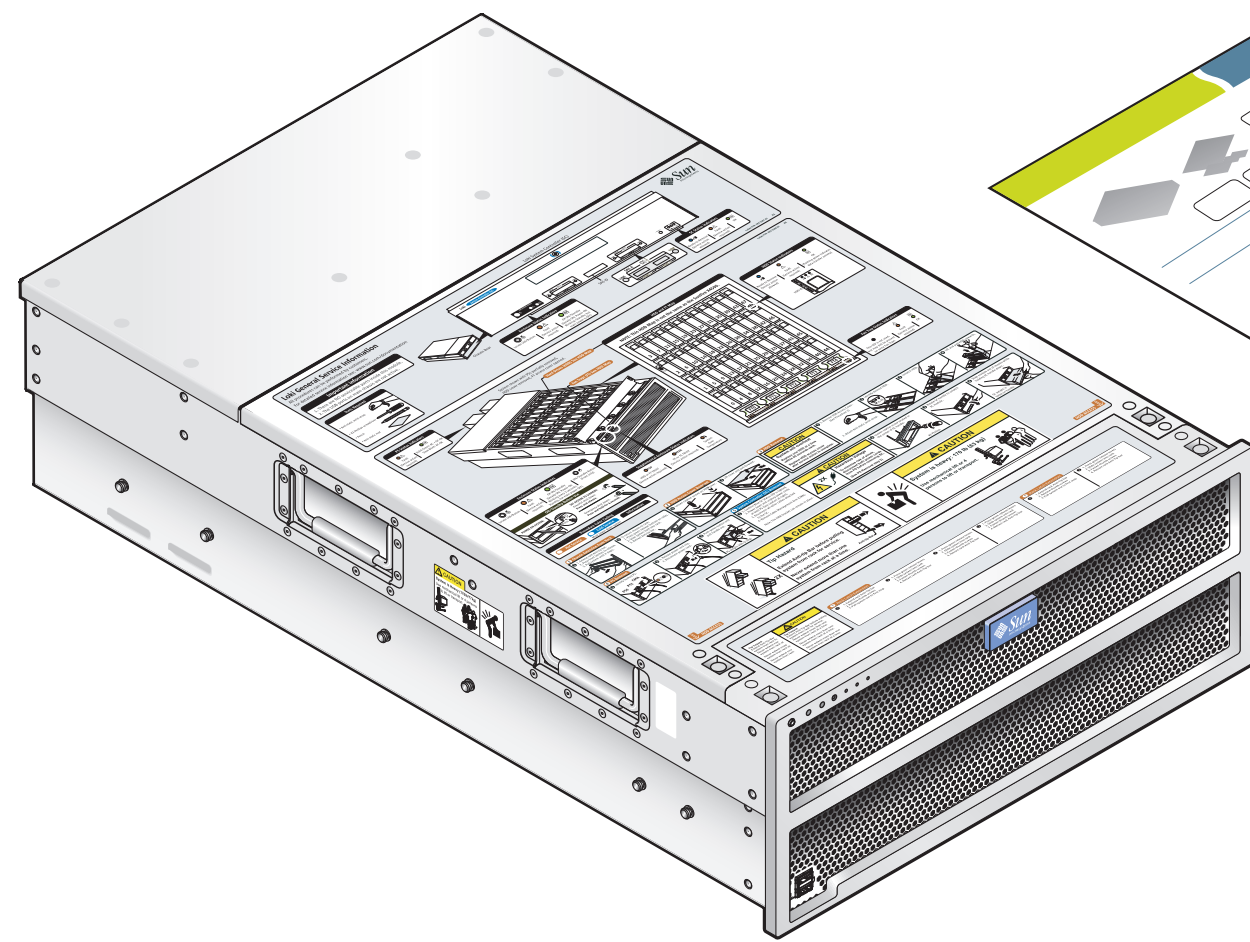

X4500-J Slide Rail Kit

Supported cabinets:

- Sun™ Rack 1000-38
- Sun Rack 1000-42
- Sun Rack II 1042/E
- Sun Rack II 1242/E

SLIDE RAIL INSTALLATION


820-7238-XX





See the *X4500-J Slide Rail Installation Guide* for more information on attaching rack slide rails and installing your array in a rack.

<http://docs.sun.com/app/docs/prod/j4500.array>

FRONT PANEL

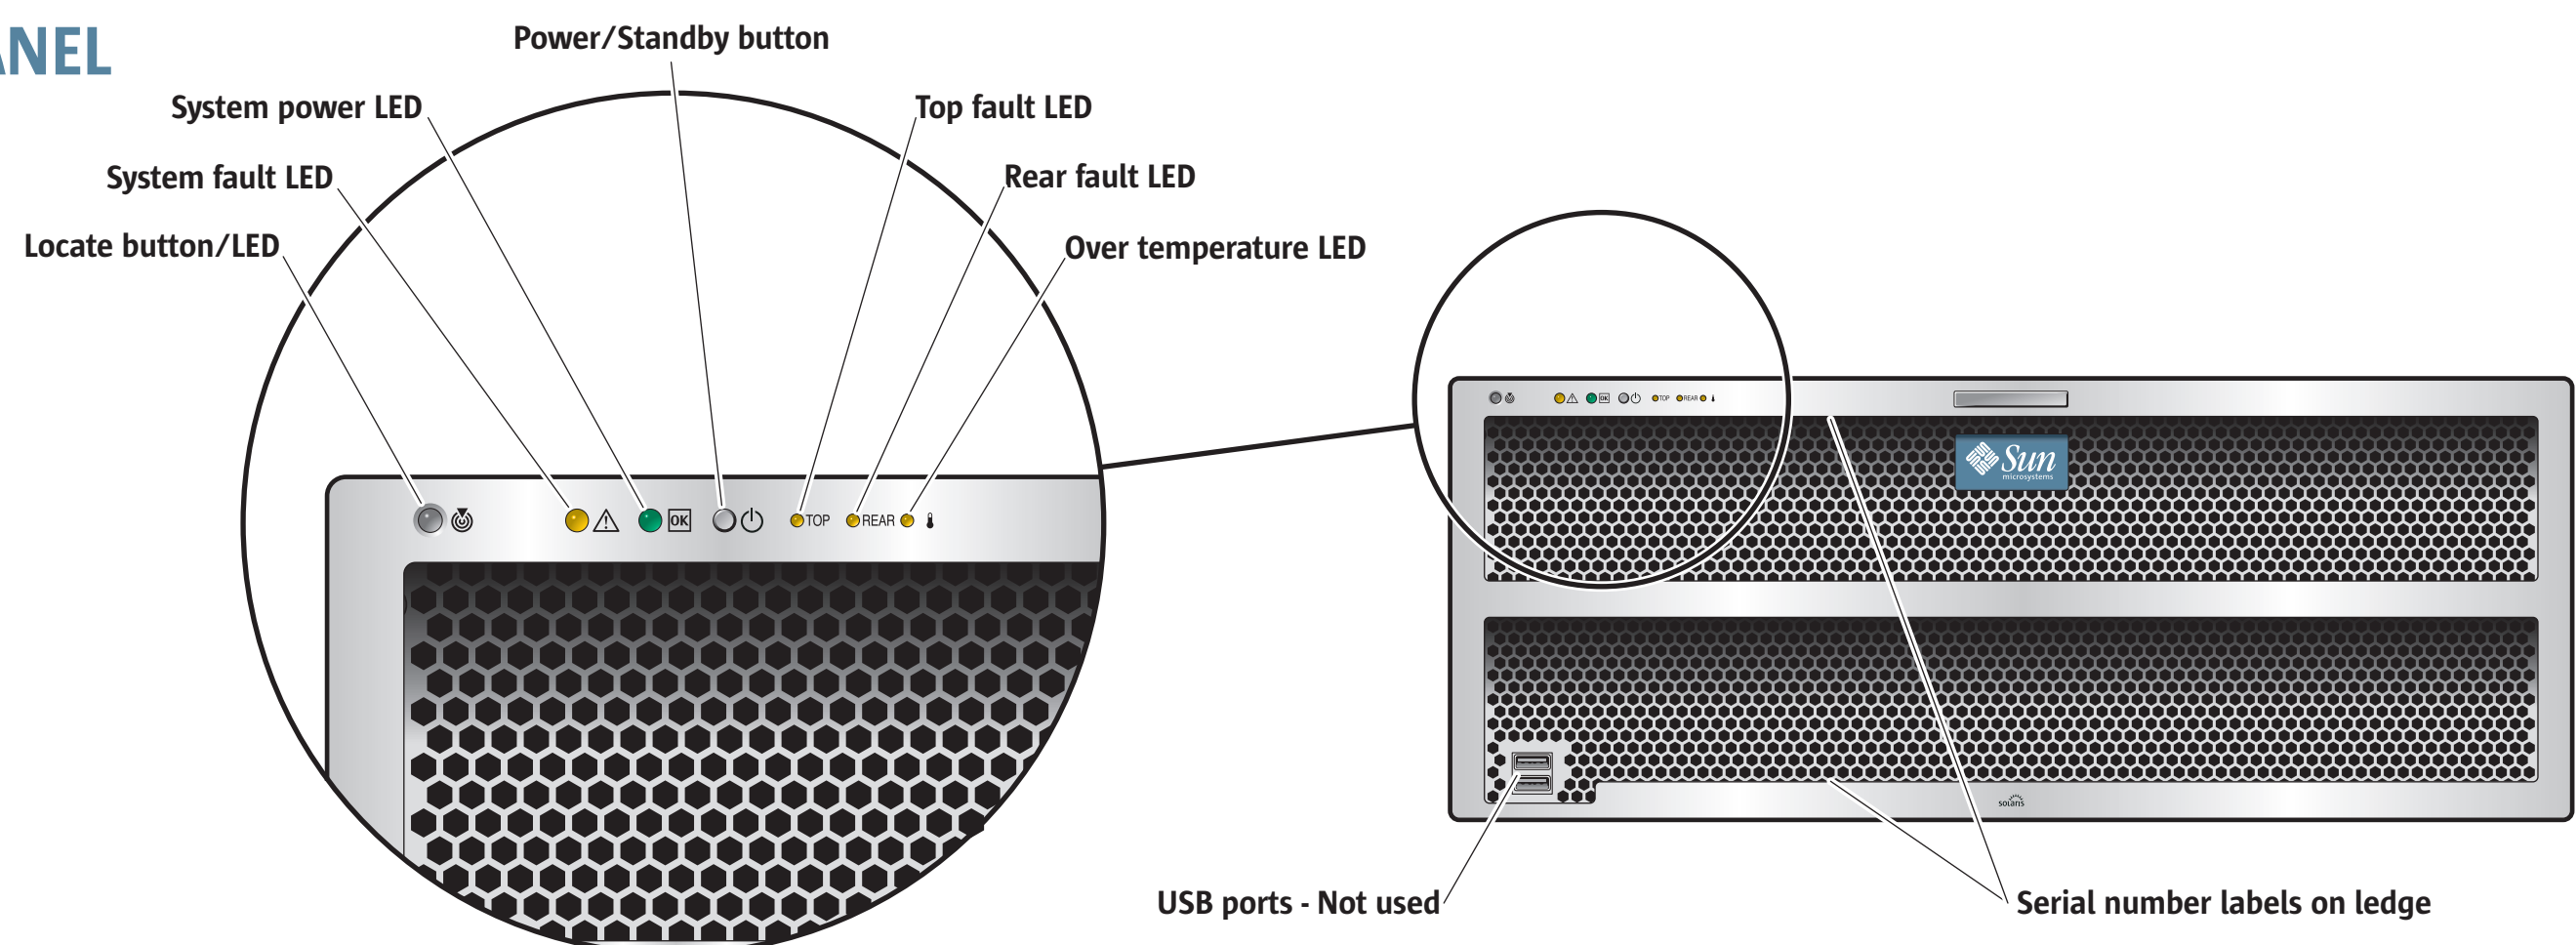


BACK PANEL

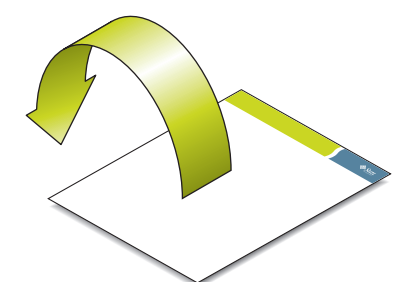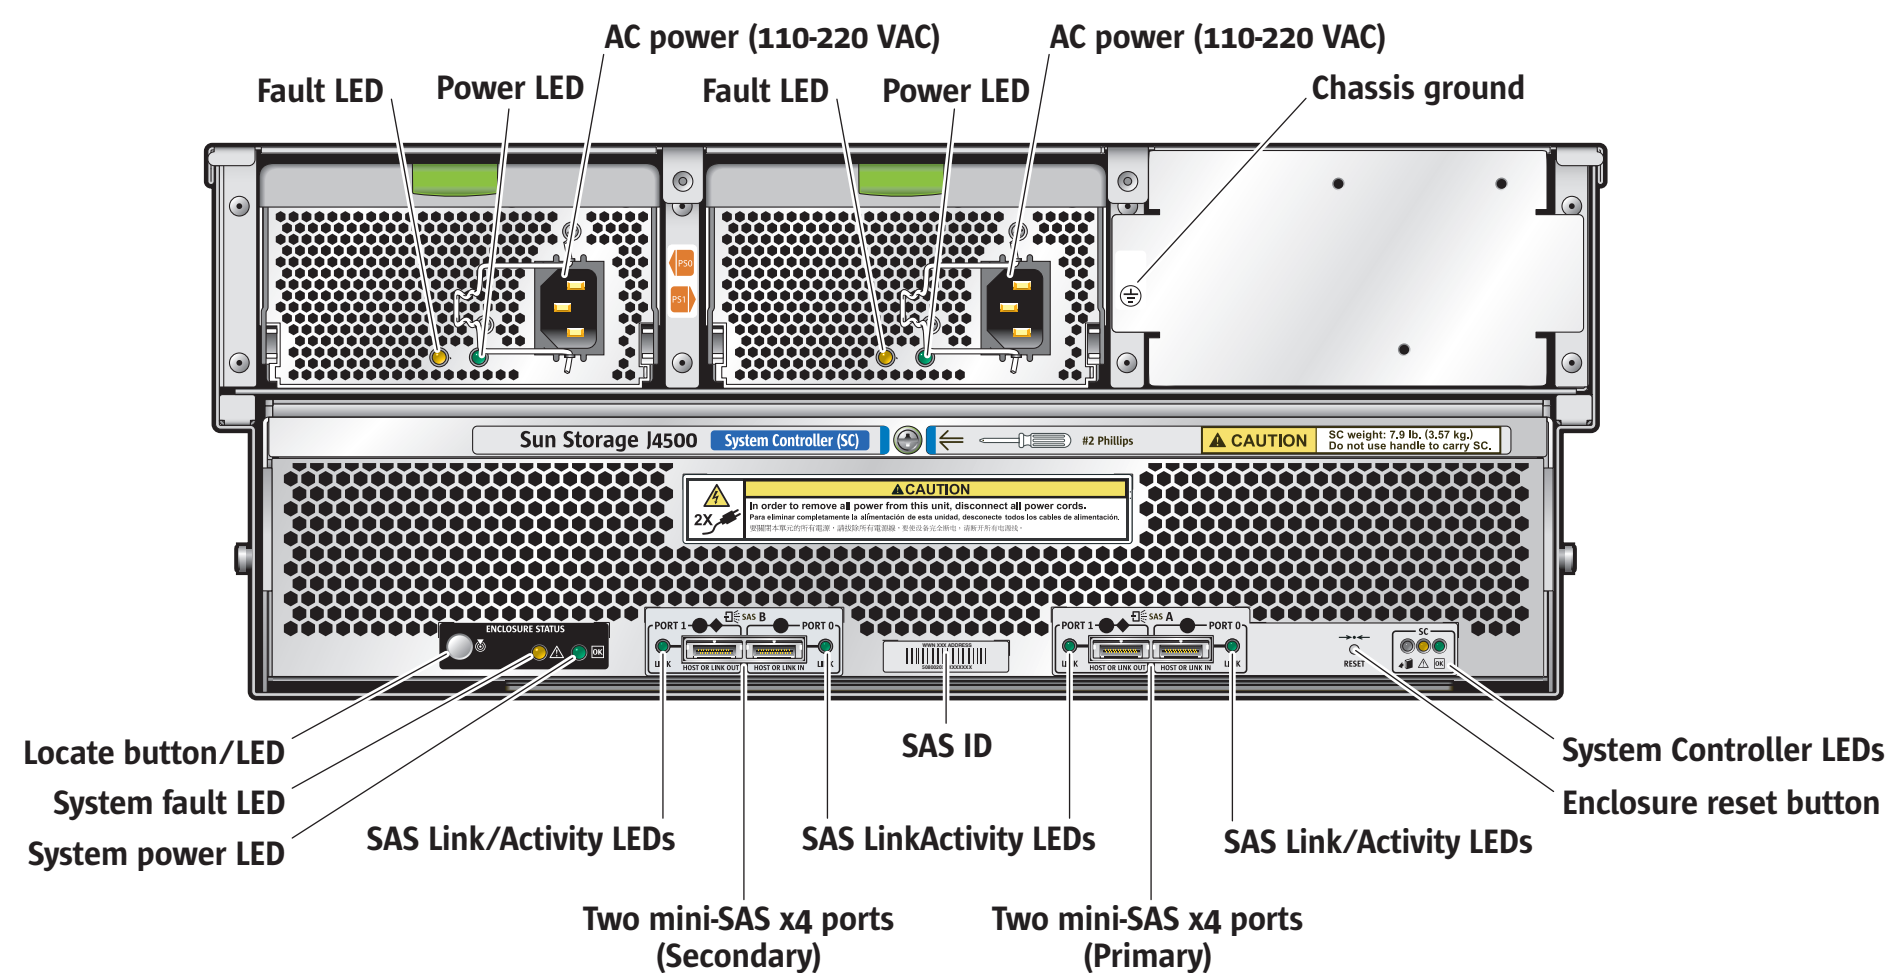

SUN STORAGE J4500 ARRAY SETUP



CONFIGURATIONS

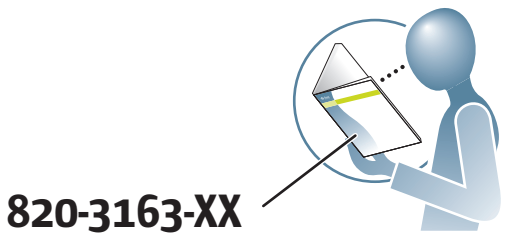

820-3163-XX

How To:

See the *Sun Storage J4500 Array System Overview* for information on supported HBAs, setup and configuration.

Late-Breaking Information:

See the *Sun Storage J4500 Array Product Notes* for the most current information released for your product.






820-3162-XX




<http://docs.sun.com/app/docs/prod/j4500.array>

Sample Supported Configuration

Single Path

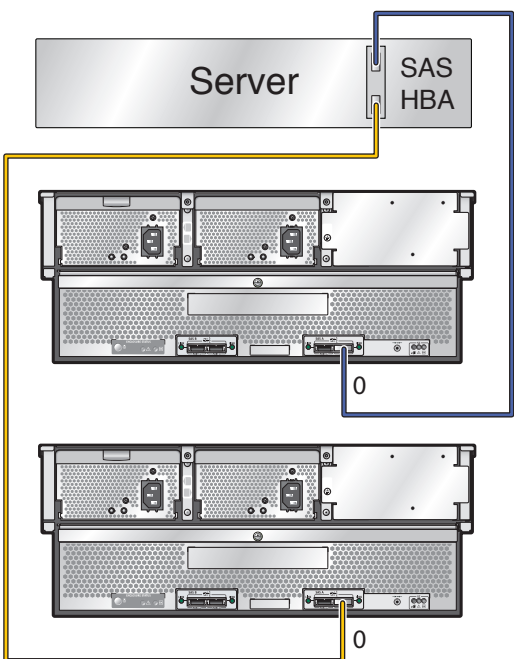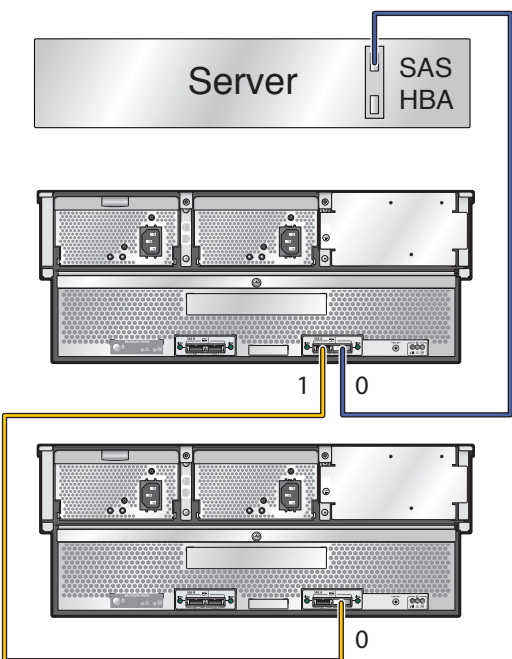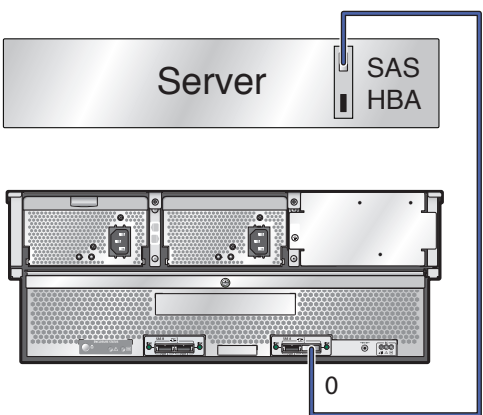


Dual Path*

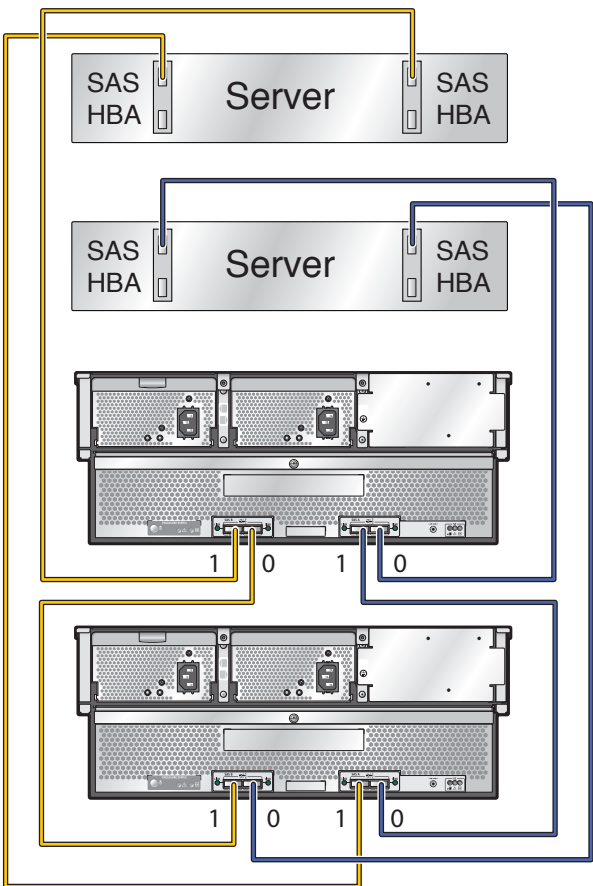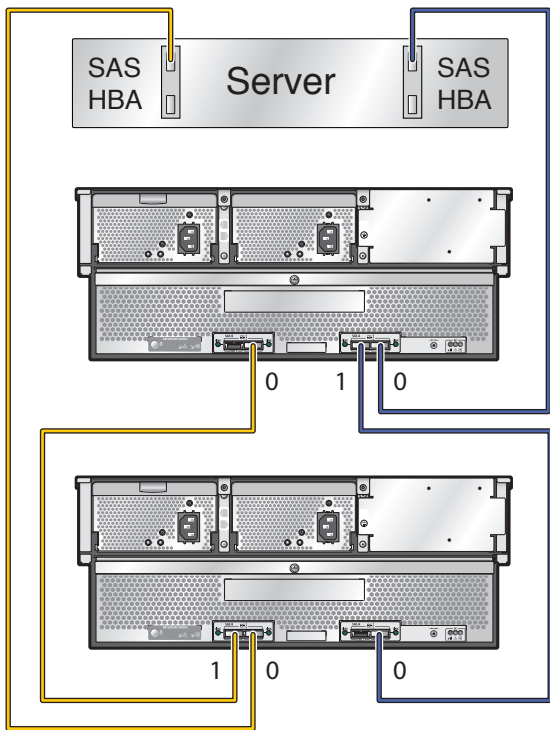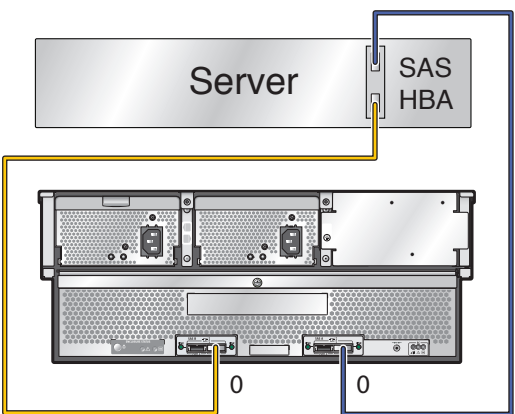

* Software is required for multipath failover and storage zoning support. See the *Sun Storage J4500 Array System Overview*.

CONNECTING

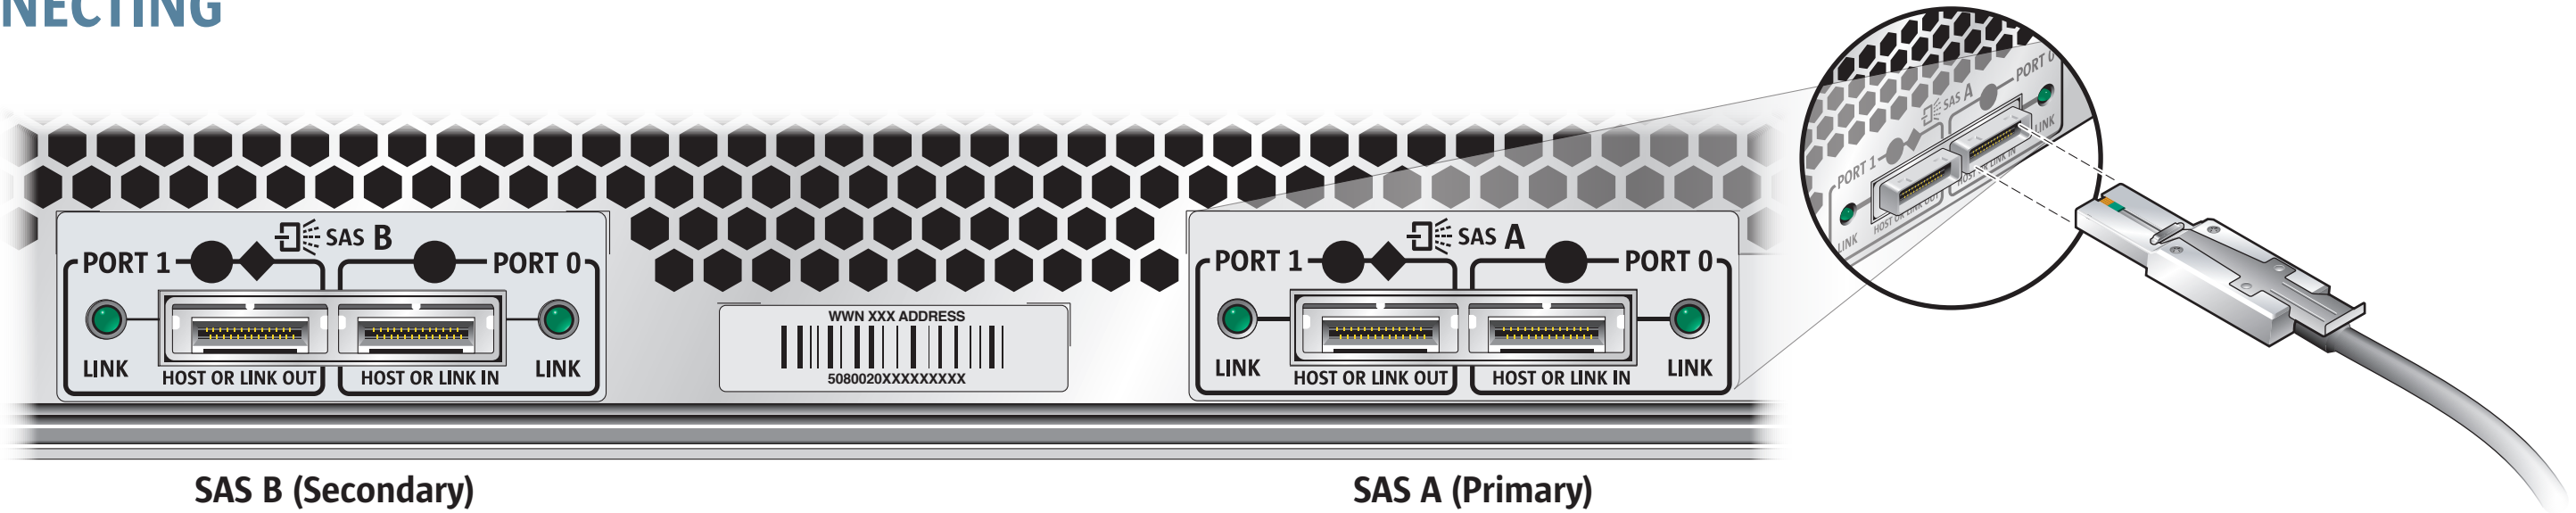

INITIAL POWER-ON SEQUENCE

- 1 Storage J4500
- 2 Server

