


Sun Fire™ Link Assembly Installation Guide for Sun Fire 15K/12K Systems

Copyright 2002 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Sun, Sun Microsystems, the Sun logo, Sun Fire, AnswerBook2, docs.sun.com, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Federal Acquisitions: Commercial Software—Government Users Subject to Standard License Terms and Conditions.

Copyright 2002 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Sun, Sun Microsystems, le logo Sun, Sun Fire, AnswerBook2, docs.sun.com, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux États-Unis et dans d'autres pays.

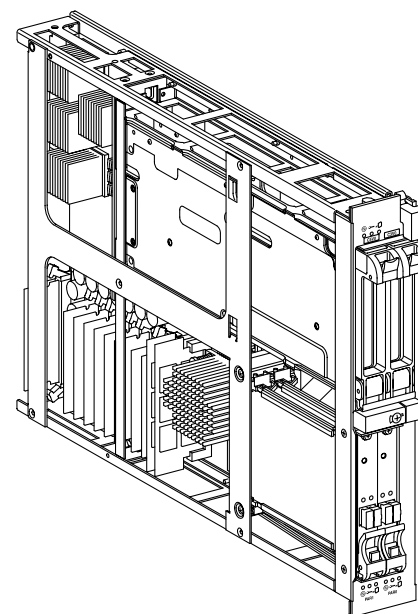

Please
Recycle

Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, CA 95054 U.S.A.
650-960-1300, Fax 650-969-9131



Adobe PostScript

This doclette provides instructions for installing a Sun Fire Link assembly in a Sun Fire 15K/12K chassis.

Complete documentation for the Sun Fire Link interconnect product is available in two formats:

- In a printed version, which you can order (part number, X4190A)
- In Adobe Acrobat Exchange (.pdf) format on the Sun Fire Link CD. The CD ships with:
 - The Sun Fire Link assembly (for Sun Fire 6800 systems)
 - The Sun Fire Link assembly (for Sun Fire 15K/12K systems)

To read the documentation online, use the CD-ROM drive on the workstation that serves as your administration station.

Installing a Sun Fire Link Assembly

These instructions are for use by trained service representatives who have been trained on Sun Fire Link interconnect hardware, and who have previously installed a Sun Fire Link assembly in the field. They are not complete instructions; they lack illustrations and precautions.

Note – These instructions are intended only as a reminder for those who have previous experience with this procedure. See the *Sun Fire Link Hardware Installation Guide* for more detailed instructions.

1. **To install the Fire Link assembly, hold the assembly by the front handle with one hand, while supporting the bottom with your other hand, and position the board onto the carrier rail.**
2. **With the ejector lever extended, slide the assembly into the slot until it connects with the expander connector.**
3. **Apply firm pressure to the face plate to properly seat the assembly with the expander connector.**
4. **Push the ejector lever downwards to fully seat the assembly.**

Accessing Sun Documentation Online

A broad selection of Sun system documentation is located at:

<http://www.sun.com/products-n-solutions/hardware/docs>

A complete set of Solaris documentation and many other titles are located at:

<http://docs.sun.com>

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun at:

docfeedback@sun.com

Please include the part number (816-2795-10) of the document in the subject line of your email.