


# Sun PCI High Speed Quad Port Serial Interface Adapter

---

User's Guide

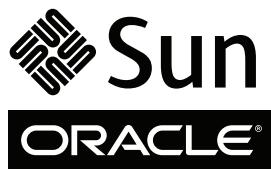

Part No. 819-1207-11  
May 2010, Revision A

Copyright © 2005, 2010, Oracle and / or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related software documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

**U.S. GOVERNMENT RIGHTS.** Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle USA, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure the safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and / or its affiliates. Other names may be trademarks of their respective owners.

AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. UNIX is a registered trademark licensed through X/Open Company, Ltd.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

---

Copyright © 2005, 2010, Oracle et / ou ses affiliés. Tous droits réservés.

Ce logiciel et la documentation qui l'accompagne sont protégés par les lois sur la propriété intellectuelle. Ils sont concédés sous licence et soumis à des restrictions d'utilisation et de divulgation. Sauf disposition de votre contrat de licence ou de la loi, vous ne pouvez pas copier, reproduire, traduire, diffuser, modifier, breveter, transmettre, distribuer, exposer, exécuter, publier ou afficher le logiciel, même partiellement, sous quelque forme et par quelque procédé que ce soit. Par ailleurs, il est interdit de procéder à toute ingénierie inverse du logiciel, de le désassembler ou de le décompiler, excepté à des fins d'interopérabilité avec des logiciels tiers ou tel que prescrit par la loi.

Les informations fournies dans ce document sont susceptibles de modification sans préavis. Par ailleurs, Oracle Corporation ne garantit pas qu'elles soient exemptes d'erreurs et vous invite, le cas échéant, à lui en faire part par écrit.

Si ce logiciel, ou la documentation qui l'accompagne, est concédé sous licence au Gouvernement des Etats-Unis, ou à toute entité qui délivre la licence de ce logiciel ou l'utilise pour le compte du Gouvernement des Etats-Unis, la notice suivante s'applique :

**U.S. GOVERNMENT RIGHTS.** Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

Ce logiciel ou matériel a été développé pour un usage général dans le cadre d'applications de gestion des informations. Ce logiciel ou matériel n'est pas conçu ni n'est destiné à être utilisé dans des applications à risque, notamment dans des applications pouvant causer des dommages corporels. Si vous utilisez ce logiciel ou matériel dans le cadre d'applications dangereuses, il est de votre responsabilité de prendre toutes les mesures de secours, de sauvegarde, de redondance et autres mesures nécessaires à son utilisation dans des conditions optimales de sécurité. Oracle Corporation et ses affiliés déclinent toute responsabilité quant aux dommages causés par l'utilisation de ce logiciel ou matériel pour ce type d'applications.

Oracle et Java sont des marques déposées d'Oracle Corporation et / ou de ses affiliés. Tout autre nom mentionné peut correspondre à des marques appartenant à d'autres propriétaires qu'Oracle.

AMD, Opteron, le logo AMD et le logo AMD Opteron sont des marques ou des marques déposées d'Advanced Micro Devices. Intel et Intel Xeon sont des marques ou des marques déposées d'Intel Corporation. Toutes les marques SPARC sont utilisées sous licence et sont des marques ou des marques déposées de SPARC International, Inc. UNIX est une marque déposée concédée sous licence par X/Open Company, Ltd.

Ce logiciel ou matériel et la documentation qui l'accompagne peuvent fournir des informations ou des liens donnant accès à des contenus, des produits et des services émanant de tiers. Oracle Corporation et ses affiliés déclinent toute responsabilité ou garantie expresse quant aux contenus, produits ou services émanant de tiers. En aucun cas, Oracle Corporation et ses affiliés ne sauraient être tenus pour responsables des pertes subies, des coûts occasionnés ou des dommages causés par l'accès à des contenus, produits ou services tiers, ou à leur utilisation.



# Contents

---

<b>Regulatory Compliance Statements</b>	<b>xi</b>
<b>Declaration of Conformity</b>	<b>xv</b>
<b>Preface</b>	<b>xvii</b>
<b>1. Product Overview</b>	<b>1</b>
Product Description	1
Features	2
Hardware and Software Requirements	3
<b>2. SunHSI/U Adapter Installation</b>	<b>5</b>
Installation Process	5
▼ To Install the Adapter	5
External Cabling	6
RS-232 to RS-449 Connections	7
<b>3. SunHSI PCI Software Installation</b>	<b>9</b>
Installation Overview	9
Before Installing the Software	11
Verifying the Software and Hardware Requirements	11
▼ To Remove Older Versions of the Software	11

Installing the Software	12
▼ To Install the SunHSI Software	12
▼ To Test the Installation	14
Configuring the Software	14
▼ To Configure for Point-to-Point Protocol	15
<b>4. SunHSI Utilities</b>	<b>17</b>
hsip_init Utility	17
T1 Compatibility Options	18
Operating Modes Options	18
HDLC Mode	19
IBM (SDLC) Mode	19
hsip_loop Utility	20
hsip_stat Utility	21
<b>A. Cable Pin Assignments &amp; Signals</b>	<b>23</b>
Pin Assignments	23
Interface Signals	27
<b>B. Null Modem Cable Requirements</b>	<b>29</b>
Configuring Internal or External Clocking	30
Building the Null Modem Cable	30
RS-449 Null Modem Cable	31
X.21 to RS-449 Converter	34
<b>C. T1 Inverted Data and Clock Signals</b>	<b>35</b>
Data Signal Inversion	35
Bipolar with 8-Zero Substitution	36
HDLC Zero Insertion Algorithm	36
Clock Signal Inversion	37

**D. SunVTS Diagnostic Testing 39**

Using the SunVTS sunlinkTest 39

**E. Viewing the Man Pages 41**

Man Pages 41

▼ To View Man Pages in the C Shell Environment 41

▼ To View Man Pages in Bourne or Korn Shell Environments 42

**Glossary 43**



# Figures

---

- FIGURE 1-1** SunHSI/U Adapter 2
- FIGURE 3-1** SunHSI Software Directories and Files 10
- FIGURE 3-2** SunHSI Devices Created by the Postinstall Script 10
- FIGURE B-1** Null modem Cable (Both Suns Supply Clocking) 32
- FIGURE B-2** Null modem Cable (Sun System Supplies Clocking for Both Sides) 33
- FIGURE B-3** X.21 to RS-449 Converter 34



# Tables

---

TABLE 1-1	Hardware and Software Requirements	3
TABLE 3-1	Required Disk Space	11
TABLE A-1	RS-449 Connector Pin Assignments	23
TABLE A-2	RS-449 Interface Signals	27
TABLE B-1	RS-449 Signals	31
TABLE B-2	X.21 Signals	31
TABLE D-1	Sun VTS Documentation	39



# Regulatory Compliance Statements

Your Sun product is marked to indicate its compliance class:

- Federal Communications Commission (FCC) — USA
- Industry Canada Equipment Standard for Digital Equipment (ICES-003) — Canada
- Voluntary Control Council for Interference (VCCI) — Japan
- Bureau of Standards Metrology and Inspection (BSMI) — Taiwan
- Certification and Accreditation Administration of the People's Republic of China (CNCA) — China
- Korea Communications Commission (KCC) — Korea

Please read the appropriate section that corresponds to the marking on your Sun product before attempting to install the product.

## FCC Class A Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

**Modifications:** Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

## FCC Class B Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

**Modifications:** Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

## ICES-003 Class A Notice - Avis NMB-003, Classe A

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

## ICES-003 Class B Notice - Avis NMB-003, Classe B

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### VCCI 基準について

#### クラス A VCCI 基準について

クラス A VCCI の表示があるワークステーションおよびオプション製品は、クラスA情報技術装置です。これらの製品には、下記の項目が該当します。

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

#### クラス B VCCI 基準について

クラス B VCCI の表示  があるワークステーションおよびオプション製品は、クラスB情報技術装置です。これらの製品には、下記の項目が該当します。

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをしてください。

## BSMI Class A Notice

The following statement is applicable to products shipped to Taiwan and marked as Class A on the product compliance label.

### 警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

## CCC Class A Notice

The following statement is applicable to products shipped to China and marked with "Class A" on the product's compliance label.

以下声明适用于运往中国且其认证标志上注有 "Class A" 字样的产品。

### 声明

此为A级产品，在生活环境 中，该产品可能会造成无线电干扰。  
在这种情况下，可能需要用户 对其干扰采取切实可行的措施。

## Korean Class A Notice

The following is the Korean Class A Broadcasting and Telecommunication Products for Business Purpose Statement.

A급 기기 (업무용 방송통신기기)	이 기기는 업무용(A급)으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하 시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.
-----------------------	---



# Declaration of Conformity

To receive a copy of the latest Declaration of Conformity (DoC) for the product, create an online request at ([https://www2.sun.de/dct/forms/reg\\_us\\_1607\\_755\\_0.jsp](https://www2.sun.de/dct/forms/reg_us_1607_755_0.jsp)), or send email to: compliance\_request\_ww@oracle.com.



# Preface

---

This document provides information for users of the Sun PCI High Speed Quad Port Serial Interface Adapter from Oracle. Information provided includes adapter installation, software installation and configuration, utilities, cable pin-outs and signals, and null modem cable requirements. This document is intended for use by either first-time or experienced users.

If you have just acquired this product, review the introductory sections and follow the guidelines for installing and using the adapter.

---

**Note** – The Sun PCI High Speed Quad Port Serial Interface adapter is high-speed serial-interface (HSI) adapter for PCI applications. The adapter is referred to as SunHSI/U in this manual.

---

---

## How This Book Is Organized

This document is organized as follows:

[Chapter 1](#) describes the products and lists system requirements.

[Chapter 2](#) provides instructions for installing the adapter.

[Chapter 3](#) contains the SunHSI software installation instructions.

[Chapter 4](#) describes the utilities supplied with the SunHSI software.

[Appendix A](#) lists the cable pin assignments and signals.

[Appendix B](#) provides information on external clocking and the null modem cable.

[Appendix C](#) explains the inverted data and clock signals for T1.

[Appendix D](#) gives an overview of the SunVTS diagnostic software.

[Appendix E](#) provides instructions for viewing the man pages.

---

## Typographic Conventions

Typeface	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit <code>your.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
<b>AaBbCc123</b>	What you type, when contrasted with on-screen computer output	% <b>su</b> Password:
AaBbCc123	Book titles, new words or terms, words to be emphasized. Replace command-line variables with real names or values.	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this. To delete a file, type <code>rm filename</code> .

---

**Note** – Characters display differently depending on browser settings. If characters do not display correctly, change the character encoding in your browser to Unicode UTF-8.

---

## Related Documentation

The documents listed as online are available at:

<http://docs.sun.com/app/docs/prod/serial.adapt.card?l=en#hic>

Application	Title	Part Number	Format	Location
Installation	<i>Sun PCI High Speed Quad Port Serial Interface Adapter</i>	819-1207	PDF, HTML	Online
Issues & updates	<i>Sun PCI High Speed Quad Port Serial Interface Adapter Release Notes</i>	819-1208	PDF, HTML	Online

---

# Documentation, Support, and Training

These web sites provide additional resources:

---

Sun Function	URL
Documentation	<a href="http://docs.sun.com/">http://docs.sun.com/</a>
Support	<a href="http://www.sun.com/support/">http://www.sun.com/support/</a>
Training	<a href="http://www.sun.com/training/">http://www.sun.com/training/</a>

---

---

## Document Feedback

Submit comments about this document by clicking the Feedback [+] link at: <http://docs.sun.com/>. Include the title and part number of your document with your feedback:

*Sun PCI High Speed Quad Port Serial Interface Adapter User's Guide*, part number 819-1207-11



# Product Overview

---

This chapter includes the following topics:


- “[Product Description](#)” on page 1
  - “[Features](#)” on page 2
  - “[Hardware and Software Requirements](#)” on page 3
- 

## Product Description

The Sun PCI High Speed Quad Port Serial Interface adapter is high-speed serial interface (HSI) adapter for PCI applications and is referred to as the SunHSI/U adapter in this manual. The adapter offers comprehensive hot-plug compatibility with Solstice WAN software packages available through Sun. The SunHSI software is a transparent interface on the SunHSI/U adapter, providing a compliant environment for SunLink WAN packages operating on similar Sun communication modules.

The SunHSI/U adapter (see [FIGURE 1-1](#)) is an intelligent, four-port communication controller with onboard CPU and memory dedicated to WAN communication functions. This architecture operates much more efficiently at high data rates than unintelligent WAN modules. Onboard intelligence allows the workstation or server to be off-loaded from many of the low-level communication tasks that it must perform when there is no native intelligence on the controller.

**FIGURE 1-1** SunHSI/U Adapter

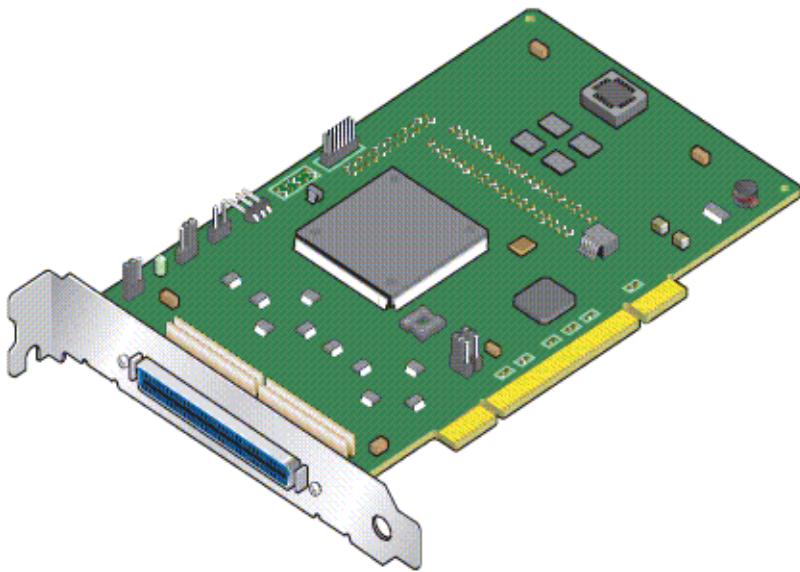

The adapter comes with the RS-449 industry standard connectors (for example, DB-37).

The protocols that operate with the SunHSI/U adapter include the Solstice X.25 and Solstice Point-to-Point Protocol (PPP). The SunHSI/U adapter conforms to the Sun Synchronous Serial Driver Interface Specification.

---

## Features

- Four synchronous RS-449 serial ports
- Each port can be independently configured
- T1/E1 transfer speed simultaneously on all four ports
- Works in 3.3 Volt 66 MHz and 5 Volt 33 MHz PCI slots
- Increased RS-232 support for data transmission range, up to 100 Kbps
- Meets PCI local bus specification, rev. 2.2
- Oracle Solaris 64-bit and 32-bit Operating System compatibility
- Hot-plug capability

---

# Hardware and Software Requirements

The hardware and software requirements for the SunHSI/U adapter are listed in **TABLE 1-1**.

**TABLE 1-1** Hardware and Software Requirements

<b>Sun Systems</b>	
Workstations	Sun Blade 100, 150, 1500, 1000, 2000, 2500
Servers	Sun Fire V210, V240, 280R, V440, V480, V490, V880, V890, V1280, E2900, E6900/E4900, 15K/12K, E25K/E20K
NEBS-certified servers	Netra 240, 440, 1280
<b>Operating Systems</b>	
	Solaris 10, Solaris 9, and Solaris 8
<b>SunHSI Software (PCI device drivers, man pages, and utilities)</b>	
	SunHSI/P 3.1 or newer <sup>†</sup>
<b>Diagnostics Version</b>	
	Solaris 10 SunVTS 6.0 and subsequent compatible releases
	Solaris 9 SunVTS 5.0 and subsequent compatible releases
	Solaris 8 SunVTS 4.0 and subsequent compatible releases

<sup>†</sup>The Sun HSI/P software is downloadable from the Sun Download Center at:

<http://www.sun.com/download>



# SunHSI/U Adapter Installation

---

This chapter describes how to install the adapter in your system and includes the following topics:

- “[Installation Process](#)” on page 5
  - “[To Install the Adapter](#)” on page 5
  - “[External Cabling](#)” on page 6
- 

## Installation Process

A simplified version of the installation process follows:

1. **Install the adapter** (see “[To Install the Adapter](#)” on page 5).
2. **Install the SunHSI PCI software** (see “[SunHSI PCI Software Installation](#)” on page 9).
3. **Test the installation** (see “[To Test the Installation](#)” on page 3-14).

### ▼ To Install the Adapter



---

**Caution** – Electronic components on printed circuit boards are extremely sensitive to static electricity. Ordinary amounts of static electricity generated by your clothing or work environment can damage the electronic equipment. When installing the SunHSI/U adapter in a system, use anti-static grounding straps and antistatic mats to help prevent damage due to electrostatic discharge.

---

---

**Note –** Refer to your system installation guide or service manual for detailed instructions for the following steps.

---

1. **Power off your system, using the standard shutdown procedures described in the *Solaris Handbook for Sun Peripherals* or your system service manual.**

The *Solaris Handbook for Sun Peripherals* is shipped with the Solaris OS software and is available on the <http://docs.sun.com> web site.

2. **Remove the cover from the unit to access the card slots and connectors.**
3. **Select an available 3.3 Volt or 5 Volt PCI slot and remove the slot filler panel.**

4. **Insert the adapter into the PCI connector of the system unit.**

Ensure that the front plate on the adapter mounts flush with the chassis panel opening.

5. **Install the front plate screw to secure the adapter into the chassis.**

This also provides a chassis ground connection to the adapter.

6. **Reinstall the cover on the unit.**

7. **Attach the serial port cable assembly to the I/O connector on the adapter.**

8. **Connect any cables from the peripheral devices to the RS-449 connectors on the adapter's cable.**

9. **Turn power back on and allow the system to reboot.**

This completes the hardware installation. Proceed to “[SunHSI PCI Software Installation](#)” on page 9.

---

## External Cabling

The SunHSI/U adapter provides external connectivity through a passive cabling system. A hydra-style connector provides connectivity to four RS-449 devices by means of four DB-37 female connectors in a DTE configuration.

---

**Note –** Always use shielded twisted pair RS-449 cables with your SunHSI/U adapter.

---

## RS-232 to RS-449 Connections

In order to connect RS-232 devices to the adapter, you need to install an externally powered RS-449 to RS-232 interface converter to each DB-37 connector on which you intend to connect an RS-232 device. A converter is necessary because of incompatibilities between RS-232 and RS-449 signal levels.

To obtain an externally powered RS-232 to RS-449 interface converter, contact:

Black Box Corporation at: <http://www.blackbox.com>

---

**Note –** Use only externally powered RS-449 devices with the SunHSI/U adapter.



# SunHSI PCI Software Installation

---

This chapter describes how to install the SunHSI PCI software and includes the following sections:

- “[Installation Overview](#)” on page 9
  - “[Before Installing the Software](#)” on page 11
  - “[Installing the Software](#)” on page 12
  - “[Configuring the Software](#)” on page 14
- 

## Installation Overview

Software for unbundled products is distributed in the form of software packages. The SunHSI PCI software package can be downloaded from the Sun Download Center at:

<http://www.sun.com/download>


You can use the pkgadd command to install software packages, to spool software packages for installation at a later date, or to remove software packages from your system. For more information see the Solaris System Administration Guide. When you have completed the software installation and run the postinstallation script, you will have created the software directories and files illustrated in [FIGURE 3-1](#) and [FIGURE 3-1](#).

---

**Note** – If you are upgrading to the SunHSI/U adapter from the SunHSI/P adapter or if you are running a SunHSI/P adapter along with the SunHSI/U adapter, you must upgrade the SunHSI software to the latest version.


---

**FIGURE 3-1** SunHSI Software Directories and Files

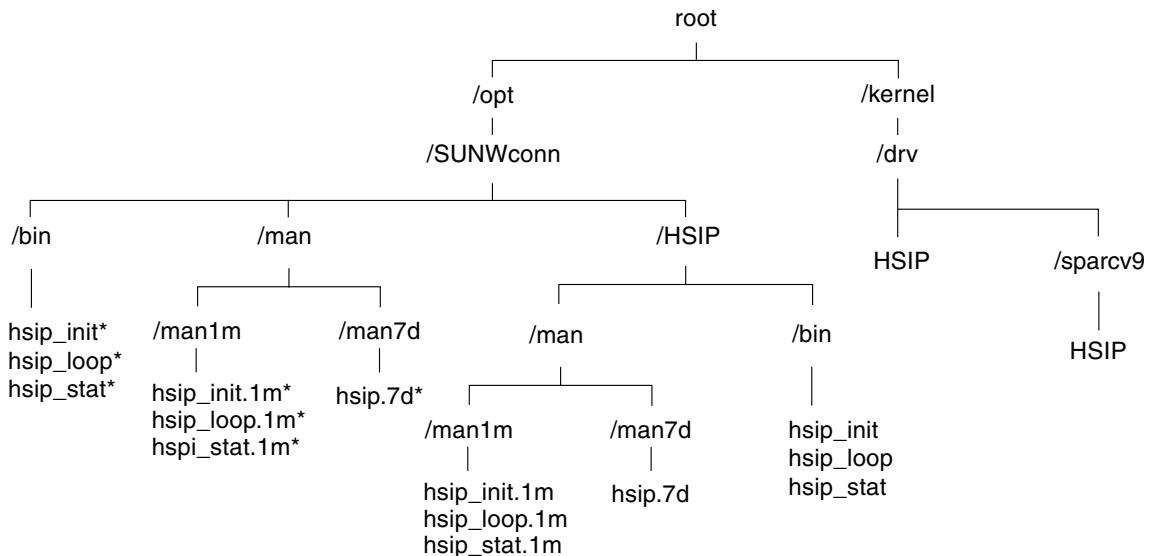

\* Signifies a symbolic link.

**FIGURE 3-2** SunHSI Devices Created by the Postinstall Script

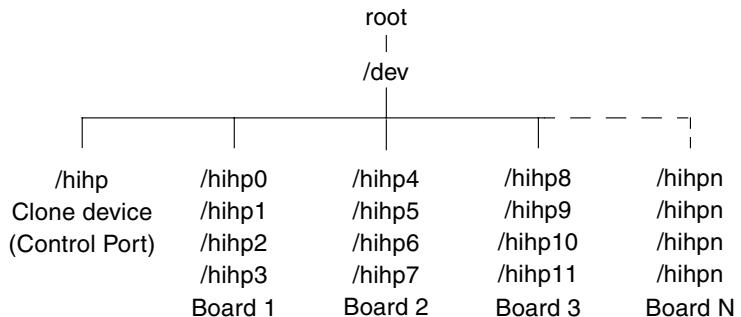

# Before Installing the Software

## Verifying the Software and Hardware Requirements

Before installing the software, answer the following questions:

- Does your system have any available 3.3V or 5V PCI slots?
- Have you downloaded the SunHSI software from the Sun Download Center at:  
<http://www.sun.com/download>
- What is the installation directory (default directory is /opt)?
- Do you have the superuser password for both the system where the software is to be installed and the system with download software, if different?
- Does your system have enough disk space?

Use both the following commands to check for disk space:

```
# df -k /opt  
# df -k /
```

**TABLE 3-1** Required Disk Space

SunHSI Package Name	Default Installation Directory	Approximate Space Required
SUNWhsip	/	1 Mbyte
SUNWhsipm and SUNWhsipu	/opt	1 Mbyte total

## ▼ To Remove Older Versions of the Software



**Caution** – Do not overwrite any existing SunHSI software packages. If you install the SunHSI software packages over existing SunHSI software packages, you will have two instances of the software packages. This might cause problems when installing or backing out of software patches.

Before installing the SunHSI PCI software on your system, check your system to see if previous versions of the SunHSI software are installed. If older SunHSI software exists, you must remove this software before installing the new SunHSI software.

- Using the `pkginfo` command, check the system for installed SunHSI software packages:

```
# /usr/bin/pkginfo | grep SUNWhsip  
system SUNWhsip SunHSI/P Driver for PCI  
system SUNWhsippm SunHSI/P Man Pages for PC  
system SUNWhsippu SunHSI/P Utilities for PCI
```

If no SunHSI packages are installed, skip to the next section, “[Installing the Software](#)” on page 12, to continue with the software installation.

If there are SunHSI packages installed, remove them by logging on as superuser (`root`) and typing the following command:

```
# /usr/sbin/pkgrm SUNWhsip SUNWhsippu SUNWhsippm
```

---

## Installing the Software

The SunHSI PCI driver, utilities, and man pages are distributed in the standard Solaris `pkgadd` distribution format. The `pkgadd` utility loads the `SUNWhsip`, `SUNWhsippm`, and `SUNWhsippu` packages onto the system from the distribution media.

### ▼ To Install the SunHSI Software

1. Access the directory where the SunHSI software has been downloaded.

```
# cd download-directory
```

where `download-directory` is the name of the directory where the SunHSI software was downloaded.

## 2. Log in as superuser or change to superuser.

You must possess superuser privileges to invoke the following commands. This ensures that all preinstallation scripts in the software package will be executed with superuser privileges.

```
# /usr/bin/su  
Password: superuser-password
```

## 3. Using the pkgadd command, install the software packages as follows:

```
# pkgadd -d /download-directory/sunhsip_3_1/Product  
  
The following packages are available:  
  SUNWhsip SunHSI/P Driver for PCI 3.1,REV=2005.xx.xx  
  SUNWhsippm SunHSI/P Man pages for PCI 3.1,REV=2005.xx.xx  
  SUNWhsipu SunHSI/P Utilities for PCI 3.1,REV=2005.xx.xx  
  
Select package(s) you wish to process (or 'all' to process  
all packages). (default: all) [?,??,q]: all
```

where *download-directory* is the name of the directory where the SunHSI software was downloaded.

- a. Type all or leave blank then press the Return key to continue the installation of the driver software.

If the pkgadd utility warns you that some scripts must be executed with superuser permissions, type y.

4. After successful completion of the package installation, reboot the system using the reconfigure option.

- a. Synchronize the hard disks and halt the system, using the following commands.

```
# /usr/sbin/sync  
# /usr/sbin/halt
```

- b. At the ok prompt, type the boot command with the -r option:

```
ok boot -r
```

5. After the system reboots, verify the installation by typing the following commands:

```
# /usr/bin/pkginfo | grep SUNWhsip  
system SUNWhsip SunHSI/P Driver for PCI  
system SUNWhsipm SunHSI/P Man Pages for PC  
system SUNWhsipu SunHSI/P Utilities for PCI  
  
# modinfo | grep HSIP  
126 7bb24000 17708 150 1 HSIP (PT-PCI334 Driver)  
  
# grep HSIP /etc/path_to_inst  
"/ssm@0,0/pci@18,700000/pci1214,334a@2" 0 "HSIP"
```

The output shows that the packages are installed, the driver is loaded, and that the software is mapped to the adapter.

## ▼ To Test the Installation

- Type the following command (replace *n* with the adapter port you are testing):

```
# hskip_loop -c 100 -l 2048 -s 2048000 -t 1 hiphn
```

This command runs an internal loopback test. For more information, see the *hsip\_loop(1M)* man page.

---

## Configuring the Software

To configure the adapter for the Point-to-Point Protocol (PPP), see “[To Configure for Point-to-Point Protocol](#)” on page 3-15. Also refer to the *Solaris System Administration Guide: Network Services* documentation for the version of Solaris that you are running. These documents are available from the following web site:

<http://docs.sun.com/>

To configure the adapter for the X.25 9.2 protocol, refer to the *Solstice X.25 9.2 Administration Guide* (806-1234). The X.25 9.2 documents are available from the following web site:

<http://docs.sun.com/>

## ▼ To Configure for Point-to-Point Protocol

1. Change to the /etc/ppp directory and create an executable file called conf\_hsip, containing the following information:

```
#!/bin/ksh -x

DEVICE='echo $DEVICE | sed 's/?dev?//'
/opt/SUNWconn/bin/hsip_init $DEVICE speed=2048000 mode=fdx loopback=no \
nrzi=no txc=baud rxc=rxc txd=txd rxd=rxd signal=no 2>&1 > /dev/null
```

2. Create another executable file called demand, containing the following information:

```
if [ -f /var/run/ppp-demand.pid ] &&
/usr/bin/kill -s 0 '/bin/cat /var/run/ppp-demand.pid'
then
:
else
env DEVICE=hihp0 /usr/bin/pppd hihp0 :qalb-hihp0 call far-hsip
env DEVICE=hihp1 /usr/bin/pppd hihp1 :qalb-hihp1 call far-hsip
env DEVICE=hihp2 /usr/bin/pppd hihp2 :qalb-hihp2 call far-hsip
env DEVICE=hihp3 /usr/bin/pppd hihp3 :qalb-hihp3 call far-hsip
fi
```

3. Change to the /etc/ppp/peers directory and create an executable file called far-hsip, containing the following information:

```
connect '/etc/ppp/conf-hsip'
local
sync
noauth
0:
ipcp-accept-local
nodefaultroute
passive
persist
noccp
nopcomp
novj
noaccomp
```

4. Add the client site hosts on the server machine and add the server site hosts on the client machine.

- a. Edit the server's /etc/hosts file and add the client site local hosts.

**b. Edit the client's /etc/hosts file and add the server site local hosts.**

---

**Note** – Both IP addresses have to be on the same subnet.

---

Refer to the hosts(4) man page and the sample /etc/hosts files:

#Server site (/etc/hosts)	# Client site (/etc/hosts)
=====	=====
#local	#local
192.10.10.10 qa8a-hihp0	192.10.10.20 qa1b-hihp0
193.10.10.10 qa8a-hihp1	193.10.10.20 qa1b-hihp1
194.10.10.10 qa8a-hihp2	194.10.10.20 qa1b-hihp2
195.10.10.10 qa8a-hihp3	195.10.10.20 qa1b-hihp3
#remote	#remote
192.10.10.20 qa1b-hihp0	192.10.10.10 qa8a-hihp0
193.10.10.20 qa1b-hihp1	193.10.10.10 qa8a-hihp1
194.10.10.20 qa1b-hihp2	194.10.10.10 qa8a-hihp2
195.10.10.20 qa1b-hihp3	195.10.10.10 qa8a-hihp3

**5. Edit the /etc/netmasks file as follows:**

```
192.10.10.0 255.255.255.0
193.10.10.0 255.255.255.0
194.10.10.0 255.255.255.0
195.10.10.0 255.255.255.0
```

**6. Start the PPP connection by typing the following commands:**

```
/etc/rc2.d/S47pppd stop
/etc/rc2.d/S47pppd start
```

## SunHSI Utilities

---

The SunHSI software includes the `hsip_init`, `hsip_loop`, and `hsip_stat` utilities. This chapter contains a short description of each utility. Refer to each man page to get more information on the commands. Also see “[Viewing the Man Pages](#)” on page 41.

This chapter includes the following topics:

- “[hsip\\_init Utility](#)” on page 17
  - “[hsip\\_loop Utility](#)” on page 20
  - “[hsip\\_stat Utility](#)” on page 21
- 

**Note** – You need to be superuser (`root`) in order to run the `hsip_init`, `hsip_loop`, or `hsip_stat` utilities.

---

### `hsip_init` Utility

The `hsip_init` utility enables you to modify some of the hardware operating modes common to synchronous serial lines. This modification is needed for the operation of some communications packages and is useful in troubleshooting a link. See the `hsip_init(1M)` man page for details.

The `hsip_init` utility includes options for T1 compatibility and operating modes. See “[T1 Compatibility Options](#)” on page 18 and “[Operating Modes Options](#)” on page 18 for information on these options.

## T1 Compatibility Options

The version of the `hsip_init` utility shipped with the SunHSI software has options that enable you to invert data and clock signals to accommodate the requirements of T1 or CEPT transmission equipment. The `hsip_init` parameters that allow for inversion are:

- `txd` – transmit data signal
- `rxr` – receive data signal
- `txc` – transmit clock signal
- `rxr` – receive clock signal

The effect of the default settings for all of these parameters is that SunHSI software does not invert the data or clock signal controlled by the parameter. To invert a signal, you specify a setting of the form *param-name=-paramname*, for example, `txc=-txc`.

As an example, suppose you want to invert the transmit and receive data signals on the first SunHSI/U port (port 0) on the second SunHSI/U adapter in your system. To do so, enter the following command:

```
# hsip_init hihp4 txd=-txd rxd=-rxd
```

To invert both clock and data signals, enter:

```
# hsip_init hihp4 txd=-txd rxd=-rxd txc=-txc rxc=-rxc
```

[Appendix C](#) discusses the background and requirements for these inverted settings.

## Operating Modes Options

This section describes the operating modes that you can set with the `hsip_init` utility.

The SunHSI software operates in two main operating modes, the high-level data link control (HDLC) mode and the IBM (SDLC) mode. The HDLC mode always operates in a full-duplex, point-to-point fashion. While the IBM mode defaults to a full-duplex, point-to-point, operation.

## HDLC Mode

The default operating mode used by the SunHSI software is the HDLC full-duplex protocol (`mode=fdx`). In this mode the transmitter is always enabled. The transmitter sends flag bytes continuously when it is not sending a data frame.

If no message is currently being transmitted, the driver will attempt to start sending its next message. At this point the driver indicates that it is busy transmitting, to prevent the transmission of another message concurrently. The driver also activates a mechanism that ensures that the transmit operation will not hang if the hardware is not responding.

When the transmission is completed, the busy mechanism previously set is cleared and the next message can be transmitted. If the transmission is hung an abort sequence is sent instead of the cyclic redundancy check (CRC), so that the receiver will not interpret the frame as valid data. The message is discarded, and the output error statistic is incremented, which allows for a proper recovery by higher level protocols.

The received data is buffered until a complete frame has been received. If any error occurs during the reception of a frame, the appropriate statistic is incremented and the frame is discarded.

## IBM (SDLC) Mode

SDLC mode is designed to support IBM system network architecture (SNA) communications. It uses most of the same protocols used in HDLC mode, with two major exceptions:

- When the line is idle, instead of sending flag bytes the transmitter is disabled.
- The request-to-send (RTS) and clear-to-send (CTS) signals are used to gate transmission.

### *IBM Full-Duplex Mode*

When the SunHSI software is set to this mode (`mode=ibm-fdx`), the software uses a full-duplex point-to-point communication protocol. Both ends of the link are expected to have RTS and CTS signals asserted at all times when data is being exchanged. When starting a message transmission, the interface raises the RTS signal and expects the CTS signal to be asserted immediately. If this is not done, all messages currently queued for transmission are discarded, and the write operation returns an error.

If the CTS signal drops before the frame transmission is complete, the frame is discarded and the abort error statistic is incremented. If the transmission underruns, an abort sequence is not sent and the frame is silently discarded. The RTS signal remains asserted until the data transmission is complete.

### *IBM Half-Duplex Mode*

Half-duplex is a submode of the IBM mode (`mode=ibm-hdx`). Half-duplex mode operates in the same manner as full-duplex mode except that transmission cannot occur while receiving, and vice-versa. When a transmission is completed, the RTS signal is dropped. Dropping the RTS signal tells the remote station to begin transmitting if it is ready to.

### *IBM MultiPoint Mode*

In a multipoint configuration (`mode=ibm-mpt`), more than two stations share a link. This configuration is accomplished by designating one station as a primary station and the rest as secondary stations. In this mode, the port acts as a secondary station. The primary station arbitrates traffic on the link by polling the secondary stations, to see if they are ready to transmit.

If a secondary station has data to transmit, it will raise its RTS signal and check for CTS signals. When a CTS signal comes up the station may begin transmitting, following the same rules for RTS and CTS signals used in half-duplex mode. When the transmission is complete the secondary drops the RTS signal, which enables another station to respond to a poll and begin transmitting. The RTS signal cannot be dropped until the transmission is complete.

---

## **hsip\_loop Utility**

The `hsip_loop` utility is high-speed, synchronous, serial loopback test program for high-speed serial interface. The utility performs several loopback tests that exercise the components of a serial communications link. See the `hsip_loop(1M)` man page for more information.

---

## hsip\_stat Utility

The `hsip_stat` utility reports the event statistics maintained by the SunHSI device driver. The report might be a single snapshot of the accumulated totals, or a series of samples showing incremental changes. At the beginning of the report, the device name being used to query a particular device appears. See the `hsip_stat(1M)` man page for more information.



# Cable Pin Assignments & Signals

---

This appendix includes the following information:

- “[Pin Assignments](#)” on page 23
  - “[Interface Signals](#)” on page 27
- 

## Pin Assignments

A shielded, hydra-style breakout cable providing four 37-pin, D-shell (DB-37) DTE connectors is available for the SunHSI/U adapter. Since there are not enough wires to create the signal ground (pin 19) connections, use the shield ground (pin 1) of the DB-37 connector for this signal. The pin assignments for the cabling and connectors are shown in [TABLE A-1](#).

**TABLE A-1** RS-449 Connector Pin Assignments

80-Pin Amp. Pin No.	RS-449 Signal Name	RS-449 DB-37 Pin No.	Description
1	RxD1(A)	6	Port 1 Receive Data
2	RxD1(B)	24	Port 1 Receive Data
3	DTR1(A)	12	Port 1 Data Terminal Ready
4	DTR1(B)	30	Port 1 Data Terminal Ready
5	TxD1(A)	4	Port 1 Transmit Data
6	TxD1(B)	22	Port 1 Transmit Data
7	RTS1(A)	7	Port 1 Request To Send
8	RTS1(B)	25	Port 1 Request To Send
9	TxC1(A)	17	Port 1 Transmit Clock

**TABLE A-1** RS-449 Connector Pin Assignments (*Continued*)

80-Pin Amp. Pin No.	RS-449 Signal Name	RS-449 DB-37 Pin No.	Description
10	TxC1(B)	35	Port 1 Transmit Clock
11	TxCI1(A)	5	Port 1 Transmit Clock In
12	TxCI1(B)	23	Port 1 Transmit Clock In
13	DCD1(A)	13	Port 1 Data Carrier Detect
14	DCD1(B)	31	Port 1 Data Carrier Detect
15	DSR1(A)	11	Port 1 Data Set Ready
16	DSR1(B)	29	Port 1 Data Set Ready
17	CTS1(A)	9	Port 1 Clear To Send
18	CTS1(B)	27	Port 1 Clear To Send
19	RxC1(A)	8	Port 1 Receive Clock
20	RxC1(B)	26	Port 1 Receive Clock
Shield Ground	SG	1	Port 1 Shield Ground and Signal Ground
21	RxD2(A)	6	Port 2 Receive Data
22	RxD2(B)	24	Port 2 Receive Data
23	DTR2(A)	12	Port 2 Data Terminal Ready
24	DTR2(B)	30	Port 2 Data Terminal Ready
25	TxD2(A)	4	Port 2 Transmit Data
26	TxD2(B)	22	Port 2 Transmit Data
27	RTS2(A)	7	Port 2 Request To Send
28	RTS2(B)	25	Port 2 Request To Send
29	TxC2(A)	17	Port 2 Transmit Clock
30	TxC2(B)	35	Port 2 Transmit Clock
31	TxCI2(A)	5	Port 2 Transmit Clock In
32	TxCI2(B)	23	Port 2 Transmit Clock In
33	DCD2(A)	13	Port 2 Data Carrier Detect
34	DCD2(B)	31	Port 2 Data Carrier Detect
35	DSR2(A)	11	Port 2 Data Set Ready
36	DSR2(B)	29	Port 2 Data Set Ready
37	CTS2(A)	9	Port 2 Clear To Send
38	CTS2(B)	27	Port 2 Clear To Send

**TABLE A-1** RS-449 Connector Pin Assignments (*Continued*)

80-Pin Amp. Pin No.	RS-449 Signal Name	RS-449 DB-37 Pin No.	Description
39	RxC2(A)	8	Port 2 Receive Clock
40	RxC2(B)	26	Port 2 Receive Clock
Shield Ground	SG	1	Port 2 Shield Ground and Signal Ground
41	RxD3(A)	6	Port 3 Receive Data
42	RxD3(B)	24	Port 3 Receive Data
43	DTR3(A)	12	Port 3 Data Terminal Ready
44	DTR3(B)	30	Port 3 Data Terminal Ready
45	TxD3(A)	4	Port 3 Transmit Data
46	TxD3(B)	22	Port 3 Transmit Data
47	RTS3(A)	7	Port 3 Request To Send
48	RTS3(B)	25	Port 3 Request To Send
49	TxC3(A)	17	Port 3 Transmit Clock
50	TxC3(B)	35	Port 3 Transmit Clock
51	TxCI3(A)	5	Port 3 Transmit Clock In
52	TxCI3(B)	23	Port 3 Transmit Clock In
53	DCD3(A)	13	Port 3 Data Carrier Detect
54	DCD3(B)	31	Port 3 Data Carrier Detect
55	DSR3(A)	11	Port 3 Data Set Ready
56	DSR3(B)	29	Port 3 Data Set Ready
57	CTS3(A)	9	Port 3 Clear To Send
58	CTS3(B)	27	Port 3 Clear To Send
59	RxC3(A)	8	Port 3 Receive Clock
60	RxC3(B)	26	Port 3 Receive Clock
Shield Ground	SG	1	Port 3 Shield Ground and Signal Ground
61	RxD4(A)	6	Port 4 Receive Data
62	RxD4(B)	24	Port 4 Receive Data
63	DTR4(A)	12	Port 4 Data Terminal Ready
64	DTR4(B)	30	Port 4 Data Terminal Ready
65	TxD4(A)	4	Port 4 Transmit Data
66	TxD4(B)	22	Port 4 Transmit Data

**TABLE A-1** RS-449 Connector Pin Assignments (*Continued*)

80-Pin Amp. Pin No.	RS-449 Signal Name	RS-449 DB-37 Pin No.	Description
67	RTS4(A)	7	Port 4 Request To Send
68	RTS4(B)	25	Port 4 Request To Send
69	TxC4(A)	17	Port 4 Transmit Clock
70	TxC4(B)	35	Port 4 Transmit Clock
71	TxCI4(A)	5	Port 4 Transmit Clock In
72	TxCI4(B)	23	Port 4 Transmit Clock In
73	DCD4(A)	13	Port 4 Data Carrier Detect
74	DCD4(B)	31	Port 4 Data Carrier Detect
75	DSR4(A)	11	Port 4 Data Set Ready
76	DSR4(B)	29	Port 4 Data Set Ready
77	CTS4(A)	9	Port 4 Clear To Send
78	CTS4(B)	27	Port 4 Clear To Send
79	RxC4(A)	8	Port 4 Receive Clock
80	RxC4(B)	26	Port 4 Receive Clock
Shield Ground	SG	1	Port 4 Shield Ground and Signal Ground

# Interface Signals

Functional descriptions of the RS-449 interface signals are provided in [TABLE A-2](#).

**TABLE A-2** RS-449 Interface Signals

RS-449 Pin No.	Signal Name	Function
1	Shield Ground	Enables tandem sections of shielded cable to retain continuity through the connector.
19	Signal Ground (SG)	Directly connects the DTE circuit ground to the DCE circuit ground, providing a path for DTE and DCE signal commons.
4/22	Transmit Data (TxD)	Used by the DTE to pass binary data to the DCE for transmission over the communications channel.
6/24	Receive Data (RxD)	Used by the DCE to pass binary data received from the communications channel to the DTE.
5/23	Transmit Clock in (TxCI)	Enables the DCE to transmit signal element timing to the DTE. This enables the DTE Transmit Data signal on circuit TxD to be in synchronization with On/Off transitions on this lead.
8/26	Receive Clock (RxC)	Transitions on this lead enables the DTE to time data received over circuit RxD.
17/35	Transmit Clock (TxC)	Enables the DTE to provide transmit timing information to the DCE so that the DTE can synchronize with data arriving over the TxD lead.
7/25	Request to Send (RTS)	Used by the DTE to advise the DCE it is ready to transmit data.
9/27	Clear to Send (CTS)	Used by the DCE to advise the DTE that the DCE is ready to send data over the communications channel.
11/29	Data Set Ready (DSR)	Used to advise the DTE of the Ready status on the DCE. In most cases, this signal simply implies the unit is powered on.
12/30	Data Terminal Ready (DTR)	Used by the DTE to advise the DCE it is ready to transmit or receive.
13/31	Data Carrier Detect (DCD)	The DCE uses this lead to advise the DTE that an incoming signal on the communications channel is present. When first initialized this signal is an indication to the DTE to expect data momentarily.



## Null Modem Cable Requirements

---

A synchronous null modem cable is a specially-configured cable that simulates modems that are connected back-to-back. When the distance between the two host systems is not great, you may be able to use a null modem cable instead of a synchronous modem or a synchronous modem eliminator.

The maximum distance a null modem cable can work is determined by the specification for your serial port interface.

There are two steps you must perform to use a null modem cable for machine supplied clocking:

Run `hsip_init` (see “[Configuring Internal or External Clocking](#)” on page 30) so that the Sun system, in the absence of a synchronous modem, supplies clocking on the serial line.

Build or configure the cable for the null modem.

---

**Note** – You must run `hsip_init` each time you reboot your system.

---

The following topics are included in this appendix:

- [“Configuring Internal or External Clocking” on page 30](#)
- [“Building the Null Modem Cable” on page 30](#)

# Configuring Internal or External Clocking

To configure an RS-449 port to provide transmit clocking for itself as well as receive clocking for the other end of the link, set the `txc` (transmit clock) and `rcx` (receive clock) parameters in `hsip_init` to `baud` and `rcx`, respectively. For example, the following `hsip_init` command sets the data rate of the first Sun HSI serial port to 9600 bps and sets the clocking as just described:

```
# hsip_init hihp0 9600 txc=baud rxc=rxc
```

You enter such a command at both ends of a link if both sides are supplying clocking.

In the situation in which you have Sun systems at both ends of a link and have one system supplying clocking for both sides, on the system that is not supplying the clocking, you enter:

```
# hsip_init hihp0 9600 txc=tzc rxc=rzc
```

# Building the Null Modem Cable

To build a null modem cable, you can configure your own cable or use a standard cable with an adapter box.

---

**Note** – Be sure to use shielded, twisted pair wire when building a null modem cable.

---

If you decide to use an adapter box, be sure to obtain an adapter that allows you to change the pin configurations. Pre-configured adapters generally do not work with synchronous protocols because they do not handle clock signals correctly.

## RS-449 Null Modem Cable

TABLE B-1 and TABLE B-2 list the signals and names for RS-449 and X.21 circuits

**TABLE B-1** RS-449 Signals

Circuit	Name	Direction
TxD	Transmit Data	To DCE
RxD	Receive Data	From DCE
TxC	Transmit Clock	To DCE
TxCI	Transmit Clock In	From DCE
RxC	Receive Clock	From DCE
RTS	Request to Send	To DCE
CTS	Clear to Send	From DCE
DCD	Data Carrier Detect	From DCE
DTR	Data Terminal Ready	To DCE
DSR	Data Set Ready	From DCE
SG	Signal Ground	


**TABLE B-2** X.21 Signals

Circuit	Name	Direction
G	Signal Ground	
T	Transmit	To DCE
R	Receive	From DCE
C	Control	To DCE
I	Indication	From DCE
S	Signal Element Timing	From DCE
B	Byte Timing	From DCE

**FIGURE B-1** illustrates a synchronous null modem cable that allows you to connect two Sun systems that each supply clocking, using the RS-449 interface. Each Sun supplies clocking on pins 17 and 35. The null modem cable routes this clocking to pins 8 and 26 on the opposite side to provide receive clocking.


Because the RS-449 interface is balanced, there are two pins for each signal. For example, Transmit Data (TxD), pins 4 and 22, is connected to Received Data (RxD), pins 6 and 24. This means that pin 4 is connected to pin 6 and pin 22 is connected to pin 24.

**FIGURE B-1** Null modem Cable (Both Suns Supply Clocking)

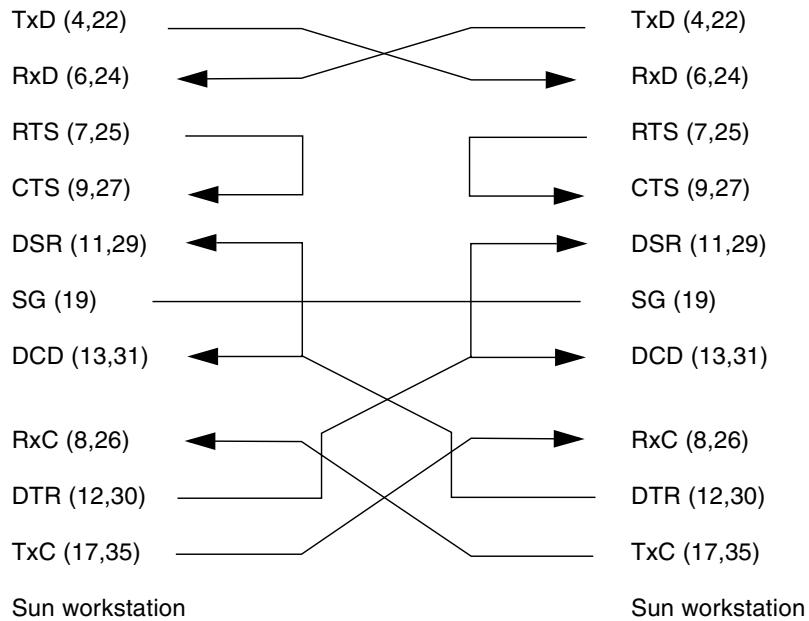

**FIGURE B-2** illustrates a synchronous null modem cable that allows you to another system, Sun or non-Sun, using the RS-449 interface. The Sun supplies both the transmit and receive clocks for the other system. Note that this null modem cable is not symmetrical.


**FIGURE B-2** Null modem Cable (Sun System Supplies Clocking for Both Sides)

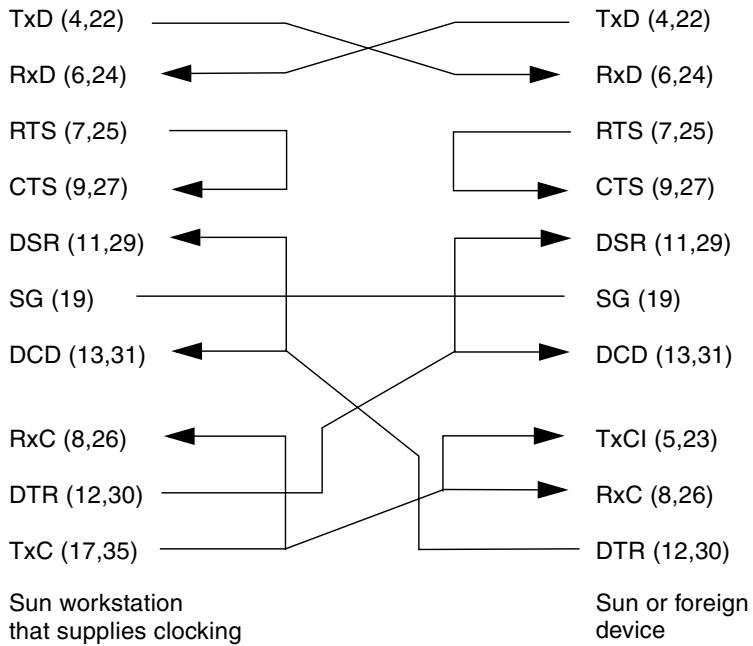

# X.21 to RS-449 Converter

**FIGURE B-3** illustrates the pin connections required for an X.21 to RS-449 converter.

**FIGURE B-3** X.21 to RS-449 Converter

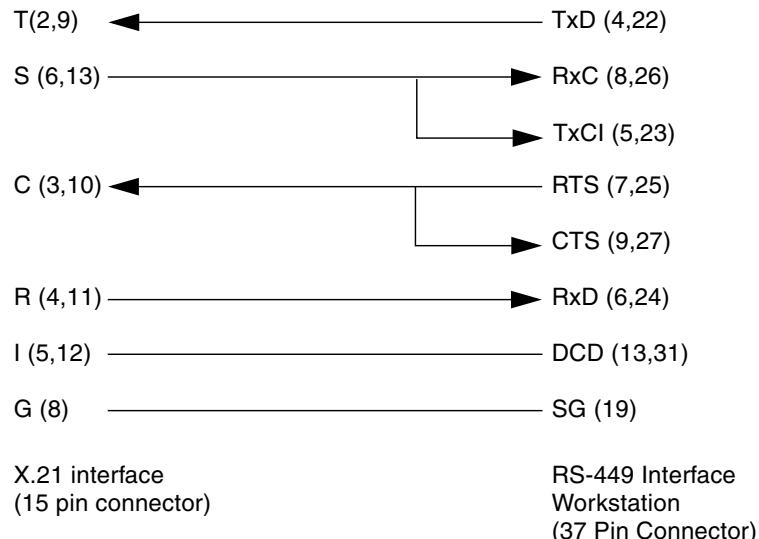

When using an X.21 conversion you must perform the following `hsip_init` operation:

```
# hskip init hihip0 9600 txc=txc rxc=rxc
```

**Note** – Both receive and transmit clock inputs (RxC and TxCl) need a clock signal if txc is set to txc and rxc is set to rxc.

# T1 Inverted Data and Clock Signals

---

This appendix includes the following topics:

- “[Data Signal Inversion](#)” on page 35
  - “[Clock Signal Inversion](#)” on page 37
- 

## Data Signal Inversion

The requirement for inverting data signals arises from the “ones density” problem you encounter with most T1 transmission lines in North America. The T1 transmission scheme uses a signaling mechanism known as Alternate Mark Inversion (AMI), in which one bits are represented by a positive or negative pulse, while zero bits are represented by the absence of a pulse. In this scheme, the polarity of each pulse must be the opposite of the polarity of the pulse which immediately preceded it. This signaling scheme makes it possible to embed a reference clock for the data into the data stream itself.

Various types of T1 transmission equipment, such as Data Service Units (DSU), Channel Service Units (CSU), repeaters, and various telephone central office equipment, must be able to keep a phase locked loop (PLL) circuit locked on to this reference clock. This PLL circuit uses the pulses generated when one bits are transmitted to lock the embedded clock to a local reference oscillator. To keep the PLL circuit locked on the extracted clock, a certain density of pulses (one bits) must be guaranteed. For North American T1 lines, the density requirement dictates that at least one out of every 16 bits must be a one (see *AT&T Technical Publication 62411*). Another way of stating this is that no more than 15 consecutive zero bits can occur anywhere in the data stream.

T1 lines were originally intended to carry voice traffic, wherein the digitized voice signals could be altered to meet the ones-density requirement by forcing every eighth bit of a voice channel to be a one. This practice introduces a small—but virtually

inaudible—amount of distortion in the voice signal. Digital data streams between two computers are another matter, since the corruption of even one data bit causes a packet to be rejected. Note that in a typical data packet it is quite easy to produce bit patterns that violate the ones-density requirement. A random file could easily contain a sequence of bytes that would produce 16 or more consecutive zero bits if transmitted serially.

There are many different schemes for circumventing the ones-density requirement. The most common technique simply reserves every eighth bit of the signal for a “density bit” and forces this bit to be a one. Obviously, these bits are not available for data transmission, which means that 12.5 percent of the bandwidth of the T1 line is wasted. When you consider that the lease cost for a coast-to-coast T1 line can be exceedingly expensive, this waste of bandwidth can be unacceptable. There are alternatives.

## Bipolar with 8-Zero Substitution

One of them uses a special code that transmission equipment can generate when using the AMI signalling scheme. This special code depends on the fact that two successive one bits that are represented by pulses of the same polarity result in a signal known as a “Bipolar Violation.” A CSU can be designed so that it will automatically replace any string of eight consecutive zeros with a special code pattern that contains two of Bipolar Violations. A compatible, receiving CSU recognizes this special code and converts it back to a pattern of eight zeros. This technique is known by the acronym B8ZS, which stands for Bipolar with 8-Zero Substitution.

All CEPT lines (the European equivalent of T1) mandate the use of a variant of B8ZS that holds the density requirement down to no more than three consecutive zeros. However, telephone companies in North America have been slow to adopt B8ZS, because it would entail a significant capital investment. Therefore, the B8ZS solution will not solve the ones-density problem in the short term.

## HDLC Zero Insertion Algorithm

An alternative to B8ZS—an alternative used by the SunHSI/P product—makes use of the fact that the HDLC framing rules specify that any data stream that contains five or more consecutive one bits requires that the transmitting end insert a zero bit after the fifth one bit. This guarantees that the HDLC flag pattern 01111110 (hex 7E) does not occur randomly inside a frame. The receiving end must automatically discard the zero bit that follows a pattern of five consecutive ones. So, HDLC framing, which is used by SunHSI/P, guarantees that, except for the flag pattern, in any set of six bits, at least one bit will be a zero. If you include the flag pattern, you can say that in any set of seven bits, at least one bit will be a zero.

By inverting the data signal with HDLC framing on both ends of a link, the HDLC zero insertion algorithm becomes a ones insertion algorithm. This guarantees that in any set of seven bits, at least one bit will be a one. Thus, the HDLC data stream meets the density requirements of North American T1 lines without sacrificing any bandwidth.

---

## Clock Signal Inversion

The need to invert clock lines is separate from the need to invert data lines. Most computer, modem, and terminal vendors adhere to an industry standard specification known as RS-334. This specification defines the relationship between a data bit and a reference clock on a synchronous serial link. The specification also says that a device should transmit data with reference to the rising edge of the clock signal and that data should be received with reference to the falling edge of the clock signal.

When using long cables or cables not carrying a clock signal, a phase shift may occur causing a high number of errors. In such cases, inverting the clock signal may correct the phase shift. You may also need to invert the clock signal when connecting a SunHSI/P port to equipment not adhering to the RS-334 standard.



## SunVTS Diagnostic Testing

---

The SunVTS software executes multiple diagnostic hardware tests from a single user interface, and is used to verify the configuration and functionality of most hardware controllers and devices. The SunVTS software operates primarily from a graphical user interface, enabling test parameters to be set quickly and easily while a diagnostic test operation is being performed.

Refer to the SunVTS documents (see **TABLE D-1**) for instructions on how to run and monitor the sunlink diagnostic. These SunVTS documents are available online at the following URL:

<http://www.sun.com/documentation>

Select the document for the Solaris release on your system.

**TABLE D-1** Sun VTS Documentation

Title	Description
<i>SunVTS User's Guide</i>	Describes the SunVTS diagnostic environment.
<i>SunVTS Test Reference Manual</i>	Describes each SunVTS test (including sunlink) and describes the various test options and command-line arguments.
<i>SunVTS Quick Reference Card</i>	Provides an overview of the user interface.

---

## Using the SunVTS sunlinkTest

The sunlink diagnostic test, which is shipped with the SunVTS software, verifies the functionality of SunHSI adapters. This test can be run from the SunVTS user interface, or it can be run from the command line. Refer to the *SunVTS Test Reference Manual* for more information about the sunlink test.

---

**Note** – Some of the sunlink tests require a RS-449 loopback plug, which can be ordered through Sun (part number 540-1430).

---

## Viewing the Man Pages

---

The following man pages are included with the SunHSI software:

- `hsip(7d)`
- `hsip_init(1m)`
- `hsip_loop(1m)`
- `hsip_stat(1m)`

If you cannot view these man pages, you need to add the `/opt/SUNWconn/man/` directory to your `MANPATH` environment variable. Depending on the UNIX shell you are using, this variable might be defined in one of a number of startup files.

---

## Man Pages

### ▼ To View Man Pages in the C Shell Environment

1. **Examine your `$HOME/.login` and `$HOME/.cshrc` files to locate the `MANPATH` variable.**
2. **Using a text editor, add the following line to the end of the file containing the `MANPATH` variable.**

```
setenv MANPATH "/opt/SUNWconn/man/:$MANPATH"
```

If neither of the files in **Step 1** contains the MANPATH variable, add the following line to the end of one of the files, or contact your system administrator for assistance.

```
setenv MANPATH "/opt/SUNWconn/man/"
```

3. Use the source command on the file you edited to make the changes effective in your current window.

For example, if you added the MANPATH line to the .login file, you would type:

```
hostname% source $HOME/.login
```

---

**Note –** If you log out and then back into your system, you update the MANPATH variable in all command windows and shells.

---

## ▼ To View Man Pages in Bourne or Korn Shell Environments

1. Using a text editor, add these two lines to the end of the \$HOME/.profile file.

```
MANPATH=/opt/SUNWconn/man:$MANPATH  
export MANPATH
```

If this file did not already contain this variable, add the following two lines to the end of the file, or contact your system administrator for assistance.

```
MANPATH=/opt/SUNWconn/man  
export MANPATH
```

2. Make the changes effective in your current window.

```
$ . $HOME/.profile
```

---

**Note –** If you log out and then back into to your system, you update the MANPATH variable in all command windows and shells.

---

# Glossary

---

<b>AMI</b>	Alternate Mark Inversion
<b>bps</b>	Bits per second
<b>CEPT</b>	European Conference of Postal and Telecommunications Administrations
<b>CSU</b>	Channel Service Unit
<b>CPU</b>	Central Processing Unit
<b>DSU</b>	Data Service Unit.
<b>E1</b>	European equivalent of T1
<b>HDLC</b>	High-Level Data Link Control
<b>MHz</b>	MegaHertz
<b>PLL</b>	Phase-locked loop
<b>PPP</b>	Point-to-Point Protocol
<b>SDLC</b>	Synchronous Data Link Control
<b>SNA</b>	System Network Architecture
<b>T1</b>	A communications service providing leased-line support for 1,554,000 bps on twisted copper wire.
<b>WAN</b>	Wide Area Network

