

# StorageTek Host Software Component (MSP Implementation)

---

## Configuration Guide

Version 6.2



Part Number: E21431-02  
February 2012  
Revision 02

Submit comments about this document to [STP\\_FEEDBACK\\_US@ORACLE.COM](mailto:STP_FEEDBACK_US@ORACLE.COM).

Oracle welcomes your comments and suggestions for improving this book. Contact us at [STP\\_FEEDBACK\\_US@ORACLE.COM](mailto:STP_FEEDBACK_US@ORACLE.COM). Please include the title, part number, issue date, and revision.

Copyright ©1987, 2012, Oracle and /or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related software documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle USA, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure the safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle is a registered trademark of Oracle Corporation and /or its affiliates. Oracle and Java are registered trademarks of Oracle and /or its affiliates. Other names may be trademarks of their respective owners.

AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. UNIX is a registered trademark licensed through X/Open Company, Ltd.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

## Document Effectivity

---

EC Number	Date	Doc Kit Number	Type	Effectivity
132886	September, 2007	---	Revision A	This document applies to the Host Software Component for MSP, Version 6.2.
---	February, 2009	---	Revision B	
---	August, 2010	---	Revision BA	
---	February, 2011	---	Revision 01	
---	February, 2012	---	Revision 02	



# Contents

---

<b>What's New With This Release?</b> .....	<b>xv</b>
<b>Preface</b> .....	<b>xxvii</b>
Access to Oracle Support .....	xxvii
<b>Chapter 1. Overview</b> .....	<b>1</b>
Summary of Configuration Tasks .....	1
Performing Library Modifications .....	3
Customizing HSC Software .....	6
Macros .....	6
Utilities .....	6
HSC Control Statements .....	6
User Exits .....	6
Operator Commands .....	6
Interacting With Third Party Software .....	7
Library Configuration Checklist .....	7
<b>Chapter 2. Configuring the HSC Environment</b> .....	<b>9</b>
Physical Plan Verification .....	9
System Software Verification .....	10
Migration from Earlier HSC Releases .....	10
Verification of Third-Party Software Compatibility .....	11
LSM/Pass-thru Port Relationship Definition .....	12
Considerations for Configuring Unit Addresses and Esoterics .....	13
JCL Considerations .....	13
Remote Library Considerations .....	13
CDS Considerations .....	13
HSC Scratch Allocation Considerations .....	13
Configuring MSP Unit Addresses and Esoterics .....	14
Unit Addresses .....	14
Nonlibrary Esoteric .....	14
Library Esoteric(s) .....	14
Configuring LIBGEN Unit Addresses .....	15
Unit Addresses .....	15
DASD Planning .....	16
Control Data Set Recovery Strategies .....	16
DASD Sharing .....	19

I/O Device Reserve Considerations .....	19
Calculating DASD Space .....	21
Automated Space Calculation .....	22
Data Set Placement .....	22
Cartridge Capacity Calculation - SL8500 and SL3000 .....	23
<b>Chapter 3. Performing Pre-execution Tasks .....</b>	<b>25</b>
Coding and Cataloging the HSC Started Task Procedure .....	26
IPLing the System .....	26
<b>Chapter 4. Creating the Library Configuration File (LIBGEN) .....</b>	<b>27</b>
Defining the Library Configuration File(LIBGEN) .....	27
Procedure for Library Generation (LIBGEN) .....	27
LIBGEN Macros .....	28
SLIRCVRY Macro .....	34
SLLIBRY Macro .....	36
SLIALIST Macro .....	44
SLIACS Macro .....	45
SLISTATN Macro .....	49
SLILSM Macro .....	51
SLIDLIST Macro .....	60
SLIDRIVS Macro .....	62
SLIENDGN Macro .....	69
LIBGEN Outputs .....	70
LIBGEN Process Verification .....	70
Assembler and Linkage Editor JCL .....	70
Verifying the Library Generation (LIBGEN) .....	71
SLIVERFY Program .....	71
<b>Chapter 5. Initializing the Control Data Sets .....</b>	<b>73</b>
Creating Control Data Set Initialization JCL .....	73
Descriptions of DD Statements .....	75
Calculating DASD Space using SLICREAT .....	76
Calculating Cartridge Capacity - SL8500 and SL3000 .....	76
Executing the SLICREAT Program .....	77
Verifying Successful Completion of the SLICREAT Program .....	80
Reformatting the SLSJRNNnn Data Sets .....	80
Creating Only the SLSSTBY CDS .....	80
Storage Cell Capacity for 4410, 9310, and ExtendedStore LSMs .....	82
Storage Cell Capacity for 9360 LSMs .....	82
Storage Cell Capacity for TimberWolf 9740 LSMs .....	83
Storage Cell Capacity for StreamLine SL8500 Libraries .....	84
Storage Cell Capacity for StreamLine 3000 Libraries .....	85
Backup Utility Recommendation .....	87
<b>Chapter 6. Defining HSC Control Statements .....</b>	<b>89</b>
Definition Data Set Control Statements .....	89

Parameter Library (PARMLIB) Control Statements .....	90
<b>Chapter 7. Initializing the HSC .....</b>	<b>93</b>
Starting the HSC .....	93
Creating an HSC START Procedure .....	93
Executing the HSC START Procedure .....	100
Modifying LSMs Online .....	100
Configuration Mismatches .....	101
Multiple Hosts Startup Considerations .....	101
Issuing the START Command .....	102
Initializing the HSC Under the Master Subsystem .....	103
Starting the HSC Using the SSYS Parameter .....	103
Starting the HSC to the Full Service Level .....	103
Starting the HSC at the Base Service Level .....	103
<b>Chapter 8. Terminating the HSC .....</b>	<b>105</b>
Stopping the HSC .....	105
Orderly Termination of the HSC .....	105
Forced Termination of the HSC .....	106
<b>Chapter 9. Testing the Installation .....</b>	<b>107</b>
Scope of Installation Verification .....	107
Installation Verification Prerequisites .....	110
IVP Functional Test Phases .....	110
Basic Installation Integrity Test .....	111
Recommended Test Procedure .....	111
ACS and HSC Functionality Test .....	112
Recommended Test Procedure .....	112
HSC Utilities and Basic Commands Test .....	114
Recommended Test Procedure .....	114
Manual Mode Test .....	116
Recommended Test Procedure .....	116
Description of Test Programs .....	117
SLIEXERS Program .....	117
<b>Chapter 10. Planning Migration to the Library .....</b>	<b>119</b>
Tri-Optic Label Verification .....	119
ECART External Media Label Requirements .....	119
ZCART External Media Label Requirements .....	119
Helical External Media Label Requirements .....	120
STK1 (T9840A, T9840B, T9840C, or T9840D) External Media Label Requirements .....	120
STK2 (T9940A or T9940B) External Media Label Requirements .....	121
LTO, SDLT, T10000 External Media Label and Media Domain Requirements .....	122
Loading Cartridges into the Library .....	124
ENter Command .....	124
Manually Loading Cartridges into LSM .....	124
Initialize Cartridge Utility .....	125

Using an Auto-mode CAP to Load Cartridges .....	125
Migrating Applications to Library Use .....	125
<b>Appendix A. Library Configuration Checklist .....</b>	<b>127</b>
<b>Appendix B. Library Configurations .....</b>	<b>131</b>
Example Configuration with LIBGEN Files .....	131
One Host, One ACS, One SL3000 Library Configuration .....	132
Hardware Components .....	132
LIBGEN .....	132
One Host, Two ACSs, One 9310 LSM, One SL8500 Library Configuration .....	134
Hardware Components .....	134
LIBGEN01 .....	134
One Host, One ACS, One 9310, One 9360 LSM Configuration .....	139
Hardware Components .....	139
LIBGEN02 .....	139
One Host, One ACS, Two 9360 WolfCreek LSM Configuration .....	143
Hardware Components .....	143
LIBGEN03 .....	143
One Host, One ACS, One 9310 LSM, Dual LMU Configuration .....	147
Hardware Components .....	147
LIBGEN04 .....	147
Two Host, One ACS, Two 9310 LSM Configuration .....	150
Hardware Components .....	150
LIBGEN05 .....	150
<b>Appendix C. Commands, Macros, Control Statements, and Utilities Syntax Conventions .....</b>	<b>155</b>
Syntax Elements .....	155
Command Elements .....	155
Library Identification .....	156
Ranges and Lists .....	157
Control Statement Syntax Conventions .....	160
<b>Appendix D. Migration and Coexistence Processes .....</b>	<b>163</b>
Overview of Migration and Coexistence .....	164
HSC Migration Scenarios .....	165
Software Support .....	165
HSC Coexistence Scenarios .....	165
HSC Installation Scenarios .....	166
Installation in a Verification Environment .....	166
Direct Installation into a Production Environment .....	167
Hardware Support Dependencies Between HSC Releases .....	169
HSC Support for Virtual Media .....	170
Control Data Set and Journal Requirements .....	171
Backup Requirements .....	171
CDS Conversion Requirements (Up-Level Migration) .....	171
CDS Conversion Requirements (Down-Level Migration) .....	171



MERGEcds Utility .....	171
Utility Usage Requirements .....	172
Compatibility of Stand-Alone Utilities .....	172
Compatibility of Utilities Requiring the HSC Subsystem .....	172
Up-Level Migration .....	173
Procedure for 6.0/6.1 to 6.2 Up-Level Migration .....	173
Procedure to Verify HSC 6.2 Functions Against a Separate CDS .....	174
Procedure to Verify HSC 6.2 Functions Without Library Hardware .....	175
Procedure to Verify 6.2 Functions With Library Hardware .....	177
Down-Level Migration .....	178
De-installation of PTFs .....	178
Procedure for 6.2 to 6.0/6.1 Down-Level Migration .....	178
<b>Glossary .....</b>	<b>179</b>
<b>Index .....</b>	<b>195</b>



## Figures

---

Figure 1. Configuration/Installation Flow Diagram .....	4
Figure 2. Required Order for Specifying the LIBGEN Macros .....	30
Figure 3. Sample Library Configuration .....	31
Figure 4. LIBGEN MACRO Relationship .....	32
Figure 5. Example of Pass-thru Port Relationships .....	55
Figure 6. SL3000 Drive Panel Layout Example .....	64
Figure 7. Data Set Initialization .....	79
Figure 8. Installation Verification Flow Diagram .....	108
Figure 9. Cartridge with Tri-Optic label and ECART Media Type Indicator .....	120
Figure 10. LIBGEN for One Host, One ACS, One SL3000 Library Configuration .....	132
Figure 11. One Host, One ACS, One SL3000 Library Configuration .....	133
Figure 12. LIBGEN for One Host, Two ACSs, One 9310 LSM, One SL8500 Library Configuration ..	135
Figure 13. One Host, Two ACSs, One 9310 LSM, One SL8500 Library Configuration .....	138
Figure 14. LIBGEN for One Host, One ACS, One 9310 LSM, One 9360 LSM Configuration .....	140
Figure 15. One Host, One ACS, One 9310 LSM, One 9360 LSM Configuration .....	142
Figure 16. LIBGEN for One Host, One ACS, Two 9360 LSM Configuration .....	144
Figure 17. One Host, One ACS, Two 9360 LSM Configuration .....	146
Figure 18. LIBGEN for One Host, One ACS, One 9310 LSM, Dual LMU Configuration .....	148
Figure 19. One Host, One ACS, One 9310 LSM, Dual LMU Configuration .....	149
Figure 20. LIBGEN for Two Host, One ACS, Two 9310 LSM Configuration .....	151
Figure 21. Two Host, One ACS, Two 9310 LSM Configuration .....	153



## Tables

---

Table 1.	Other Software Products Compatible with the HSC .....	11
Table 2.	Mapping of Command Prefix Codes to Characters .....	39
Table 3.	SL8500 Drive Panel Layout Example - Outside Library .....	65
Table 4.	SL8500 Drive Panel Layout Example - Inside Library .....	65
Table 5.	LIBGEN Job Step Return Codes .....	70
Table 6.	Storage Cell Capacity of 4410, 9310, ExtendedStore LSMs .....	82
Table 7.	Storage Cell Capacity of WolfCreek 9360-050 LSMs .....	82
Table 8.	Storage Cell Capacity of WolfCreek 9360-075 LSMs .....	83
Table 9.	Storage Cell Capacity of WolfCreek 9360-100 LSMs .....	83
Table 10.	Storage Cell Capacity of TimberWolf 9740 LSMs .....	83
Table 11.	Storage Cell Capacity of StreamLine (SL8500) Libraries .....	84
Table 12.	Storage Cell Capacity of StreamLine (SL3000) Libraries .....	85
Table 13.	HSC Initialization .....	102
Table 14.	Utilities Tested During Installation Verification .....	108
Table 15.	Commands Tested During Installation Verification .....	109
Table 16.	Job Processing Functions Tested During Installation Verification .....	110
Table 17.	Basic Installation Test Procedure .....	111
Table 18.	ACS and HSC Functionality Test Procedure .....	112
Table 19.	HSC Utilities and Basic Commands Test Procedure .....	114
Table 20.	ACS/HSC Detailed Functionality Test Procedure .....	116
Table 21.	Non-legacy Media Type/Domain Definitions .....	122
Table 22.	Library Configuration Checklist .....	127
Table 23.	HSC Library Hardware Dependencies .....	169
Table 24.	Procedure for 6.0/6.1 to 6.2 Up-Level Migration .....	173
Table 25.	Procedure to Verify 6.2 Functions without Library Hardware .....	175
Table 26.	Procedure to Verify 6.2 Functions with Library Hardware .....	177

Table 27. Procedure for 6.2 to 6.0/6.1 Down-Level Migration .....	178
---	-----

## What's New With This Release?

---

HSC 6.2 includes the following enhancements and modifications:

Enhancement/Modification	Publication(s)/ Primary Locations
<b>Revision 02:</b>	
The SL8500 partitioning feature has been enhanced for users at firmware level 7.02 and above. Legacy partitioning procedures for users below this firmware level continue to appear in Appendix A, "HSC Support for the SL8500 Library." Enhanced partitioning procedures for both the SL8500 and SL3000 libraries are shown in a new appendix, Appendix C, "StreamLine Library Partitioning."	<b>System Programmer's Guide</b> Appendix C, StreamLine Library Partitioning
The Display DRives command includes the SHOWSlot parameter, used to display the drive bay location (slot) for drives in SL3000 and SL8500 libraries.	<b>Operator's Guide</b> Chapter 2, Display DRives command  <b>Messages and Codes Guide</b> Changed messages: <ul style="list-style-type: none"><li>• SLS0041I</li><li>• SLS2916I</li><li>• SLS4633I</li></ul>
The Display EXceptns command reports errors in two formats: <ul style="list-style-type: none"><li>• LSM AA:LL</li><li>• AA:LL:CC</li></ul>	<b>Operator's Guide</b> Chapter 2, Display EXceptns command
The HSC Start procedure EXEC statement allows you to write HSC software events to the system LOGREC data set.	<b>Configuration Guide</b> Chapter 7, Initializing the HSC  <b>System Programmer's Guide</b> Chapter 3, HSC Control Statements and HSC Start Procedure

Enhancement/Modification	Publication(s)/ Primary Locations
<b>Revision 01:</b>	
Support for the T10000C drive and cartridges.	<p><b>System Programmer's Guide</b> Chapter 2, T10000 Drive Encryption</p> <p>Chapter 3, VOLATTR control statement</p> <p>Chapter 4, EJECT Cartridge and Scratch Redistribution utilities</p> <p>Appendix G, MOUNT, QDRLIST, QSCRATCH, and SELSCR requests</p> <p><b>Operator's Guide</b> Chapter 2, Display DRives, Display SCRatch, Display THReshld, EJECT, Warn commands</p>
<p>For the SL3000 library, "Adding Resources to a Library" procedure, there is an additional optional step to modify CAPs online (step 7) after varying all ACSs online.</p> <p>For the SL3000 library, "Removing Resources from a Library" procedure, there is an additional optional step to modify CAPs offline (step 6) after varying RTDs offline to VTCS.</p>	<p><b>System Programmer's Guide</b> Appendix B, HSC Support for the SL3000 Library</p> <ul style="list-style-type: none"> <li>• Adding Resources to a Library</li> <li>• Removing Resources from a Library</li> </ul>
<p>Support for LTO generation 5 drives.</p> <p><b>Note: LTO transports are not supported in an MSP environment.</b> These transports are recognized by the HSC but are accessible only to open systems clients using LibraryStation.</p>	<p><b>Configuration Guide</b> Chapter 2, Unit Addresses</p> <p>Chapter 10, LTO, SDLT, T10000 External Media Label and Media Domain Requirements</p> <p><b>Operator's Guide</b> Chapter 2, Display Drives, Display SCRatch, Display THReshld, EJECT, Mount, Warn</p> <p><b>System Programmer's Guide</b> Chapter 3, VOLATTR</p> <p>Chapter 4, EJECT, SCRatch Redistribution</p> <p>Appendix I, MOUNT, QDRLIST, QSCRATCH, SELSCR</p>



Enhancement/Modification	Publication(s)/ Primary Locations
The SL8500 library now allows you to remove or add a partition.	<b><i>System Programmer's Guide</i></b>  Appendix A, HSC Support for the SL8500 Library: <ul style="list-style-type: none"> <li>• Remove a Partition from the Library</li> <li>• Add a Partition to the Library.</li> </ul>

Enhancement/Modification	Publication(s)/ Primary Locations
<b>Revision BA:</b>	
Support for the SL3000 library Access Expansion Module (AEM).	<p><b><i>System Programmer's Guide</i></b>  Chapter 4, AUDIt, EJECT Cartridge, INITIalize Cartridge, and MOVE utilities</p> <p>Appendix C, Adding/Removing Expansion Modules - SL3000 Library</p> <p>Appendix D, CAPid Formats</p> <p><b><i>Operator's Guide</i></b>  Chapter 1, SL3000 Library description</p> <p>Chapter 2, CAPid Formats, CAPPref, DRain, EJECT, ENTER, MODify, MOVE, RELEASE CAP, SENTER</p>

Enhancement/Modification	Publication(s)/ Primary Locations
<p>For SL8500 libraries, the Redundant Electronics (RE) feature minimizes control path downtime caused by an active Library Controller (LC) failure. The RE configuration provides a standby LC that acts as a back up to the active LC.</p>	<p><b><i>System Programmer's Guide</i></b>  Chapter 3, HSC Control Statements and HSC Start Procedure</p> <ul style="list-style-type: none"> <li>• LMUPATH control statement</li> </ul> <p>Appendix A, HSC Support for the SL8500 Library:</p> <ul style="list-style-type: none"> <li>• TCP/IP Communications - Important Considerations</li> <li>• Multiple TCP/IP Redundant Electronics (RE)</li> <li>•</li> </ul> <p><b><i>Operator's Guide</i></b>  Chapter 1, General Information</p> <ul style="list-style-type: none"> <li>• SL8500 Redundant Electronics (RE)</li> </ul> <p>Chapter 2, Commands, Control Statements, and Utilities</p> <ul style="list-style-type: none"> <li>• Display Acs</li> <li>• SWitch</li> </ul> <p>Chapter 3, Operating an Automated Cartridge System</p> <ul style="list-style-type: none"> <li>• SL8500 Redundant Electronics Environment</li> <li>• Redundant LC Operational Overview and Operation</li> </ul> <p><b><i>Messages and Codes Guide</i></b>  New messages:</p> <ul style="list-style-type: none"> <li>• SLS0692I</li> <li>• SLS0693I</li> <li>• SLS1666E</li> <li>• SLS1667I</li> </ul> <p>Changed messages:</p> <ul style="list-style-type: none"> <li>• SLS0699I</li> <li>• SLS1000I</li> <li>• SLS1003I</li> <li>• SLS1004I</li> <li>• SLS1007I</li> </ul>

Enhancement/Modification	Publication(s)/ Primary Locations
<p>The Media Warranty Life feature shows the percentage of media life that has been used for a volume. The following transports are supported:</p> <ul style="list-style-type: none"> <li>• T9x40, excluding T9840B</li> <li>• T10000A</li> <li>• T10000B</li> </ul>	<p><b><i>System Programmer's Guide</i></b> Chapter 4, Utility Functions</p> <ul style="list-style-type: none"> <li>• Volume Report Utility: MWL, MWLNA, and MWLGE parameters</li> </ul> <p>Chapter 6, Monitor Cartridges Nearing End of Life</p> <p><b><i>Messages and Codes Guide</i></b> New message:</p> <ul style="list-style-type: none"> <li>• SLS2149I</li> </ul> <p>Changed message:</p> <ul style="list-style-type: none"> <li>• SLS0601I</li> </ul>
<p>The PING parameter on the LMUPATH control statement allows you to set the number of minutes in between requests sent from the HSC to the LMU. These requests are to keep the connection active, which prevents a firewall from closing the connection due to inactivity</p>	<p><b><i>System Programmer's Guide</i></b> Chapter 3, HSC Control Statements and HSC Start Procedure</p> <ul style="list-style-type: none"> <li>• LMUPATH control statement</li> </ul>
<p>The Display DRives command adds the IDentity parameter, which displays the World Wide Name transport identifier and the transport serial number.</p>	<p><b><i>Operator's Guide</i></b> Chapter 2, Display DRives</p>

Enhancement/Modification	Publication(s)/ Primary Locations
<b>Revision B:</b>	
Support for the SL3000 library (HSC 6.1 and later).	<p><b>Configuration Guide</b> Chapter 2, Calculating DASD Space</p> <p>Chapter 4, SLILSM, SLIDRIVS macros</p> <p>Chapter 5, Storage Cell Capacity for StreamLine SL3000 Libraries</p> <p>Appendix B, Library Configurations</p> <p><b>Operator's Guide</b> Chapter 2, CAPPref, DRAIn, EJECT, ENter, MODify, MOVe, RELease CAP, VIEw commands</p> <p><b>System Programmer's Guide</b> Chapter 2, Mixing Media Types and Recording Techniques</p> <p>Chapter 4, AUDIt , EJECT Cartridge, Initialize Cartridge utilities</p> <p>Appendix B, HSC Support for the SL3000 Library</p>
Support for T10000B drive encryption recording techniques and model types (HSC 6.1 and later).	<p><b>System Programmer's Guide</b> Chapter 2, T10000 Drive Encryption</p> <p>Chapter 3, VOLATTR control statement</p> <p>Chapter 4, EJECT Cartridge and Scratch Redistribution utilities</p> <p>Appendix G, MOUNT, QDRLIST, QSCRATCH, and SELSCR requests</p> <p><b>Operator's Guide</b> Chapter 2, Display DRives, Display SCRatch, Display THReshld, EJECT, Warn commands</p>

Enhancement/Modification	Publication(s)/ Primary Locations
<b>Revision B:</b>	
Support for T9840D drive media types, recording techniques, and model types (HSC 6.1 and later).	<p><b>Configuration Guide</b> Chapter 2, Unit Addresses</p> <p>Chapter 4, SLIDRIVS macro</p> <p>Chapter 11, External Media Requirements</p> <p><b>Operator's Guide</b> Chapter 2, Display Drives, Display SCRatch, Display Mount, THReshld, EJECT, Warn</p> <p><b>System Programmer's Guide</b> Chapter 3, TAPEREQ, UNITATTR, VOLATTR</p> <p>Chapter 4, EJECT, SCRatch Redistribution</p> <p>Appendix H, MOUNT, QDRLIST, QSCRATCH, SELSCR</p>
<p>Support for LTO generation 4 drives (HSC 6.1 and later).</p> <p><b>Note: LTO transports are not supported in an MSP environment.</b> These transports are recognized by the HSC but are accessible only to open systems clients using LibraryStation.</p>	<p><b>Configuration Guide</b> Chapter 2, Unit Addresses</p> <p>Chapter 4, SLIDRIVS macro</p> <p>Chapter 11, External Media Requirements</p> <p><b>Operator's Guide</b> Chapter 2, Display Drives, Display SCRatch, Display Mount, THReshld, EJECT, Warn</p> <p><b>System Programmer's Guide</b> Chapter 3, TAPEREQ, UNITATTR, VOLATTR</p> <p>Chapter 4, EJECT, SCRatch Redistribution</p> <p>Appendix H, MOUNT, QDRLIST, QSCRATCH, SELSCR</p>
The SLILIBRY macro adds the FUTRACS parameter to allow new ACSs to be added to the library complex (HSC 6.1 and later).	<p><b>Configuration Guide</b> Chapter 4, SLILIBRY macro</p>

Enhancement/Modification	Publication(s)/ Primary Locations
<b>Revision B:</b>	
The SLILSM macro adds the TYPE=3000 and DOOR=3000 parameters for the SL3000 library (HSC 6.1 and later).	<i>Configuration Guide</i> Chapter 4, SLILSM macro
The OPTion command DUPOFL parameter allows the duplicate VOLSER process to continue when the VOLSER being entered exists in an ACS that is disconnected or in an LSM that is offline (HSC 6.1 and later).	<i>Operator's Guide</i> Chapter 4, OPTion command
The LMUPATH control statement PARTID parameter defines a partition ID for an SL3000 or SL8500 library (HSC 6.1 and later).	<i>System Programmer's Guide</i> Chapter 3, LMUPATH control statement
The EJECT Cartridge utility SEQ parameter specifies whether or not CAP eject processing fills the CAP cells in the same order specified by the <b>VOLser</b> parameter (HSC 6.1 and later).	<i>System Programmer's Guide</i> Chapter 4, EJECT Cartridge utility
The LIST diagnostic command has been expanded with more control blocks and enhanced storage dump capability (HSC 6.1 and later).	<i>System Programmer's Guide</i> Chapter 5, LIST command

Enhancement/Modification	Publication(s)/ Primary Locations																
<b>Revision A:</b>																	
Guidelines to connect an SL8500 to the HSC.	<i>System Programmer's Guide</i> Appendix A, Connecting the SL8500 to the HSC																
SL8500 support for LSM partitioning.	<p><i>System Programmer's Guide</i> Chapter 3, LMUPATH control statement</p> <p>Chapter 4, SET FREEZE utility</p> <p>Appendix A, Partitioning LSMs (main discussion)</p> <p><i>Operator's Guide</i> Chapter 2, Display Acs, Display Cap, Display Exceptions, Display Lsm</p> <p><i>Messages and Codes</i> Chapter 2, HSC System Messages</p> <table> <tr> <td><u>New:</u></td><td><u>Updated:</u></td></tr> <tr> <td>SLS0073I</td><td>SLS0653I</td></tr> <tr> <td>SLS0695I</td><td>SLS0663I</td></tr> <tr> <td>SLS4232I</td><td>SLS1000I</td></tr> <tr> <td>SLS4412I</td><td>SLS2008I</td></tr> <tr> <td>SLS4413I</td><td>SLS4401I</td></tr> <tr> <td>SLS4463I</td><td>SLS4407I</td></tr> <tr> <td></td><td>SLS4610I</td></tr> </table>	<u>New:</u>	<u>Updated:</u>	SLS0073I	SLS0653I	SLS0695I	SLS0663I	SLS4232I	SLS1000I	SLS4412I	SLS2008I	SLS4413I	SLS4401I	SLS4463I	SLS4407I		SLS4610I
<u>New:</u>	<u>Updated:</u>																
SLS0073I	SLS0653I																
SLS0695I	SLS0663I																
SLS4232I	SLS1000I																
SLS4412I	SLS2008I																
SLS4413I	SLS4401I																
SLS4463I	SLS4407I																
	SLS4610I																
Considerations for connecting an SL8500 to multiple hosts or to shared networks.	<i>System Programmer's Guide</i> Appendix A, TCP/IP Communications - Important Considerations																
Procedures to define dual IP connections for the SL8500.	<i>System Programmer's Guide</i> Appendix A, Dual IP Connection																
SLUADMIN output options, date field formats, and alphabetic data field formats have been expanded to include structured XML and comma-separated values (CSV).	<i>System Programmer's Guide</i> Chapter 4, "SLUADMIN Output" and "Parameters Controlling Report Headings"																
Support for the Unified User Interface (UUI) and CSV.	<i>NCS/VTCS XML User's Guide</i>																



Enhancement/Modification	Publication(s)/ Primary Locations
<b>Revision A:</b>	
Support for T10000 drive encryption recording techniques and model types.	<p><b>System Programmer's Guide</b> Chapter 2, T10000 Drive Encryption</p> <p>Chapter 3, VOLATTR control statement</p> <p>Chapter 4, EJECT Cartridge and Scratch Redistribution utilities</p> <p>Appendix G, MOUNT, QDRLIST, QSCRATCH, and SELSCR requests</p> <p><b>Operator's Guide</b> Chapter 2, Display DRives, Display SCRatch, Display THReshld, EJECT, Warn commands</p>
The "Serializing CDSs" topic discusses resource serialization using either the IBM Global Resource Serialization (GRS) facility or the Unicenter CA-MIM/MII third-party software. This replaces the "Global Resource Sharing (GRS) and Multi-Image Integrity Manager (MII)" section.	<b>System Programmer's Guide</b> Chapter 7, Software Interaction
The BACKUp utility DD parameter allows a backup to be run on a selected CDS.	<b>System Programmer's Guide</b> Chapter 4, BACKUp utility
The EJECT utility WAITCAP parameter specifies whether a list of ejecting volumes waits for available CAP if one is not available.	<b>System Programmer's Guide</b> Chapter 4, EJECT utility
The Scratch Conversion utility SLUDRCA1, SLUDRTLm, and SLUDRRMM load modules are distributed in the SMC SMCLINK library during SMP/E installation. Previously, the HSC SLULINK library was used.	<b>System Programmer's Guide</b> Chapter 4, Scratch Conversion utility
The Volume Report utility NOVOL parameter displays summary and/or subpool totals without producing volume detail.	<b>System Programmer's Guide</b> Chapter 4, Volume Report utility
The Display SCRatch command ALL parameter specifies that all scratch subpool totals, including 0 scratch count values, will be displayed.	<b>Operator's Guide</b> Chapter 4, Display command
The SCRATCH and UNSCRATCH operator commands have been added to allow you to scratch or unscratch up to 100 volumes.	<b>Operator's Guide</b> Chapter 2, SCRATCH and UNSCRATCH commands
Support for circumventing the IBM length restriction of 255 characters for a macro parameter.	<p><b>Configuration Guide</b> Chapter 4, SLIACS macro, LSM2, LSM3, and LSM4 parameters</p> <p><b>System Programmer's Guide</b> Chapter 4, Reconfiguration utility</p>

Enhancement/Modification	Publication(s)/ Primary Locations
<b><i>Revision A:</i></b>	
The starting column for the control statement information area has been changed from column 2 to column 1.	Control Statement Syntax Conventions, found in the following documents:  <b><i>System Programmer's Guide</i></b> Appendix C  <b><i>Operator's Guide</i></b> Appendix C  <b><i>Reference Summary</i></b>

## Preface

---

This guide provides information about Oracle's StorageTek Host Software Component (HSC) and its use with the Automated Cartridge System.

The *Configuration Guide* is intended primarily for systems programmers responsible for configuring and maintaining HSC software at their library sites. Library operators and computer system administrators may also find information contained in this guide useful on occasions to review or understand some HSC system concepts.

### Access to Oracle Support

Oracle customers have access to electronic support through My Oracle Support. For information, visit <http://www.oracle.com/support/contact.html> or visit <http://www.oracle.com/accessibility/support.html> if you are hearing impaired.



# Chapter 1. Overview

---

This chapter defines the procedures to plan and complete the configuration of the Host Software Component (HSC) product. Refer to the *NCS-VTCS Installation Guide* for information about installing the HSC software.

## Summary of Configuration Tasks

There are a variety of tasks necessary to configure the HSC software and prepare the library for use. Figure 1 on page 4 illustrates the flow of the major tasks recommended for installing and configuring the HSC (refer to the *NCS-VTCS Installation Guide* for installation information). The order for performing the tasks may vary depending upon various circumstances, such as hardware availability. A summary description follows for each chapter contained in this guide:

- **Chapter 1, “Overview”** — This chapter summarizes the steps in planning for and configuring the HSC.
- **Chapter 2, “Configuring the HSC Environment”** — This chapter discusses configuration planning issues that relate to ensuring that all hardware installation/environmental provisions, software, and installation requirements are predetermined and complete before installing the software.
- **Chapter 3, “Performing Pre-execution Tasks”** — Preexecution tasks involve coding and cataloging the HSC started task procedure and IPLing the system.
- **Chapter 4, “Creating the Library Configuration File (LIBGEN)”** — The LIBGEN process consists of defining the library configuration using LIBGEN macros. The LIBGEN macros define the hardware configuration, recovery requirements, global characteristics, and library control data sets and journals to the HSC software.

In addition, the important process of verifying the LIBGEN is described. This verification process is performed to ensure that the library configuration defined in the LIBGEN is correct. Verification is performed by executing the SLIVERFY program.

PARMLIB control statements for data set allocation (CDSDEF) and for any journaling (JRNDEF) are required. If you are upgrading from a prior release of the HSC or are adding hardware, it may be necessary to define the HSC 6.2 control data set (CDS) using the RECDEF control statement followed by an execution of the MERGEcdfs Utility (see “MERGEcdfs Utility” in the *HSC/MSP System Programmer’s Guide*).

- **Chapter 5, “Initializing the Control Data Sets”** — The data set initialization process creates the library control data sets. The process results in the creation of a primary control data set, optional secondary and standby control data sets, and optional journal data sets.
- **Chapter 6, “Defining HSC Control Statements”** — Definition data sets allow you to define tape request characteristics, volume attributes, and unit attributes for mixed media and mixed device support.

Defining PARMLIB control statements involves specifying static operational parameters for the HSC that are invoked at installation and initialization. The control statements become members in a user-defined data set that is used by the HSC at startup.

- **Chapter 7, “Initializing the HSC”** — Starting execution of HSC software involves issuing the MSP START command that activates the library software. Starting execution of HSC software involves executing a job file for starting the subsystem. Refer to Appendix D, “Migration and Coexistence Processes” on page 163 for related information.
- **Chapter 8, “Terminating the HSC”** — Terminating HSC software involves issuing the MSP STOP command. Orderly and forced termination of the HSC are discussed.
- **Chapter 9, “Testing the Installation”** — Testing the software installation involves ensuring that information specified in the LIBGEN process is fully operational with the HSC software as installed with a working library configuration. The tests involve exercising the operational phases of the HSC software using the SLIEXERS program. The process includes exercising the library tape transports which mount, read, write to, and dismount tape cartridges. Refer to Appendix D, “Migration and Coexistence Processes” on page 163 for related information.

Other tests are recommended to thoroughly test the installation. Each command and utility as well as every major HSC function should be fully verified to ensure that the HSC operates as intended.

Since each library site has unique operating requirements, you should ensure that HSC defaults are properly set during the testing phase of HSC installation. To accomplish this, adjust your PARMLIB defaults to match the requirements for your library site.

- **Chapter 10, “Planning Migration to the Library”** — Planning involves the following tasks:
  - determining the procedures necessary to place external Tri-Optic labels on cartridges before loading them into a Library Storage Module
  - determining the method of entering cartridges into the library
  - invoking the Audit utility to update the control data set.


Refer to “Loading Cartridges into the Library” in the *HSC/MSP System Programmer’s Guide* for performance considerations when loading cartridges into an LSM.

- **Appendix A, “Library Configuration Checklist”** — The checklist helps ensure that all necessary steps are complete for installing the HSC software.
- **Appendix B, “Library Configurations”** — Library configurations can be used as models to analyze how you can configure your library and provide for future expansion.
- **Appendix C, “Commands, Macros, Control Statements, and Utilities Syntax Conventions”** — Provides an overview of conventions used for syntax diagrams, library identifiers, ranges and lists, and control statements.
- **Appendix D, “Migration and Coexistence Processes”** — This appendix describes procedures for up-level and down-level migration and discusses coexistence requirements.

## Performing Library Modifications

After installation and verification of a successful installation of the HSC, you may perform modifications to the library software configuration. These modifications cannot take place during the initial installation of the software. Library modifications may be made any time after the initial installation, when requirements at your site change.

Typical library modifications are to alter the LIBGEN macros and use the Reconfiguration function to enable library configuration modifications. This type of modification can be done without requiring a full audit of the library.

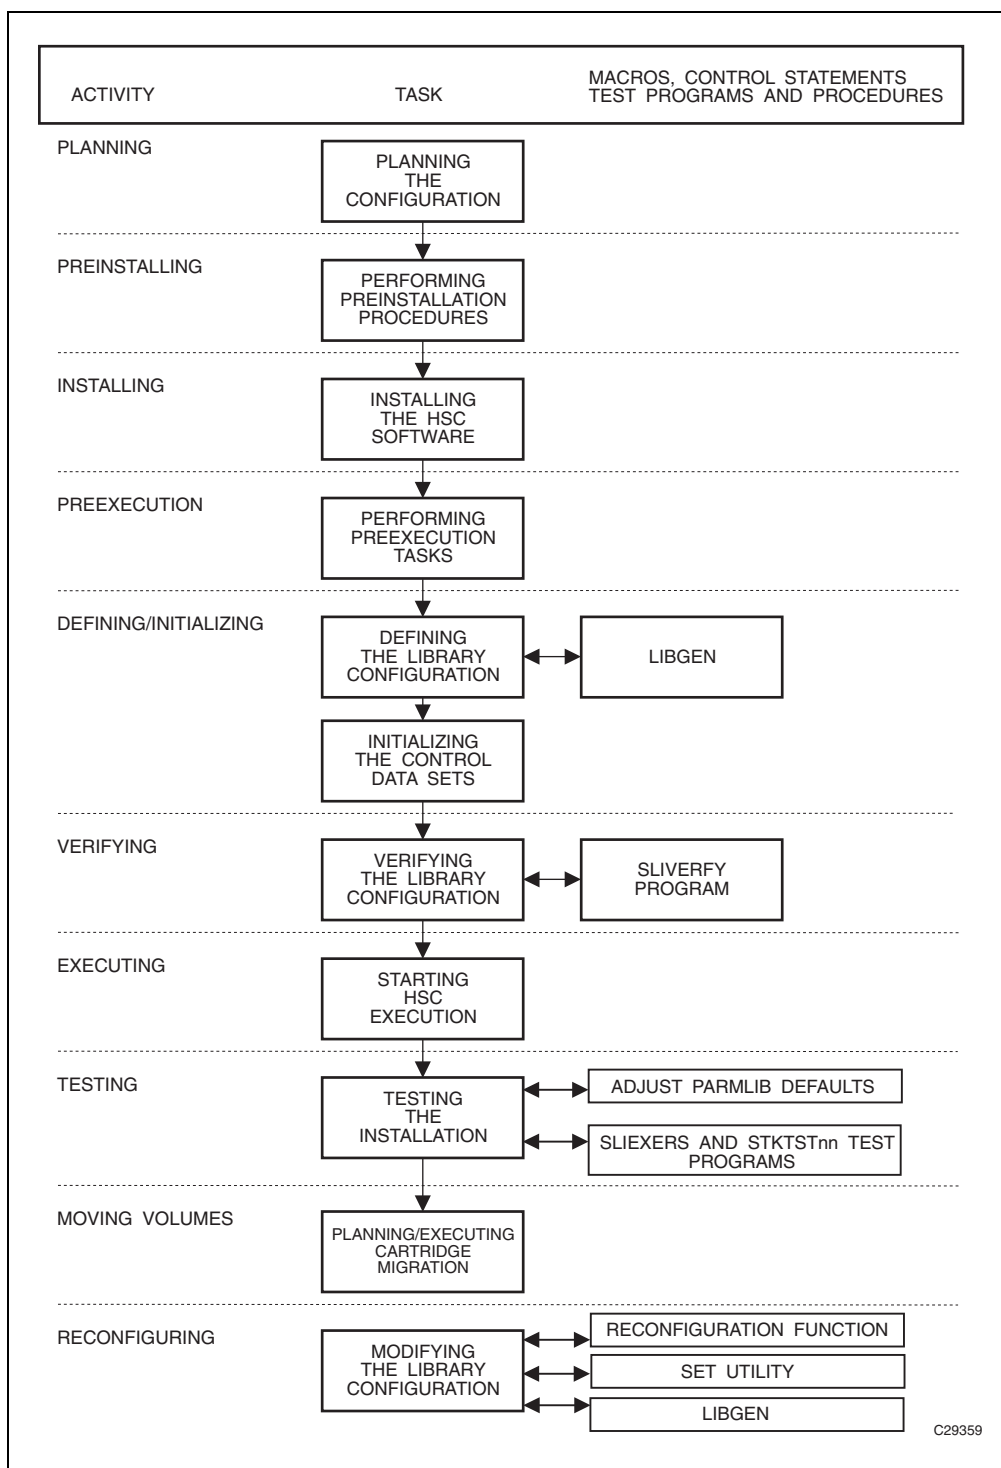

**Figure 1. Configuration/Installation Flow Diagram**



Refer to “MERGEcds Utility” in the *HSC/MSP System Programmer’s Guide* for detailed procedures for reconfiguring the library.

See the “SET Utility” in the *HSC/MSP System Programmer’s Guide* for information on setting or changing the library configuration without performing reconfiguration.

## Customizing HSC Software

Macros, utilities, HSC control statements, user exits, and operator commands allow users to customize the HSC.



**Note:** To assemble customized versions of HSC user exits or other modules, it is recommended that you use the High-Level Assembler.

### Macros

LIBGEN macros are used to establish the library configuration and recovery options for the HSC. These macros are discussed in Chapter 4, “Creating the Library Configuration File (LIBGEN)” on page 27.

### Utilities

Utilities allow you to dynamically control library resources. Refer to “Utility Functions” in the *HSC/MSP System Programmer’s Guide*.

One utility, Scratch Conversion, calls three routines (SLUDRCA1, SLUDRTLM, and SLUDRRMM) that read tape management library systems (TLMS) scratch data and then format this information so that it can be used by the Scratch Update utility. See “Scratch Conversion (SLUCONDB) Utility” in the *HSC/MSP System Programmer’s Guide*.

### HSC Control Statements

Two types of control statements can be defined: PARMLIB, used to set system values at initialization, and definition data set, used to specify mixed media and devices. These control statements are discussed in Chapter 3, “Performing Pre-execution Tasks” on page 25.

### User Exits

Default HSC user exits are installed as part of the HSC install process. If these defaults do not meet your operational requirements, you must create and install your own local HSC user exits. If you already use your own user exits, you must re-assemble and re-install them to validate the changes in the parameter lists.

Refer to the *NCS User Exit Guide* for more information about HSC user exits.

### Operator Commands

Operator commands allow system operators to perform daily library operations. In addition, operator commands can be specified as PARMLIB control statements. Refer to “Commands, Control Statements, and Utilities” in the *HSC/MSP Operator’s Guide* for detailed information about each command.

## Interacting With Third Party Software

The HSC operates with the following third-party software:

- Multi-Image Manager (MIM)
- CA-ASM2
- Global Resource Sharing (GRS)
- Multi-Image Integrity Manager (MII)
- CONTROL-T Tape Management System.

See “Software Interaction” in the *HSC/MSP System Programmer’s Guide* for information about restrictions when using these products in conjunction with the HSC.

## Library Configuration Checklist

A Library Configuration Checklist is provided to help you identify all of the steps involved in the configuration process for HSC software. This checklist is used to ensure that all of the tasks relating to the configuration process are performed.

Refer to Appendix A, “Library Configuration Checklist” on page 127 for the checklist.



## Chapter 2. Configuring the HSC Environment

---

Configuration planning is an important phase of the installation process that must be completed to ensure smooth installation of the HSC software. The customer is responsible for ensuring that each task is successfully completed. Planning tasks include:

- physical plan verification
- system software verification
- migration from earlier HSC releases
- verification of third-party software compatibility
- LSM/pass-thru port (PTP) relationship definition(s)
- configuring MSP unit addresses and esoterics
- configuring LIBGEN unit addresses and esoterics
- DASD planning
- DASD sharing
- calculating DASD space.

### Physical Plan Verification

All of the installation activities should be thoroughly planned before proceeding with installation of the HSC. StorageTek recommends that the configuration plan be available at the beginning of the installation process. The completed physical plan is your installation blueprint. Ensure that provisions are made for the following requirements:

- floor space
- power
- environmental considerations.



**Note:** All space requirements are computed using the StorageTek *Nearline Physical Planning Guide* and the templates provided. In the computations, provisions are made for each library component ordered, future components considered for growth of the system, service areas, personnel clearances, and furniture.

## System Software Verification

The MSP version of the HSC system supports JES. The specific MSP and JES levels supported coincide with Fujitsu's current support position on these operating system levels. That is, if Fujitsu currently provides program services for a particular level, then the HSC also supports it; however, StorageTek may require the customer to apply additional Fujitsu maintenance to ensure satisfactory HSC operation. If Fujitsu has dropped support for a particular level, then the HSC no longer supports that level. For newly announced Fujitsu operating system levels, it is our intent to support each such new level.



**Note:** If you have installed third-party software at your site, refer to “Third-Party Software Interaction” in the *HSC/MSP System Programmer's Guide* for any restrictions that may apply to installing the HSC when such software is present. Refer to “Verification of Third-Party Software Compatibility” below for program product levels required for use with the HSC.

## Migration from Earlier HSC Releases

If your installation plans to run a multiple-host environment including HSC 6.2 and earlier versions of the HSC on other hosts, only HSC 6.0 and 6.1 can run with HSC 6.2. Refer to Appendix D, “Migration and Coexistence Processes” on page 163 for more information.

For information regarding the latest PTF and PUT levels, contact StorageTek Software Support.

## Verification of Third-Party Software Compatibility



**Caution:** Initialization of the HSC subsystem in conjunction with initialization of third-party software and/or other subsystems may be order dependent. It may be necessary to initialize the HSC subsystem after third-party or other subsystem initialization.

The software products shown in the following table are compatible for use with the HSC.

**Table 1. Other Software Products Compatible with the HSC**

Software Product	Minimum Level Required
CA-1	Release 4.7
CA DYNAM/TLMS	Release 5.2
SORT	V11L10
Global Device Manager (GDM)	V10L10
SYNCSORT	Release 2.5E



**Warning:** Caution must be exercised if you use any third-party software that modifies the Eligible Device List (EDL) and therefore the MSP Device Allocation process. These products may compromise the functionality of the HSC and lead to unpredictable results.

HSC provides limited support for the CONTROL-T tape management system. Refer to the BMC publication *CONTROL-T for OS/390 Implementation Guide* for more information.

## LSM/Pass-thru Port Relationship Definition

If your ACS contains only one LSM, you do not need to perform this installation step.

If your ACS contains two or more connected LSMs, you must define the LSM/pass-thru port (PTP) relationships.

PTPs are not designated as master or slave; the terms master and slave refer to the LSMs which share a common PTP. An LSM that controls the PTP is called the “master” LSM, and the LSM which shares that PTP and does not control it is called the “slave” LSM.

All LSMs, except the SL8500, can be a master of only two PTPs. Even though an LSM may have more than two PTPs, it can control only two PTPs; therefore, it is possible for one LSM to be both a master and a slave.



### Notes:

- SL8500 libraries can control eight PTPs.
- SL3000 libraries do not contain PTPs.

The LSM/PTP relationships are defined in the Configuration Plan. Verify that the Configuration Plan defines these relationships. These relationships will be logically defined later in the LIBGEN.

If verification is confirmed, continue with the installation. If verification of the LSM/PTP relationships is not confirmed, cease installation activity until resolution is achieved.

Refer to the “SLILSM Macro” on page 51 for additional information about PTP relationship definition.



## Considerations for Configuring Unit Addresses and Esoterics

### JCL Considerations

There is no need to change JCL. Continue to use the generic or esoteric which allows any library or nonlibrary device to be allocated. The Storage Management Component (SMC) influences MSP to allocate the correct transport within the specified generic or esoteric.

### Remote Library Considerations

For information about device allocation relating to the operation of remote-linked libraries, refer to “Special Considerations for Control Data Sets Processing Independently” in the *HSC/MSP System Programmer’s Guide*.

### CDS Considerations

Unit Control Blocks (UCBs) for HSC CDS volumes can be defined either as `LOCANY=NO` or `LOCANY=YES` using the IBM Hardware Configuration Definition (HCD) facility.

### HSC Scratch Allocation Considerations

HSC scratch allocation can be modified using the `LSMPREF`, `SCRTECH`, and `LOWSCR` keywords on the `ALLOC` operator command/`PARMLIB` statement.

# Configuring MSP Unit Addresses and Esoterics

## Unit Addresses

The IORGP facility is used to assign MSP unit addresses to the devices in your I/O configuration. Refer to the appropriate Fujitsu publications for more information about these facilities.

An LMU Station emulates a 3278-2 terminal attached to a local controller and must be assigned an MSP unit address. The LMU must be defined as a 3x74 local controller.

A 4480 cartridge tape transport is plug-compatible with an IBM 3480; 4490, 9490, and 9490EE cartridge tape transports are plug-compatible with an IBM 3490E; and SD-3, T9840x, T9940x, LTO, SDLT, and T10000x cartridge tape transports are plug-compatible with either an IBM 3490E or 3590. All cartridge tape transports must be assigned MSP unit addresses.

If unit addresses are generated for nonexistent library tape transports, ensure that these addresses are also defined in a SLIDRIVS macro. Such drives are treated by the HSC as incompatible with any media type and are excluded from HSC allocation counts.

## Nonlibrary Esoteric

Nonlibrary esoterics are no longer used to control allocation processing, except when an SMC 6.0 client is communicating with an HSC 6.1 or 6.2 server. Device types for StorageTek tape transports outside the library can be defined by using the SMC UNITATTR command, which can also identify devices to be excluded from any allocation by specifying the MModel(IGNORE) parameter. Refer to the *SMC Configuration and Administration Guide* for more information.

## Library Esoteric(s)

Library esoteric names are no longer used to control allocation processing.

## Configuring LIBGEN Unit Addresses

### Unit Addresses

For a given host, the unit address of each cartridge tape transport attached to an LSM is defined to the HSC using the ADDRESS parameter on the SLIDRIVS macro. Nonexistent devices can be defined in LIBGEN only if the LIBGEN and LMU panel types match. Changing an LMU panel type requires action by a StorageTek Customer Service Engineer. When the new devices are actually installed, be sure to reconfigure your MSP unit address and esoteric definitions to accurately reflect the changes.

StorageTek recommends specifying unit addresses for devices not defined on a host **if that host may be used as a server for another host where device addresses have been configured.**

## DASD Planning

The HSC uses some data sets resident on DASD devices:

- the primary control data set
- optional secondary and standby control data sets
- optional journal data sets
- backup data sets.

As a result, some DASD planning is required. The following considerations must be made for DASD planning:

- control data set recovery strategies
- DASD space planning
- DASD sharing

Each of these requirements is described in the following paragraphs.

### Control Data Set Recovery Strategies

To guard against the destruction of the primary control data set, the following recovery techniques are available:

- optional multiple copies of the control data set, available at all times, to the library hosts
- optional multiple journals recording library transactions separately from the control data sets
- BACKup and REStore utilities available that perform extensive checking and reporting
- automatic switching of control data sets in cases of failure or degradation
- operator controlled switching of control data sets to allow for uninterrupted library operation during problem investigation.

The control data sets are important components relating to the recovery process. These data sets include:

#### Primary Control Data Set

The primary control data set resides on a DASD or solid state disk (SSD) device. The primary control data set must be accessible by all CPUs configured with the library. All configuration information about the ACS is stored in this data set, and it is continuously updated to reflect changes resulting from volume processing.

#### Secondary Control Data Set

This data set is an exact duplicate of the primary control data set and is also continuously updated to reflect changes in the library. In general, if the primary control data set becomes corrupted, the HSC continues to operate without interruption by automatically switching to the secondary control data set. Thus, the secondary control data set becomes the primary control data set. However, the data set name remains unchanged.



**Note:** It is highly recommended that the secondary control data set reside on separate HDAs and separate strings from the primary control data set.

The secondary control data set is commonly referred to as the Shadow CDS. The HSC allows for the SHADOW option to be specified at the time of product installation during library generation (LIBGEN). Refer to “SLIRCVRY Macro” on page 34 for instructions on specifying the use of a secondary control data set.

### Standby Control Data Set

The standby control data set is optional. This data set is a formatted CDS containing only the first CDS record. If necessary, this data set is used for control data set disaster recovery. Refer to “Software Diagnostics and Recovery” in the *HSC/MSP System Programmer’s Guide* for more information on recovery techniques.

The HSC allows for the STANDBY option to be specified at the time of product installation during library generation (LIBGEN). Refer to the “SLIRCVRY Macro” on page 34 for instructions on specifying the use of a standby control data set.

### Journals

Journals are data sets that record a running log of all transactions that affect the control data set(s). If journaling is used as a recovery technique, two journals must be specified for each host to record any activity affecting the primary control data set since the last HSC backup.

One journal is used to record all activity until it becomes full; then, the HSC automatically switches to the other journal and issues a message to inform the operator. The operator should then offload the first journal or back up the control data set. Backing up the CDS resets the journals to empty when the backup is completed.

By default, HSC abends when both journals become full. Warning messages are issued when the journals are more than 75 percent full. A second option can be specified by operator command or in the PARMLIB options to allow the HSC to “continue” to run without journals on all hosts, if both data sets become full on any one host.



**Caution:** With this option, if journaling is disabled, none of the journals may be used for recovery purposes.

Refer to “Journal Definition (JRNDEF) Control Statement” in the *HSC/MSP System Programmer’s Guide* for a description of the CONTINUE option for the JRNDEF control statement.

The control data set can be reconstructed by using the journals and the most recent CDS backup. All HSCs must be stopped before attempting recovery by this technique and must remain down until the restore operation is finished.

The HSC allows for the journaling option to be specified at the time of product installation during library generation (LIBGEN). Refer to the “SLIRCVRY Macro” on page 34 for instructions on specifying the use of journaling.

**Using a standby data set provides the best protection for the CDS. Journals should be used when the SHADOW and STANDBY techniques are not possible. Failure to specify any technique may require running an audit of the entire library to re-create the control data set.**



**Note:** If a VM host shares the library, then the journal offload data sets must also reside on shared DASD.

## DASD Sharing

There are very stringent requirements for DASD volumes shared between multiple host systems and processors.

Some data sets must be capable of being shared in read/write mode by all host systems which access the ACS. These data sets include:

- primary control data set
- optional secondary and standby control data sets
- optional journals for offload or backup reset.

The primary, secondary, and standby control data sets must be accessible to all hosts sharing the ACS. If the data sets are required by only one system, then this sharing requirement can be disregarded.

If you decide to use the optional journals and offload journals at your installation, a set of two journals (Journal 1 and Journal 2) is unique to each host. The same requirement applies for the optional offload journals.

## I/O Device Reserve Considerations

StorageTek strongly recommends that you do **not** place copies of the control data set on the same volume(s) as other data sets that generate high I/O activity and excessive reserves to that volume during normal processing. This applies to all control data set copies including secondary (shadow) and standby.



**Warning:** If you place data sets on volumes that contain CDSs, you must ensure programs that interact with each other do not access multiple CDS volumes concurrently, or a *deadly embrace* scenario can occur. The best solution is for you to place data sets that require reserve/release functions on disks that do not contain HSC CDS data sets.

For example, TMS catalog and audit data sets are known to cause contention and lockout problems when on the same volume as HSC CDSs, while a backup copy of a data set that is used only occasionally for restore purposes normally does not cause a significant problem. However, if response problems or lockouts do occur, an examination should be made of all ENQ and I/O activity related to that volume.

Various problems have been encountered when running the HSC on a VM host that shares the CDS with an HSC running on MSP.

- The DEFRAg utility running on MSP has caused problems with lockout conditions as well as moving a CDS copy while a VM HSC was running.
- HSM processing has caused problems with lockout conditions

In order to prevent errors caused by contention lockout situations with other hosts, it is recommended that the VM missing interrupt interval (MITIME) for the DASD volumes containing the primary, secondary, and standby control data sets be set to a value slightly greater than the length of the longest reserve that will be held on either pack. For backup utilities this is a minimum of thirty seconds and may take several minutes. Refer to the appropriate Fujitsu Command Reference for the syntax of the SET MITIME command.

To prevent errors caused by contention lockout situations with other hosts when an MSP system is running as a guest under VM, it is recommended that the missing interrupt handler (MIH) for the DASD volumes containing the primary, secondary, and standby control data sets be set to a value slightly greater than the length of the longest reserve that will be held on either pack. Use the MIH parameter to set the time for specific devices in the MSP SYS1.IPLLIB member KHSDEVxx. Set the MSP MIH TIME value to either one half or two times the VM MITIME value, depending on which system you want to have control first. Set the value large enough so that a missing interrupt is not detected while a reserve is being held.<sup>1</sup> Then IPL the system.

If you are running the HSC on a VM host that shares the CDS with an HSC running on MSP, make sure your command prefix does not conflict with any of the VM facilities, such as the CP line editing symbol.

---

1. If a reserve is being held, it can show up as a missing interrupt to other systems.



## Calculating DASD Space

Instructions for computing the DASD space requirements for these data sets are contained in this section. The formula used for the computations calculates the number of 4K blocks required.



### Notes:

1. It is recommended that each data set reside on a different HDA. If possible, the primary, secondary, and standby control data sets should be on different control units and different channels. Each control data set must be allocated in a single DASD extent.
2. If you are running Virtual Storage Manager (VSM), refer to the VSM software documentation to determine DASD space requirements for VSM.

Since the HSC uses hardware device reserve/release to control sharing, it is recommended for performance reasons that the library configuration allow device reserve/release to be issued.

For DASD planning, use the following formula to estimate the number of 4K blocks (NUMBLKS) necessary to store the primary, secondary, and standby control data sets, and each journal data set:

$$\text{NUMBLKS} = 225 + (130 * splsm) + (70 * wls m) + (50 * t l s m) + (25 * sl8 l s m) + (25 * sl3 l s m) + (25 * future-ls m s)$$

where:

***splsm***

the total number of 4410 (Standard) or 9310 (PowderHorn) LSMs

***wls m***

the total number of 9360 (WolfCreek) LSMs

***tlsm***

the total number of 9740 (TimberWolf) LSMs.

***sl8lsm***

the total number of real SL8500 LSMs. Each SL8500 library counts as four LSMs.

***sl3lsm***

the total number of real SL3000 LSMs.

### *future-lsms*

**This parameter applies to SL3000 and SL8500 libraries only.** It is the sum of the following two values:

- Include planned SL3000 or SL8500 libraries as if they were physically present. Refer to the FUTRACS parameter in the “SLILIBRY Macro” on page 36.

The value is the number of future ACSs times the number of future LSMs as specified in the FUTRACS parameter. Each FUTRACS value represents an SL3000 or an SL8500 library.



**Note:** To allow sufficient CDS space, assume each future ACS is an SL8500 and equals 4 LSMs.

- Include planned SL8500 libraries as if they were physically present. Refer to the FUTRLSM parameter in the “SLIACS Macro” on page 45.

Each FUTRLSM value can represent only future SL8500 LSMs added to an existing ACS.



#### Notes:

- No additional space is required for an HSC 6.1 CDS.
- The “225” constant in the DASD space calculation accounts for hosts and ACSs. Drives are attributed in the constant multiplier for each LSM type, for example, the “25” in the  $25 * sl81sm$  portion of the formula.

The CDS size increase allows users to specify additional drives for each LSM and, in future releases, to dynamically define more hosts.

Besides planning for the DASD space requirements for the primary, secondary, standby control data sets, and the unique set of journals to each host, you must ensure that enough DASD space exists for HSC authorized target and distribution libraries (refer to the *NCS-VTCS Installation Guide*).

## Automated Space Calculation

You can automatically calculate DASD space when you run the SLICREAT program, which is used to create the control data sets. Refer to “Calculating DASD Space” on page 21 for more information.

## Data Set Placement

For performance and recovery considerations, each copy of the CDS should reside on a separate DASD HDA. Separate control units are also recommended to further ensure adequate recovery conditions. A CDS should not reside on the same volume as other high reserve or high I/O data sets. All journals for all hosts may be on the same volume as long as that volume does **not** contain a CDS.

## Cartridge Capacity Calculation - SL8500 and SL3000

Message SLS0557I displays the maximum cartridge capacity for the library. **For the SL8500 and SL3000 libraries only**, these numbers are not accurate, and you must first vary the library online (Vary ACS command) to see the actual capacity of the library rather than the maximum capacity of the library.

The library type is specified in the SLILSM LIBGEN macro, however, the HSC cannot determine whether or not the SL8500 or SL3000 contains expansion panels. Until the library is varied online, the HSC assumes the maximum number of panels allowable or zero.

After you vary the library online, enter the Display Acs or Display Lsm command to show the actual SL8500 or SL3000 library capacity. Refer to the *HSC Operator's Guide* for information about the Vary and Display commands.



## Chapter 3. Performing Pre-execution Tasks

---

The following tasks must be performed as pre-execution tasks:

- coding and cataloging the HSC started task procedure
- IPLing the system.



**Note:** The majority of the pre-execution tasks are installation-related. Refer to the *NCS-VTCS Installation Guide* for a description of these items.

If you are migrating from a previous HSC release, some of these tasks can be bypassed. Review each task and verify that it is properly completed before proceeding to the next task.

## Coding and Cataloging the HSC Started Task Procedure

Your system cataloged procedure library must contain a started task procedure for HSC 6.2. The following JCL is a sample cataloged procedure to run HSC 6.2. This JCL is also contained in HSC SAMPLIB member JCLPROC.



**Note:** The PARMLIB control statement CDSDEF must be defined in your PARMLIB to allocate data sets. If journaling is desired, the JRNDEF control statement must also be defined in your PARMLIB. For more information, refer to “Parameter Library (PARMLIB) Control Statements” on page 90.

```
//SLSØ      PROC  PROG=SLSBINIT,PRM=' '  
//*  
//IEFPROC   EXEC  PGM=&PROG,TIME=144Ø,  
//          PARM='&PRM E(EØ86) F(23) M(ØØ) SSYS(SLSØ)',REGION=4M  
//*  
//STEPLIB   DD   DSN=SLS.SLSLINK,DISP=SHR  
//*  
//SLSSYSØØ  DD   DSN=SLS.PARMS,DISP=SHR
```

Refer to “Creating an HSC START Procedure” on page 93 for a complete description of the parameters that may be specified in the PARM operand.

## IPLing the System

You must perform a COLD start at the first HSC startup. Subsequent HSC startups should not require a COLD start unless a problem is encountered.

## Chapter 4. Creating the Library Configuration File (LIBGEN)

---

### Defining the Library Configuration File(LIBGEN)

LIBGEN is a process of defining the library configuration and recovery options to the HSC. LIBGEN provides HSC with information necessary to control the automated library.

LIBGEN output is an object module created by the assembler and must be link-edited into a load module. This load module is loaded by the HSC during library control data set initialization and used to format the control data sets.



**Note:** The LIBGEN module **must** reside in an APF-authorized library, but does not itself require APF authorization.

The Installation Verification Process is used to verify information specified during the LIBGEN process.

### Procedure for Library Generation (LIBGEN)

The LIBGEN process consists of the following steps:

1. Create a file to contain the assembler statements for the LIBGEN. The assembler file invokes a set of macros provided by StorageTek to describe the library configuration. The LIBGEN macros are described in “LIBGEN Macros” on page 28. Sample LIBGEN files are contained in Appendix B, “Library Configurations” on page 131.
2. Assemble and link-edit the LIBGEN file.
3. Allocate the library control data sets. Refer to Chapter 5, “Initializing the Control Data Sets” on page 73 for information on data set initialization.



**Note:** If you are migrating from a prior release of the HSC, refer to Appendix D, “Migration and Coexistence Processes” on page 163 for information concerning updating the CDS for HSC 6.2.

Upon the completion of these steps, the library generation is completed and the library control data sets are ready to use.

## LIBGEN Macros

The LIBGEN macros are provided in source format on the distribution tape in SLS.SLSMAC.

### Description of LIBGEN Macros

Each LIBGEN macro has a specific function. Descriptions of the LIBGEN macros follow:

Macro	Description
SLIRCVRY	This macro describes the recovery characteristics of the HSC. One SLIRCVRY macro is specified. It is the first macro of the LIBGEN.
SLILIBRY	This macro describes all global characteristics of the library. One SLILIBRY macro is specified. It must follow the SLIRCVRY macro.
SLIALIST	This macro includes a list of all of the ACSs which comprise the library. One SLIALIST macro follows the SLILIBRY macro.
SLIACS	This macro describes the characteristics of each ACS listed in the SLIALIST macro. One SLIACS macro is specified for each ACS listed in the SLIALIST macro. The ACSDRV parameter contains the esoterics of all attached transports. The STATION parameter contains label names used in SLISTATN macros. The LSM, LSM2, LSM3, and LSM4 parameters contain label names used in SLILSM macros.
SLISTATN	This macro lists the stations (LMU interfaces) that connect a host to an ACS. One SLISTATN macro is specified for each station entry listed in the SLIACS macro. The SLISTATN macros follow the SLIACS macro in the order specified on the SLIACS macro STATION parameter.
SLILSM	This macro describes the characteristics of each Library Storage Module (LSM) defined by the SLIACS macro. One SLILSM macro is specified for each LSM listed in the SLIACS macro LSM, LSM2, LSM3, and LSM4 parameters. The SLILSM macro follows the SLISTATN macro and both are referenced by the SLIACS macro. The SLILSM macro contains a PASTHRU parameter defining the LSM/PTP relationships. The ADJACNT parameter defines the label of the SLILSM macro which is adjacent to this LSM.
SLIDLIST	This macro lists the SLIDRIVS macro for each host. One SLIDLIST macro is specified for each DRVELST parameter entry listed in the SLILSM macro. The SLIDLIST macro follows the SLILSM macro which refers to it.
SLIDRIVS	This macro lists the transport device addresses used by each host attached to an LSM. The SLIDRIVS macro follows the SLIDLIST macro which refers to it.
SLIENDGN	This macro specifies the end of the LIBGEN macros.



## **Required Order for Specifying LIBGEN Macros**


Figure 2 on page 30 illustrates a list of LIBGEN macros in required order.

## **LIBGEN Macro Relationship to a Library Configuration**

Figure 3 on page 31 is an example of a typical library configuration. Figure 4 on page 32 contains the corresponding LIBGEN components applicable to the example configuration. The illustration and corresponding LIBGEN definitions are provided to help you better understand the relationship of a LIBGEN to an actual configuration.


## **Macro Syntax Conventions**

Syntax conventions are important when specifying macros in LIBGEN. Refer to Appendix C, “Commands, Macros, Control Statements, and Utilities Syntax Conventions” on page 155 for an explanation of macro syntax conventions.

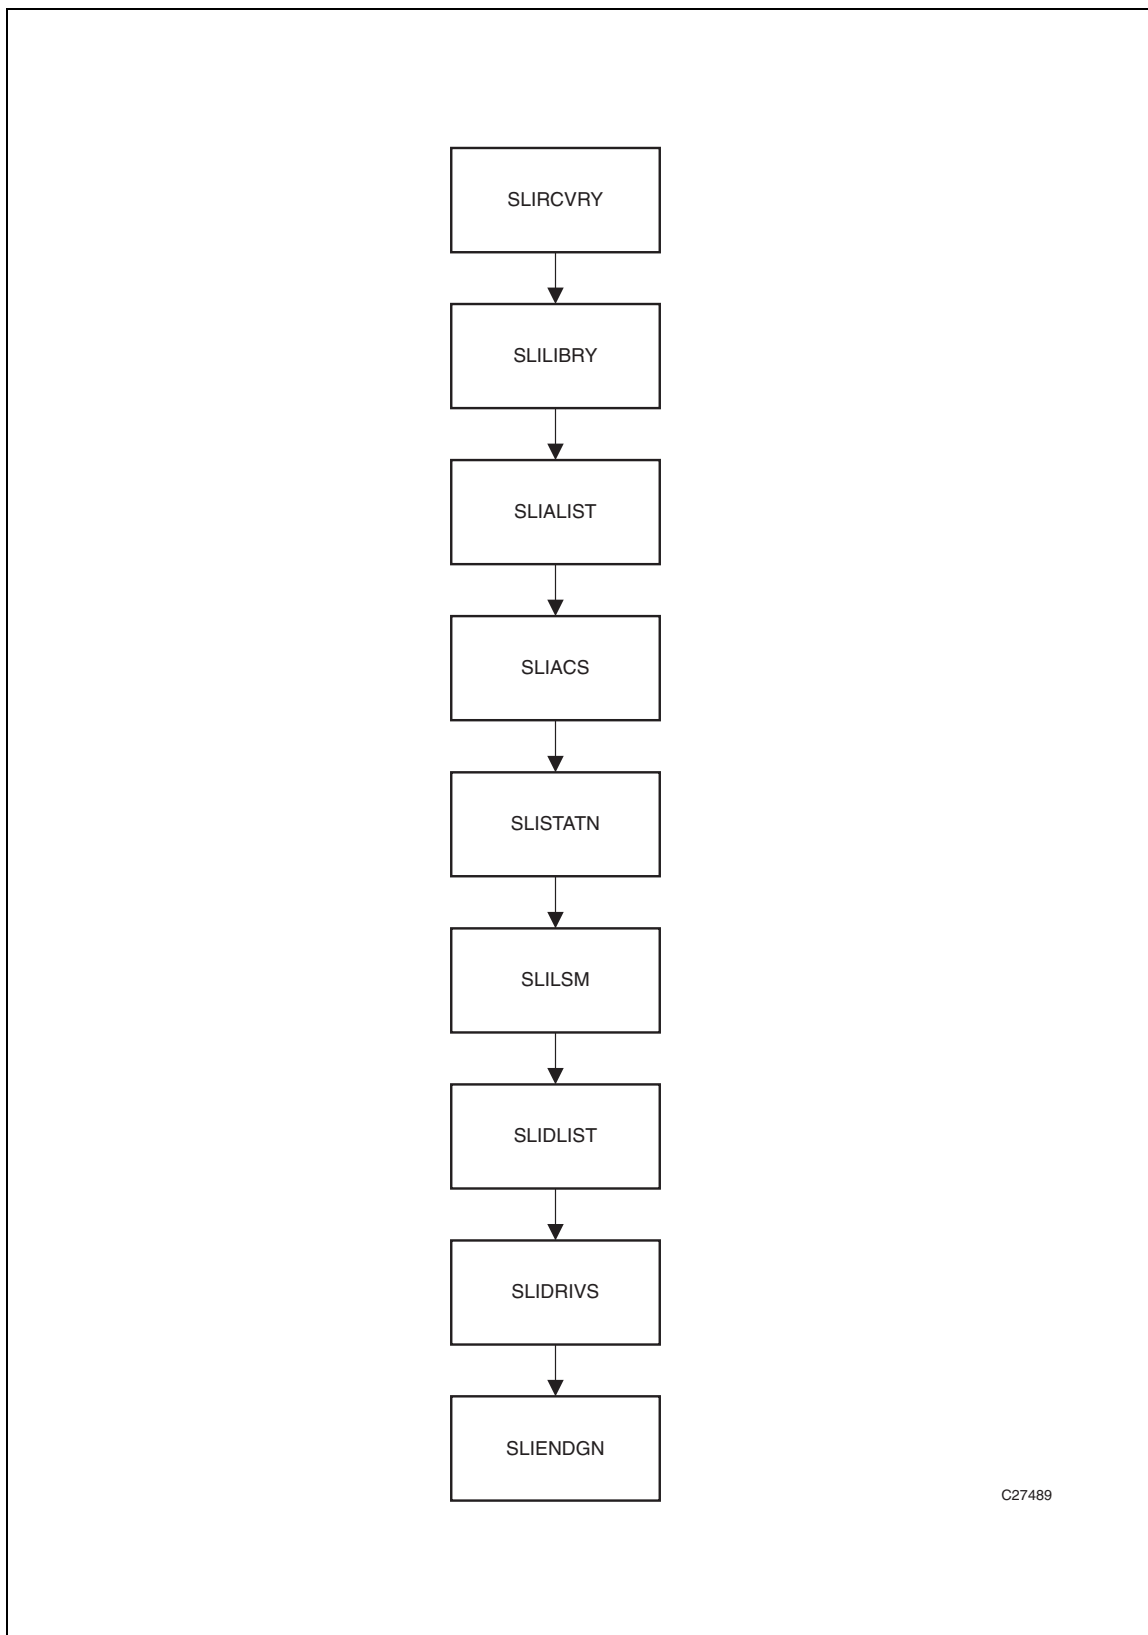


**Figure 2. Required Order for Specifying the LIBGEN Macros**



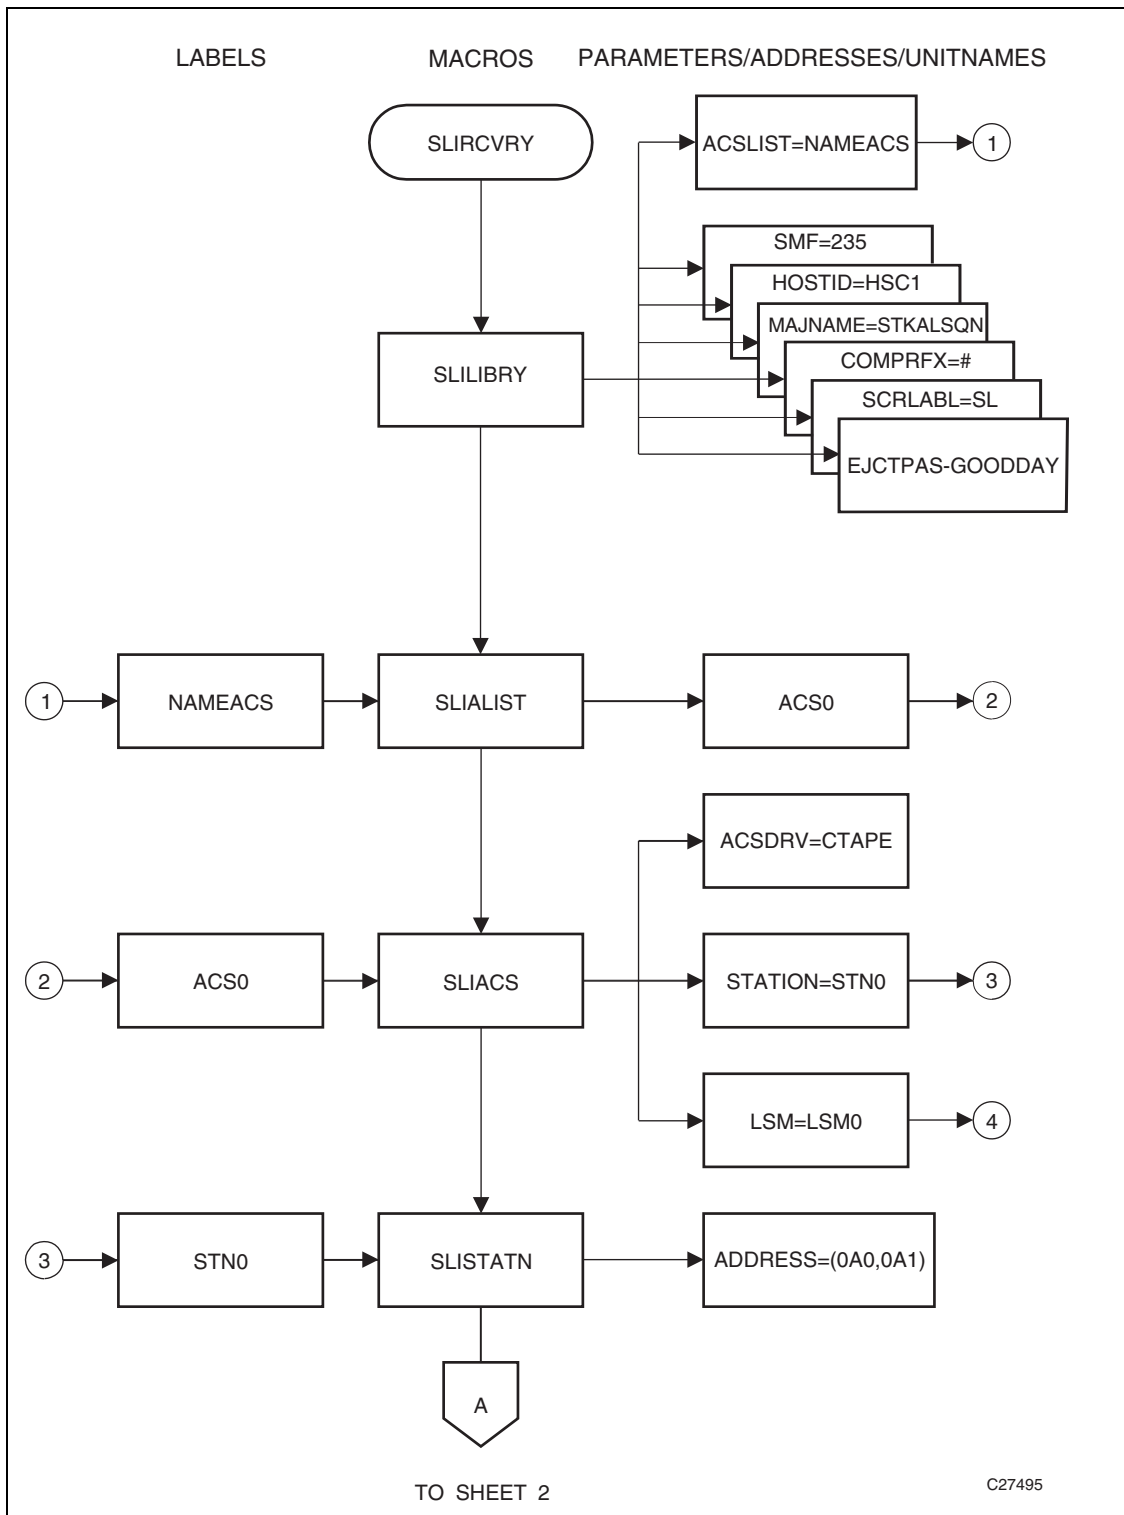

**Figure 4. LIBGEN MACRO Relationship  
(1 of 2)**

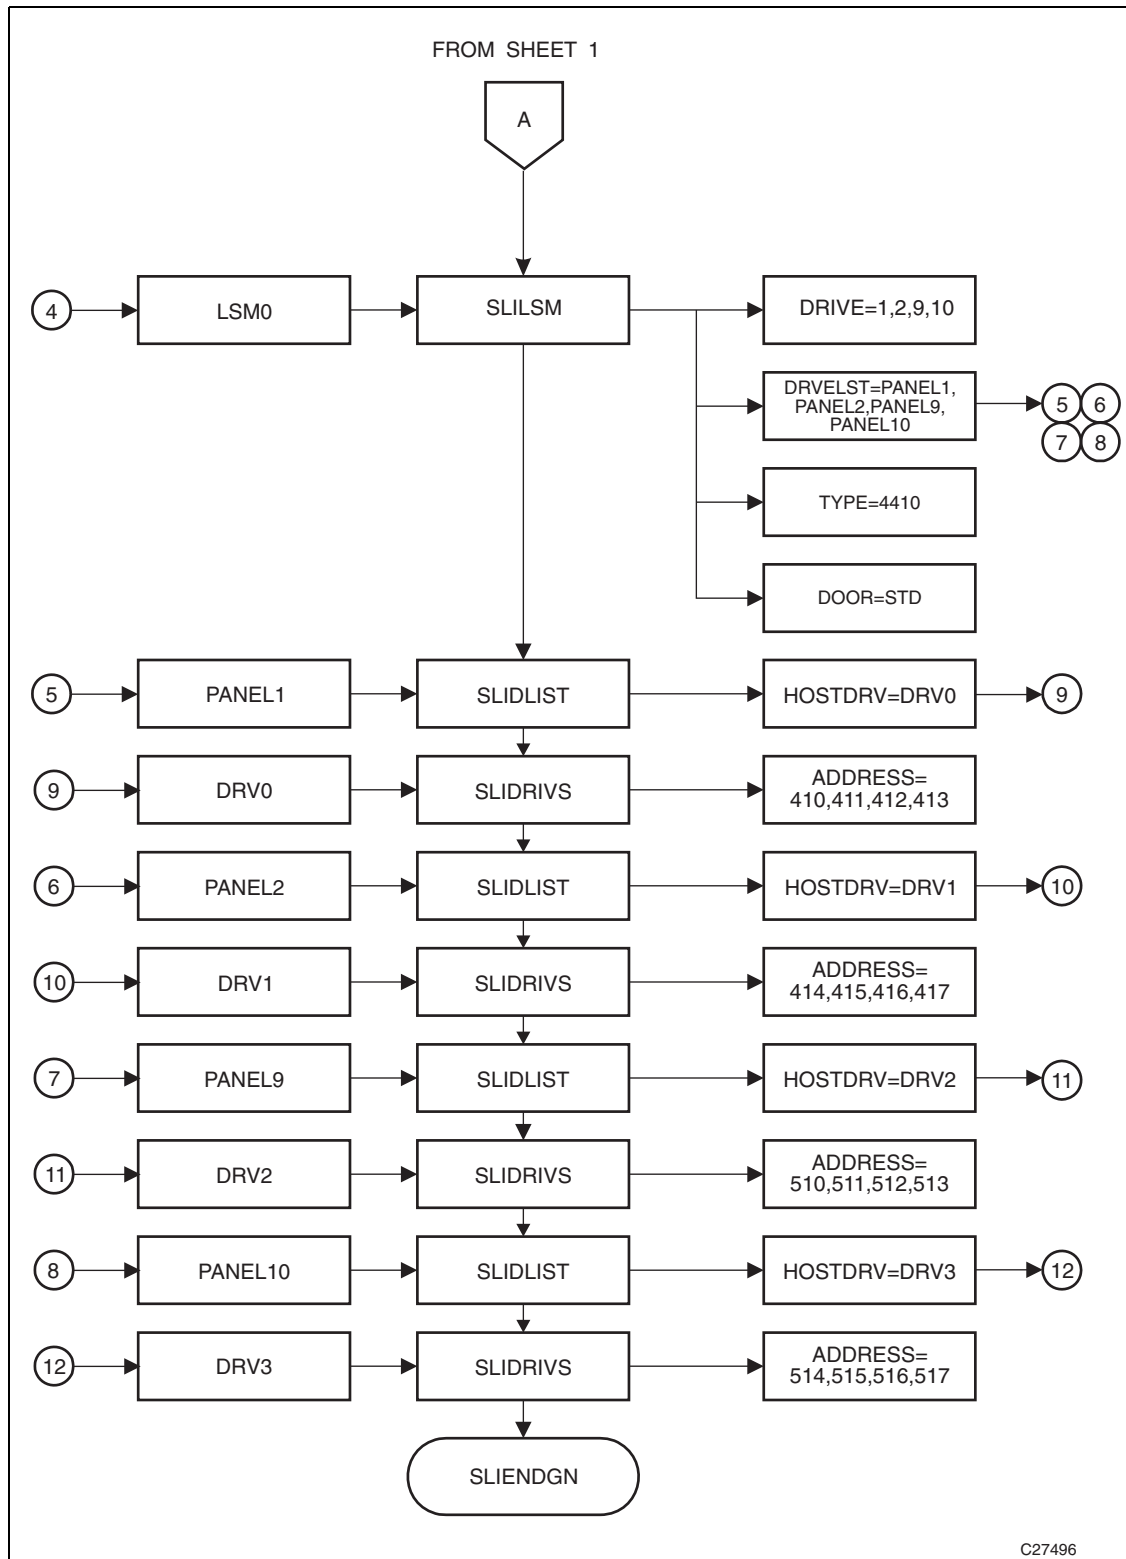


**Figure 4. LIBGEN Macro Relationship**  
(2 of 2)

## SLIRCVRY Macro

The SLIRCVRY macro defines criteria to determine when a control data set has become inoperable and requires recovery processing. Only one SLIRCVRY macro is specified, and it is the first macro in the LIBGEN.

### Syntax

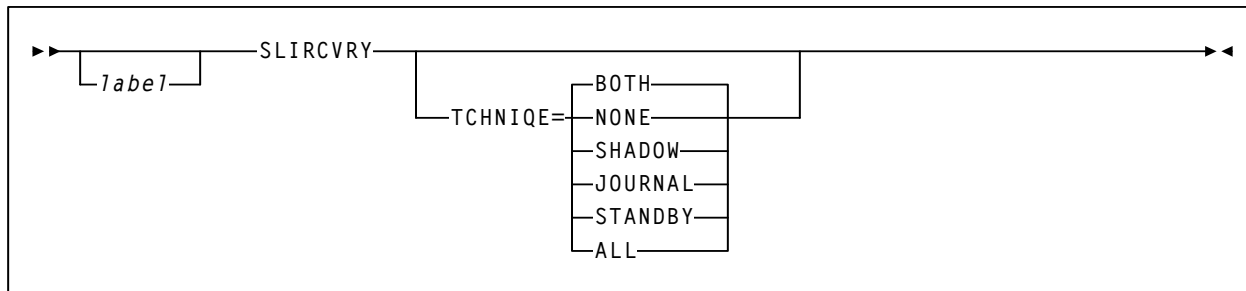

### Parameters

#### *label*

name of the CSECT generated by LIBGEN. If not specified, an unnamed CSECT is generated.

#### **SLIRCVRY**

name of this macro.

#### **TECHNIQUE**

parameter that selects the form of recovery from a CDS failure.

#### **BOTH**

specifies that two distinct copies of the control data set (primary and secondary) and journals are specified for recovery purposes. The default is **BOTH**.

#### **NONE**

specifies no form of recovery is used for the control data set. Thus, the primary control data set must be rebuilt, if inaccessible.

#### **SHADOW**

specifies that there is to be two distinct copies of the control data set (primary and secondary) for recovery purposes. It is recommended that these data sets reside on separate HDAs and separate strings. A journal is not recorded.

#### **JOURNAL**

specifies that there is to be only one primary control data set and that journals are kept. These data sets are to be used for recovery purposes.

The journals contain a record of all transactions that update the control data set. There are two journals per host. It is recommended that they are placed on separate HDAs from the primary control data set DASD volume.

### **STANDBY**

specifies that primary, secondary, and standby control data sets are to be recorded for recovery purposes. No journals are recorded during HSC operation.

### **ALL**

specifies that all control data sets (primary, secondary, and standby) and journals are to be kept and available for recovery purposes.



**Note:** The SLIRCVRY LIBGEN macro TCHNIQE parameter determines how many CDS copies will be initialized by the SLICREAT program and whether or not journals will be initialized by SLICREAT.

The number of CDS copies used by the HSC is dependent on the number of CDS copies defined in the CDSDEF PARMLIB control statement. It is **not** determined by the TCHNIQE parameter.

The HSC uses all of the CDS copies defined in the CDSDEF control statement (whether this includes more or less CDS copies than are specified by the TCHNIQE parameter). However, if journaling is specified by the TCHNIQE parameter, journals must be defined for successful HSC initialization.

### **Example**


#### ***SLIRCVRY Statement***

```
LIBGEN  SLIRCVRY TCHNIQE=STANDBY
```

## SLILIBRY Macro

The SLILIBRY macro defines the global characteristics of the library. Only one SLILIBRY macro is specified and immediately follows the SLIRCVRY macro.

### Syntax

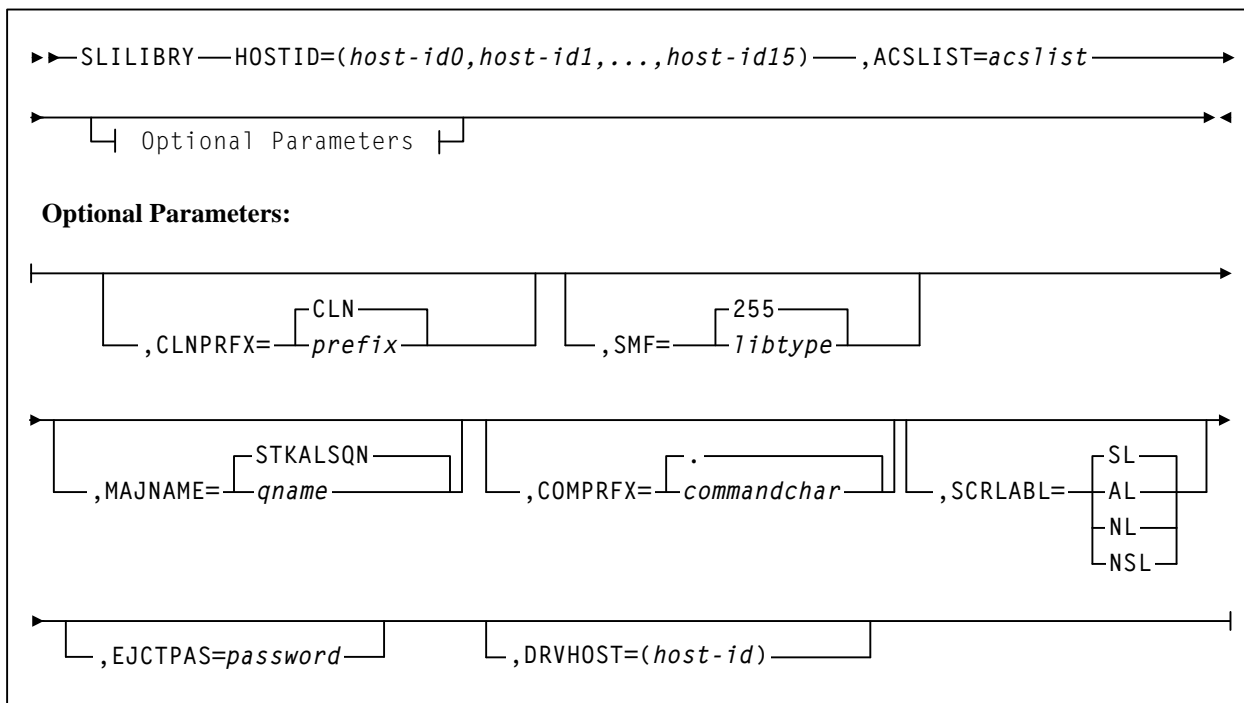

### Parameters

#### SLILIBRY

name of this macro.

#### HOSTID=

*host-id0*, *host-id1*, ..., *host-id15* identifies each host that accesses the library. Valid characters for a HOSTID are A-Z, 0-9, #, \$, and @.

JES Example:

```
HOSTID=(MSPA,MSPB)
```

where MSPA is Host0 and MSPB is Host1.



**Note:** The order of the hosts specified is positional. This information is used by other LIBGEN macros. Any changes in host order here may affect other areas of your LIBGEN configuration.



**ACSLIST=**

*acslst* is the assembler label of the SLIALIST macro that defines ACSs in the configuration.

Example:

```
ACSLIST=LACSLIST
```

**CLNPRFX=**

*prefix* is the three-character prefix that applies to all types of cleaning cartridges. Valid characters are A-Z, 0-9, \$, #, and @. All cartridges having this prefix followed by numerics on their external labels are treated as cleaning cartridges. **CLN** is the default.

Examples:

```
CLNPRFX=CLN  
CLNPRFX=KCR
```



**Note:** Cleaning cartridges defined by VOLATTR control statements must still use the cleaning prefix established in the LIBGEN.

**SMF=**

*libtype* is the System Management Facility (SMF) record type used by the HSC to record cartridge movement and library performance. The value specified must match the SUBSYS type specified for the HSC in SMFPRMxx. The default is **255**.

Example:

```
SMF=235
```

**MAJNAME=**

*qname* specifies the ENQ/DEQ/QNAME used by host software for serialization. It must conform to the requirements for an ENQ/RESERVE/DEQ QNAME as defined by the Fujitsu publication *MSP Task Management Macro Instructions Reference Manual*. The default is **STKALSQN**.

Example:

```
MAJNAME=STKALSQN
```

## COMPRFX=

*commandchar* specifies the command prefix character used to direct operator commands to the HSC. It is a single character. The default command prefix character is a **period** (.).

Example command prefixes are: ¢, #, !



**Note:** Ensure that the prefix character used does not conflict with any of the following:

- another subsystem's command prefix character (such as "\$" for JES or ";" the delimiter for TSS PFD)
- a JES line editing character as specified in the JES initialization statements or default. Descriptions of these statements and default values can be found in the Fujitsu publication *Operations Guide (JES)*.
- If you are running the HSC on a VM host that shares the CDS with an HSC running on MSP, make sure that your command prefix does not conflict with any of the VM facilities, such as the CP line editing symbol.

A null character can be specified as the command prefix character. During library operation, to specify an HSC command when the command prefix is a null character, you **must** use the MSP MODIFY command to issue commands to the HSC.

Even if you have specified a command prefix, you may use either method for issuing commands to the HSC:

- Specify an HSC command with the command prefix preceding the command.
- Specify an HSC command using the MSP MODIFY command. The following formats for the MSP MODIFY command may be used:

Example:

```
MODIFY hsc-subsystem-name,hsc-command
```

**or**

```
F hsc-subsystem-name,hsc-command
```

where *hsc-subsystem-name* is the HSC subsystem name specified in the HSC startup proc.

Examples of how a specific HSC command can be issued are:

```
MODIFY hsc-subsystem-name,DISPLAY CDS
```

**or**

```
F hsc-subsystem-name,DISPLAY CDS
```

**Table 2. Mapping of Command Prefix Codes to Characters**

Hex	Character	Description
40	null	blank
4A	¢	cent
4B	.	period
4C	<	less than
4D	(	left parenthesis
4E	+	plus
4F		vertical bar
50	&	ampersand
5A	!	exclamation point
5B	\$	dollar sign
5C	*	asterisk
5D	)	right parenthesis
5E	;	semicolon
5F	¬	not symbol
60	-	minus
61	/	slash
6B	,	comma
6C	%	percent
6D	_	underscore
6E	>	greater than
6F	?	question mark
7A	:	colon
7B	#	crosshatch
7C	@	at sign
7E	=	equals sign
7F	“	double quote



**Note:** If you specify a null command prefix (hex 40), you must use the MSP MODIFY command to perform any HSC operator command.

Example:

```
F SLS0, MOUNT EDU050, B30
```

where

**F**

an abbreviation for the MSP MODIFY command

**SLS0**

an HSC subsystem

**MOUNT**

an HSC operator command

**EDU050**

a VOLSER

**B30**

a designated tape drive

Because of Fujitsu assembler restrictions, a single ampersand (&) cannot be specified as a command prefix. However, if you want to use an ampersand (&) as the command prefix, specify two ampersands (&&). When the LIBGEN file is assembled, the assembler strips off the first ampersand and leaves the second one. The result is that the valid command prefix is a single ampersand.

Example:

```
COMPRFX=&&
```

If specifying a left parenthesis (4D) or right parenthesis (5D), the prefix character must be enclosed in single quotes. For example:

```
COMPRFX='('
```

```
COMPRFX=')'
```

Another example of specifying a valid command prefix is:

```
COMPRFX=@
```

**SCRLABL=**

specifies the magnetic label type of a library controlled scratch volume. The HSC assumes nonspecific requests with other than the SCRLABL label type are outside the library. If a nonspecific volume is requested with the label type specified, it is considered a scratch volume. Parameter options are:

**SL**

standard label. The default is **SL**.

**AL**

ANSI label

**NL**

nonlabeled

**NSL**

nonstandard label.

Automated mounts of scratch volumes other than the SCRLABL label type can be performed by using user exits. Refer to the *NCS User Exit Guide* for information about invoking user exits.

Example:

```
SCRLABL=NSL
```

**EJCTPAS=**

*password* specifies that a password is required for the Eject operator command. The password is one to eight alphanumeric characters. Acceptable characters include A-Z (must be capitalized) and numbers 0-9.



**Note:** Existing passwords do not need to be changed to conform to these restrictions, but any new passwords must follow the guidelines described above. If EJCTPAS is not specified, no password is used. An encrypted form of the password is maintained in the control data set.

Example:

```
EJCTPAS=GOODDAY
```

## DRVHOST

*hostid* specifies a host ID to be used as the “master” host for drive address definitions in a client/server environment. This parameter provides a consistent server environment when a single SMC can communicate with multiple servers that have different defined drive addresses. DRVHOST is used in conjunction with the SMC DRIVEMAP command (refer to the *SMC Configuration and Administration Guide*).

If DRVHOST is not specified, each HSC host reports its defined drive configuration to the SMC.

Example:

```
DRVHOST=MSPA
```

## FUTRACS=

This parameter is used when new ACSs are to be added to the library complex. *x* specifies the number of ACSs, and *y* optionally specifies the number of LSMs to add for each added ACS.



**Caution:** The additional CDS records you create can cause your system to generate an 878-10 ABEND error if there is not enough space to hold the internal records for some operations. If you run out of space during the HSC INIT, you need to re-create your LIBGEN and lower these numbers.



### Notes:

- The number of ACSs specified can be between 1 and 255, but the total number of real ACSs and FUTRACS must not exceed 255.
- The number of LSMs for each FUTRACS must be a multiple of 4 and range between 4 and 40.
- If you do not specify LSMs (*y*), it defaults to 12.
- The FUTRACSs are generic, meaning you can use them to dynamically add an SL3000 or a string of SL8500s, not to exceed the number of LSMs generated.
- You **must** specify REGION=0M on your HSC start JCL.

## Example

### SLILIBRY Statement

SLILIBRY	HOSTID=(MSPA,MSPB),	X
	ACSLIST=LACSLIST,	X
	CLNPRFX=CLN,	X
	SMF=235,	X
	MAJNAME=STKALSQN,	X
	COMPRFX=Ø,	X
	SCRLABL=NSL,	X
	EJCTPAS=GOODAY,	X
	DRVHOST=MSPA	

## SLIALIST Macro

The SLIALIST macro contains the assembler labels of the SLIACS macro(s). The first ACS listed has an ACSid of 00, the second 01, etc.

### Syntax

```
►► acslist — SLIALIST — acs0, acs1, ..., acs255 —►◀
```

### Parameters

*acslist*

assembler label referred to by the SLILIBRY macro ACSLIST parameter.

**SLIALIST**

name of this macro.

*acs0,acs1,...,acs255*

label name used by the SLIACS macro(s). One label name is specified for each ACS, and at least one label name is required.

### Example

#### SLIALIST Statement

```
ACSLIST SLIALIST ACS0,ACS1
```



## SLIACS Macro


The SLIACS macro defines the following items:

- the esoteric unit name used by tape transports attached to an ACS
- the communication paths between a host (or hosts) and an ACS
- the LSMs attached to an ACS
- preallocating space in the CDS for additional SL8500 LSMs.

There must be one and only one SLIACS macro for each ACS.

The SLIACS macro for the first ACS must appear immediately after the SLIALIST macro. The SLIACS macro for each subsequent ACS must appear immediately after the last SLIDRVS macro for the prior ACS definition.

### Syntax

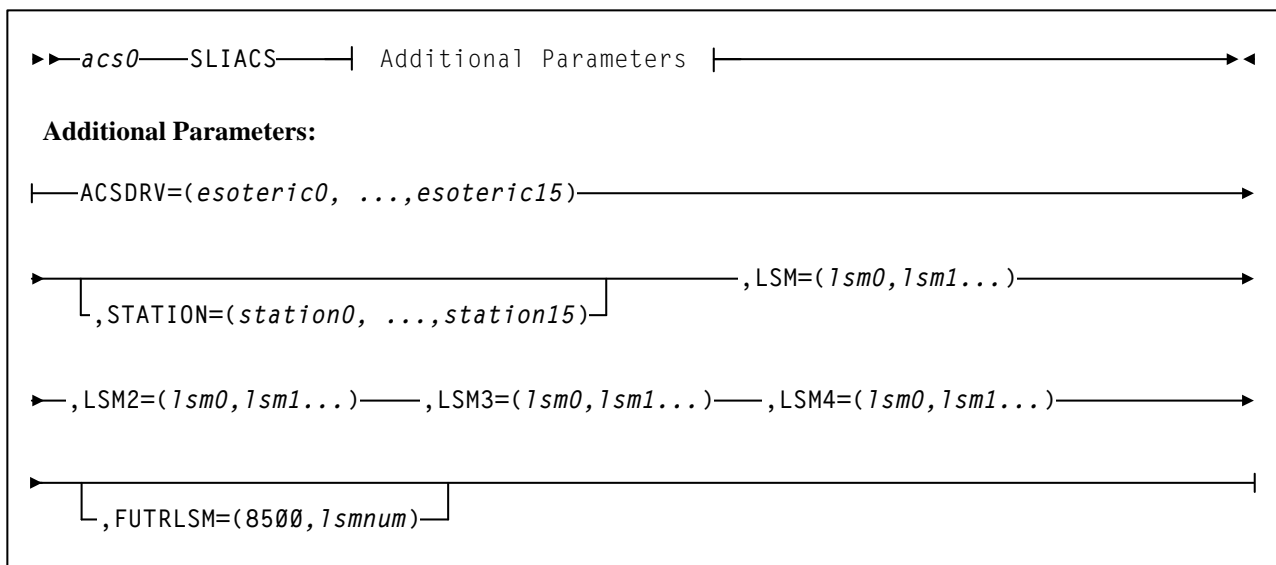

### Parameters

#### *acs0*

assembler label referred to by the SLIALIST macro ACS positional parameter.

#### SLIACS

name of this macro.

#### ACSDRV=

*esoteric0, ..., esoteric15* specifies the esoteric unit name defined by the I/O Configuration for each host which refers to the transports attached to this ACS. If an esoteric is omitted for a host, a comma is used in its place.

**If an esoteric is omitted for a host, the esoteric specified with the first host system is substituted.**



#### Notes:

- The ACSDRV operands are positional. The SLILIBRY macro HOSTID parameter determines the positional ordering of the operands specified in the ACSDRV parameter. The first operand specified in the ACSDRV parameter corresponds to the first host specified in the SLILIBRY macro HOSTID parameter, etc.

Example:

ACSDRV=CTAPE,

where CTAPE corresponds to Host0.

Example:

ACSDRV=(CTAPEA,CTAPEB),

where CTAPEA corresponds to Host0 and CTAPEB corresponds to Host1.

- The ACSDRV esoterics are not used by SMC allocation.

#### STATION=

*station0, ...,station15* are the assembler labels of the SLISTATN macro. They define the station numbers used to communicate between a host and an ACS. Multiple hosts (maximum of 16) may refer to the same SLISTATN macro.



**Note:** To establish communication with an ACS if the LIBGEN SLISTATN macro has been omitted, use the SET SLISTATN utility to add station addresses for the ACS. See the *HSC/MSP System Programmer's Guide* for a description of this utility.

#### This parameter is optional.

If STATION is specified, parameters can be omitted for hosts that are not attached to the ACS by using the comma delimiter as follows:

STATION=(,STN1)

where Host0 does not have a defined connection and STN1 is a defined connection to Host1.



**Note:** Users running TCP/IP LMU network attachment are not required to supply either SLIACS station number or SLISTATN station address statements. However, if you intend to transition between TCP/IP and 3270 station

connections, you should specify both the SLIACS STATION labels and SLISTATN ADDRESS settings.

If STATION is omitted, the ACS has no defined connections to any host. Leaving out this parameter is desirable if the user wants to define a future ACS and automatically bypass the “ACS *acs-id* is disconnected” message.



**Caution:** If a CDS is created using HSC 6.2 LIBGEN macros without STATION definitions, then HSC 6.0 and 6.1 systems cannot operate with this CDS. The HSC 2.1 systems will fail in initialization.

Examples:

If the SLILIBRY macro has been entered as:

```
SLILIBRY HOSTID(MSP0,MSP1)
```

and , if the STATION parameter is specified as:

```
STATION=(STN0),
```

STN0 corresponds to MSP0.

If STATION is specified as:

```
STATION=(STN0,STN1),
```

STN0 corresponds to MSP0, and STN1 corresponds to MSP1.

#### **LSM, LSM2, LSM3, LSM4=**

*lsm0,lsm1 ...* are the assembler labels of the SLILSM macros that define each LSM configured within the ACS.

The number of assembler labels that can be specified on an **LSM, LSM2, LSM3**, or **LSM4** parameter is variable and depends on the length of each label, the number of imbedded commas, and the opening and closing parentheses.

The total number of characters specified cannot exceed the IBM limitation of 255 characters. The **LSM2, LSM3**, and **LSM4** are optional parameters not required if the

number of LSMs in the ACS and your naming convention results in a string length less than 255 characters.

For example, if each assembler label is four characters long, a maximum of 50 assembler labels can be specified on the **LSM** parameter:

200 label characters + 49 imbedded commas + 2 parentheses =  
251 characters

Adding another assembler label results in a LIBGEN assembly error. To resolve this problem, add an **LSM2** parameter on the SLIACS macro and specify the fifty-first assembler label on that parameter.

In general, if the ACS contains more LSMs (assembler labels) than can be supported by the **LSM** parameter, you must code **LSM2**, **LSM3**, or **LSM4** parameters, as necessary, for the other LSMs. It is recommended that you code additional **LSMx** parameters in ascending order for easier maintainability. Also, note that there is an architectural limit of 256 LSMs for each ACS.

Examples:

```
LSM=(L000)  
LSM=(L000,L001,L002)
```

#### **FUTRLSM=**

**8500** indicates to preallocate space in the CDS for SL8500 LSMs. This space is used when new LSMs are to be added to the ACS through PTP connections.

*lsmnum* defines the number of future preformatted LSM records written to the CDS. The number specified must be between 4 and 124.

**This parameter is optional.**



#### **Notes:**

- An SL8500 library contains four rails (LSMs), thus the *lsmnum* value must be in multiples of four (4, 8, 12, 16, and so on).
- If the number specified in *lsmnum* is too small, another LIBGEN will be required to add additional LSMs. If the number entered for *lsmnum* is too large, the result is unused CDS space reserved for future expansion.

#### **Example**

##### **SLIACS Statement**

ACS0	SLIACS	ACSDRV=(CTAPEA,CTAPEB),	X
		STATION=(STN0,STN1),	X
		LSM=(LSM0,LSM1,LSM2),	X
		FUTRLSM=(8500,16)	

## SLISTATN Macro

The SLISTATN macro contains LMU station addresses that connect a host system to an ACS. One SLISTATN macro is used for each station label coded in the SLIACS macro STATION parameter. The SLISTATN macro must appear immediately following the SLIACS macro which references them and in the order specified on the SLIACS macro STATION parameter.

Normally, the HSC waits for offline stations when it attempts to initiate communication. This means message JDJ238D is issued when the HSC allocates the station.

However, if the HSC has already established communication with at least one station, the HSC does not wait for other stations to come on during initialization. Therefore, list the stations that are designated for backup usage last. These backup stations are normally offline.



**Note:** If you are using only TCP/IP LMU connections, you can omit this macro statement, but if you are using 3270 or a combination of 3270 with TCP/IP, then you need to include the SLISTATN macro.

### Syntax

```
►► station0—SLISTATN ADDRESS=(addr0,...,addr15)—————►◄
```

### Parameters

#### *station0*

assembler label referred to by the SLIACS macro STATION parameter.

#### SLISTATN

name of this macro.

#### ADDRESS=

*addr0*,...,*addr15* specifies the LMU addresses that connect the ACS to the host system. A minimum of one and a maximum of 16 station addresses may be used by a single host to communicate with an ACS. A maximum of 16 connections per ACS is allowed. In a dual LMU configuration the maximum is 32 connections per ACS; 16 to each LMU in the dual LMU configuration.

Examples:

```
ADDRESS=(0A0)  
ADDRESS=(0A0,0A1)
```

## Example

### SLISTATN Statement

STNØ   SLISTATN   ADDRESS=(ØAØ,ØA1)
-------------------------------------

## SLILSM Macro


This macro defines the panel numbers and relative position of cartridge drive panels around an LSM, the assembler labels for the SLIDLIST macro, the panel number for each pass-thru port in an LSM, and the assembler labels of SLILSM macros.

The first SLILSM macro for an ACS must appear immediately after the last SLISTATN macro for an ACS. Subsequent SLILSM macros for the ACS must appear immediately after the last SLIDRIVS macro referred to by the preceding SLILSM macro. The SLILSM macros are coded in the same order as specified in the SLIACS macro **LSM**, **LSM2**, **LSM3**, and **LSM4** parameters.



**Note:** For the SL3000 library, the only required parameter is **TYPE=3000**, although the other parameters are still valid. If you specify only TYPE=3000 and decompile the CDS, the other relevant parameters are shown in the decompile output.

### Syntax

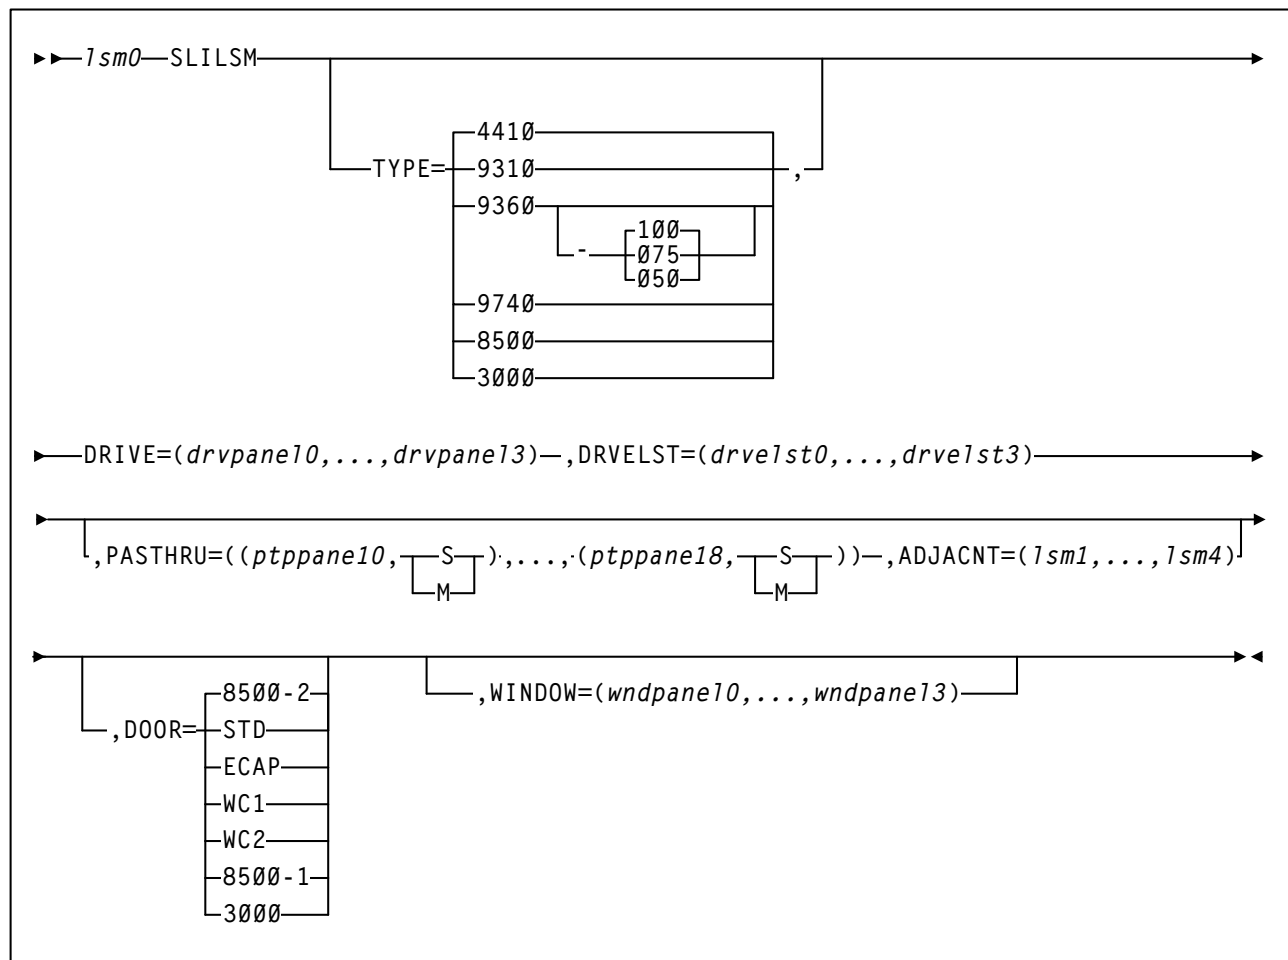

## Parameters

***lsm0***

assembler label referred to by the SLIACS macro LSM parameter.

**SLILSM**

specifies the name of this macro.

**TYPE=**

specifies the LSM type.



**Caution: The value specified must match both the physical hardware configuration and the value coded by the StorageTek CSE or panel mismatch errors appear at startup.** Confirm the value you are specifying on the **TYPE** parameter with your CSE.

Options include:

**4410**

standard LSM. **4410** is the default.

**9310**

specifies a PowderHorn™ LSM.

**9360-xxx**

specifies a WolfCreek™ LSM with a distinct cartridge capacity.  
Allowable values for *xxx* are:

**050**

500 cartridge capacity WolfCreek. This is a WolfCreek LSM without cell arrays on panels 3 and 4.

**075**

750 cartridge capacity WolfCreek. This is a WolfCreek LSM without cell arrays on panel 4.

**100**

1000 cartridge capacity WolfCreek. This is the default value.

**9740**

specifies a TimberWolf LSM.

**8500**

specifies an SL8500 library.



### 3000

specifies an SL3000 library.



**Note:** For the SL3000 library, the DRIVE and DRVELST parameters are optional. If you do not specify them, you must run the SET SLIDRIVS utility to add the MSP drive unit addresses.

#### DRIVE=

*drvpanel0*,...,*drvpanel3* specifies the range of panel numbers. *drvpanel0* specifies the panel number of the first cartridge drive panel moving clockwise from the door; *drvpanel1* specifies the second cartridge drive panel, etc. The following are LSM-specific panel requirements:

- For the 4410 standard LSM and the 9310 PowderHorn LSM, *drvpanel* must be in the range from 1 through 10, with a maximum of four panels specified. For the ExtendedStore™ LSM, panel 10 **must** be defined as a drive panel because the SLIDRIVS macro requires a definition for panel 10 (see “SLIDRIVS Macro” on page 62 for additional information).
- 9360 (WolfCreek) LSMs must have one drive defined in panel 1, with the optional drive/viewing window available in panel 3.
- In 9740 (TimberWolf) LSMs, panel 1 is the drive panel (up to 10 drives can be specified), and panel 3 includes a viewing window if optional cells are not requested.
- For SL8500 libraries, panel 1 is the only drive panel.
- For SL3000 libraries, panels 10 and 12 are the only drive panels.

Examples:

```
DRIVE=(9,10)
DRIVE=(1,2,9,10)
DRIVE=(7,8,9,10)
DRIVE=(1) (WolfCreek or TimberWolf DRIVE example)
```

#### DRVELST=

*drvelst0*,...,*drvelst3* defines the assembler labels for the SLIDLIST macros. The positional ordering of the DRVELST parameter is determined by the DRIVE parameter.

Example:

```
DRVELST=(PANEL1,PANEL2,PANEL9,PANEL10)
```

## PASTHRU=

*ptppanel0* specifies the panel number for each pass-thru port in the LSM.

- For 4410 Standard, and 9310 PowderHorn LSMs, *ptppanel0* is a decimal number in the range from 1 through 9 and identifies the panel number of a pass-thru port (PTP).
- For the 9360 WolfCreek and 9740 TimberWolf LSMs, the only valid values for *ptppanel0* are 0 and 2.
- For SL8500, valid values for *ptppanel0* are 0 (internal elevator) and 1 (external PTPs).



**Note:** The SL8500 contains 3 internal PTPs (elevator) that move cartridges between LSMs (rails).

The S or M specification defines LSM/PTP relationship. .

### S

indicates this LSM does not control the PTP (slave).

### M

indicates this LSM controls the PTP (master).

There can be a total of four pass-thru port panels per 4410 and 9310 LSMs and a total of two pass-thru ports for the 9360, 9740, and SL8500 LSMs.

**Note:** The SL8500 contains 3 internal PTPs (the elevator) that move cartridges between LSMs (rails).

A maximum of two master (M) pass-thru ports are allowed per LSM as shown in Figure 5 on page 55.

For 9360 WolfCreek LSMs, panel zero (0) is always a master PTP. When a 9360 WolfCreek LSM is connected to a 4410 or 9310 LSM, the panel of the 9360 (panel 0 and or 2) connected to the 4410 or 9310 LSM is always a master. When 9360s are connected in a series with other 9360s, panel 0 is always a master and panel 2 is always a slave.


For 9740 TimberWolf LSMs, panel 2 is the master PTP and panel 0 is the slave. 9740 LSMs can attach only to other 9740s.

For SL8500 libraries, the lowest numbered LSM is always the master PTP.

If the PASTHRU parameter is specified, the ADJACNT parameter must also be specified. The order of PTPs listed must correspond to that specified in the ADJACNT parameter.

Examples:

```
PASTHRU=((5,M))
PASTHRU=((5,M),(7,S))
```

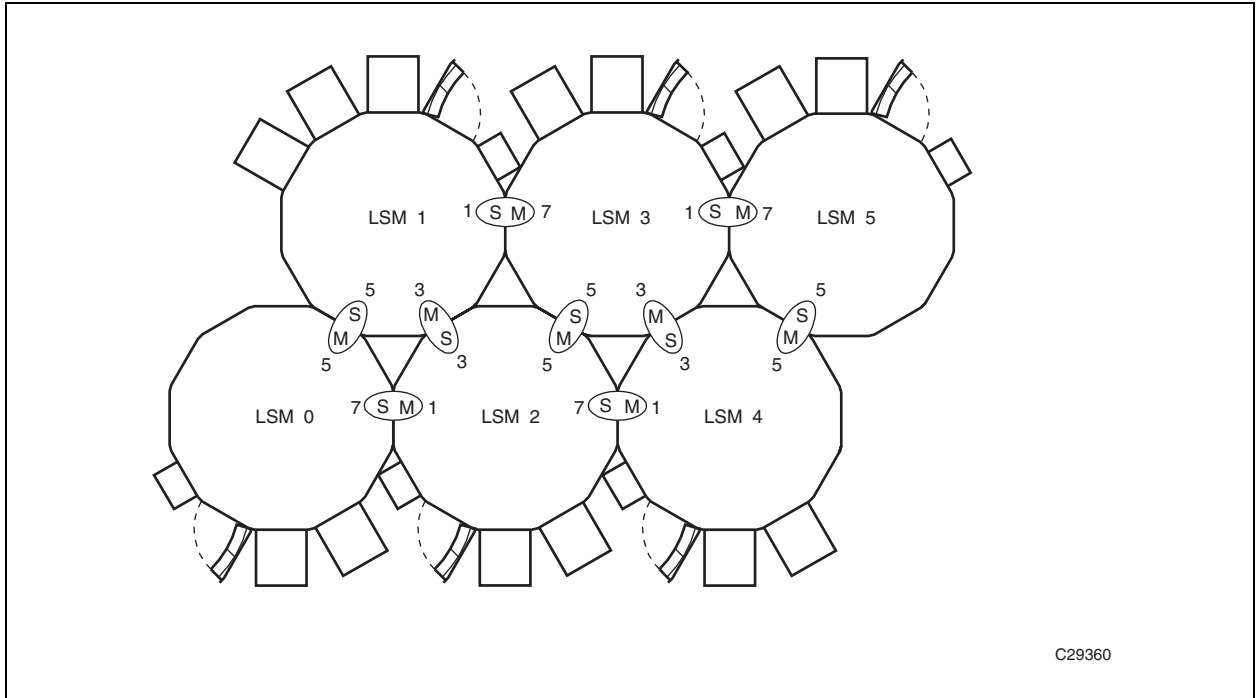

**Figure 5. Example of Pass-thru Port Relationships**

PASTHRU=((1,M),(3,M),(5,S))  
 PASTHRU=((0,M),(2,S)) (WolfCreek Example)  
 PASTHRU=((2,M),(0,S)) (9740 Example)  
 PASTHRU=((0,M),(0,M),(0,M)) (SL8500 Example)



**Note:** All of parentheses delimiters must be included in the macro statement even if only one PTP is specified. For example, if only one PTP is specified, the double parentheses must be indicated as shown in the following example.

Example:

PASTHRU=((6,M))

**ADJACNT=**

*lsm0,lsm1,lsm2,lsm3* specifies the assembler labels of SLILSM macros, as coded in the SLILSM macro, which are connected via PTPs to this LSM. If the ADJACNT parameter is specified, the PASTHRU parameter must also be specified. The order listed must correspond to that specified in the PASTHRU parameter.

Examples:

```
ADJACNT=(LSM1) 3
```

where LSM1 is *ptppanel0*

```
ADJACNT=(LSM2,LSM0)
```

where LSM2 is *ptppanel0* and LSM0 is *ptppanel2*

**DOOR=**

optionally specifies the CAP configuration in the LSM access door.



**Note:** The 9740 TimberWolf LSM contains either a 10-cell removable magazine or a 14-cell permanent rack. The HSC receives CAP configuration information directly from the LMU, so it is not necessary to specify this parameter for the 9740.

**STD**

indicates the LSM access door contains a standard CAP (capacity of twenty-one cartridges).

**ECAP**

indicates the LSM access door contains an enhanced CAP. The enhanced CAP door features two large CAPs (capacity of forty cartridges each), and one small CAP, referred to as the priority CAP or PCAP (capacity of one cartridge).

**WC1**

indicates the LSM access door contains a WolfCreek CAP having a 20-cell capacity and a PCAP.

**WC2**

indicates the LSM access door contains an optional WolfCreek CAP having a 30-cell capacity. This is in addition to the capacity provided by the WC1 CAP door. Thus a WolfCreek with an optional WC2 CAP has the following configuration: WC1 with 20-cell capacity and a PCAP plus a WC2 with 30-cell capacity.

**8500-1**

indicates an SL8500 configured with one CAP (capacity of 39 cartridges).

**8500-2**

indicates an SL8500 configured with two CAPs (capacity of 39 cartridges each). **8500-2 is the default.**

**3000**

indicates an SL3000.

## WINDOW=

*wndpanel0*,...,*wndpanel3* specifies one or more panel numbers containing a viewing window. *wndpanel0* specifies the panel number of the first window panel moving clockwise from the access door; *wndpanel1* specifies the second window panel, etc. The panel number(s) designated for the viewing window(s) must be enclosed in parentheses.

Viewing windows are an available option on the following LSM types:

- PowderHorn (9310)
- WolfCreek (9360)
- TimberWolf (9740)
- SL3000 - available only on panel 13. If not specified, the HSC self-discovers the window at HSC INIT.



**Note:** The standard LSM (TYPE=4410) does not allow the replacement of a panel with a viewing window. TYPE=4410 is the default LSM type. You must enter an LSM type of TYPE=9310 (PowderHorn), TYPE=9360-xxx (WolfCreek), or TYPE=9740 (TimberWolf) in order to specify a viewing window.

Only one viewing window can be specified for a WolfCreek or a TimberWolf LSM, and it must be defined in panel number three (3). Selecting any panel number other than three causes an error message to be displayed. If the viewing window is defined for the WolfCreek LSM, panel three may not be designated as a DRIVE panel.

The following example shows the WolfCreek and TimberWolf LSM viewing window selection:

Example:

```
WINDOW=(3)
```

The PowderHorn LSM supports from one to four viewing windows. Panel numbers one (1) through nine (9) are eligible for designations as viewing windows. Panel numbers zero (0), ten (10), and eleven (11), are not eligible as viewing windows. If panels zero, ten, or eleven are designated as viewing windows, an error message is issued describing their ineligibility.

The following examples show PowderHorn LSM viewing window selections:

Examples:

```
WINDOW=(2)
WINDOW=(2,5,7,9)
```

If more than one panel is designated as a viewing window, the panel numbers must be separated by commas and the entire list must be enclosed in parentheses. Panel numbers selected for viewing windows may not be designated as DRIVE panels or as PASTHRU panels.

## Examples

### ***SLILSM Statement for Standard LSM (4410) as Default***

LSMØ	SLILSM	DRIVE=(1,2,9,1Ø),	X
		DRVELST=(PANEL1,PANEL2,PANEL9,PANEL1Ø),	X
		PASTHRU=((5,M),(7,S)),	X
		ADJACNT=(LSM1,LSM2),	X
		DOOR=STD	

### ***SLILSM Statement for LSM Model 9310-PowderHorn***

LSM4	SLILSM	TYPE=931Ø,	X
		DRIVE=(1,2,9,1Ø),	X
		DRVELST=(PANEL1,PANEL2,PANEL9,PANEL1Ø),	X
		PASTHRU=((5,M),(7,S)),	X
		ADJACNT=(LSM1,LSM2),	X
		DOOR=STD	

### ***SLILSM Statement Specifying LSM Model 9360-100 WolfCreek***

LSM4	SLILSM	TYPE=936Ø-1ØØ,	X
		DRIVE=(1),	X
		DRVELST=(PANEL1),	X
		PASTHRU=((Ø,M)),	X
		ADJACNT=(LSMØ),	X
		DOOR=WC2	X
		WINDOW=(3)	

### ***SLILSM Statement Specifying LSM Model 9740 - TimberWolf***

LSMØ	SLILSM	TYPE=974Ø	X
		DRIVE=(1),	X
		DRVELST=(PANEL1),	X
		PASTHRU=((2,M)),	X
		ADJACNT=(LSM1),	X
		WINDOW=(3)	

### ***SLILSM Statement Specifying LSM Model SL8500 - StreamLine***

LSMØ	SLILSM	TYPE=85ØØ,	X
		DRIVE=(1),	X
		DRVELST=(PANEL1),	X
		PASTHRU=((Ø,M),(Ø,M),(Ø,M)),	X
		ADJACNT=(LSM1,LSM2,LSM3),	X
		DOOR=85ØØ-1	

## SLIDLIST Macro

Each SLIDLIST macro specifies an assembler label corresponding to a SLIDRIVS macro which identifies the unique host addresses associated with the transports residing on a cartridge drive panel.

The first SLIDLIST macro for an LSM must appear immediately after the SLILSM macro which refers to it. Subsequent SLIDLIST macros for the LSM must appear immediately after the last SLIDRIVS macro for the preceding SLIDLIST macro.

### Syntax

► *drvelst0* — SLIDLIST — HOSTDRV=(*drives0*, ..., *drives15*) — ◄

### Parameters

*drvelst0*

specifies the assembler label that is referred to by the SLILSM macro DRVELST parameter.

**SLIDLIST**

name of this macro.

**HOSTDRV=**

(*drives0*, ..., *drives15*) specifies the assembler label name of each SLIDRIVS macro which defines transport addresses.



**Note:** The HOSTDRV operands are positional. The SLILIBRY macro HOSTID parameter determines the positional ordering of the operands specified in the HOSTDRV parameter. The first operand specified in the HOSTDRV parameter corresponds to the first host specified in the SLILIBRY macro HOSTID parameter, etc.

Examples:

HOSTDRV=(DRV0)

where DRV0 is for Host0

HOSTDRV=(DRV0, DRV1)

where DRV0 is for Host0 and DRV1 is for Host1

HOSTDRV=(DRV0, DRV0)

where DRV0 is for Host0 and DRV0 is for Host1



## Example

### SLIDLIST Statement

```
PANEL1 SLIDLIST HOSTDRV=(DRVØ,DRVØ)
```

## SLIDRIVS Macro

The SLIDRIVS macro lists the transport device addresses used by a host, which correspond to a specific cartridge drive panel. A SLIDRIVS macro must be specified for each unique operand coded in the SLIDLIST macro HOSTDRV parameter. The SLIDRIVS macro(s) must appear immediately following the SLIDLIST macro which references it.

### Syntax

```
►—drives0 SLIDRIVS ADDRESS=(addr0,addr1...)————►◄
```

### Parameters

#### *drives0*

specifies the assembler label that is referenced by the SLIDLIST macro HOSTDRV parameter.

#### **SLIDRIVS**

name of this macro.

#### **ADDRESS=**

*addr0,addr1,...* specifies the host-unique device addresses associated with transports residing in a cartridge drive panel. Nonexistent transports are indicated by position-holding commas. Duplicate unit addresses are not allowed for a given host.



**Note:** If addresses exceed more than one line, place a comma after the last address **and** a nonblank character in column 72 (e.g., an X). Continue on the next line starting in column 16. Unlike control statements, no plus (+) or minus (-) continuation characters are required after the last parameter value.

#### Examples:

ADDRESS=(410,411,412,413)		for a 4480 M24, 4490 M34, 9490 M34, 9490EE M34, or SD-3 H34 device
ADDRESS=(410,,412,)		for a 4480 M22 or 4490 M32 device
ADDRESS=(,B75,,B76)		for a 9490 or 9490EE M32 or SD-3 H32 device
ADDRESS=(,B75,,)		for an SD-3 H31 device
ADDRESS=(,B75,B76,B77)		for an SD-3 H33 device
ADDRESS=(C10,C11,C12,C13,C14, C15,C16,C17,C18,C19)	X	for a T9840A, T9840B, T9840C, T9940A, or T9940B device (10-drive panel)

ADDRESS=(C10,C11,C12,C13,C14, C15,C16,C17,C18,C19,C1A,C1B, C1C,C1D,C1E,C1F,C20,C21,C22, C23)	X X X	for a T9840A, T9840B, T9840C, T9940A, or T9940B device (20-drive panel)
ADDRESS=( , , , 9A01 , , , 9A02 , , , 9A03 , , , 9A04 )	X	for an SL8500 device (16-drive panel)
ADDRESS=( , , , 00CA , , , 00CB , , , 00CC , , , 00CD , , , 00CE , , , )	X	for an SL3000 device (24-drive panel)



#### Notes:

- If you are executing the HSC as a remote server for the SMC, and drive addresses are defined differently on different HSC server hosts, you may need to specify either or both the HSC SET DRVHOST utility or the SMC DRIVEMAP command to define client/server drive mapping. Refer to the SMC DRIVEMAP command in the *SMC Configuration and Administration Guide* and the SET DRVHOST utility in the *HSC System Programmer's Guide*.
- You must specify at least one drive address for each ACS. For example, you cannot specify


ADDRESS=( , , , )

for **all** drive addresses in an ACS.



**Caution:** If you fail to enter at least one drive address, the Database Decompile utility will fail against this CDS.

- The total number of drive positions, including position-holding commas, must be 4, 10, 16, 20, 24, or 32 depending on the LSM type:
  - 4410 or 9360 LSM: 4 drives per panel are supported.
  - 9740 LSM: 4 or 10 drives per panel are supported.
  - 9310 LSM: 4, 10, and 20 drives per panel are supported.
  - SL3000: 32 drives per panel are supported for panel 10; 24 drives per panel are supported for panel 12
  - SL8500: 16 drives per panel are supported.
- Outside and back of the SL3000 library, drive panel numbering proceeds from top to bottom, right to left. Figure 6 on page 64 shows an example of drive numbering for drive addresses on panels 12 and 10.

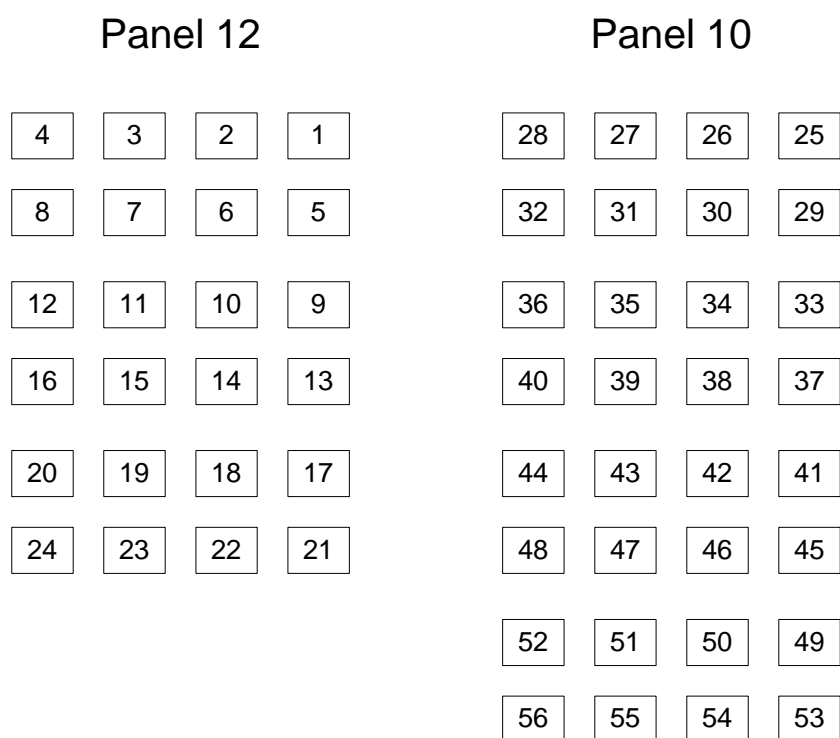

## SL3000 Drive Panels as viewed from the outside back

**Figure 6. SL3000 Drive Panel Layout Example**

Refer to Appendix B, “HSC Support for the SL3000,” in the *HSC System Programmer’s Guide* for more information.

- Outside the SL8500 library, drive panel numbering proceeds from top to bottom, right to left, as viewed outside the structure from the drive end. Table 3 shows an example of drive numbering for drives on one LSM (LSM0) and drive addresses on drives 3 and 15.

**Table 3. SL8500 Drive Panel Layout Example - Outside Library**

LSM	Drive Panel				Row
	+2	+1	-1	-2	
<b>LSM0 (Rail 1)</b>	12	8	4	0	<b>1</b>
	13	9	5	1	<b>2</b>
	14	10	6	2	<b>3</b>
	15 (1624)	11	7	3 (1621)	<b>4</b>

Inside the library, drive panel numbering is top to bottom, left to right, as viewed inside the library from the CAP end. Table 4 shows the same drive configuration as Table 3.

**Table 4. SL8500 Drive Panel Layout Example - Inside Library**

LSM	Drive Panel				Row
	-2	-1	+1	+2	
<b>LSM0 (Rail 1)</b>	0	4	8	12	<b>1</b>
	1	5	9	13	<b>2</b>
	2	6	10	14	<b>3</b>
	3 (1621)	7	11	15 (1624)	<b>4</b>

To specify the drives above, the SLIDRIVs statement is:

SLIDRIVS ADDRESS=(,,1621,,,,,,,,,1624)

Refer to Appendix A, “HSC Support for the SL8500,” in the *HSC System Programmer’s Guide* for more information.

- The total number of drive positions specified by all SLIDRIVS statements for a single panel must be the same.
- For an ExtendedStore library, panel 10 must be defined using commas to indicate nonexistent transports. Example:

```
ADDRESS=( , , , )
```

- On all LSMs, drives are defined to the HSC from top to bottom, with *addr0* representing the topmost drive and *addrn* the bottommost drive.

However, on a 9740 10-drive panel LSM, the drives are populated and configured to the 9740 LSM from bottom to top. (9740 4-drive panels are configured to the 9740 LSM from top to bottom, as are all other LSM drive panels.)

An example showing how to define a 9740 10-drive panel containing five 9840 drives is:

```
ADDRESS=( , , , , BD4 , BD3 , BD2 , BD1 , BD0 )
```

## Examples

### ***SLIDRIVS Statement***

```
DRV0 SLIDRIVS ADDRESS=(410,411,412,413)
```

### ***SLILSM, SLIDLIST, SLIDRIVS Statements for ExtendedStore LSM***

The following example illustrates how to code drive specifications for an ExtendedStore LSM on a system with four hosts.

```
LSM1    SLILSM    DRIVE=(10),                      X
          PASTHRU=((1,S)),                          X
          ADJACNT=(LSM0),                          X
          DRVELST=(PANL110),                        X
          TYPE=4410,                                X
          DOOR=STD
PANL110  SLIDLIST  HOSTDRV=(DRV110,DRV110,DRV110,DRV110)
DRV110   SLIDRIVS  ADDRESS=(,,,) 
```

### ***SLILSM, SLIDLIST, SLIDRIVS Statements for a 9740 LSM***

The following example illustrates how to code drive specifications for a 9740 LSM that contains a 10-drive 9840 panel.

```
LSM0    SLILSM    TYPE=9740
          DRIVE=(1),                                X
          DRVELST=(PANEL1),                          X
          PASTHRU=((2,M)),                            X
          ADJACNT=(LSM1),                            X
          WINDOW=(3),                                X
PANL1    SLIDLIST  HOSTDRV=(P10DRV0)
P10DRV0  SLIDRIVS  ADDRESS=(D19,D18,D17,D16,D15,D14,D13,
          D12,D11,D10)                                X
```

### ***SLILSM, SLIDLIST, SLIDRIVS Statements for a 9310 LSM***

The following example illustrates how to code drive specifications for a 9310 LSM that contains a 20-drive 9840 panel.

LSM1	SLILSM	DRIVE=(10),	X
		PASTHRU=((5,S)),	X
		ADJACNT=(LSM0),	X
		DRVELST=(PANEL8),	X
		TYPE=9310,	X
		DOOR=STD	
PANEL8	SLIDLIST	HOSTDRV=(DRV105)	
DRV105	SLIDRIVS	ADDRESS=(C10,C11,C12,C13,C14,C15,	X
		C16,C17,C18,C19,C1A,C1B,C1C,C1D,	X
		C1E,C1F,C20,C21,C22,C23)	



## SLIENDGN Macro

The SLIENDGN macro specifies the end of the LIBGEN macros. It must appear as the last statement of the LIBGEN. No comments or other statements can follow this macro because they generate assembler warning messages.

### Syntax

▶▶ SLIENDGN —————▶◀

### Parameters

#### **SLIENDGN**

name of this macro. The SLIENDGN macro has no parameters.

## LIBGEN Outputs

Job step return codes are listed in the following table.

**Table 5. LIBGEN Job Step Return Codes**

Return Code	Description
0, x'00'	Indicates a successful LIBGEN.
4, x'04'	Indicates successful LIBGEN; however, warning messages have been issued.
12, x'0C'	Indicates that the LIBGEN failed.

LIBGEN error messages are issued as assembler MNOTES. Refer to the *HSC Messages and Codes Manual* for an explanation of any error message encountered while running LIBGEN.

## LIBGEN Process Verification

The LIBGEN macros must be assembled and link edited into a load module used by control data set initialization. (It is recommended that you use the High-Level Assembler.) Refer to Chapter 5, “Initializing the Control Data Sets” on page 73 for more information.

### Assembler and Linkage Editor JCL

The assembler and linkage editor JCL for LIBGEN is shown in the following listing.

```
/*
//ASM      EXEC PGM=JLAX00
//SYSPRINT DD SYSOUT=*
//SYSTEM   DD SYSOUT=* (optional)
//SYSLIB   DD DSN=SYS1.MACLIB,DISP=SHR
//          DD DSN=SLS.SLSMAC,DISP=SHR
//SYSUT1   DD UNIT=SYSDA,SPACE=(CYL,(3,1))
//SYSLIN   DD DSN=&&OBJ,UNIT=SYSDA,
//           SPACE=(CYL,(1,1)),DISP=(,PASS)
//SYSIN    DD *

                LIBGEN deck goes here

/*
//LKED     EXEC PGM=IEWL,PARM='LIST,XREF,RENT,REUS,REFR,RMODE=24',
//           COND=(0,NE)
//SYSPRINT DD SYSOUT=*
//SYSLMOD  DD DSN=SLS.your.hsc.linklib(lgenname),DISP=SHR
//SYSUT1   DD UNIT=SYSDA,SPACE=(CYL,(3,1))
//SYSLIN   DD DSN=&&OBJ,DISP=(OLD,DELETE)
//*
```

## Verifying the Library Generation (LIBGEN)

After creation of the LIBGEN, it is important to verify that the configuration is correct.

To verify the LIBGEN, execute the SLIVERFY program. Verification can be performed at this point or can be performed during installation verification when testing the basic installation (refer to “Basic Installation Integrity Test” on page 111).

### SLIVERFY Program

The SLIVERFY program must be installed in an APF-authorized library. The program validates the nonlibrary esoteric defined in the LIBGEN and compares it with the Eligible Device Table (EDT). The ACS esoteric names are **not** validated, since they are not used in allocation processing.

Station and transport device addresses are verified against Unit Control Blocks (UCBs) for each of a host's defined LMU addresses and transports. This verifies that the LMU addresses, if supplied, are 3278 devices. If transports exist, SLIVERFY ensures that they are 3480, 3490, or 3590 devices. SLIVERFY must execute on a host defined to access the library.

Sample JCL for SLIVERFY is contained in the HSC SAMPLIB member JCLVRFY.

### Example

#### *SLIVERFY Program JCL*

```
//SLIVERFY job (account),'programmer',CLASS=A
//*
//VERIFY EXEC PGM=SLIVERFY,PARM='libgen-load-module-name'
//STEPLIB DD DSN=your.hsc.linklib,DISP=SHR
//SYSPRINT DD SYSOUT=*
//*
```

SLIVERFY must be run on all hosts defined in the LIBGEN.



## Chapter 5. Initializing the Control Data Sets

---

Data set initialization creates the library control data sets and must be performed before the library is operational.

Steps required to initialize the library control data sets are:

1. Create data set definitions in the data set initialization JCL using the SLICREAT program.
2. Execute SLICREAT to create the library control data sets.
3. Verify successful completion of the SLICREAT program and note the library volume capacity displayed in a confirming message.



**Note:** If you are migrating from a prior release of the HSC, refer to Appendix D, “Migration and Coexistence Processes” on page 163 for more information regarding control data set changes.

### Creating Control Data Set Initialization JCL

Creating the definitions for the library control data set is done by coding JCL in a job file named SLICREAT.

The following is an example of JCL for the SLICREAT program. This sample is also included in the HSC SAMPLIB as member JCLCRT.

```

//SLICREAT JOB (account),'programmer',CLASS=A
//CREATE EXEC PGM=SLICREAT, CDS CREATE MODULE
// PARM='libgen-load-module-name',
// REGION=4096K
//*
//STEPLIB DD DSN=your.hsc.linklib,DISP=SHR
//SYSPRINT DD SYSOUT=* MESSAGES
//*
//*****
//* LIBRARY PRIMARY CONTROL DATASET (CDS)
//*****
//SLSCNTL DD DSN=SLS.SLSCNTL, PRIMARY CDS
// SPACE=(4096,s,,CONTIG,ROUND), REPLACE 's' WITH YOUR
// DISP=(NEW,CATLG,DELETE), SPACE CALCULATIONS
// UNIT=SYSDA
//*****
//* LIBRARY SECONDARY CONTROL DATASET (CDS)
//*****
//SLSCNTL2 DD DSN=SLS.SLSCNTL2, SECONDARY CDS
// SPACE=(4096,s,,CONTIG,ROUND), REPLACE 's' WITH YOUR
// DISP=(NEW,CATLG,DELETE), SPACE CALCULATIONS
// UNIT=SYSDA
//*****
//* LIBRARY STANDBY CONTROL DATASET (CDS)
//*****
//SLSSTBY DD DSN=SLS.SLSCNTL3, STANDBY CDS
// SPACE=(4096,s,,CONTIG,ROUND), REPLACE 's' WITH YOUR
// DISP=(NEW,CATLG,DELETE), SPACE CALCULATIONS
// UNIT=SYSDA
//*****
//* LIBRARY JOURNAL DATASET (INITIAL)
//*****
//SLSJRN01 DD DSN=SLS.SLSJRN*1, INITIAL JOURNAL
// SPACE=(4096,u,,CONTIG,ROUND), REPLACE 'u' WITH YOUR
// DISP=(NEW,CATLG,DELETE), SPACE CALCULATIONS
// UNIT=SYSDA
//*****
//* LIBRARY JOURNAL DATASET (ALTERNATE)
//*****
//SLSJRN02 DD DSN=SLS.SLSJRN02, ALTERNATE JOURNAL
// SPACE=(4096,u,,CONTIG,ROUND), REPLACE 'u' WITH YOUR
// DISP=(NEW,CATLG,DELETE), SPACE CALCULATIONS
// UNIT=SYSDA
//*****
//* ONE PAIR OF JOURNALS ARE REQUIRED FOR EACH GENED HOST
//*****
//*

```



**Note:** Refer to “Calculating DASD Space using SLICREAT” on page 76 for information about how to estimate DASD space before running SLICREAT.

## Descriptions of DD Statements

The following are descriptions of the JCL DD statements that must be used to define the library control data sets.

### **SYSPRINT**

output messages.

Refer to the following criteria when allocating the control and journal data sets:

- Do not specify the DCB statement. The HSC defines the required blocksize (4K).
- The data set(s) must be allocated in a single contiguous extent.
- The CDS(s) must not include existing data sets containing records prior to running the SLICREAT process.
- StorageTek recommends that the CDSs do **not** reside on the same volume(s) as other CDSs or other data sets that generate high I/O activity. Refer to “I/O Device Reserve Considerations” on page 19 for more information.

### **SLSCNTL**

primary library control data set. This is the initial data set that is used to control and synchronize all activities within the HSC. It is used by the HSC until the controlling data set is switched to the secondary, either automatically or manually. Refer to “Control Data Set Recovery Strategies” on page 16 for more information on multiple data set configurations.

SLSCNTL also controls the SLICREAT process. If you do not include an SLSCNTL DD statement when you run SLICREAT,

- the CDSs will not be formatted, and
- the size requirement (in blocks) of the LIBGEN load module included in the PARM statement will be calculated and reported and journal formatting will be attempted.

### **SLSCNTL2**

secondary copy of the primary control data set. This is required only if the SLIRCVRY macro TCHNIQE parameter is SHADOW, STANDBY, BOTH, or ALL.

### **SLSSTBY**

standby control data set. This data set is required only if the SLIRCVRY macro TCHNIQE parameter is STANDBY or ALL. A secondary data set is required if a standby control data set is specified. This data set is also required for STBYONLY processing (refer to “Creating Only the SLSSTBY CDS” on page 80).

### **SLSJRNnn**

specifies the two journal DD statements for each host. This is required only if the SLIRCVRY macro TECHNIQ parameter is JOURNAL, BOTH, or ALL. The range if 'nn' is from 01 to 32.

During SLICREAT, two SLSJRNnn statements are used per host specified. For example, if you define three hosts in the SLILIBRY macro, SLICREAT formats only the first six SLSJRNnn statements (two for each host), SLSJRN01 through SLSJRN06. Any other SLSJRNnn statements are ignored by SLICREAT. SLICREAT always formats the SLSJRNnn statements in sequential order, thus you may not specify that your formatted journals begin with SLSJRN24 and end with SLSJRN29.

## **Calculating DASD Space using SLICREAT**

You can determine the minimum DASD space required for the CDSs by executing SLICREAT without specifying the SLSCNTL and SLSJRNnn DD statements. The HSC generates a message that indicates the minimum space requirements in 4096-byte blocks. When you execute SLICREAT, you must specify the number of blocks for each of these data sets that is **at least** as large as this minimum.



**Note:** If you are specifying multiple CDSs (SLSCNTL2, SLSSTBY), StorageTek recommends that you allocate the same amount of space (in blocks) for all your data sets when you define them.

If the data sets are defined with different space allocations, the HSC uses the size of the smallest data set to determine the number of 4K blocks that it will use for the CDS. The additional space in the other CDS data sets, if any, will **not** be used by the HSC.

The difference in space between the minimum space required (returned by SLICREAT) and the size of the smallest CDS copy is formatted as CDS free blocks.



**Note:** When an SL8500 library is configured in LIBGEN, SLICREAT builds a 6.1-level CDS. If SL8500 is not specified, a 2.1 CDS is built as with previous releases.

## **Calculating Cartridge Capacity - SL8500 and SL3000**

Message SLS0557I displays the total cartridge capacity for the library. **For the SL8500 and SL3000 libraries**, you must first vary the library online (Vary ACS command) to see the actual capacity of the library rather than the maximum capacity of the library. Before you vary the library, the maximum capacity is based on the highest possible number of panels that the HSC allows to be defined, not the number you defined in LIBGEN.

After you vary the library online, enter the Display Acs or Display Lsm command to show the actual SL8500 library capacity. Refer to the *HSC Operator's Guide* for information about the Vary and Display commands.



## Executing the SLICREAT Program

The next step in initializing the control data sets is to execute the SLICREAT program. Figure 7 on page 79 illustrates execution of SLICREAT.

The EXEC statement to execute the SLICREAT program which creates the library control data sets is

### **EXEC Statement for the SLICREAT Program**

```
EXEC PGM=SLICREAT,PARM='libgen-load-module-name'
```

The PARM value indicates the LIBGEN load module name. The steplib statement must point to the appropriate library in which the LIBGEN load module currently resides.



**Note:** SLICREAT requires a LIBGEN load module assembled with the same level macros as the release LINKLIB. A LIBGEN load module created with earlier HSC releases cannot be used as input to a later release of SLICREAT.

The CDS files that are created by SLICREAT (SLSCNTL, SLSCNTL2, and SLSSTBY) are verified to be empty data sets prior to being formatted. If SLICREAT identifies any of these files as containing records, an error message is displayed and the creation process terminates. If this occurs, specify a different data set(s) or delete and redefine the data set(s) and reexecute SLICREAT.

The journal files (all SLSJRNN files) are also verified prior to being formatted. If SLICREAT identifies any journal file as an existing CDS prior to formatting, an error message is generated and that journal file is not formatted. If this occurs, specify a different data set or delete and redefine the data set and reexecute SLICREAT without specifying the SLSCNTL DD statement. Refer to “Reformatting the SLSJRNN Data Sets” on page 80 for more information about formatting journals.

If your installation previously installed the HSC and you have never created a standby control data set, you can run the SLICREAT program to create only the standby control data set. At least a primary control data set must exist before the SLICREAT program can be executed for this purpose.

A standby control data set is created by specifying the PARM='STBYONLY' statement.




**Note:** For a standby data set to be recognized by the system, it must be defined by a CDSDEF statement in the PARMLIB.

### ***SLICREAT EXEC Statement to Create Standby CDS***

```
EXEC PGM=SLICREAT,PARM='STBYONLY'
```

This method does not create a backup of the primary control data set. The first record of the primary control data set is copied and the remainder of the data set is formatted to allow the standby CDS to be enabled.

The following figure illustrates the dataset initialization process.

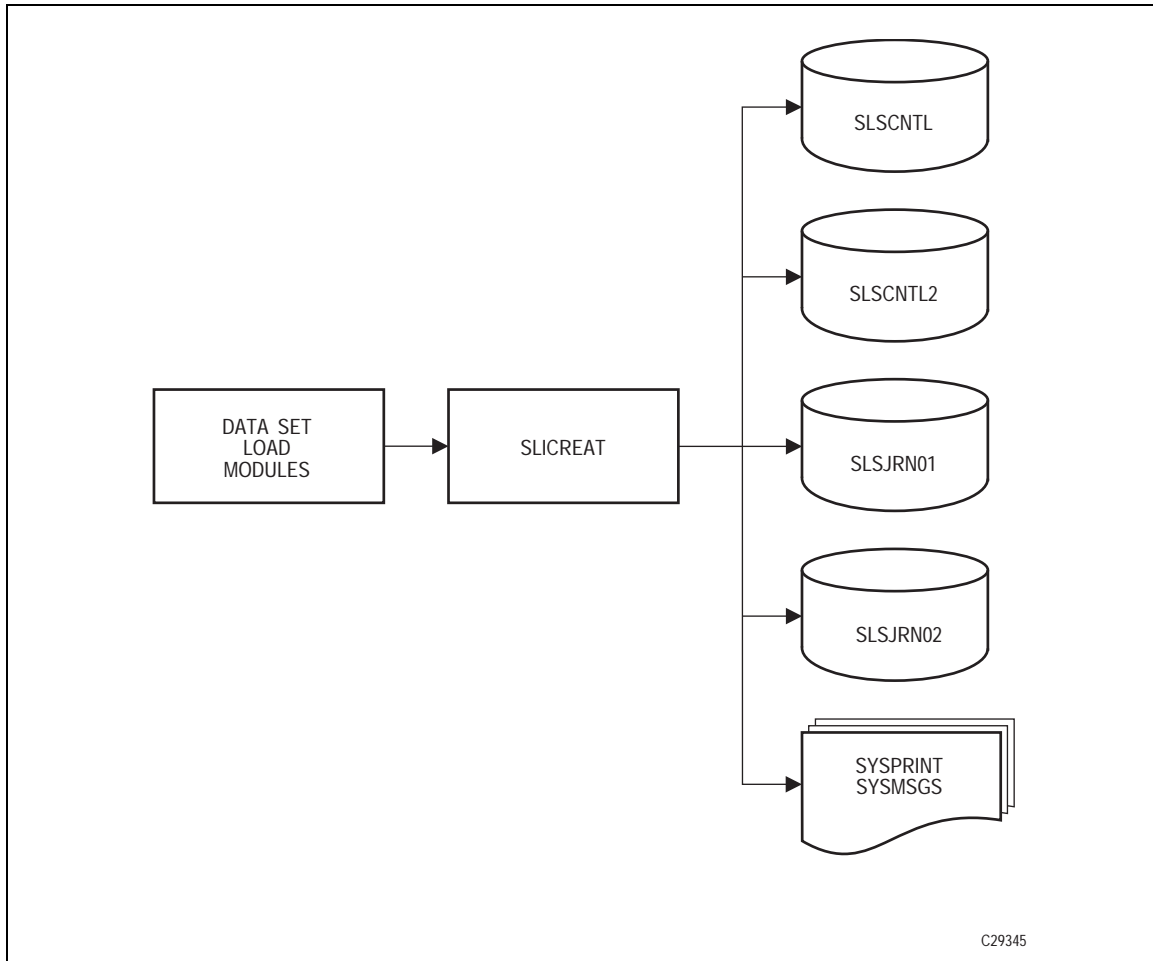

**Figure 7. Data Set Initialization**

## Verifying Successful Completion of the SLICREAT Program

After the SLICREAT program is successfully processed, a message is generated indicating the status and the capacity of the library. An example is:

### ***SLICREAT Success Status Message***

```
SLS0557I DATABASE SUCCESSFULLY INITIALIZED; TOTAL CARTRIDGE CAPACITY:  
          DDDDDDDDDDD VOLUMES
```



Refer to “Calculating Cartridge Capacity - SL8500 and SL3000” on page 76 for information about how the total cartridge capacity is determined for SL8500 libraries.

## Reformatting the SLSJRNnn Data Sets

SLICREAT can be used to reformat your HSC journal file(s). To reformat only the journal file(s), you can run SLICREAT without the SLSCNTL DD statement. You should also omit any journal files you do not wish to have reformatted. The

```
PARM='libgen-load-module-name'
```

parameter is required.

SLICREAT attempts to reformat any valid journal file it finds and issues a message for all omitted DD statements.



**Note:** A backup must be run after you reformat any journal file(s).

## Creating Only the SLSSTBY CDS

SLICREAT can be used to create an additional CDS. If the HSC was previously installed without a standby CDS, you can run the SLICREAT program to create one.



**Notes:** You must have a primary CDS before you can run the STBYONLY option of SLICREAT.

This method does not make a backup of the primary CDS. It formats the additional CDS and allows you to activate it with the CDS Enable command.

A standby CDS is created by specifying the following EXEC statement:

***SLICREAT EXEC Statement to***

```
EXEC PGM=SLICREAT,PARM='STBYONLY'
```

The SLSCNTL and SLSSTBY DD statements must be specified with the STBYONLY parameter.



**Note:** For the additional CDS to be recognized by the HSC, it must be defined by a CDSDEF statement in the PARMLIB.

## Storage Cell Capacity for 4410, 9310, and ExtendedStore LSMs

Refer to Table 6 to determine the cartridge storage capacity of a 4410 standard, 9310 PowderHorn, or ExtendedStore LSM. Refer to Table 7, Table 8, and Table 9 to determine the cartridge storage capacity of the three 9360 WolfCreek LSM models.

**Table 6. Storage Cell Capacity of 4410, 9310, ExtendedStore LSMs**

Number of PTPs	Number of Drive Panels			
	1	2	3	4
0	5970	5786	5602	5418
1	5946	5762	5578	5394
2	5922	5738	5554	5370
3	5898	5714	5530	5346
4	5874	5690	N/A	N/A



### Notes:

1. If you have installed an enhanced CAP, reduce the number of cartridges by 240 for any given scenario listed in the table above.
2. If you have installed a PowderHorn (9310) window, reduce the number of cartridges by 288 for each window for any given scenario listed in the table above.

## Storage Cell Capacity for 9360 LSMs

Storage capabilities for the 9360 WolfCreek LSMs is affected by the number of pass-thru ports, cartridge drives, CAPs, and whether a viewing window is desired. Certain options preclude each other. For instance, you may select the viewing window or add a second cartridge drive, but not both, since they both need the same panel for installation. Multiple CAPs will also affect cartridge storage volume as well as multiple pass-thru ports. The following tables illustrate the storage capacity available for each model, dependent on the options available and selected.

**Table 7. Storage Cell Capacity of WolfCreek 9360-050 LSMs**

WolfCreek 9360-050	0 PTPs	1 PTP	2 PTPs
Base Unit	504	496	488
Additional options do not affect capacity			

**Table 8. Storage Cell Capacity of WolfCreek 9360-075 LSMs**

<b>WolfCreek 9360-075</b>	<b>0 PTPs</b>	<b>1 PTP 2</b>	<b>PTPs</b>
1 Cartridge Drive (CD)	756	748	740
2nd CD (optional)	648	640	632
Viewing window (optional)	672	664	656

**Table 9. Storage Cell Capacity of WolfCreek 9360-100 LSMs**

<b>WolfCreek 9360-100</b>	<b>0 PTPs</b>	<b>1 PTP</b>	<b>2 PTPs</b>
1 CD, standard WolfCreek CAP	949	941	933
1 CD, standard and optional WolfCreek CAPs	865	857	849
2nd optional CD, standard WolfCreek CAP	841	833	825
2nd optional CD, standard and optional WolfCreek CAPs	757	749	741
Viewing window, standard WolfCreek CAP	865	857	849
Viewing window option, standard and optional WolfCreek CAPs	781	773	765

## Storage Cell Capacity for TimberWolf 9740 LSMs

Storage capacity for the TimberWolf 9740 LSMs varies depending on the number of PTPs (two maximum) configured and whether or not a viewing window is present. The following table illustrates the storage capacity available.

**Table 10. Storage Cell Capacity of TimberWolf 9740 LSMs**

<b>9740 LSM</b>	<b>0 PTPs</b>	<b>1 PTP</b>	<b>2 PTPs</b>
Standard 9740 (window present)	326	322	318
9740 without window	494	488	484

## Storage Cell Capacity for StreamLine SL8500 Libraries

Storage capacity for the SL8500 library varies depending on how many expansion frames are present. No viewing windows are included, and no PTPs exist for this release. The following table lists the storage capacity for the base library and expansion frames.

**Table 11. Storage Cell Capacity of StreamLine (SL8500) Libraries**

Module/Frame Type	Cartridge Capacity Per Module/Frame	Total Cartridge Capacity
Control Module/Tape Drive Frame	0	
Robotics Interface Module	800	
Customer Interface Module	648	
<b>Base Library</b>		<b>1448</b>
First Expansion Frame	1728	<b>3176</b>
Second Expansion Frame	1728	<b>4904</b>
Third Expansion Frame	1728	<b>6632</b>
Fourth Expansion Frame	1728	<b>8360</b>
Fifth Expansion Frame	1728	<b>10088</b>



**Note:** Refer to “Calculating Cartridge Capacity - SL8500 and SL3000” on page 76 for information about how the total cartridge capacity is determined for SL8500 libraries.



## Storage Cell Capacity for StreamLine 3000 Libraries

As with the SL8500 library, you can reconfigure the SL3000 library capacity by adding modules. This library can contain a viewing window. Table 12 shows storage capacity for each module.



**Note:** Refer to “Calculating Cartridge Capacity - SL8500 and SL3000” on page 76 for information about how the total cartridge capacity is determined for SL3000 libraries.

**Table 12. Storage Cell Capacity of StreamLine (SL3000) Libraries**

Module	Configuration	Total Cartridge Capacity
Access Expansion Module - Panels 0, 1, 22, 23		0
Base Drive Module - Panel 12		
	8 Drives	216
	16 Drives	150
	24 Drives	78
	Back Panel - Last on Left - 8 Drives	180
	Back Panel - Last on Left - 16 Drives	125
	Back Panel - Last on Left - 24 Drives	65
Base Drive Module - Panel 13		
	Front Panel - Full - With Window - With CAP	205
	Front Panel - Full - No Window - With CAP	228
	Front Panel - Last on Left - With Window - With CAP	153
	Front Panel - Last on Left - No Window - With CAP	176
Drive Expansion Module - Panel 10		
	Back Panel - Full - 8 Drives	216
	Back Panel - Full - 16 Drives	150
	Back Panel - Full - 24 Drives	78
	Back Panel - Full - 32 Drives	0
	Back Panel - Last on Left - 8 Drives	180
	Back Panel - Last on Left - 16 Drives	125
	Back Panel - Last on Left - 24 Drives	65
	Back Panel - Last on Left - 32 Drives	0

**Table 12. Storage Cell Capacity of StreamLine (SL3000) Libraries**

Module	Configuration	Total Cartridge Capacity
Drive Expansion Module - Panel 11		
	Front Panel - Full - With Window - With CAP	205
	Front Panel - Full - No Window - With CAP	228
	Front Panel - Full - With Window - No CAP	282
	Front Panel - Full - No Window - No CAP	305
	Front Panel - Last on Left - With Window - With CAP	153
	Front Panel - Last on Left - No Window - With CAP	176
	Front Panel - Last on Left - With Window - No CAP	230
	Front Panel - Last on Left - No Window - No CAP	253
Cartridge Expansion Module - Panels (L) 2, 4, 6, 8; (R) 14, 16, 18, 20		
	Back Panel - Full	308
	Back Panel - Last on Left	256
Cartridge Expansion Module - Panels (L) 3, 5, 7, 9; (R) 15, 17, 19, 21		
	Front Panel - Full - With CAP	234
	Front Panel - Full - No CAP	312
	Front Panel - Last on Left - With CAP	182
	Front Panel - Last on Left - No CAP	260

## Backup Utility Recommendation

It is recommended that the BACKUp utility be executed after data set initialization to maintain the integrity of the library system should a DASD failure occur. The primary control data set is backed up to a user-specified data set.

At this point, in the event of CDS problem, it is quicker to rebuild a CDS from a backup than it is to execute a SLICREAT again.

If journaling is enabled, all specified journal data sets are reset during backup processing, and the primary control data set is returned to support normal library processing. For additional instructions, refer to the “BACKUp Utility” in the *HSC/MSP System Programmer's Guide*.



## Chapter 6. Defining HSC Control Statements

---

At this point in the installation process, you may want to consider setting up your definition data set and PARMLIB control statements. The following sections briefly discuss these two kinds of control statements: definition data set, which allow you to define mixed media and devices, and PARMLIB, which are used to define various operation parameters.

### Definition Data Set Control Statements

Definition data sets contain control statements that can be used to define to the HSC the volume attributes, unit attributes, and tape request characteristics for your data center. The HSC uses this information to ensure:

- the correct media type is used to satisfy the request
- the cartridge is mounted on an appropriate device (i.e., 4480, 4490, 9490, 9490EE, SD-3, T9840x, T9940x, LTO, SDLT, or T10000x).

Definition data set control statements include:

- OPTion TITLE
- Scratch Subpool Definition (SCRPDEF).
- Tape Request (TAPEREQ) - controlled by the SMC
- Tape Request Definition (TREQDEF) - controlled by the SMC
- Unit Attribute (UNITATTR) - controlled by the SMC
- Unit Attribute Definition (UNITDEF)
- Volume Attribute (VOLATTR)
- Volume Attribute Definition (VOLDEF).



**Note:** If your library contains more than one media type or device type, enter TAPEREQ, VOLATTR, and UNITATTR control statements to manage allocation of mixed media and/or devices. The TAPEREQ and UNITATTR statements are controlled by the SMC. Refer to the *SMC Configuration and Administration Guide* for detailed information.

For VOLATTR statements, you must enter a statement for each media type so that the HSC can correctly determine scratch counts.

Some alternatives are available to using these control statements:

- create esoterics for each device type (4480, 4490, 9490, 9490EE, SD3, T9840x, T9940x, LTO, SDLT, or T10000x)
- change the UNIT parameter in your JCL to specify the esoteric containing the devices you wish to use
- create scratch subpools for each media type
- define and invoke User Exit 01 and 02 to direct scratch mount requests to the scratch subpool you select.

If you do not use any of these methods to manage allocation of mixed media and devices, unacceptable media/devices may be selected.

For more detailed information about definition data sets, refer to “HSC Control Statements and HSC Start Procedure” in the *HSC/MSP System Programmer’s Guide*.

## Parameter Library (PARMLIB) Control Statements

PARMLIB consists of command and control statements that are executed during each time the HSC is initialized. PARMLIB control statements provide a way, at HSC initialization, to statically define various operation parameters. Identifying your system needs and then specifying various control statements permits you to tailor the HSC to the needs of your data center.

PARMLIB control statements discussed in the *HSC/MSP System Programmer’s Guide* include the following:

- CDS Definition (CDSDEF)
- EXECParm Control Definition
- Journal Definition (JRNDEF)
- Reconfiguration CDS Definition (RECDEF).

Additional control statements that can be entered as operator commands include:

- Allocation (ALLOC)
- CAP Preference (CAPPref)
- Communications Path (COMMpath)
- MNTD
- OPTion
- User Exit (UEXIT).

These are described in the *HSC/MSP Operator’s Guide*.

Some PARMLIB options can be altered after HSC initialization with the HSC executing. These options can be changed using an appropriate HSC operator command, which means that it is not necessary to stop the HSC and restart it to initialize the new or changed options.



**Note:** PARMLIB control statements that can be altered with the HSC executing are identified as PARMLIB commands or control statements.

Any operator command can be specified in a PARMLIB control statement.

For a detailed discussion of the PARMLIB command and control statements, refer to “HSC Control Statements and HSC Start Procedure” in the *HSC/MSP System Programmer’s Guide*.





## Chapter 7. Initializing the HSC

---

### Starting the HSC

Starting the HSC has two requirements:


- creating an HSC START procedure
- executing the HSC START procedure.

#### Creating an HSC START Procedure

A procedure for starting the HSC must be created in the cataloged procedure library of the host system. The START command invokes the cataloged procedure. The procedure loads the initialization routine specified in the nucleus of the HSC into main storage, instructs the operating system to allocate data sets, and activates the library host software.

This section describes how to create the procedure. A typical syntax for the EXEC statement and full descriptions of each of the parameters follows.

## EXEC Statement Syntax

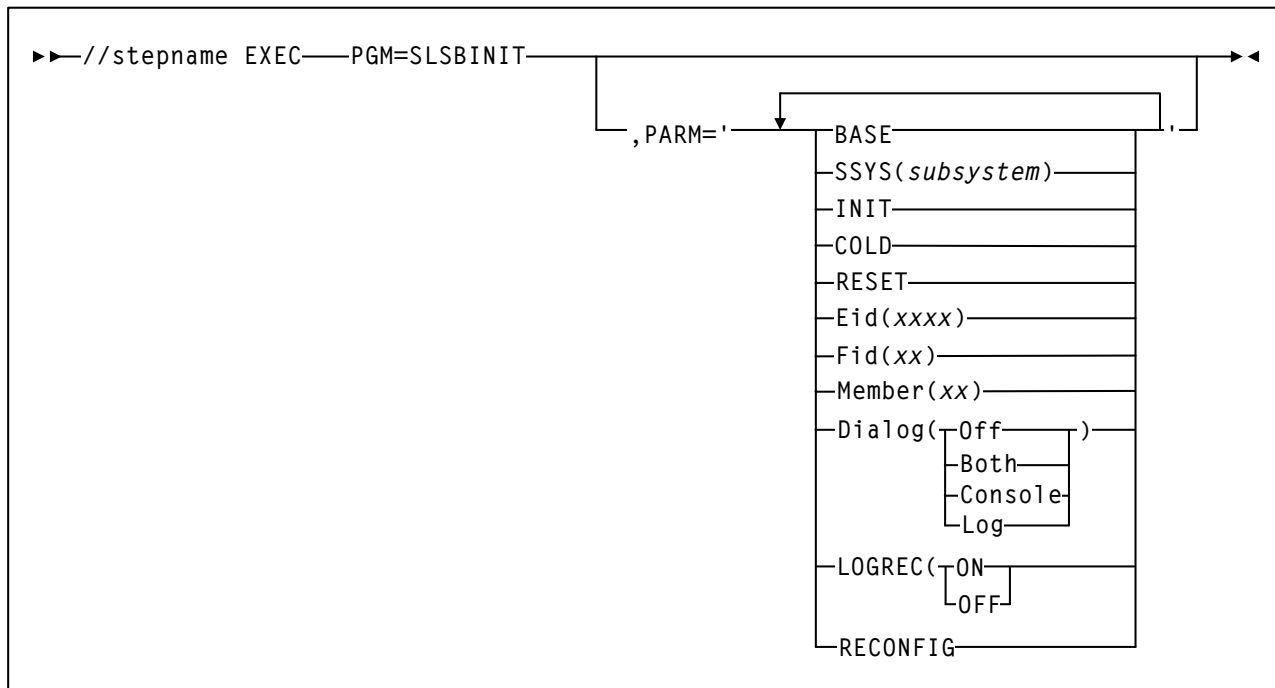

## EXEC Statement Parameters

### PARM=

defines the list of parameters passed to the HSC initialization routine.



**Note:** If you enter more than one of the following parameters, **you must separate them with a blank space** (e.g., BASE SSYS(subsystem) RESET).

### BASE

specifies that the HSC initialize and execute at the base service level.

### SSYS

specifies that HSC initialization search for the *subsystem* name specified. If the name is not found or is not a valid name, the subsystem terminates. *subsystem* must be a 1- to 4-character name or problems can occur when initializing the HSC.

This parameter permits you to symbolically specify the subsystem and retain the same startup procedure whether starting the HSC before or after JES.

## INIT

specifies that only preinitialization of the HSC occur.



**Note:** If PARM=INIT is specified, the HSC subsystem is only initialized. It is still necessary to issue an HSC Start command to start the HSC. If any other parameters are specified with INIT (except for SSYS), they are ignored.

## COLD

specifies that any permanent in-memory data structures previously allocated by HSC are reallocated and reinitialized.

On the first startup of the HSC after an IPL, this option is meaningless. If the HSC has been brought up previously for this IPL, use of this option results in the loss of a system linkage index for Program Call (PC) instructions. There are a limited number of system linkage indexes. Once exhausted, they can only be restored by IPLing. If COLD is not specified, the linkage index used previously by the HSC is reused.

This parameter should be used only when absolutely necessary. (The installation instructions for some HSC maintenance may direct you to perform a COLD start.)



**Note:** You do **not** need to include the COLD parameter when you are initializing an HSC that is at a different release level than the HSC that was previously running on a host. When an initializing HSC detects a release level difference, it performs an automatic internal cold start. For an automatic cold start, PC system linkage indexes are reused by the HSC.

If error conditions persist, contact StorageTek Software Support before using this parameter.

## RESET

specifies that all subsystem status flags in the MSP Subsystem Communications Vector Table (SSCVT) for the HSC are unconditionally reset. Use of this option may correct a situation in which the HSC was terminated abnormally without resetting the status flags; for example, if the HSC was terminated with the MSP FORCE command.

One possible symptom of this situation is the message:

```
... ACS subsystem CCCC is ACTIVE
```

**or**

```
... ACS subsystem CCCC is TERMINATING
```

**or**

```
... ACS subsystem CCCC is INITIALIZING
```

at HSC startup, when a display of active jobs indicates that the subsystem is not, in fact, active.

This parameter should only be used in extreme situations and may not correct all error conditions. Contact StorageTek Software Support before using this parameter.

### **Eid**

xxxx is 1 to 4 hex characters specifying the GTF event ID used for the duration of this subsystem. “E” is the abbreviation for this parameter. The default Eid value is **E086**.

### **Fid**

xx is 1 to 2 hex characters specifying the GTF format ID used for the duration of this subsystem. “F” is the abbreviation for this parameter. The default Fid value is **17**.



**Note:** Refer to “EXECParm Control Statement” in the *HSC/MSP System Programmer’s Guide* for an alternative method of specifying GTF Eid and Fid parameters.

### **Member**

For MSP, xx is the suffix of the SLSSYSxx member in SYS1.PARMLIB, or an SLSSYSxx DD statement in the startup procedure used as the automatic commands (PARMLIB control statements) data set. “M” is the abbreviation for this parameter.

### **Dialog**

specifies that messages can be displayed on the operator console and/or written to the system log. This option can be used to further restrict where messages are displayed based on the ROUTCDE. These messages indicate that the HSC is waiting for an active task to complete before the HSC terminates.

For more information on Dialog, see “OPTION Command and Control Statement” in the *HSC Operator’s Guide*.

If Dialog is specified, one of the options **must** be selected. There is no default. The options for Dialog include:

### **Off**

specifies that you do not want messages displayed on the operator console or written to the system log.

**Both**

specifies that messages are displayed on the operator console and written to the system log.

**Console**

specifies that messages are displayed on the operator console only.

**Log**

specifies that messages are written to the system log only.

**LOGREC**

specifies whether the HSC writes software events to the system LOGREC data set.

**ON**

specifies that HSC software events are written to the LOGREC data set.

**OFF**

specifies that HSC software events are not written to the LOGREC data set.

**RECONFIG**

specifies this execution of the HSC will only run the Reconfiguration utility.

**Example**

The following listing is an example PROC for the START command. This sample is also included in the HSC SAMPLIB as member JCLPROC.

**Example PROC for START Command**

```
//SLSØ      PROC  PROG=SLSBINIT,PRM=' '
//*
//IEFPROC   EXEC  PGM=&PROG,TIME=144Ø,
//  PARM='&PRM E(EØ86) F(23) M(ØØ) SSYS(SLSØ)',REGION=4M
//*
//STEPLIB   DD   DSN=SLS.SLSLINK,DISP=SHR
//*
//SLSUEXIT  DD   DSN=load.module.library,DISP=SHR
//SLSSYSØØ DD   DSN=SLS.PARMS,DISP=SHR
```

In this example, SLS0 is used as both the name of the started task procedure (line 1) and as the subsystem name defined in the SSYS parameter “SSYS (SLS0)” in line 4. Your site is not required to use these values. You can replace either or both of these values with more meaningful or useful names pertaining to your site specific needs. However, you must keep in mind the following:

- The subsystem name must be 4 characters in length.
- If the started task member name and the subsystem name are identical, the SSYS parameter is not necessary in the started task procedure. If the started task procedure name is not identical to the subsystem name, then the SSYS parameter must be used to point the started task procedure to the required HSC subsystem.

For more information on using the SSYS parameter, refer to “SSYS” on page 94 and “Starting the HSC Using the SSYS Parameter” on page 103.



#### Notes:

- Control data sets are normally defined using the CDSDEF and RECDEF control statements. The CDSDEF statement **must** be present in your PARMLIB definitions. Control and journal data sets may no longer be defined in JCL. Refer to “CDS Definition (CDSDEF) Control Statement” in the *HSC/MSP System Programmer’s Guide* for more information.

When the HSC is started to run the Reconfiguration utility, the CDSDEF control statement identifies the old control data sets, while the RECDEF control statement designates the new control data sets. If the old and new CDSs are to be temporarily placed on VIO to reduce reconfiguration time during the reconfiguration, (see “Minimizing I/O Time” in the *HSC/MSP System Programmer’s Guide*), JCL DD statements are required to identify the temporary VIO data sets. Refer to “Reconfiguration Utility” in the *HSC/MSP System Programmer’s Guide* for more details.

- The number of CDS copies used by the HSC is dependent on the number of CDS copies defined in the CDSDEF PARMLIB control statement. It is **not** determined by the TECHNIQUE parameter of the LIBGEN SLIRCVRY macro. The HSC uses all of the CDS copies defined in the CDSDEF control statement (whether this includes more or less CDS copies than are specified by the TECHNIQUE parameter).
- Journals are defined using the JRNDEF control statement. The JRNDEF statement must be present in your PARMLIB definitions if you want to use journaling. Journal data sets may no longer be defined in JCL. Refer to and “Journal Definition (JRNDEF) Control Statement” in the *HSC/MSP System Programmer’s Guide* for more information.
- If journaling is specified by the TECHNIQUE parameter of the LIBGEN SLILIBRY macro, journals must be defined in your PARMLIB definitions for successful HSC initialization.

- A control statement is terminated if the statement is not continued. For additional information, refer to “Control Statement Syntax Conventions” on page 160.
- TIME=1440 or TIME=NOLIMIT should be coded to ensure that the HSC does not time out and terminate.

## Descriptions of DD Statements

The following are descriptions of the JCL DD statements used in the example PROC for the START command.

### **SLSSYSxx**

statement that defines the data set containing the HSC PARMLIB. In the example procedure above, *xx* is replaced by the suffix “00”. The SLSSYS00 DD statement matches the M(00) declaration and points to the PARMLIB member “00” that contains your start-up parameters.

### **SLSUEXIT**

statement that defines the data set containing HSC user exits.

## Executing the HSC START Procedure

The HSC cataloged procedure is invoked by issuing the MSP START command. Refer to “Issuing the START Command” on page 102 for information about the MSP START command, syntax, and parameter descriptions. During HSC initialization, messages inform you when HSC base service level initialization completes and when full service level initialization completes.



**Note:** When it is initialized, the HSC determines whether this release differs from the release level of the previous HSC subsystem. If there is a difference, an internal cold start is invoked.

Before starting the internal cold start processing, however, the Program Call system linkage index is saved, and the HSC’s main in-memory data structure is freed. This reduces the resources lost due to the cold start.

If your SMF options for the HSC did not specify the SUBTYPE parameter, the HSC issues a message indicating that SMF record subtypes 1 through 6 are being recorded.

If you did not specify GTF Eid and Fid parameters on the PARM operand in the HSC startup procedure, HSC issues a message indicating that default Eid and Fid values are being used.

The HSC may be started prior to hardware arrival to ensure that it has been installed properly. The HSC subsystem comes up with the LMU stations offline. HSC operator commands may be entered, but any functions requiring interaction with the ACS hardware result in error messages.

## Modifying LSMs Online

When the CDS is initialized, the status of all LSMs defined in the LIBGEN is OFFLINE. You must issue the HSC MODify ONline command to bring all of your LSMs online.

For subsequent executions of the HSC, the last recorded status of the LSMs is obtained from the control data set.

When an LSM is modified online for the first time, the drive types of all drives in the LSM are recorded in the CDS. Before an LSM is modified online, the drive type is determined from UNITATTR control statements, if any exist. If not, drive types are set to a model type of IGNORE, which is incompatible with all media types.



## Configuration Mismatches

During HSC initialization, the HSC remains active if LSM or panel type configuration mismatches occur between the CDS and LMU. Specifically, these mismatches include:

- different numbers of LSMs
- different or unknown types of LSMs
- different or unknown panel types in an LSM.

In these cases, the affected ACS(s) is forced offline. The HSC continues to support the unaffected ACS(s).

While the unaffected ACS(s) remains online, the mismatched configuration can be corrected. If the hardware configuration is incorrect, the affected ACS(s) can then be brought online. Otherwise, the configuration can be changed through the LIBGEN/SLICREAT/MERGEcds process at your convenience.

## Multiple Hosts Startup Considerations

In a multiple-host configuration, start one host at a time. **Do not bring up multiple hosts simultaneously.**

## Issuing the START Command

The HSC software is initialized by issuing the MSP START command. Parameters associated with PARM= on the EXEC statement of the HSC cataloged procedure (see “Creating an HSC START Procedure” on page 93) can also be supplied via PARM= on the START command. The PARM= specification on the START command overrides the PARM= specification in the HSC cataloged procedure.



**Note:** Examples in this section relevant to single PARM= parameters may need to be accompanied by other parameters present in the HSC cataloged procedure.

Alternately, a JCL substitution symbol may be specified in the HSC cataloged procedure, and additional parameters passed via the START command using the substitution symbol.

The HSC can be initialized to a full or base service level by issuing the MSP START command. The HSC can also be initialized under the MSP Master Subsystem (MSTR) through the START command.

The following table shows examples of the START command options introduced in this section. For further information about these options, refer to the paragraphs following the table.

**Table 13. HSC Initialization**

HSC Start Command	Proc Name Same as SUBSYSxx Entry	SLSBPREI in SUBSYSxx or Previous HSC Start With PARM='INIT'
<b>HSC Started Under MSTR and PROC in SYS1.PROCLIB</b>		
S SLS0	Yes	No
S SLS0,SUB=MSTR	Yes	Ignored
S SLS0,PRM='SSYS(SLS0)',SUB=MSTR	No	Ignored
<b>HSC Started Under JES and PROC in a PROCLIB</b>		
S SLS0	Yes	Yes
S SLS0,PARM='INIT' S SLS0	Yes	No

## Initializing the HSC Under the Master Subsystem

If you want to initialize the HSC under the Master subsystem (MSTR), the following circumstances must be considered:

### ***Subsystem Name is the same as Start Procedure Name***

```
S SLSØ
```



**Note:** When running the HSC under the Master subsystem, JES services are not used. It is also possible to receive duplicate messages in the system log.

If you want to initialize the HSC under JES later, the INIT parameter may be used to do the preinitialization when necessary.

## Starting the HSC Using the SSYS Parameter

The HSC can be started against a particular subsystem by specifying the SSYS parameter. Refer to “Creating an HSC START Procedure” on page 93.

### ***Starting HSC Against a Subsystem Named SLSØ***

In this example, PARM overrides all other parameter values.

```
S HSCPROC,PARM='SSYS(SLSØ)'
```



**Note:** This example shows that the procedure name specified (HSCPROC) is more than four characters long. The SSYS parameter contains the subsystem name identified in the SUBSYSxx member of SYS1.PARMLIB. Note that the first four characters of the procedure name can be different than the subsystem name.

## Starting the HSC to the Full Service Level

Normally, HSC software is initialized to the full service level when it is started. The syntax for the START command to initialize the HSC to the full service level is:

### ***Starting to Full Service Level***

```
S SLSØ
```

## Starting the HSC at the Base Service Level

HSC software can be started only to the base level by coding the BASE parameter in the PARM field of the MSP START command.

The syntax for the START command to initialize the HSC to the base service level is:

### ***Starting to Base Service Level***

```
S SLSØ,PRM='BASE'
```



**Note:** PRM adds the parameter BASE to the startup PARMs.

The BASE parameter should be used with other parameters in the START command since these parameters override whatever is specified in the HSC START Procedure. A sample START command with parameters is:

```
S SLSØ,PRM='BASE E(Ø86) F(23) M(ØØ)'
```

In this case, PARM overrides **all** parameters in the PARM field.

Refer to “Creating an HSC START Procedure” on page 93 for a description of these and other related parameters.

After initializing to this point, the HSC SRVlev command can be used to bring the subsystem up to full function. Refer to “SRVlev (Service Level) Command” in the *HSC/MSP Operator's Guide* for more information.

## Chapter 8. Terminating the HSC

---

### Stopping the HSC

The HSC may be terminated by issuing MSP commands. Either an orderly or forced termination of the HSC can be accomplished depending upon the MSP command used.

#### Orderly Termination of the HSC

You may terminate execution of the HSC in an orderly manner by issuing the MSP STOP command at an operator console. An orderly termination causes the HSC to complete all outstanding processing for library activity known to the HSC before termination begins. The HSC is not aware of new activity while in termination processing. Ensure that tape allocation is not being performed by the operating system before executing termination of the HSC. During termination, the following actions occur:

1. The HSC waits for pending work to complete. This includes actions against the LMU such as current mounts and dismounts, utilities, active CAPs, operator commands, and station termination(s).
2. The control data sets and journals are updated as the outstanding processes are performed.
3. Resource cleanup and termination occurs.
4. An HSC message is displayed on the system console indicating that the HSC is terminated.

Restart of the HSC is achieved by running the HSC startup procedure. After startup, the HSC executes and normal operation of the library occurs. See “Executing the HSC START Procedure” on page 100 for more information.

## Forced Termination of the HSC

You may force the immediate termination of the HSC by issuing an MSP Cancel command at an operator console. If this does not work, issue a second Cancel command, and if this still does not terminate the HSC, issue the MSP FORCE command.



**Warning: Forced termination of the HSC is not recommended by StorageTek as a normal form of termination, and should be avoided if possible. Unpredictable results may occur on subsequent startups following forced terminations.**

Before executing forced termination of the HSC, ensure that tape allocation is not being performed by the operating system. Tape drive separation and device allocation for the library is not performed during the period that the HSC is down.

A forced termination of the HSC causes all HSC processes to abort immediately and termination occurs. Any of the following conditions may exist:

- volumes may be left mounted in tape drives or may be left in transit
- outstanding utilities mayabend
- the control data sets and journals may lose synchronization.

An MSP message is displayed at an operator console indicating that the HSC subsystem was abnormally terminated.

Restart of the HSC after a forced termination may produce unpredictable results and may affect subsequent operation of the library.

Errant volume records are created for volumes left in drives, the playground, CAPs, or pass-thru ports. Operator intervention may be required to resolve the status of errant volumes when HSC execution is resumed. Tape transports may require operator intervention to satisfy mount requests.

## **Chapter 9. Testing the Installation**


---

Testing the installation consists of executing the Installation Verification Process (IVP). The process consists of performing a set of recommended test procedures for testing of the Automated Cartridge System before introducing the library into the production environment. Individual procedures contain steps to test the basic functions of the HSC, the Automated Cartridge System (library), and the attached tape transports. The procedures also contain functional tests to exercise the main functions of the HSC and ACS components.

Each program is contained in the HSC SAMPLIB on the HSC Base tape.

### **Scope of Installation Verification**

Installation verification consists of the execution of planned tests to verify proper functioning of basic HSC operations. Figure 8 on page 108 illustrates the flow of a recommended verification process.

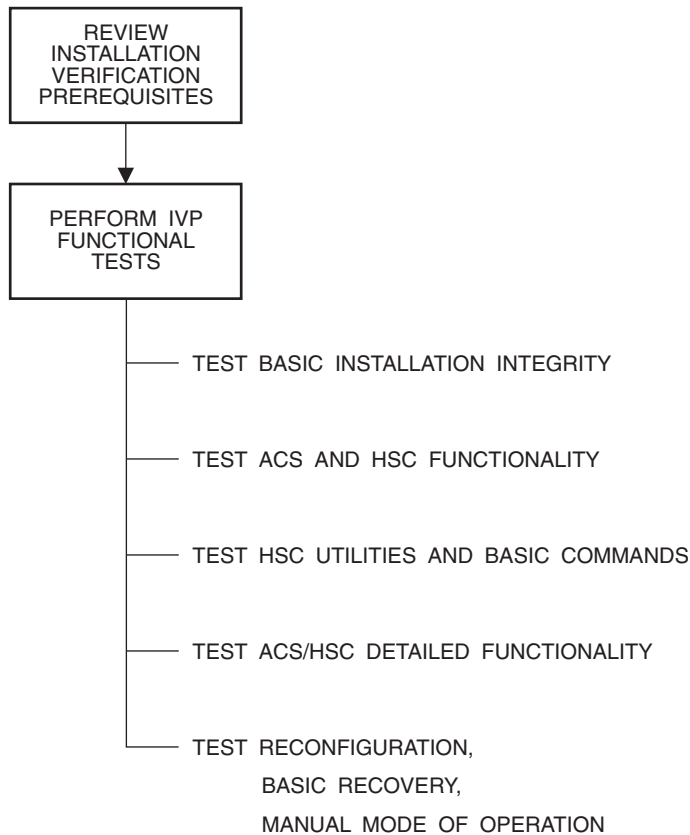

C29346

---

**Figure 8. Installation Verification Flow Diagram**

The following tables provide a summary of recommended IVP tests.

**Table 14. Utilities Tested During Installation Verification**

Utility	Description of Required Function
ACTivities Report	Produces a report presenting library activity.
AUDIt	Causes the robot to scan all library cells and to update the control data sets with cartridge location information.
BACKup	Creates a backup copy of the HSC control data sets and analyzes data.
EJECT	Ejects tape cartridges from the library.
INITialize cartridge	Initializes tape cartridges through the CAP.
MOVE	Directs the robot to move cartridges to specified designations.
RESTore	Restores the HSC control data sets and generates control statements.



**Table 14. Utilities Tested During Installation Verification**

Utility	Description of Required Function
Scratch Conversion	Reads the TMS database and produces input of scratch VOLSERs to be used by the Scratch Update utility.
Scratch Update	Updates the scratch list contained in the control data sets.
Volume Report (VOLRpt)	Produces a volume report by VOLSER and LOCATION sequence.
SLIVERFY and SLIEXERS are two additional utility-type testing programs used specifically during Installation Verification. Refer to “SLIVERFY Program” on page 71 and “SLIEXERS Program” on page 117 for more information about these programs.	

Refer to “Utility Functions” in the *HSC/MSP System Programmer’s Guide* for detailed information on each HSC utility.

**Table 15. Commands Tested During Installation Verification**

Command	Description of Required Function
CAP	Pref Sets and resets CAP selection parameters.
COMMPath	Establishes or changes the communication method for a host.
DISMount	Performs an operator requested dismount for a specific volume and for any volume.
Display	Display CDS displays control data set information. Other Display commands display status of an ACS, an LSM, a volume in the library, a detailed status of a volume in the library, a message, a command, a drive request, the status of a CAP, and so forth.
DRAin	Terminates an ENter or Eject command and releases the CAP from the enter mode.
Eject	Ejects the labeled volumes (previously entered) from the library. Ejects one unlabeled volume from the library.
ENter	Enters a number of labeled volumes into the library. Enters one unlabeled volume into the library.
MODify	Changes status of an LSM or CAP from online to offline.
Mount	Performs an operator requested mount.
MOVE	Directs the robot to move cartridges to specified designations.
Vary	Varies a station online and offline.
View	If video monitors are attached to the LSM, permits visual inspection of the interior of the LSM.
Warn	Sets the scratch warning threshold values.

**Table 16. Job Processing Functions Tested During Installation Verification**

<b>Job Processing Function</b>	<b>Description of Required Function</b>
Initialization	Performs the following: <ul style="list-style-type: none"><li>• Successful initializations of the HSC</li><li>• Displays the ACS from all hosts</li><li>• Verifies that all station addresses indicate online.</li></ul>
Drive Exclusion	Verifies that library tape transports are selected for library volumes and that nonlibrary transports are selected for nonlibrary volumes.
Drive Prioritization	Verifies that tape transports allocated are attached to LSMs containing the requested volumes.
Multi-unit DD statements	Verifies successful execution of a job that contains multi-unit DD statements in the JCL.
Multi-volume file	Verifies successful execution of a job that reads from and writes to a multi-volume file.

## Installation Verification Prerequisites

There are certain initial requirements and considerations of which you should be aware before performing the verification. These include:

- Ensure that you have the complete set of StorageTek documentation. Refer to the HSC publications shown in “Preface” on page xxvii for a complete list.
- Ensure that you have all pertinent Fujitsu documentation.
- Prepare/setup JCL in advance for those HSC utilities being tested.
- Store the test JCL in a permanent library for future use.

## IVP Functional Test Phases

Installation Verification consists of several phases. Each phase is dependent on the previous phase; therefore, testing is executed in a required order. Some portions of the tests consist of simply verifying that all of the necessary installation tasks were completed. Other portions of the tests require that you run jobs or issue commands to insure that the HSC and the library function as intended.

It is highly recommended that every procedure in the IVP be performed and completed to ensure absolute system functionality.

Direct any questions or notification of problems to StorageTek Support Services.

Use the tables contained in following sections as reference for running each testing step and as a check list to validate completion of each testing phase.

IVP programs used for testing are described in “Description of Test Programs” on page 117. Refer to this section for a description of each test used in the IVP.

## Basic Installation Integrity Test

The HSC must be installed but not started to perform the following recommended tests.

### Recommended Test Procedure

Perform the steps listed in the following table to test the HSC and library basic functions.

When you have completed this test phase, go to “ACS and HSC Functionality Test” on page 112 to continue the installation verification process.

**Table 17. Basic Installation Test Procedure**

Step	Description of Action	Checkmark to Verify Completion	Person Responsible for Test / Verification
1	Verify that the HSC software was installed as specified in the <i>NCS-VTCS Installation Guide</i> .		
2	Verify that all PUT tapes to date were received and applied as specified in the <i>NCS-VTCS Installation Guide</i> .		
3	Verify that LIBGEN modules are coded, assembled, and link-edited. The EJECT password will be changed in another testing phase.		
4	Verify that the SLIVERFY utility was executed to confirm a valid LIBGEN with the existing hardware configuration.		
5	Verify that the SLICREAT utility was executed to initialize the library control data sets.		

## ACS and HSC Functionality Test

The HSC must be installed and running to perform the following recommended tests.

### Recommended Test Procedure

Perform the steps listed in Table 19 to test ACS and HSC functionality.

When you have completed this test phase, go to “HSC Utilities and Basic Commands Test” on page 114 to continue the installation verification process.

**Table 18. ACS and HSC Functionality Test Procedure**

Step	Description of Action	Checkmark to Verify Completion	Person Responsible for Test / Verification
1	Verify that the HSC was initialized on each host. The MSP START command (S hscprocname) was used.		
2	Issue the Display CDS command to display database information.		
3	Display the ACS from all attached hosts. Verify that all configured station addresses are online.		
4	Display each LSM from each host.		
5	Vary all LSMs online.		
6	Display the CAP status.		
7	Display the help text for any message (Display Message msg-id).		
8	Issue the ENter command for a CAP.		
9	Issue the DRAin command for a CAP.		
10	Display, modify, and restore CAPPref parameters.		
11	Display (Display THReshld), modify, and restore Warn parameters.		
12	Modify an LSM offline, display the LSM, modify the LSM back online. Display LSM status.		
13	Vary a station address offline. Vary the station back online.		
14	Use the TREQDEF, UNITDEF, and VOLDEF commands to load/reload the definition data sets. Then display information about the TREQDEF, UNITDEF, and VOLDEF data sets.		
15	Display the drive status (Display DRives).		
16	Display, modify, and restore COMMPath settings.		

**Table 18. ACS and HSC Functionality Test Procedure (Continued)**

<b>Step</b>	<b>Description of Action</b>	<b>Checkmark to Verify Completion</b>	<b>Person Responsible for Test / Verification</b>
<b>17</b>	Use the OPTion command to change output to uppercase and back to mixed case.		

## HSC Utilities and Basic Commands Test

The HSC must be installed and running to perform the following recommended tests.

### Recommended Test Procedure

Perform the steps listed in Table 19 to test the functionality of HSC utilities and basic operator commands.

When you have completed this test phase, go to “ACS/HSC Detailed Functionality Test Procedure” on page 116 to continue the installation verification process.

**Table 19. HSC Utilities and Basic Commands Test Procedure**

Step	Description of Action	Checkmark to Verify Completion	Person Responsible for Test / Verification
1	Execute the BACKup utility. Verify that the backup of the control data sets was successful.		
2	Execute the RESTore utility. Verify that the restore of the control data sets was successful.		
3	Open the door to an LSM and place cartridges into a panel and row of the LSM. Close the LSM door.  <b>Note:</b> If you enter an SL8500, all LSM activity for the library ceases.  Execute the AUDIt utility for the LSM, panel, and row where the cartridges were placed. Specify APPlY(YES).		
4	Use the Initialize Cartridge utility to initialize several volumes through the CAP.		
5	Execute the Eject command to eject half of the volumes that were entered in the previous step.		
6	Execute the Eject utility to eject the remainder of the volumes that were entered through the CAP.		
7	Use the ENter command to place volumes ejected in the previous two steps back into the LSM.		
8	Use the DRAin command to terminate the ENter function.		

**Table 19. HSC Utilities and Basic Commands Test Procedure (Continued)**

<b>Step</b>	<b>Description of Action</b>	<b>Checkmark to Verify Completion</b>	<b>Person Responsible for Test / Verification</b>
9	<p>Make sure that there is at least one initialized volume in the ACS for each type of drive attached to the ACS (specifically, an STK1 volume for T9840A, T9840B, and T9840C, and T9840D drives; an STK2 volume for T9940A or T9940B drives; a helical volume for SD-3s; an 18-track volume for 4480s; and a 36-track volume for 4490s, 9490s, and 9490EEs; and LTO volume; an SDLT volume; and a T10000A, T10000B, or T10000C volume). These volumes are needed for the SLIEXERS program (see below).</p> <p>If necessary, use the ENter command to enter the required volumes.</p>		
10	Use the SLIEXERS program to automatically exercise each available transport in an ACS. Refer to “SLIEXERS Program” on page 117 for more information.		
11	Execute the VOLRpt utility to produce a volume report.		
12	If your tape management system is CA-1 or CA-DYNAM/TLMS, use the Scratch Conversion utility to generate transactions for the Scratch Update utility.		
13	Execute the SCRATCH utility to scratch designate the cartridges entered in Step 7 as scratch volumes.		
14	Use the Mount, MSP UNLOAD, and DISMount commands to mount and dismount a selected volume.		
15	Use the SET utility to change the Eject password. Use the Eject command to eject a volume. Use the SET utility to change the password back to its original setting.		
16	Use the MOVE command to move some cartridges to a new location.		
17	Use the MOVE utility to move other cartridges to a different panel.		
18	Execute the VOLRpt utility to produce a volume report (again). Examine the entries for the scratch cartridges in the volume report.		
19	If video monitors are attached to an LSM, use the Vlew command to display a cartridge in its cell and in cells in a CAP.		

## Manual Mode Test

The HSC must be installed and running to perform the following recommended tests.

### Recommended Test Procedure

Perform the steps listed in Table 20 to test manual mode operation.

When you have completed this test phase, the installation verification process is completed.

**Table 20. ACS/HSC Detailed Functionality Test Procedure**

Step	Description of Action	Checkmark to Verify Completion	Person Responsible for Test / Verification
1	Modify an LSM from automatic to manual mode. Verify that the LSM switched to the manual mode successfully.		
2	Restore automatic mode from manual mode. Verify that the LSM switched to the Automatic mode successfully.		



## Description of Test Programs

Various test programs are provided to verify performance of the HSC as installed on your system. These programs include:

- SLIVERFY (refer to “SLIVERFY Program” on page 71)
- SLIEXERS
- hardware test programs
- allocation test programs.

The following paragraphs describe the purpose for each program and the functions that the program tests.

### SLIEXERS Program

The SLIEXERS program automatically exercises each available transport in an ACS. The ACS is defined by the PARM parameter of the EXEC statement. It is recommended that SLIEXERS be executed on each host and each ACS combination to verify library installation.

This program must be executed from an APF-authorized library. SLIEXERS dynamically allocates each library transport defined to the executing host. A compatible scratch cartridge is then retrieved from the ACS, mounted on the transport, opened, written to, read from, and closed.

This process is repeated for each transport in the specified ACS. If no scratch tapes of the required media type are available, a WTOR is issued to the operator requesting a scratch cartridge VOLSER.



**Note:** Make sure your TMC is configured to allow a scratch mount by VOLSER.

For SLIEXERS to execute properly, the HSC subsystem must be started. Refer to “Issuing the START Command” on page 102 for detailed information on the START command.

### SLIEXERS DD Parameters

SLIEXERS JCL consists of the following statements:

#### **EXEC statement**

Specify PGM=SLIEXERS.

The PARM parameter specifies one operand: the ID (range 00 to FF) of the ACS to be exercised.

#### **STEPLIB**

The partitioned data set name where the SLIEXERS program resides. This data set must be APF-authorized.

#### **SYSPRINT**

Diagnostic messages.

## Example

### *JCL for SLIEXERS Program*

```
//SLIEXERS job (account),'programmer',CLASS=A
//*
//EXERS      EXEC PGM=SLIEXERS,PARM='00',REGION=4096K
//STEPLIB    DD DSN=your.hsc.linklib,DISP=SHR
//SYSPRINT   DD SYSOUT=*
//*
```

## Chapter 10. Planning Migration to the Library

---

To ensure a successful movement and installation of cartridges into an LSM, a Tri-Optic label verification must be made and the cartridges must be loaded into the library.

### Tri-Optic Label Verification

Verify that the Tri-Optic labels are placed correctly on the cartridge. When the cartridge is positioned so the customer label is on the left while the leader block is pointing up and away from the person verifying the label, a recessed area is visible on the cartridge surface.

The Tri-Optic label should be centered in this area, without any edges extending beyond the recessed area, and the VOLSER characters must be to the left of the bar code. After the Tri-Optic labels have been visually verified, cartridges can be stored in the LSM, and the labels may be read by the machine-vision system.

Refer to Figure 9 on page 120 for an illustration of cartridge with a Tri-Optic label attached.

### ECART External Media Label Requirements

ECART cartridges require a volume serial number (VOLSER) but do not require a media type indicator in their external labels. StorageTek recommends, however, that customers provide a media type indicator for all ECARTs. The media type for ECARTs is “E.” The VOLSER occupies the first six positions of the external label.


### ZCART External Media Label Requirements

Every ZCART cartridge requires both a volume serial number (VOLSER) and a media type indicator in its external label. The VOLSER occupies the first six positions of the external label; the media type indicator occupies the seventh position of the external label. The media type for ZCART cartridges is “Z.”

## Helical External Media Label Requirements

Every helical cartridge requires both a volume serial number (VOLSER) and a media type indicator in its external label. The VOLSER occupies the first six positions of the external label; the media type indicator occupies the seventh position of the external label. The media type for helical cartridges must be one of the following:

- A (10 GB)
- B (25 GB)
- C (50 GB)
- D (cleaning cartridge).

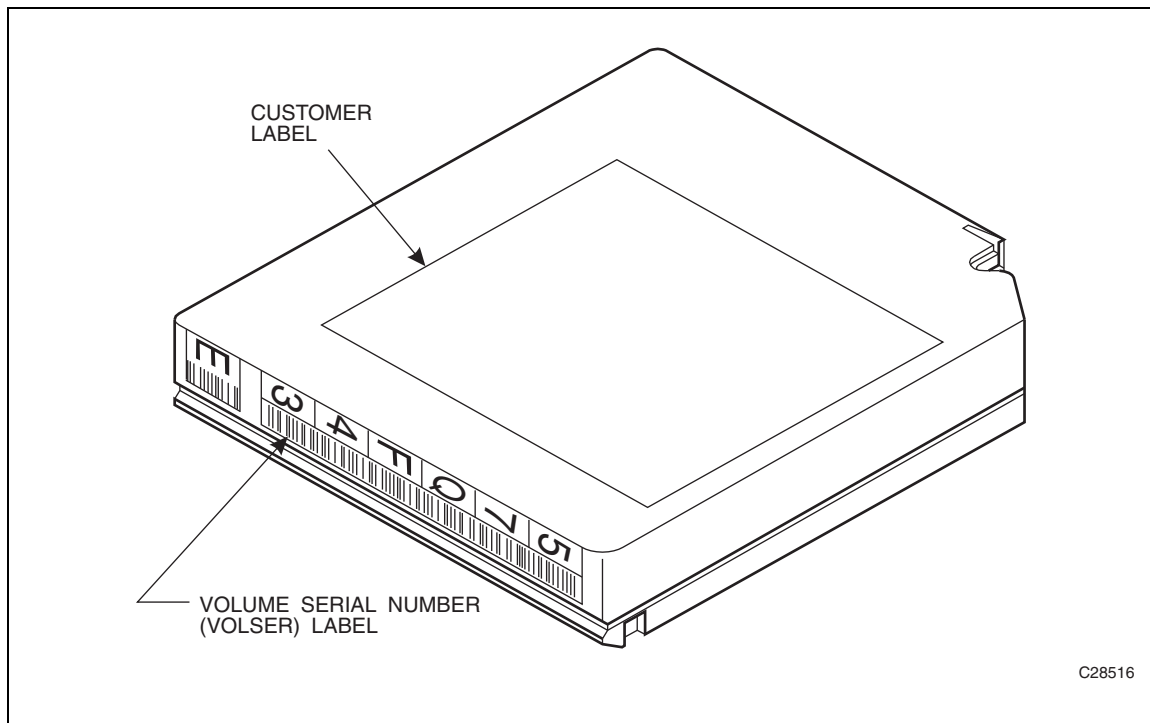

*Figure 9. Cartridge with Tri-Optic label and ECART Media Type Indicator*

## STK1 (T9840A, T9840B, T9840C, or T9840D) External Media Label Requirements

Every STK1 cartridge requires both a volume serial number (VOLSER) and a media type indicator in its external label. The VOLSER occupies the first six positions of the external label; the media type indicator occupies the seventh position of the external label. The media type for STK1 cartridges must be one of the following:

- R
- U (cleaning cartridge – T9840A, B, and C)
- Y (cleaning cartridge – T9840D).

## **STK2 (T9940A or T9940B) External Media Label Requirements**

Every STK2 cartridge requires both a volume serial number (VOLSER) and a media type indicator in its external label. The VOLSER occupies the first six positions of the external label; the media type indicator occupies the seventh position of the external label. The media type for STK2 cartridges must be one of the following:

- P
- W (cleaning cartridge).

## LTO, SDLT, T10000 External Media Label and Media Domain Requirements

Every LTO, SDLT, and T10000 cartridge requires a volume serial number (VOLSER) in its external label. The VOLSER occupies the first six positions of the external label.

In addition, because the LTO, SDLT, and T10000 cartridges apply to non-legacy media types, media domains are supported in the HSC as a means to separate a logical collection of differing media into distinct pools known as a domain.

The media domain is shown as part of the external label and is affixed to the outside of the cartridge following the volume serial label. This information is returned to the host as part of an LMU catalog response. Physical move requests for all volumes require a media domain to be supplied as part of the LMU request initiated by the controlling software. Failure to provide the correct domain results in the LMU failing the request.

All legacy StorageTek media (e.g., ECARTs) belong to domain “0”; non-legacy media belong to other domains as defined in Table 21.

**Table 21. Non-legacy Media Type/Domain Definitions**

Media Name	Media Domain	Media Type
LTO-10G	'L'	'C'
LTO-35G	'L'	'B'
LTO-50G	'L'	'A'
LTO-100G	'L'	'1'
LTO-200G	'L'	'2'
LTO-400G	'L'	'3'
LTO-400W	'L'	'T'
LTO-800G	'L'	'4'
LTO-800W	'L'	'U'
LTO-1.5T	'L'	5
LTO-1.5W	'L'	V
LTO-CLN1	'C'	'1'
LTO-CLN2	'C'	'2'
LTO-CLNU	'C'	'U'
SDLT	'1'	'S'
SDLT-2	'1'	'2'
SDLT-S1	'S'	'1'
SDLT-S2	'S'	'2'
SDLT-S3	'S'	'3'

**Table 21. Non-legacy Media Type/Domain Definitions**

Media Name	Media Domain	Media Type
SDLT-S4	'S'	'4'
SDLT-4	'1'	'4'
T10000T1	'T'	'1'
T10000TS	'T'	'S'
T10000CT	'C'	'T'
T10000T2	'T'	'2'
T10000TT	'T'	'T'
T10000CL	'C'	'L'

## Loading Cartridges into the Library

There are several ways to load cartridges into the library during initial installation of the system:

- Use the ENter command to load initialized cartridges into the LSM.
- Manually load initialized cartridges into LSM and invoke the AUDIt utility.
- Use the Initialize Cartridge utility to enter cartridges through the CAP.
- Use an auto-mode CAP to load cartridges into an LSM without using HSC commands or utilities.
- Manually load and run JSGINITT.

### ENter Command

The ENter command is used to move cartridges from the CAP to the LSM and to record the location data in the primary control data set. The operator types the ENter command at the system console; the CAP is then available for inserting cartridges. The operator can insert one or more cartridges into the LSM via the CAP (when free cells exist) placing them under library control. The HSC selects a storage cell location for the cartridge at the time of entry.



**Note:** When a cartridge is entered, if the vision system does not detect a media label, the cartridge is entered and the media type defaults to Standard. If the media label is unreadable, a message is displayed prompting the operator to supply a valid media type or eject the cartridge. VOLATTR information is not used during ENter processing.

The CAP remains in enter mode until the console operator terminates enter processing by issuing the DRAIn command.

Scratch volumes can also be placed into the LSM by specifying the SCRatch parameter for the ENter command. The scratch status of volumes previously entered into the LSM may be changed using the SCRatch Update utility.

### Manually Loading Cartridges into LSM

Cartridges may be loaded into LSM cell storage locations by opening the LSM door and manually placing them into the cells.



**Note:** If you enter an SL8500, all LSM activity for the library ceases.

Refer to the appropriate hardware operator's guide for the location of reserved cells. Once the LSM has been filled with cartridges, the AUDIt utility may be invoked to update the control data set with physical volume location information. The SCRatch Update function may be executed to update scratch status for these volumes, if required. Refer to "Overview of Library Utilities" in the *HSC/MSP System Programmer's Guide* for a description of library utilities.



**Note:** Before loading the LSM, verify that the cartridges have Tri-Optic labels. Cartridges without Tri-Optic labels are ejected by the AUDIt utility.



## Initialize Cartridge Utility

The Initialize Cartridge utility permits batch entry of cartridges into the library through the CAP and the writing of magnetic labels for those cartridges. This program reads the external Tri-Optic labels and records them in the data set defined through the CNTLDD parameter. When there are no more cartridges to be labeled, and the empty CAP has been opened and closed, cartridge initialization begins. For additional information, refer to “Initialize Cartridge (INITialize) Utility” in the *HSC/MSP System Programmer’s Guide*.

## Using an Auto-mode CAP to Load Cartridges

An automatic mode CAP (referred to as an auto-mode CAP), allows cartridges to be entered into an LSM without using HSC commands or utilities. Any CAP can be placed in automatic mode, which unlocks the CAP making it available for entering cartridges.



**Note:** An auto-mode CAP may be locked temporarily while another process is using it for enter/eject processing.

When cartridges are entered into an LSM through an auto-mode CAP, the AUDit utility is run automatically. Refer to the *HSC/MSP Operator’s Guide* for more information about using an auto-mode CAP.

## Migrating Applications to Library Use

StorageTek recommends using TAPEREQ statements to direct new scratch allocations to the library. Alternatively, user exits can be used.

Refer to the *SMC Configuration and Administration Guide* for information on TAPEREQ control statements and to the *NCS User Exit Guide* for information on user exits.



## Appendix A. Library Configuration Checklist

---

The following checklist can be used to ensure that all necessary steps for installing HSC software are complete.

**Table 22. Library Configuration Checklist**

Step	Description of Action	Checkmark to Verify Completion	Person Responsible for Test / Verification
<b>Planning the Configuration</b>			
1	Verify the physical plan, including floor space, power, environmental considerations.		
2	Verify that the operating system release level is at the proper level.		
3	If your installation utilizes application programs that will interface with the HSC, verify that custom routines have been considered and that program routines conform to the requirements specified in "Programmatic Interface", in the <i>HSC/MSP System Programmer's Guide</i> .		
4	Verify that LSM/pass-thru port relationships are properly defined.		
5	Verify that MSP and LIBGEN esoterics are defined.		
6	Verify that DASD space is planned and sufficient to accommodate library data sets.		
7	Determine which control data sets and journals will be allocated and the locations on DASD.		
8	Determine which control data sets are shared data sets; ensure that space calculations are completed.		
<b>Performing Pre-execution Tasks</b>			
9	Code and catalog the HSC started task procedure.		
10	IPL the system.		
<b>Defining the Library Configuration (LIBGEN)</b>			
11	Prepare the library configuration (LIBGEN file).		
12	Assemble and link-edit the LIBGEN file.		

**Table 22. Library Configuration Checklist (Continued)**

Step	Description of Action	Checkmark to Verify Completion	Person Responsible for Test / Verification
<b>Verifying the Library Generation</b>			
13	Execute SLIVERFY program to verify the library configuration created by the LIBGEN file.		
<b>Initializing the Control Data Sets</b>			
14	Create JCL to initialize the library control data sets.		
15	Execute SLICREAT program to initialize the data sets.		
16	Verify completion of SLICREAT program.		
17	Verify the storage capacity of the LSMs in the installation.		
18	Execute the BACKup utility.		
<b>Defining Definition Data Sets and PARMLIB Control Statements</b>			
19	Define TAPEREQ, UNITATTR, and VOLATTR control statements. <b>Note:</b> TAPEREQs and UNITATTRs are now defined and processed by the SMC. Refer to the <i>SMC Configuration and Administration Guide</i> for more information.		
20	Define PARMLIB control statements applicable for your installation:  Control data set definition Journal data set definition Device allocation CAP preference Communications path definition EXECparm definition Mount processing control General purpose OPTions Scratch subpool definitions User exit execution control TREQDEF, UNITDEF, VOLDEF definition.		
<b>Starting HSC Execution</b>			
21	Start the SMC software. Refer to the <i>SMC Configuration and Administration Guide</i> for more information about starting the SMC.  <b>Note:</b> In previous releases, the SMC was required to be initialized before the HSC and to be running on the same host as the HSC. This is no longer true. However, if the HSC is brought up without SMC, the HSC acts as a server only and cannot perform allocations or device preferencing.		

**Table 22. Library Configuration Checklist (Continued)**

<b>Step</b>	<b>Description of Action</b>	<b>Checkmark to Verify Completion</b>	<b>Person Responsible for Test / Verification</b>
22	Start the HSC software. Determine and verify if system IPL is required and performed.		
23	Modify LSMs and CAPs online.		
<b>Testing the Installation (Recommended Testing)</b>			
24	Perform each group of recommended test procedures. Verify completion of each test by completing the applicable test form contained in that section.		
<b>Planning and Executing Cartridge Migration into the Library</b>			
25	Verify that Tri-Optic labels are correctly placed on each cartridge.		
26	Load cartridges into the library.		



## Appendix B. Library Configurations

---

This appendix contains examples of library configurations that can be used as models for analyzing how you can configure your library and future expansion. Example LIBGEN files corresponding to each configuration are also provided.

### Example Configuration with LIBGEN Files

Examples provided include the following:

- one host, one ACS, one SL3000 library configuration
- one host, two ACSs, one 9310 PowderHorn LSM, one SL8500 library configuration
- one host, one ACS, one 9310 LSM, one 9360-075 WolfCreek LSM configuration
- one host, one ACS, one 9360-050 LSM, one 9360-100 LSM configuration
- one host, one ACS, one 9310 LSM, dual LMU configuration
- two host, one ACS, two 9310 LSM configuration.



**Note:** For two host configurations, it is absolutely necessary that host IDs be included in the LIBGEN for each host having access to the library CDS. An example is:

```
SLIBLIBRY ...  
HOSTID=(HSC1,HSC2)
```

Be aware that the HSC does not distinguish the type of host; that is, production or test machine.

The source code for the example LIBGENs shown in this appendix are included in the SAMPLIB as members LIBGENnn, where nn is the corresponding LIBGEN example number.

# One Host, One ACS, One SL3000 Library Configuration

## Hardware Components

This configuration consists of the following components:

- one host (EC20)
- one ACS (ACS00)
- library transport esoteric (TACS0) for ACS00
- one SL3000 standalone library containing one LSM (LSM000).

Figure 11 on page 133 illustrates a sample layout.


## LIBGEN

An example LIBGEN for this configuration is shown in Figure 10.

```
LIBGEN  SLIRCVRY  TCHNIQ=SHADOW
*
      SLILIBRY  SMF=245,
      ACSLIST=ACSLIST,
      FUTRACS=(3,12),
      HOSTID=(EC20),
      DELDISP=SCRTCH,
      MAJNAME=TESTING,
      CLNPRFX=CLN,
      COMPRFX=-,
      SCRLABL=SL
*
ACSLIST  SLIALIST  ACS00
*
ACS00    SLIACS  ACSDRV=(TACS0,TACS0,TACS0,TACS0),
          STATION=(ST000,ST000,ST000,ST000),
          LSM=(LSM000)
*
ST000    SLISTATN  ADDRESS=(00CC,00CD)
*
LSM000    SLILSM  TYPE=3000
*
      SLIENDGN ,
```

**Figure 10. LIBGEN for One Host, One ACS, One SL3000 Library Configuration**



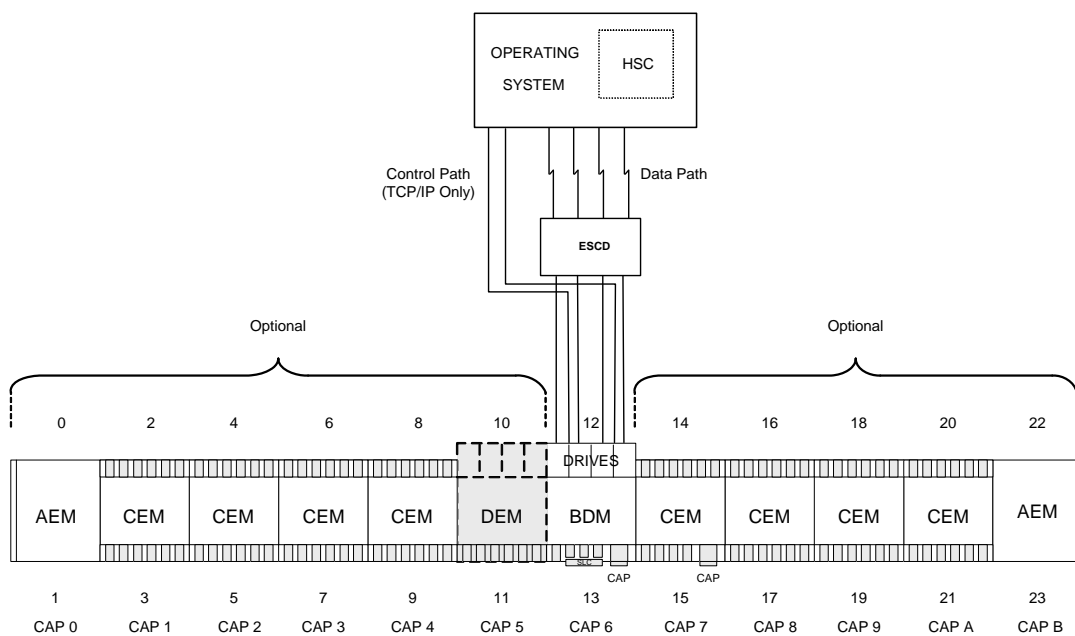

**Figure 11. One Host, One ACS, One SL3000 Library Configuration**

# One Host, Two ACSs, One 9310 LSM, One SL8500 Library Configuration

## Hardware Components

This configuration consists of the following components:

- one host (HSC1)
- manual transport esoteric (CARTAPE)
- two ACSs (ACS00 and ACS01)
- library transport esoteric (CTAPE) for ACS00
- one 9310 LSM with:
  - four cartridge drive panels (P000001, P000002, P000009, P000010) and an enhanced CAP
  - two station addresses (0A0,0A1)
  - sixteen transports (410-417 and 510-517)
- one SL8500 standalone library containing four LSMs (LSM0100, LSM0101, LSM0102, LSM0103) with:
  - four cartridge drive panels (P010001, P010101, P010201, P010301)
  - two station addresses (00CC, 00CD)
  - eight transports (9400-9407).

Figure 13 on page 138 illustrates the current layout for this configuration.

## LIBGEN01

An example LIBGEN for this configuration is shown in Figure 12 on page 135.

```

*      Label definitions:
*
*      ACS      - 'ACSxx'   where 'xx' is the ACS number in printable hex.
*      LSM      - 'LSMxxyy' where 'xx' is the ACS number in printable hex, and 'yy'
*                        is the LSM number within the ACS in printable hex.
*      STATION - 'STxxh'   where 'xx' is the ACS number in printable hex, and 'h'
*                        is the host index in printable hex.
*      PANEL   - 'Pxxypp'  where 'xx' is the ACS number in printable hex, 'yy' is
*                        the LSM number in printable hex, and 'pp' is the panel
*                        number in decimal.
*      DRIVE    - 'Dxxypph' where 'xx' is the ACS number in printable hex, 'yy' is
*                        the LSM number in printable hex, 'pp' is the panel
*                        number in printable hex, and 'h' is the host index in
*                        printable hex.
*****

LIBGEN01 SLIRCVRY  TCHNIQ=BOTB
*
*      SLILIBRY HOSTID=HSC1,                      X
*      SMF=235,                                    X
*      COMPRFX=#,                                  X
*      ACSLIST=NAMEACS,                            X
*      MAJNAME=STKALSN,                            X
*      SCRLABL=SL,                                  X
*      EJCTPAS=GOODAY,                              X
*      CLNPRFX=CLN,                                  X
*
NAMEACS  SLIALIST  ACS00,ACS01
*
ACS00    SLIACS    ACSDRV=CTAPE,                    X
*      STATION=ST000,                                X
*      LSM=(LSM0000)
*
ST000    SLISTATN  ADDRESS=(0A0,0A1)
*
LSM0000  SLILSM    DRIVE=(1,2,9,10),                X
*      DRVELST=(P000001,P000002,P000009,P000010),    X
*      TYPE=9310,                                    X
*      DOOR=ECAP
*
P000001  SLIDLIST  HOSTDRV=D0000010
*
D0000010 SLIDRIVS  ADDRESS=(410,411,412,413)
*
P000002  SLIDLIST  HOSTDRV=D0000020
*
D0000020 SLIDRIVS  ADDRESS=(414,415,416,417)
*
P000009  SLIDLIST  HOSTDRV=D0000090
*
D0000090 SLIDRIVS  ADDRESS=(510,511,512,513)
*

```

**Figure 12. LIBGEN for One Host, Two ACSs, One 9310 LSM, One SL8500 Library Configuration (1 of 3)**

```

P000010 SLIDLIST HOSTDRV=D0000100
*
D0000100 SLIDRIVS ADDRESS=(514,515,516,517)
*
ACS01     SLIACS ACSDRV=(SL8500,SL8500),           X
           FUTURLSM=(SL8500,16),                   X
           LSM=(LSM0100,LSM0101,LSM0102,LSM0103)
*
LSM0100   SLILSM PASTHRU=((1,M),(2,M),(3,M)),       X
           ADJACNT=(LSM0101,LSM0102,LSM0103),       X
           DRIVE=(1),                                X
           DRVELST=(P010001),                        X
           TYPE=8500,                                X
           DOOR=8500-1
*
P010001   SLIDLIST HOSTDRV=(D0100010,D0100011)
*
D0100010  SLIDRIVS ADDRESS=(,,9400,,,9401,,,,,,)
D0100011  SLIDRIVS ADDRESS=(,,9400,,,9401,,,,,,)
*
LSM0101   SLILSM PASTHRU=((0,S),(2,M),(3,M)),       X
           ADJACNT=(LSM0100,LSM0102,LSM0103),       X
           DRIVE=(1),                                X
           DRVELST=(P010101),                        X
           TYPE=8500,                                X
           DOOR=8500-1
*
P010101   SLIDLIST HOSTDRV=(D0101010,D0101011)
*
D0101010  SLIDRIVS ADDRESS=(,,,,,,,,9402,,,9403)
D0101011  SLIDRIVS ADDRESS=(,,,,,,,,9402,,,9403)
*
LSM0102   SLILSM PASTHRU=((0,S),(1,S),(3,M)),       X
           ADJACNT=(LSM0100,LSM0101,LSM0103),       X
           DRIVE=(1),                                X
           DRVELST=(P010201),                        X
           TYPE=8500,                                X
           DOOR=8500-1
*
P010201   SLIDLIST HOSTDRV=(D0102010,D0102011)
*
D0102010  SLIDRIVS ADDRESS=(,,,,,,,,9406,,,9407)
D0102011  SLIDRIVS ADDRESS=(,,,,,,,,9406,,,9407)
*

```

**Figure 12. LIBGEN for One Host, Two ACSs, One 9310 LSM, One SL8500 Library Configuration (2 of 3)**


```

LSM0103  SLILSM PASTHRU=((0,S),(1,S),(2,S)),          X
          ADJACNT=(LSM0100,LSM0101,LSM0102),          X
          DRIVE=(1),                                   X
          DRVELST=(P010301),
          TYPE=8500,                                   X
          DOOR=8500-1

*
P010301  SLIDLIST HOSTDRV=(D0103010,D0103011)
*
D0103010 SLIDRIVS ADDRESS=(,,,9404,,,9405,,,,,,,,)
D0103011 SLIDRIVS ADDRESS=(,,,9404,,,9405,,,,,,,,)
*
*
          SLIENDGN

```

**Figure 12. LIBGEN for One Host, Two ACSs, One 9310 LSM, One SL8500 Library Configuration (3 of 3)**

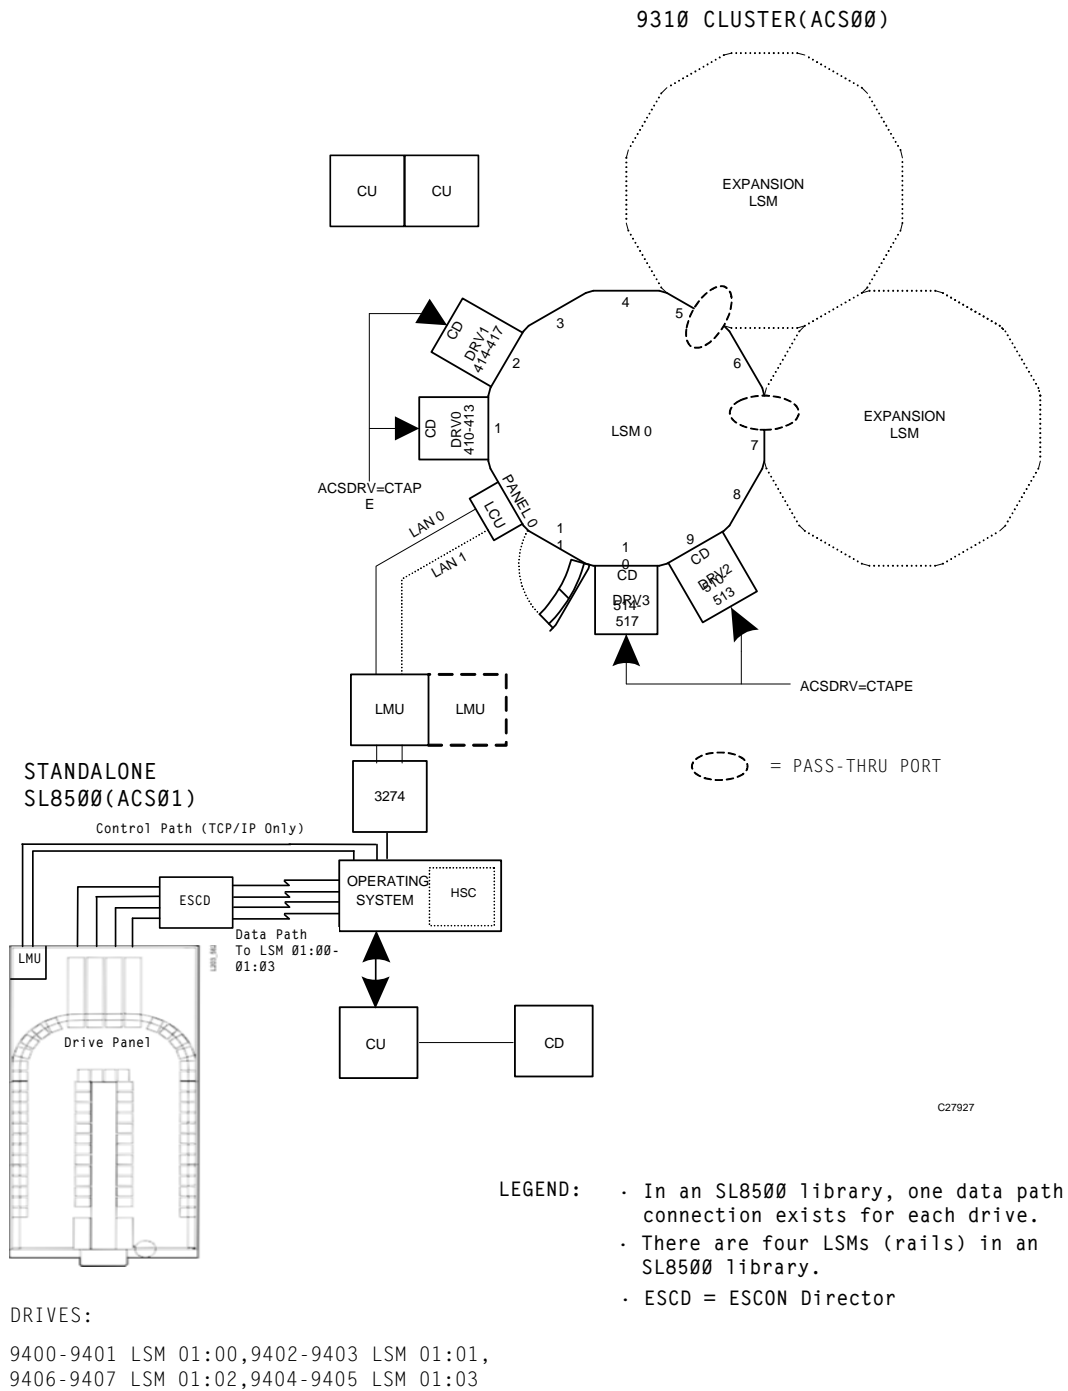

**Figure 13. One Host, Two ACSs, One 9310 LSM, One SL8500 Library Configuration**

# One Host, One ACS, One 9310, One 9360 LSM Configuration

## Hardware Components

This configuration consists of the following components:

- one host (HSC1)
- manual transport esoteric (CARTAPE)
- one Automated Cartridge System (ACS00)
- library transport esoterics (CTAPEA) for ACS00
- Library Storage Modules
  - one 9310 LSM designated as LSM0000 with four cartridge drive panels (1,2,9,10) and a standard 21-cell CAP
  - one 9360-075 WolfCreek LSM designated as LSM01 with two cartridge drive panels (1 and 3) and a 20-cell WolfCreek CAP
- two station addresses (0A0,0A1)
- twenty-four tape transports (410-417, 510-517, 610-617).

Figure 18 on page 148 illustrates the layout for this configuration.

## LIBGEN02

An example LIBGEN for this configuration is shown in Figure 14 on page 140.

```

*      Label definitions:
*
*      ACS      - 'ACSxx'   where 'xx' is the ACS number in printable hex.
*      LSM      - 'LSMxxyy' where 'xx' is the ACS number in printable hex, and 'yy'
*                        is the LSM number within the ACS in printable hex.
*      STATION  - 'STxxh'   where 'xx' is the ACS number in printable hex, and 'h'
*                        is the host index in printable hex.
*      PANEL    - 'Pxxyypp' where 'xx' is the ACS number in printable hex, 'yy' is
*                        the LSM number in printable hex, and 'pp' is the panel
*                        number in decimal.
*      DRIVE    - 'Dxxyypph' where 'xx' is the ACS number in printable hex, 'yy' is
*                        the LSM number in printable hex, 'pp' is the panel
*                        number in printable hex, and 'h' is the host index in
*                        printable hex.
*****

LIBGEN02 SLIRCVRY  TCHNIQE=SHADOW
*
*      SLILIBRY HOSTID=HSC1,                      X
*      SMF=235,                                    X
*      COMPRFX=#,                                  X
*      ACSLIST=NAMEACS,                            X
*      MAJNAME=STKALSQN,                           X
*      SCRLABL=SL,                                  X
*      EJCTPAS=GOODAY,                              X
*      CLNPRFX=CLN,                                 X
*
NAMEACS  SLIALIST  ACS00
*
ACS00    SLIACS    ACSDRV=(CTAPEA),                X
*      STATION=STN000,                              X
*      LSM=(LSM0000,LSM0001)
*
STN000   SLISTATN  ADDRESS=(0A0,0A1)
*
LSM0000  SLILSM    DRIVE=(1,2,9,10),              X
*      DRVELST=(P000001,P000002,P000009,P000010),  X
*      PASTHRU=((5,S)),                             X
*      ADJACNT=(LSM1),                              X
*      TYPE=9310,                                    X
*      DOOR=STD
*
P000001  SLIDLIST  HOSTDRV=D0000000
*
D0000000 SLIDRIVS  ADDRESS=(410,411,412,413)
*
P000002  SLIDLIST  HOSTDRV=D0000010
*
D0000010 SLIDRIVS  ADDRESS=(414,415,416,417)

```

**Figure 14. LIBGEN for One Host, One ACS, One 9310 LSM, One 9360 LSM Configuration  
(1 of 2)**




```

P000009  SLIDLIST  HOSTDRV=D0000020
*
D0000020 SLIDRIVS  ADDRESS=(510,511,512,513)
*
P000010  SLIDLIST  HOSTDRV=D0000030
*
D0000030 SLIDRIVS  ADDRESS=(514,515,516,517)
*
LSM0001  SLILSM    DRIVE=(1,3),                      X
                DRVELST=(P000101,P000103),            X
                PASTHRU=((0,M)),                      X
                ADJACNT=(LSM0),                       X
                TYPE=9360-075,                         X
                DOOR=WC1
*
P000101  SLIDLIST  HOSTDRV=D0000040
*
D0000040 SLIDRIVS  ADDRESS=(610,611,612,613)
*
P000103  SLIDLIST  HOSTDRV=D0000050
*
D0000050      SLIDRIVS  ADDRESS=(614,615,616,617)
*
                SLIENDGN

```

**Figure 14. LIBGEN for One Host, One ACS, One 9310 LSM, One 9360 LSM Configuration (2 of 2)**

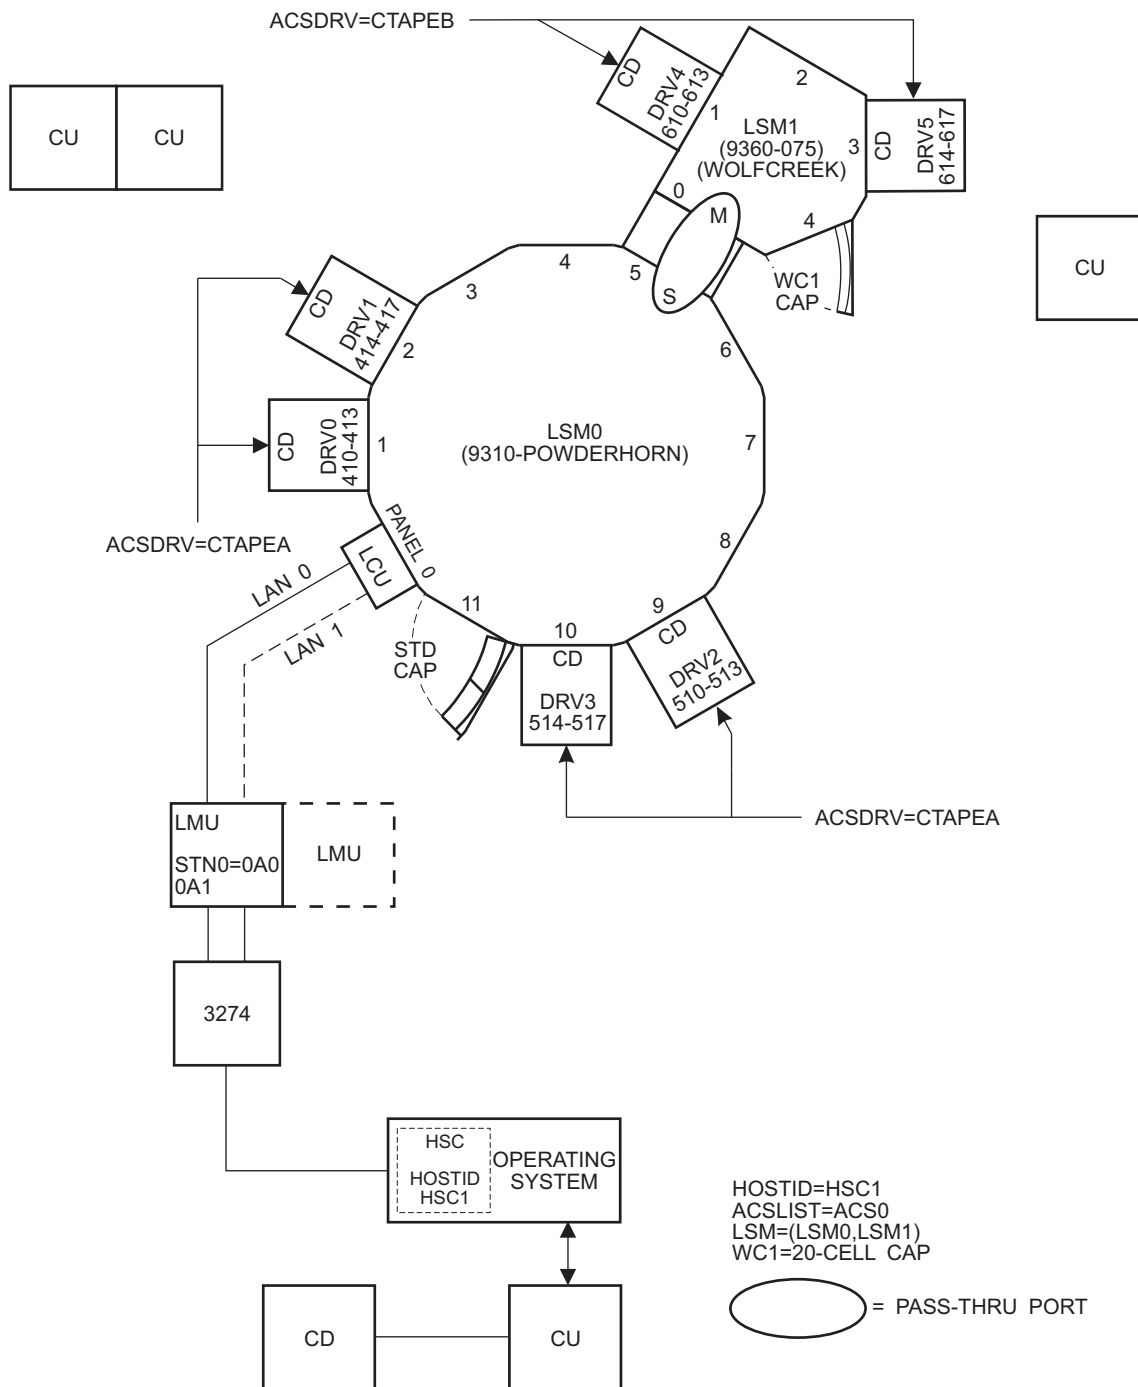

C27967

**Figure 15. One Host, One ACS, One 9310 LSM, One 9360 LSM Configuration**

# One Host, One ACS, Two 9360 WolfCreek LSM Configuration

## Hardware Components

This configuration consists of the following components:

- one host (HSC1)
- manual transport esoteric (CARTAPE)
- one Automated Cartridge System (ACS00)
- library transport esoterics (CTAPEA) for ACS00
- Library Storage Modules
  - one 9360-050 WolfCreek LSM designated as LSM0000 with two cartridge drive panels (1,3) and a 20-cell CAP
  - one 9360-100 WolfCreek LSM designated as LSM0001 with two cartridge drive panels (1,3) and an optional 30-cell WolfCreek CAP
- two station addresses (0A0,0A1)

Figure 17 on page 146 illustrates the layout for this configuration.

## LIBGEN03

An example LIBGEN for this configuration is shown in Figure 16 on page 144.

```

*      Label definitions:
*
*      ACS      - 'ACSxx'   where 'xx' is the ACS number in printable hex.
*      LSM      - 'LSMxxyy' where 'xx' is the ACS number in printable hex, and 'yy'
*                        is the LSM number within the ACS in printable hex.
*      STATION  - 'STxxh'   where 'xx' is the ACS number in printable hex, and 'h'
*                        is the host index in printable hex.
*      PANEL    - 'Pxxypp'  where 'xx' is the ACS number in printable hex, 'yy' is
*                        the LSM number in printable hex, and 'pp' is the panel
*                        number in decimal.
*      DRIVE    - 'Dxxypph' where 'xx' is the ACS number in printable hex, 'yy' is
*                        the LSM number in printable hex, 'pp' is the panel
*                        number in printable hex, and 'h' is the host index in
*                        printable hex.
*****
LIBGEN03 SLIRCVRY  TCHNIQE=SHADOW
*
      SLILIBRY HOSTID=HSC1,                      X
      SMF=235,                                   X
      COMPRFX=#,                                 X
      ACSLIST=NAMEACS,                           X
      MAJNAME=STKALSQN,                           X
      SCRLABL=SL,                                 X
      EJCTPAS=GOODAY,                             X
      CLNPRFX=CLN,                               X
*
NAMEACS  SLIALIST  ACS00
*
ACS00    SLIACS   ACSDRV=(CTAPEA),                X
          STATION=ST000,                           X
          LSM=(LSM0000,LSM0001)
*
ST000    SLISTATN ADDRESS=(0A0,0A1)
*
LSM0000  SLILSM   DRIVE=(1,3),                    X
          DRVELST=(P000001,P000003),                X
          PASTHRU=((2,S)),                           X
          ADJACNT=(LSM0001),                         X
          TYPE=9360-050,                             X
          DOOR=WC1

```

**Figure 16. LIBGEN for One Host, One ACS, Two 9360 LSM Configuration  
(1 of 2)**

```

*
P000001  SLIDLIST  HOSTDRV=D0000000
D0000000 SLIDRIVS  ADDRESS=(310,311,312,313)
P000003  SLIDLIST  HOSTDRV=D0000010
D0000010 SLIDRIVS  ADDRESS=(410,411,412,413)
*
LSM0001   SLILSM    DRIVE=(1,3),                      X
              DRVELST=(P000101,P000103),                X
              PASTHRU=((0,M)),                            X
              ADJACNT=(LSM0000),                          X
              TYPE=9360-100,                               X
              DOOR=WC2
*
P000101  SLIDLIST  HOSTDRV=D0000020
D0000020 SLIDRIVS  ADDRESS=(510,511,512,513)
P000103  SLIDLIST  HOSTDRV=D0000030
D0000030 SLIDRIVS  ADDRESS=(610,,612,)
*
          SLIENDGN

```

**Figure 16. LIBGEN for One Host, One ACS, Two 9360 LSM Configuration (2 of 2)**



## One Host, One ACS, One 9310 LSM, Dual LMU Configuration

### Hardware Components

This configuration consists of the following components:

- one host (HSC1)
- manual transport esoteric (CARTAPE)
- one Automated Cartridge System (ACS00) Library transport esoteric (CTAPE) for ACS00
- one 9310 Library Storage Module (LSM0000)
- four station addresses (0A0,0A1,0C0,0C1)
- four cartridge drive panels (1,2,9,10)
- sixteen transports (410-417 and 510-517).

Figure 19 on page 149 illustrates the layout for this configuration.

### LIBGEN04

An example LIBGEN for this configuration is shown in Figure 18 on page 148.

```

*      Label definitions:
*
*      ACS      - 'ACSxx'      where 'xx' is the ACS number in printable hex.
*      LSM      - 'LSMxxyy'    where 'xx' is the ACS number in printable hex, and 'yy'
*                               is the LSM number within the ACS in printable hex.
*      STATION   - 'STxxh'      where 'xx' is the ACS number in printable hex, and 'h'
*                               is the host index in printable hex.
*      PANEL     - 'Pxxyypp'    where 'xx' is the ACS number in printable hex, 'yy' is
*                               the LSM number in printable hex, and 'pp' is the panel
*                               number in decimal.
*      DRIVE     - 'Dxxyypph'   where 'xx' is the ACS number in printable hex, 'yy' is
*                               the LSM number in printable hex, 'pp' is the panel
*                               number in printable hex, and 'h' is the host index in
*                               printable hex.
*****
LIBGEN04 SLIRCVRY  TCHNIQE=BOTH
*
      SLILIBRY HOSTID=HSC1,                      X
      SMF=235,                                    X
      COMPRFX=#,                                  X
      ACSLIST=NAMEACS,                            X
      MAJNAME=STKALSQN,                           X
      SCRLABL=SL,                                  X
      EJCTPAS=GOODDAY,                             X
      CLNPRFX=CLN,                                 X
*
NAMEACS  SLIALIST  ACS00
*
ACS00    SLIACS    ACSDRV=CTAPE,                  X
          STATION=ST000,                          X
          LSM=(LSM0000)
*
ST000    SLISTATN  ADDRESS=(0A0,0A1,0C0,0C1)
*
LSM0000  SLILSM    DRIVE=(1,2,9,10),              X
          DRVELST=(P000001,P000002,P000009,P000010), X
          TYPE=9310,                              X
          DOOR=STD
*
P000001  SLIDLIST  HOSTDRV=D0000000
D0000000 SLIDRIVS  ADDRESS=(410,411,412,413)
P000002  SLIDLIST  HOSTDRV=D0000010
D0000010 SLIDRIVS  ADDRESS=(414,415,416,417)
P000009  SLIDLIST  HOSTDRV=D0000020
D0000020 SLIDRIVS  ADDRESS=(510,511,512,513)
P000010  SLIDLIST  HOSTDRV=D0000030
D0000030 SLIDRIVS  ADDRESS=(514,515,516,517)
*
      SLIENDGN

```

**Figure 18. LIBGEN for One Host, One ACS, One 9310 LSM, Dual LMU Configuration**





Rev. 02, February 2012

## Two Host, One ACS, Two 9310 LSM Configuration

### Hardware Components

This configuration consists of the following components:

- two hosts (HSC1,HSC2)
- two manual transport esoterics (CARTAPEA,CARTAPEB)
- one Automated Cartridge System (ACS00)
- two library transport esoterics (CTAPEA,CTAPEB) for ACS01
- Library Storage Modules
  - one 9310 LSM designated as LSM0000 with four cartridge drive panels (1,2,9,10) and a standard CAP.
  - one 9310 LSM designated as LSM0001 with four cartridge drive panels (7,8,9,10) and an enhanced CAP
- four station addresses (0A0,0A1,0A2,0A3)
- thirty-two transports (410-41F and 510-51F).

Figure 21 on page 153 illustrates the current layout for this configuration.

### LIBGEN05

An example LIBGEN for this configuration is shown in Figure 20 on page 151.

```

*      Label definitions:
*
*      ACS      - 'ACSxx'   where 'xx' is the ACS number in printable hex.
*      LSM      - 'LSMxxyy' where 'xx' is the ACS number in printable hex, and 'yy'
*                        is the LSM number within the ACS in printable hex.
*      STATION  - 'STxxh'   where 'xx' is the ACS number in printable hex, and 'h'
*                        is the host index in printable hex.
*      PANEL    - 'Pxxyypp' where 'xx' is the ACS number in printable hex, 'yy' is
*                        the LSM number in printable hex, and 'pp' is the panel
*                        number in decimal.
*      DRIVE    - 'Dxxyypph' where 'xx' is the ACS number in printable hex, 'yy' is
*                        the LSM number in printable hex, 'pp' is the panel
*                        number in printable hex, and 'h' is the host index in
*                        printable hex.
*****

LIBGEN05 SLIRCVRY TCHNIQE=SHADOW
*
      SLILIBRY SMF=235,                                X
      HOSTID=(HSC1,HSC2),                                X
      ACSLIST=NAMEACS,                                    X
      MAJNAME=STKALSQN,                                    X
      COMPRFX=#,                                          X
      SCRLABL=SL,                                          X
      EJCTPAS=GOODDAY,                                    X
      CLNPRFX=CLN,                                        X
*
NAMEACS SLIALIST ACS00
*
ACS00 SLIACS ACSDRV=(CTAPEA,CTAPEB),                    X
      STATION=(ST000,ST001),                              X
      LSM=(LSM0000,LSM0001)
*
ST000 SLISTATN ADDRESS=(0A0,0A1)
ST001 SLISTATN ADDRESS=(0A2,0A3)
*
LSM0000 SLILSM DRIVE=(1,2,9,10),                        X
      DRVELST=(P0000001,P0000002,P0000009,P0000010),    X
      PASTHRU=((5,M)),                                    X
      ADJACNT=(LSM0001),                                  X
      TYPE=9310,                                          X
      DOOR=STD
*
P0000001 SLIDLIST HOSTDRV=(D0000000,D0000000)
D0000000 SLIDRIVS ADDRESS=(410,411,412,413)
P0000002 SLIDLIST HOSTDRV=(D0000010,D0000010)
D0000010 SLIDRIVS ADDRESS=(414,415,416,417)
P0000009 SLIDLIST HOSTDRV=(D0000020,D0000020)
D0000020 SLIDRIVS ADDRESS=(418,419,41A,41B)
P0000010 SLIDLIST HOSTDRV=(D0000030,D0000030)
D0000030 SLIDRIVS ADDRESS=(41C,41D,41E,41F)
*

```

**Figure 20. LIBGEN for Two Host, One ACS, Two 9310 LSM Configuration  
(1 of 2)**

```

LSM0001    SLILSM    DRIVE=(7,8,9,10),                X
              DRVELST=(P000107,P000108,P000109,P000110),  X
              PASTHRU=((5,S)),                          X
              ADJACNT=(LSM0000),                        X
              TYPE=9310,                                X
              DOOR=ECAP
*
P000107    SLIDLIST  HOSTDRV=(D0000040,D0000040)
D0000040    SLIDRIVS  ADDRESS=(510,511,512,513)
P000108    SLIDLIST  HOSTDRV=(D0000050,D0000050)
D0000050    SLIDRIVS  ADDRESS=(514,515,516,517)
P000109    SLIDLIST  HOSTDRV=(D0000060,D0000060)
D0000060    SLIDRIVS  ADDRESS=(518,519,51A,51B)
P000110    SLIDLIST  HOSTDRV=(D0000070,D0000070)
D0000070    SLIDRIVS  ADDRESS=(51C,51D,51E,51F)
*
              SLIENDGN

```

**Figure 20. LIBGEN for Two Host, One ACS, Two 9310 LSM Configuration  
(2 of 2)**



Rev. 02, February 2012



## Appendix C. Commands, Macros, Control Statements, and Utilities Syntax Conventions

---

### Syntax Elements

Syntax is illustrated using flow diagrams. These can include the following components:

- syntax – the diagram itself
- items – individual elements inside the diagram. Items can be keywords, variables, delimiters, operators, fragment references, and separators
- groups – a collection of items or other groups

### Command Elements

Commands are composed of command names, keyword parameters, and positional parameters. Command names initiate command execution, keyword parameters are operands that contain keywords and their related values, and positional parameters are operands that are identified by their position in the command string rather than by keywords.

- keyword parameters can be specified in any order. The HSC accepts (tolerates) multiple occurrences of a keyword. The value assigned to a keyword reflects the last occurrence of a keyword within a command.
- positional parameters must be entered in the order shown in the syntax diagram.
- uppercase letters indicate the minimum abbreviation for the command name, keyword, or positional parameter.

## Library Identification

Each ACS, LSM, and CAP is assigned a unique identification number during LIBGEN. Use this number in HSC commands and utilities when identifying a specific ACSid, LSMid, or CAPid.

- ACSid (*acs-id*) is a hexadecimal value from 00 through FF that identifies the LMU. An *acs-id* is the result of defining the SLIALIST macro during a LIBGEN. See “LIBGEN Macros” on page 28 for information about the SLIALIST macro. The first ACS listed in this macro acquires a hexadecimal identifier of 00, the second ACS listed acquires a hexadecimal identifier of 01, and so forth until all ACSs are identified.
- An LSM number (*ll*) is a hexadecimal value from 00 through 17. It differentiates an LSM from every other LSM connected to the same LMU.

An LSM number is the result of defining the SLIACS macro LSM parameter. See “LIBGEN Macros” on page 28 for information about the SLIACS macro. The first LSM listed for an ACS acquires a hexadecimal number of 00, the second LSM listed for an ACS acquires a hexadecimal number of 01, and so forth.

- An LSMid (*lsm-id*) is made up of the ACSid and the LSM number separated by a colon (:). It differentiates an LSM from every other LSM in a library.
- A CAP number is a hexadecimal value from 00 to 02 for all existing libraries, except for SL3000 libraries. The CAP number for an SL3000 is a hexadecimal value from 00 to 0B. The CAP number identifies a specific CAP in an LSM that has more than one CAP.
- A CAPid (*cap-id*) is a hexadecimal value made up of the LSMid and the CAP number separated by a colon.

Some HSC commands and utilities require, or optionally allow, the user to specify a host identifier or a VOLSER.

- The *host-id* for a given host is the identifier specified in the HOSTID parameter of the SLILIBRY macro in the LIBGEN, the SMF system identifier for JES. Valid characters for a HOSTID are A-Z, 0-9, #, \$, and @.
- A VOLSER (*volser*) identifies a volume serial number consisting of one to six characters. Valid characters are A-Z, 0-9, # (crosshatch), \$, ¥ (yen character), and optional trailing blanks. Leading blanks are not allowed.



## Ranges and Lists

HSC commands and utilities often allow the user to specify ranges and lists of elements.

1. An inclusive range is indicated by a pair of elements of the same length and data type, joined by a dash. The first element must be strictly less than the second element.
  - A hexadecimal range consists of a pair of hexadecimal numbers (for example, 0A2-0AD, or 000-0FC).
  - A decimal range consists of a pair of decimal numbers (for example, 1-9, or 010-094). Leading zeros are not required.
  - A numeric VOLSER range (*vol-range*) consists of a pair of VOLSER elements containing a decimal numeric portion of 1 to 6 digits (for example, ABC012-ABC025, or X123CB-X277CB). The decimal portion is referred to as an incremental range. The following additional restrictions apply:
    - The character positions of the incremental portion of both range elements must match.
    - The non-incremental characters of the first element must be identical to those of the second element.
    - You cannot increment two portions of a range element. If 111AAA is the first element, you cannot specify 112AAB for the second element.
    - If a VOLSER range contains more than one decimal portion, any portion is valid as the incremental range. For example:

**A00B00**      the largest range that can be specified is A00B00 through A99B99.

**A0B0CC**      the largest range that can be specified is A0B0CC through A9B9CC.

**000XXX**      the largest range that can be specified is 000XXX through 999XXX.



**Note:** A VOLSER range for most operator commands is limited to 100 entries. If a larger range is entered, only the first 100 VOLSERs in the range are acted on. If HSC utilities are used, the entire range is processed.

- An alphabetic VOLSER range (*vol-range*) consists of a pair of VOLSER elements containing an incremental portion of 1 to 6 characters (for example, 000AAA-000ZZZ, or 9AAA55-9ZZZ55). This portion is referred to as an incremental range. The following additional restrictions apply:
  - The character positions of the incremental portion of both range elements must match.
  - The non-incremental characters of the first element must be identical to those of the second element.

- You cannot increment two portions of a range element. If 111AAA is the first element, you cannot specify 112AAB for the second element.
- The alphabetic portion of the VOLSER range is defined as being from character A to Z. To increment multi-character sequences, each character increments to Z. For instance, ACZ is part of the AAA-AMM range. Examples are:

**A00A0-A99A0** increments VOLSERs A00A0 through A09A0, then A10A0 through A99A0.

**9AA9A-9ZZ9A** increments VOLSERs 9AA9A through 9AZ9A, then 9BA9A through 9ZZ9A.

**111AAA-111ZZZ** increments VOLSERs 111AAA through 111AAZ, then 111ABA through 111ZZZ.

**999AM8-999CM8** increments VOLSERs 999AM8 through 999AZ8, then 999BA8 through 999CM8

**A3BZZ9-A3CDE9** increments VOLSERs A3BZZ9 through A3CAA9, then A3CAB9 through A3CDE9

**AAAAAA-AAACCC** increments VOLSERs AAAAAA through AAAAAZ, then AAAABA through AAACCC

**CCCNNN-DDDNNN** increments VOLSERs CCCNNN through CCCNNZ, then CCCNOA through DDDNNN\*

\* **Caution:** This is a very large range.

The number of volumes in an alphabetic VOLSER range depends on the number of elements in the incrementing portion of the VOLSER range. For an A to Z range in each character position, the number of volumes can be calculated by 26 to the power of the number of positions that are being incremented.

<b>A-Z</b>	$26^1$	26
<b>AA-ZZ</b>	$26^2$	676
<b>AAA-ZZZ</b>	$26^3$	17,576
<b>AAAA-ZZZZ</b>	$26^4$	456,976
<b>AAAAA-ZZZZZ</b>	$26^5$	11,881,376
<b>AAAAAA-ZZZZZZ</b>	$26^6$	308,915,776



**Note:** For most operator commands, a VOLSER range is limited to 100 entries. If a large range is entered, only the first 100 VOLSERs are acted upon. If HSC utilities are used, the entire range is processed.

2. A list consists of one or more elements. If more than one element is specified, the elements must be separated by a comma or a blank, and the entire list enclosed in parentheses.
  - For some HSC operator commands, an element may consist of a single item or a range. Refer to the individual command explanations for valid list entries.
  - In general, HSC utilities do not allow ranges to be specified in a list. The exception to this is a VOLSER list (vol-list) which does allow ranges to be specified.

For VOLATTR control statements, you can use wildcard characters (% , ? , or \*) to identify a list of VOLSERS.

## Control Statement Syntax Conventions

The control statement for each utility program consists of a command (indicating the utility function) followed by parameters, as applicable, in 80-character card-image records. The standard syntax conventions for control statements are as follows:

- The only valid control statement information area is from column 2 to column 72. Columns 73-80 are ignored.
- Parameters are separated by one or more blanks or a comma.
- A value is associated with a parameter by an equal sign (=) or by enclosing the value in parentheses, and concatenating it immediately after the parameter.
- Case (upper or lower) is ignored in actual control statements.
- Control statements may be interspersed with comments designated by an asterisk (\*) in column one.

For definition data sets (VOLATTRs, UNITATTRs and TAPEREQs) comments must be in the new format (/\*...\*/). Asterisk (\*) comments are not allowed. A /\*...\*/ comment in the first line is not required for definition data sets.

- A control statement is terminated if the statement is not continued. Control statements must have a /\*...\*/ comment as the first control statement in the PARMLIB member. A PARMLIB member that does not begin with a /\*...\*/ style comment is assumed to be in the old format. Comments in old format members must begin with an asterisk in column 1.

In contrast to utility control statements, PARMLIB control statements may begin in column 1. Columns 73-80 are ignored.

To allow for continuation, comments in the job stream must start with /\* and end with \*/. Comments cannot be nested, and mixing the two comment styles (\* and /\*) is not allowed.

- The 80-character card-image records use conventional continuation rules.
  - A space and a dash (-) following a parameter or parameter value indicates that a blank is to be inserted between the last nonblank character of this line and the first nonblank character of the next nonblank record.
  - A plus sign (+) specifies that the continued control information is to be concatenated directly after the character preceding the plus sign. The continued data starts at column two of the next nonblank record.



**Note:** You can use a continuation only after a new keyword or after the natural end of a value. Some examples follow.

The following examples illustrate continuations used correctly:

```
SCRPOOL NAME=STD36,RANGE+  
(AAA000-AAA999,ZZZ000-ZZZ999)
```

```
SCRPOOL NAME=STD36,RANGE(AAA000-AAA999,-  
ZZZ000-ZZZ999)
```

The following example illustrates a continuation used incorrectly:

```
SCRPOOL NAME=STD36,RANGE(AAA000-AAA999,ZZZ+  
000-ZZZ999)
```

- Users must enter a nonblank character in column 72 (e.g., an X).
- PARMLIB control statements can be continued using the preceding continuation rules only if they are new format control statements.
- The maximum length of a control statement is 32,767 characters.
- The maximum length of a command (used as a command or in PARMLIB) is 126 characters.



## Appendix D. Migration and Coexistence Processes

---

This appendix describes the requirements and procedures for migrating HSC software from Releases 6.0 and 6.1 to Release 6.2 (up-level migration), and, if required, from Release 6.2 to Releases 6.1 or 6.0 (down-level migration). It is very important that all guidelines, procedures, and cautions be followed. Successful migration depends on following the requirements and instructions described here.

In addition, library hardware and software requirements are discussed that must be considered before attempting to migrate between HSC releases.

This appendix also details the conditions for coexistence of different HSC releases in a multiple-host environment. Coexistence occurs when HSC 6.0 or 6.1, *and* HSC 6.2 are installed and executing on separate hosts sharing the same library complex and CDS.



### Notes:

- A 2.1-level CDS format can run with HSC 6.0, 6.1, and HSC 6.2, however, a 6.0-level CDS is built automatically if you specify an SL8500 library in the SLILSM macro, and a 6.1-level CDS is created automatically if you enter the FUTURLSM parameter in the SLIACS macro.
- In HSC 6.0, 6.1, and 6.2, the HSC lets you convert the CDS to extended format to support future enhancements to the Virtual Tape Control System (VTCS). After you convert the CDS to extended format, **you cannot run VTCS 5.1 or earlier versions** against the converted CDS.

Refer to the VTCS documentation for additional information about converting the CDS to extended format.

## Overview of Migration and Coexistence

As discussed in this appendix, migration is the process of upgrading from a previous release of the HSC (i.e., 6.0 or 6.1) to HSC 6.2. Migration may also involve moving back to the previous release and returning to a production environment.

Coexistence applies only to a multiple-host environment and is intended to be an interim step in the migration process, where different hosts temporarily run different HSC releases (i.e., 6.0, 6.1, and 6.2) and share a control data set. This appendix describes the requirements and restrictions for operating in a coexistence environment.



## HSC Migration Scenarios

The following migration scenarios are possible:

- Up-level:
  - HSC 6.0 to HSC 6.2
  - HSC 6.1 to HSC 6.2.
- Down-level:
  - HSC 6.2 to HSC 6.1
  - HSC 6.2 to HSC 6.0.

Migration should be performed by system programmers responsible for installing and maintaining HSC software. System programmers must be knowledgeable and experienced in topics discussed in the *HSC System Programmer's Guide*.

### Software Support

For questions regarding migration, contact StorageTek Software Support for assistance.

## HSC Coexistence Scenarios

In multiple-host configurations, HSC 6.0 and 6.1 can coexist with HSC 6.2.

Each HSC release provides new functions that were not present in previous releases. For this reason, any coexistence environment must be carefully managed to take advantage of new functions and to make sure that the HSC control data set accurately reflects library contents.

## HSC Installation Scenarios

Two installation scenarios are described in this appendix:

- installing HSC in a verification environment before installing it in your production environment
- installing HSC directly into your production environment.

### Installation in a Verification Environment

Installing 6.2 into a verification environment in your data center involves installing 6.2 onto a verification system during off-hours or off-peak times. This approach has distinct advantages:

- It allows system programmers, application programmers, operators, and system users to become thoroughly familiar with 6.2 functions and operation before it is placed on production systems. Comparison of new to previous functions enables your personnel to better understand the enhancements provided by this release.
- For more information about 6.2 functions, refer to “What’s New With This Release?” on page xv.
- It allows you to validate the environmental specifics of your library complex. These can include unique conditions and implementation of user exits, designation of scratch subpools, allocation, and other specific operation processes.
- It allows you to update one host (subsystem) at a time instead of immediately migrating the entire library complex.

This appendix describes procedures to migrate from HSC 6.0 or 6.1 to HSC 6.2 using a verification system. Refer to “Procedure to Verify HSC 6.2 Functions Against a Separate CDS” on page 174 for more information. Also included are procedures for temporarily terminating HSC 6.0 or 6.1; initiating a 6.2 verification subsystem; terminating the 6.2 subsystem; and returning back to your 6.0 or 6.1 system for production operations.

## Direct Installation into a Production Environment

For data centers installing 6.2 directly into a production environment, the contents of this appendix is extremely important. For successful installation, the procedures described should be followed carefully.

### Migration and Coexistence Considerations

The following guidelines apply to migration and coexistence involving HSC 6.0 or 6.1.

#### Migration

- No new LMU microcode is required for HSC 6.2 if you are migrating from HSC 6.0 or 6.1.
- Programs using the programmatic interface (PGMI) do not need to be recompiled for HSC 6.2.
- You are not required to re-assemble your user exits. If you choose to do so, StorageTek suggests that user modifications to user exits and other StorageTek-supplied programs be based on the source code shipped in the current release.

#### Coexistence PTFs

Coexistence PTFs to HSC 6.0 and 6.1 allow HSC 6.0, 6.1, and 6.2 to run on multiple hosts sharing the same CDS. Refer to the *NCS Read Me First* document to see a list of the 6.2 compatibility PTFs.

HSC 6.2 uses the same level CDS (2.1) as HSC 6.0 and 6.1, unless an SL8500 library has been specified in the SLILSM macro. In this case, a 6.0-level CDS is automatically built. The HSC creates a 6.1-level CDS if the FUTURLSM parameter is set on the SLIACS LIBGEN macro.

Refer to “Control Data Set and Journal Requirements” on page 171 for more detailed information.



#### Notes:

- HSC 6.0, 6.1, and 6.2 will not initialize if any ACS is defined that does not include attached stations.
- HSC 5.1 can be active in the same host complex with HSC 6.0, 6.1, and 6.2, as long as compatibility PTFs have been installed.
- Coexistence PTFs to HSC 5.1, 6.0, and 6.1 do not allow dynamic hardware reconfiguration changes on a 6.2 system if the downlevel hosts are active. In this case, the downlevel hosts must be terminated until the changes are completed. They can then be restarted, and the CDS is updated at initialization to reflect the changes.

## Coexistence

- Utilities that require HSC services must match the HSC release level. That is, a 6.0 utility must run with an active 6.0 subsystem, a 6.1 utility must run with an active 6.1 subsystem, and so forth. See “Utility Usage Requirements” on page 172 for additional information.
- Some stand-alone utilities (not requiring an active HSC) are dependent on the CDS level. HSC 6.0, 6.1, and 6.2 stand-alone utilities are used with a CDS in 2.1 format, **unless an SL8500 library has been specified on the SLILSM macro (6.0-level CDS) or the FUTURLSM parameter has been entered on the SLIACS macro (6.1-level CDS)**. Stand-alone utilities can be run from all of these releases. Refer to “Utility Usage Requirements” on page 172 for additional information.
- **If you run Database Decompile using HSC 6.2 load libraries, you must run the LIBGEN using HSC 6.2 load libraries.**

## Hardware Support Dependencies Between HSC Releases

Library hardware support varies depending on the release level and composition of the library. Table 23 on page 169 lists the supported functionality for major library hardware components under 6.0, 6.1, and 6.2 subsystems.

**Table 23. HSC Library Hardware Dependencies**

Hardware Component	HSC 6.0	HSC 6.1	HSC 6.2
4410 (Standard) LSM	Supported	Supported	Supported
9310 (PowderHorn) LSM	Supported	Supported	Supported
9360 (WolfCreek) LSM	Supported	Supported	Supported
9740 (TimberWolf) LSM	Supported	Supported	Supported
SL8500 (StreamLine)	Supported	Supported	Supported
SL3000 (StreamLine)	Not Supported	Supported	
4430 LMU	Supported for non-9840	Supported for non-9840	Supported for non-9840
9315 LMU	Supported	Supported	Supported
9330 LMU	Supported	Supported	Supported
4480 (18-track) Cartridge Subsystem	Supported	Supported	Supported
4490 (36-track) Cartridge Subsystem	Supported	Supported	Supported
9490 (36-track) Cartridge Subsystem	Supported	Supported	Supported
9490EE (36-track) Cartridge Subsystem	Supported	Supported	Supported
9840 Cartridge Subsystem	Supported	Supported	Supported
T9840B Cartridge Subsystem	Supported	Supported	Supported
T9840C Cartridge Subsystem	Supported	Supported	Supported
T9940A Cartridge Subsystem	Supported	Supported	Supported
T9940B Cartridge Subsystem	Supported	Supported	Supported
Virtual Tape Storage Subsystem	Supported	Supported	Supported

## **HSC Support for Virtual Media**

Only Virtual media can be mounted on Virtual Tape Drives. Refer to the VTCS documentation for more information.

## Control Data Set and Journal Requirements

The format of the HSC control data set is identified by the “CDS level.”

For HSC 6.0, 6.1, and 6.2, the CDS level defaults to 2.1, unless 6.0 load libraries are used and an SL8500 library is specified in the SLILSM macro. In this case, the SLICREAT program used to create the control data sets automatically builds a 6.0-level CDS. SLICREAT automatically builds a 6.1-level CDS if 6.2 load libraries are used.



### Notes:

- It is possible to remove LSMs from the SL8500 configuration without performing a LIBGEN, MERGEcds, and recycle of the HSC. However, **this operation requires assistance from StorageTek.**
- If you intend to add drives, run the SET SLIDRIVS utility to allow the HSC to recognize drive locations and associated UCB addresses and to ensure the CDS reflects the new tape drive configuration. Refer to the SET SLIDRIVS utility in the *HSC System Programmer's Guide*.

**Caution:** StorageTek recommends that you do not run CDS-related commands and utilities while dynamic hardware changes are being implemented.

Refer to the *HSC Operator's Guide*, “HSC Support for Near Continuous Operation (NCO)” for important procedural information, requirements, and warnings.

The CDS level is contained in the CDS and may be seen using the Display CDS command or by browsing the CDS. If you browse the CDS, the level is found in the first record (DHB) at columns 1725-1730 or in the second record (DPV) at columns 45-50. The CDS level is a 6-character field, 020100 for a 2.1-level CDS.

Expert Library Manager (ExLM) 3.0 and later runs with a 2.1 CDS. ExLM 2.1 requires PTF(s) to work with a 2.1 CDS.

## Backup Requirements

Use the HSC 6.0 or 6.1 BACKup utility before migrating, and the HSC 6.2 BACKup utility after migrating.

## CDS Conversion Requirements (Up-Level Migration)

No CDS conversion is required to migrate from HSC 6.0 or 6.1 to 6.2.

## CDS Conversion Requirements (Down-Level Migration)

No CDS conversion is required to migrate from HSC 6.2 to HSC 6.0 or 6.1.

## MERGEcds Utility

The MERGEcds utility can merge volume and configuration information from a 2.1 CDS to a 6.0-level CDS or from a 6.0-level CDS to a 2.1 CDS.

## Utility Usage Requirements

Whenever you are migrating between HSC releases or operating in a coexistence environment, correct usage of utilities is extremely important. HSC utilities are categorized as follows:

- stand-alone utilities, which do not require HSC services. These utilities can execute with or without an active HSC subsystem.

Some stand-alone utilities function only with the corresponding CDS level; 6.0, 6.1, and 6.2 stand-alone utilities are used with a 2.1 CDS, unless an SL8500 library has been specified in the SLILSM macro. In this case, a 6.0-level CDS is built automatically. If the FUTURLSM parameter is entered on the SLIACS macro, a 6.1-level CDS is created automatically.

- utilities requiring HSC services. These utilities are dependent on the release level of the HSC

### Compatibility of Stand-Alone Utilities

The following stand-alone utilities are not dependent on the HSC release or CDS level:

- Activities Report
- Journal Offload
- Performance Log Reblocker
- Scratch Conversion (SLUCONDB), unless LIBONLY is specified as an option.

### Compatibility of Utilities Requiring the HSC Subsystem

Utilities requiring the services of an active HSC are dependent on the release level of the HSC. For example, a 6.2 utility requiring an active HSC must execute against an active HSC 6.2 subsystem.

In this circumstance, the general rule is that the release level of the utility's execution library should match the release level of the current HSC subsystem for that host. That is, a 6.2 utility must execute with a 6.2 subsystem, a 6.1 utility must execute with a 6.1 subsystem, and so forth.

If a 6.2 utility is executed with a 6.0 or 6.1 subsystem, an error message describing the incompatibility is displayed on the system console and the utility terminates. The following HSC utilities require HSC services:

- AUDIt
- EJECT
- INITialize Cartridge
- MERGEcds
- MOVE
- SCRAtch, UNSCRatch, REPLaceall
- Scratch Conversion (SLUCONDB) with the LIBONLY parameter
- Scratch Redistribution (SCREdist)
- UNSElect.



## Up-Level Migration

Up-level migration to 6.2 should be performed by a system programmer who is familiar with the HSC product. Before attempting to perform an up-level migration, verify the release level of the current HSC subsystem and make sure that the migration being attempted is supported (see “HSC Migration Scenarios” on page 165).

### Procedure for 6.0/6.1 to 6.2 Up-Level Migration

The step-by-step procedure presented in Table 24 is a summary of the required steps to migrate HSC software from 6.0 or 6.1 to 6.2.

This procedure is a recommended approach and is not considered to be the only method to migrate successfully. Each site may have specific conditions that require special precautions and procedures. If you think your site requires additional assistance, contact StorageTek Software Support for assistance.

**Table 24. Procedure for 6.0/6.1 to 6.2 Up-Level Migration**

Step	Description of Action	Verification
1	Apply the coexistence PTFs on all 6.0 or 6.1 hosts (see the <i>NCS Installation Guide</i> for information and the <i>NCS/VTCS Read Me First</i> document for a list of the 6.2 PTFs).	
2	Identify the host(s) being migrated to 6.2. All active hosts must be running HSC 6.0 or 6.1 with the 6.2 coexistence PTF(s) applied.	
3	Install HSC 6.2. See the <i>NCS Installation Guide</i> for detailed information.	
4	Initialize HSC 6.2 on any host to be migrated. See Chapter 7, “Initializing the HSC” for more information.	
5	Exercise any or all 6.2 functions including enter, eject, automating mounts, and utilities.	

### Host-by-host Migration - 6.0/6.1 to 6.2

If desired, users can migrate from 6.0 or 6.1 to 6.2 on a host-by-host basis without having to terminate the HSC on all hosts. HSC 6.0 or 6.1 hosts, with the 6.2 coexistence PTF(s) applied, will run with a 6.2 host initialized. The CDS does not need to be converted.

## Procedure to Verify HSC 6.2 Functions Against a Separate CDS

This procedure permits you to perform initial 6.2 verification against a separate CDS before migrating the production CDS. Your initial verification of 6.2 should exercise the HSC 6.2 utilities that must be executed with a CDS in 2.1 format. Specifically, the 6.2 BACKup, 6.2 RESTore, and 6.2 SET utilities should be executed against the 2.1 CDS.

Execute 6.2 functions using the following procedures:

- verifying 6.2 functions at the Base service level (without library hardware). Refer to “Procedure to Verify HSC 6.2 Functions Without Library Hardware” on page 175 for detailed steps.
- verifying 6.2 functions at the Full service level (with library hardware). Refer to “Procedure to Verify 6.2 Functions With Library Hardware” on page 177 for detailed steps.

After the initial verification is successfully completed, you can perform more extensive investigation of 6.2 on a subsystem sharing a common 6.0-level CDS with other hosts.

## Procedure to Verify HSC 6.2 Functions Without Library Hardware

Table 25 describes the procedure to verify HSC 6.2 with the HSC initialized to the Base service level and without access to library hardware. You can perform this type of verification in parallel with your production systems executing against the library hardware. The 6.2 functions that require library hardware cannot be exercised, but many functions can be.

**Table 25. Procedure to Verify 6.2 Functions without Library Hardware**

Step	Description of Action	Verification
1	Create a separate 2.1 CDS by doing the following: <ul style="list-style-type: none"><li>• Run the 6.2 BACKup utility.</li><li>• Run the 6.2 RESTore utility.</li></ul> For more information on these two utilities, refer to the <i>HSC System Programmer's Guide</i> .	
2	Verify the following 6.2 stand-alone utilities that do not require HSC services. <ul style="list-style-type: none"><li>• BACKup</li><li>• RESTore</li><li>• SET</li></ul> Verify remaining 6.2 stand-alone utilities: <ul style="list-style-type: none"><li>• ACTivities report</li><li>• Database Decompile</li><li>• Journal OFFLoad (of 6.2 journals)</li><li>• Scratch Conversion</li><li>• VOLRpt</li></ul>	

**Table 25. Procedure to Verify 6.2 Functions without Library Hardware (Continued)**

Step	Description of Action	Verification
3	<p>Start the SMC subsystem. Refer to the <i>SMC Configuration and Administration Guide</i> for more information about starting the SMC.</p> <p><b>Note:</b> In previous releases, the SMC was required to be initialized before the HSC and to be running on the same host as the HSC. In HSC 6.2, this is no longer true. However, if the HSC is brought up without SMC, the HSC acts as a server only and cannot perform allocations or device preferencing.</p> <p>Initialize an HSC 6.2 subsystem to the Base service level (specify an EXEC PARM of BASE in the startup PROC):</p> <p>Exercise the following HSC operator commands.</p> <ul style="list-style-type: none"> <li>• CDs</li> <li>• COMMPath</li> <li>• Display <ul style="list-style-type: none"> <li>– Display SCRatch</li> <li>– Display THReshld</li> <li>– Display UNITDEF</li> <li>– Display Volume</li> </ul> </li> <li>• OPTion</li> <li>• UEXIT</li> </ul> <p>Verify the following utilities that require HSC services:</p> <ul style="list-style-type: none"> <li>• SCRatch</li> <li>• UNSCratch</li> <li>• UNSElect</li> </ul> <p>Verify the MERGEcds utility, from a 2.1-level (6.0) CDS to a 2.1-level (6.0) CDS.</p>	

## Procedure to Verify 6.2 Functions With Library Hardware



**Caution:** HSC subsystems using the production CDS must not be active during these periods because HSCs running with separate CDSs cannot share the same library hardware.

The steps necessary to validate 6.2 functions with the library hardware are shown in Table 26.

**Table 26. Procedure to Verify 6.2 Functions with Library Hardware**

Step	Description of Action	Verification
1	<ul style="list-style-type: none"><li>• Terminate all HSC subsystems using the shared 2.1 CDS.</li><li>• Back up the 2.1 CDS using a 6.2 BACKUp utility.</li><li>• Restore the backup of the 2.1 CDS to a separate data set using the 6.2 RESTore utility.</li></ul>	
2	<ul style="list-style-type: none"><li>• Initialize 6.2 subsystem(s) to the Full service level. Full service level is the default.</li><li>• Set float off (MNTD Float Off) via PARMLIB or the operator command.</li></ul>	
3	Enter test cartridges specifically used for performing the verifications identified in this procedure. <b>Note:</b> Verification should be done only with separate test cartridges, so the location of cartridges recorded in the production CDS will not change.	
4	Exercise any or all 6.2 functions, including enter, eject, automating mounts, and utilities.	
5	Eject all cartridges used for 6.2 verification. This makes sure that the locations of cartridges recorded in the production CDS match the contents of the library.	
6	Terminate the HSC subsystems that were exercised against the library hardware.	
7	If desired, execute a 6.2 BACKUp OPTion(Analyze) to compare the contents of the 2.1 CDS used above and the production CDS that was used to create the test CDS. The production CDS has not changed. The Discrepancy Report from the BACKUp utility should not show any VOLSER or cell location discrepancies, as only test volumes were used in the above process. These test volumes were entered at the beginning and ejected at the end of the verification process.	
8	Initialize all production subsystems using the shared production CDS. Your library environment is back to its former configuration.	

## Down-Level Migration

The step-by-step procedures presented in this section are a summary of the required steps to migrate HSC software from 6.2 to 6.0 or 6.1.

### De-installation of PTFs

It is not necessary, or advisable, to remove the HSC coexistence PTFs from 6.0, 6.1, or 6.2 subsystems.

### Procedure for 6.2 to 6.0/6.1 Down-Level Migration

Follow the steps listed in Table 27 to perform a down-level migration from 6.2 to 6.0 or 6.1.

**Table 27. Procedure for 6.2 to 6.0/6.1 Down-Level Migration**

Step	Description of Action	Verification
1	If compatibility and coexistence PTFs have been applied to hosts running 6.0, 6.1, or 6.2, do not remove them.	
2	Terminate the HSC on all hosts.	
3	Initialize HSC 6.0, 6.1, or 6.2 with tape activity suspended.	

# Glossary

---

Terms are defined as they are used in the text. If you cannot find a term here, check the index.

## A

**AC**— Alternating current.

**access method**— A technique for moving data between processor storage and I/O devices.

**ACS**— *See* Automated Cartridge System.

**ACSid**— An ACSid (*acs-id*) is a hexadecimal value from 00 through FF that identifies the LMU. An ACSid is the result of defining the SLIALIST macro during the library generation (LIBGEN) process. The first ACS listed in this macro acquires a hexadecimal identifier of 00, the second acquires a hexadecimal identifier of 01, and so forth, until all ACSs are identified.

**allocation**— The selection of a cartridge drive, either inside the library or outside (by the SMC software for SMC allocation, or MVS for MVS allocation without the HSC).

**APF**— Authorized Program Facility.

**APPL**— VTAM APPLID definition for the HSC.

**archiving**— The storage of backup files and associated journals, usually for a given period of time.

**Automated Cartridge System (ACS)**— The library subsystem consisting of one or two LMUs, and from 1 to 16 attached LSMs.

**automated library**— *See* library.

**automatic mode**— A relationship between an LSM and all attached hosts. LSMs operating in automatic mode handle cartridges without operator

intervention. This is the normal operating mode of an LSM that has been modified online.

## B

**basic direct access method (BDAM)**— An access method used to directly retrieve or update particular blocks of a data set on a direct access device.

**basic sequential access method (BSAM)**— An access method for storing and retrieving data blocks in a continuous sequence, using either a sequential access or direct access device.

**BDAM**— *See* Basic direct access method.

**beginning-of-tape (BOT)**— The location on a tape where written data begins.

**block**— A collection of contiguous records recorded as a unit. Blocks are separated by interblock gaps, and each block may contain one or more records.

**BOT**— *See* beginning-of-tape.

**BSAM**— *See* Basic Sequential Access Method.

**buffer**— A routine or storage used to compensate for a difference in rate of data flow, or time of occurrence of events, when transferring data from one device to another.

## C

**CA-1 (TMS)**— Computer Associates Tape Management

**System**— Third-party software by Computer Associates International, Inc.

**CAP**— *See* Cartridge Access Port.

**capacity**— *See* media capacity.

**CAPid**— A CAPid uniquely defines the location of a CAP by the LSM on which it resides. A CAPid is of the form *AAL:CC* where *AA* is the ACSid, *L* is the LSM number, and *CC* is the CAP number. Some commands and utilities permit an abbreviated CAPid format of *AAL*.

**cartridge**— The plastic housing around the tape. It is approximately 4 inches (100 mm) by 5 inches (125 mm) by 1 inch (25 mm). The tape is threaded automatically when loaded in a transport. A plastic leader block is attached to the tape for automatic threading. The spine of the cartridge contains a Tri-Optic label listing the VOLSER.

**Cartridge Access Port (CAP)**— An assembly which allows an operator to enter and eject cartridges during automated operations. The CAP is located on the access door of an LSM.

*See also* standard CAP, enhanced CAP, priority CAP, WolfCreek CAP, WolfCreek optional CAP, or TimberWolf CAP.

**Cartridge Drive (CD)**— A device containing two or four cartridge transports with associated power and pneumatic supplies.

**Cartridge Scratch Loader**— An optional feature for the Cartridge Drive. It allows the automatic loading of premounted tape cartridges or the manual loading of single tape cartridges.

**cartridge system tape**— Also known as a Standard tape. The basic tape cartridge media that can be used with 4480, 4490, or 9490 Cartridge Subsystems. They are visually identified by a one-color cartridge case.

**CAW**— *See* Channel Address Word.

**CD**— *See* Cartridge Drive.

**CDRM**— Cross Domain Resource Manager definition (if not using existing CDRMs).

**CDRSC**— Cross Domain Resource definition.

**CDS**— *See* control data set.

**CE**— Channel End.

**CEL**— Customer Emulation Lab. cell. A storage slot in the LSM that is used to store a tape cartridge.

**Central Support Remote Center (CSRC)**— *See* Remote Diagnostics Center.

**CFT**— Customer Field Test.

**channel**— A device that connects the host and main storage with the input and output control units.

**Channel Address Word (CAW)**— An area in storage that specifies the location in main storage where a channel program begins.

**channel command**— A command received by a CU from a channel.

**Channel Status Word (CSW)**— An area in storage that provides information about the termination of I/O operations.

**check**— Detection of an error condition.

**CI**— Converter/Interpreter (JES3).

**connected mode**— A relationship between a host and an ACS. In this mode, the host and an ACS are capable of communicating (at least one station to this ACS is online).

**control data set (CDS)**— The data set containing all configuration and volume information used by the host software to control the functions of the automated library. Also known as a library control data set.

*See also* Primary CDS, Secondary CDS, and Standby CDS.

**control data set allocation map**— A CDS subfile that marks individual blocks as used or free.

**control data set data blocks**— CDS blocks that contain information about the library and its configuration or environment.

**control data set directory**— A part of the CDS that maps its subdivision into subfiles.

**control data set free blocks**— CDS blocks available for future subfile expansion.

**control data set pointer blocks**— CDS blocks that contain pointers to map data blocks belonging to a subfile.



**control data set recovery area**— A portion of the CDS reserved for maintaining integrity for updates that affect multiple CDS blocks.

**control data set subfile**— A portion of the CDS consisting of Data Blocks and Pointer Blocks containing related information.

**Control Unit (CU)**— (1) A microprocessor-based unit situated logically between a host channel (or channels) and from two to sixteen transports. It functions to translate channel commands into transport commands, send transport status to the channel(s), and pass data between the channel(s) and transport(s). (2) A device that controls I/O operations for one or more devices. cross-host recovery. The ability for one host to perform recovery for another host that has failed.

**CSE**— Customer Service Engineer.

**CSI**— Consolidated System Inventory.

**CSL**— *See* Cartridge Scratch Loader.

**CSRC**— Central Support Remote Center (*See* Remote Diagnostics Center)

**CST**— (1) A value that can be specified on the MEDia parameter and that includes only standard capacity cartridge tapes. (2) An alias of Standard. (3) *See* Cartridge System Tape.

**CSW**— *See* Channel Status Word.

**CU**— *See* Control Unit.

## D

**DAE**— Dump Analysis Elimination.

**DASD**— Direct access storage device.

**data**— Any representations such as characters or analog quantities to which meaning is, or might be, assigned.

**Database Heartbeat record (DHB)**— The record that contains the names of the control data sets recorded by the HSC and identifies the correct primary, secondary, and standby CDS.

**data class**— A collection of allocation and space attributes, defined by the storage administrator, that are used to create a data set.

**data compaction**— An algorithmic data-reduction technique that encodes data from the host and stores it in less space than unencoded data. The original data is recovered by an inverse process called decompression.

**data-compaction ratio**— The number of host data bytes mathematically divided by the number of encoded bytes. It is variable depending on the characteristics of the data being processed. The more random the data stream, the lower the opportunity to achieve compaction.

**Data Control Block (DCB)**— A control block used by access routines in storing and retrieving data.

**data set**— The major unit of data storage and retrieval, consisting of a collection of data in one of several prescribed arrangements and described by control information to which the system has access.

**data streaming**— A continuous stream of data being transmitted in character or binary-digit form, using a specified format.

**DC**— Direct current.

**DCB**— *See* Data Control Block.

**DD3**— A generic value that can be specified on the MEDia and RECtech parameters and includes all types of helical cartridges and recording techniques.

**DD3A, DD3B, DD3C, DD3D**— Values that can be specified on the MEDia parameter and include only the specified type of helical cartridge. Aliases are A, B, C, and D, respectively.

**DDR**— *See* Dynamic Device Reconfiguration.

**default value**— A value assumed when no value has been specified.

**demand allocation**— An MVS term meaning that a user has requested a specific unit.

**device allocation**— The HSC function of *influencing* the MVS device selection process to choose either a manual transport or a transport in a particular ACS, based on the location of the volume (specific requests) or the subpool rules in effect (scratch requests).

**device group**— A subset of the eligible devices. Device groups are defined by esoteric unit names but also may be created implicitly if common devices exist in different device groups.

**device number**— A four-digit hexadecimal number that uniquely identifies a device attached to a processor.

**device separation**— *See* drive exclusion.

**DFP**— Data Facility Product. A program that isolates applications from storage devices, storage management, and storage device hierarchy management.

**DFSMS**— Refers to an environment running MVS/ESA SP and DFSMS/MVS, DFSORT, and RACF. This environment helps automate and centralize the management of storage through a combination of hardware, software, and policies.

**DFSMS ACS routine**— A sequence of instructions for having the system assign data class, storage class, management class, and storage group for a data set.

**DHB**— *See* Database Heartbeat record.

**directed allocation**— *See* drive prioritization.

**disconnected mode**— A relationship between a host and an ACS. In this mode, the host and an ACS are not capable of communicating (there are no online stations to this ACS).

**DOMed**— Pertaining to a console message that was previously highlighted during execution, but is now at normal intensity.

**drive exclusion**— (previously referred to as *device separation*) refers to the Storage Management Component (SMC) function of excluding drives for an allocation request based on SMC exclusion criteria. *See the SMC Configuration and Administration Guide* for more information.

**drive loaded**— A condition of a transport in which a tape cartridge has been inserted in the transport, and the tape has been threaded to the beginning-of-tape position.

**drive panel**— A wall of an LSM that contains tape transports. Drive panels for T9840A transports have either 10 or 20 transports per panel; drive panels for

all other transports contain up to four transports per panel.

**drive prioritization**— (previously referred to as *directed allocation*) refers to the Storage Management Component (SMC) function of influencing selection of a particular drive based on allocation criteria, including volume location. *See the SMC Configuration and Administration Guide* for more information.

**DRIVEid**— A DRIVEid uniquely defines the location of a tape transport by its location within an LSM. A DRIVEid is of the form *AAL:PP:NN* where *AA* is the ACSid, *L* is the LSM number, *PP* is the panel where the drive is located, and *NN* is the drive number within the panel.

**DSI**— Dynamic System Interchange (JES3).

**dual LMU**— A hardware/μ-software feature that provides a redundant LMU capability.

**dual LMU HSC**— HSC release 1.1.0 or later that automates a switch-over to the standby LMU in a dual LMU configuration.

**dump**— To write the contents of storage, or of a part of storage, usually from an internal storage to an external medium, for a specific purpose such as to allow other use of storage, as a safeguard against faults or errors, or in connection with debugging.

**Dynamic Device Reconfiguration (DDR)**— An MVS facility that allows a dismountable volume to be moved and repositioned if necessary, without abnormally terminating the job or repeating the initial program load procedure.

## E

**ECAP**— *See* enhanced CAP.

**ECART**— (1) Cartridge system tape with a length of 1100 feet that can be used with 4490 and 9490 Cartridge Drives. These tapes are visually identified by a two-tone (black and tan) colored case. (2) A value that can be specified on the MEDia parameter and that includes only 36-track enhanced capacity cartridge system tapes. (3) *See* Enhanced Capacity Cartridge System Tape.

**ECCST**— (1) A value that can be specified on the MEDia parameter and that includes only enhanced capacity cartridge system tapes. (2) An alias of ECART. (3) *See* Enhanced Capacity Cartridge System Tape.

**EDL**— *See* eligible device list.

**EDTGEN**— Eligible Device Table Generation. A process used to replace an installation-defined and named representation of the devices that are eligible for allocation.

**EETape**— *See* Extended Enhanced Tape.

**Effective Recording Density**— The number of user bytes per unit of length of the recording medium.

**eject**— The process where the LSM robot places a cartridge in a Cartridge Access Port (CAP) so the operator can remove it from the LSM.

**eligible device list**— (1) A group of transports that are available to satisfy an allocation request. (2) For JES2 and JES3, a list of devices representing the UNIT parameter specified by way of invoking JCL. The EDL can contain both library and nonlibrary transports depending on the I/O GEN.

**enable**— The modification of system, control unit, or device action through the change of a software module or a hardware switch (circuit jumper) position.

**enhanced CAP (ECAP)**— An enhanced CAP contains two forty-cell magazine-style CAPs and a one-cell priority CAP (PCAP). Each forty-cell CAP holds four removable magazines of ten cells each. An LSM access door with an enhanced CAP contains no cell locations for storing cartridges.

*See also* Cartridge Access Port, standard CAP, priority CAP, WolfCreek CAP, WolfCreek optional CAP, or TimberWolf CAP.

**Enhanced Capacity Cartridge System Tape**— Cartridge system tape with increased capacity that can be used with 4490 and 9490 Cartridge Drives. These tapes are visually identified by a two-tone (black and tan) housing.

**EOF**— End-of-File.

**EOT**— End-of-Tape marker.

**EPO**— Emergency Power Off.

**EREP**— Environmental Recording, Editing, Printing.

**ERP**— *See* error recovery procedures.

**error recovery procedures (ERP)**— Procedures designed to help isolate and, where possible, to recover from errors in equipment.

**esoteric**— A user-defined name that groups devices into classes.

**ETAPE**— (1) A value that can be specified on the MEDia parameter and that includes only enhanced capacity cartridge system tapes. (2) An alias of ECART. (3) *See* Enhanced Capacity Cartridge System Tape.

**Extended Capacity Tape**— *See* Enhanced Capacity Cartridge System Tape.

**Extended Enhanced Tape (EETape)**— A synonym for a ZCART, which is a cartridge that can only be used with a 9490EE drive. An EETape (ZCART) provides greater storage capacity than an ECART.

**ExtendedStore Library**— One or more LSMs with no Cartridge Drives (CDs) that are attached by pass-thru ports to other LSMs (with CDs) in an ACS. These LSMs provide archive storage for cartridges containing less active data sets. Cartridges can be entered and ejected directly into and out of this LSM though either a standard CAP or an enhanced CAP.

## F

**FDRPAS™**— A product from Innovation Data Processing, Inc. that allows two disk devices to be non-disruptively swapped with each other.

**FIFO**— First in, first out.

**file protected**— Pertaining to a tape volume from which data can be read only. Data cannot be written on or erased from the tape.

**format**— The arrangement or layout of data on a data medium.

**frozen panel**— A panel to which cartridges cannot be moved. This restriction includes allocating new cartridge locations on a panel as a result of:

- a MOVE command, utility, or PGMI request
- cartridge entry into the ACS
- float, scratch dismount, or scratch redistribution processing.

## G

**GB**— Gigabyte, billion ( $10^9$ ) bytes.

**GDG**— Generation Data Group. An MVS data set naming convention. Sequence numbers are appended to the basic data set name to track the generations created for that data set.

**GDG Separation**— Occurs when a Generation Data Group gets separated because the volumes of different generations reside in different locations. Usually, all generations of a GDG are mounted on a single drive to reduce the number of drives needed for a job.

**GTF**— Generalized Trace Facility. An MVS facility used to trace software functions and events.

## H

**HDA**— Head/disk assembly.

**Helical**— A generic value that can be specified on the RECTECH parameter and includes all helical transports.

**HOSTid**— A HOSTid is the host identifier specified in the HOSTID parameter of the SLILIBRY LIBGEN macro. The HOSTid is the SMF system identifier for both JES2 and JES3.

**High Watermark Setup (HWS)**— In JES3, a setting specified on the HWSNAME initialization statement that reduces the number of devices reserved for a job. JES3 accomplishes this task by assessing each jobstep to determine the maximum number of devices needed for each device type and reserving those devices.

**Host Software Component (HSC)**— That portion of the Automated Cartridge System which executes on host systems attached to an automated library. This component acts as the interface between the

operating system and the rest of the automated library.

**host system**— A data processing system that is used to prepare programs and the operating environments for use on another computer or controller.

**HSC**— *See* Host Software Component.

**HWS**— *See* High Watermark Setup.

## I

**ICRC**— *See* Improved Cartridge Recording Capability.

**ID**— Identifier or identification.

**IDAX**— Interpreter Dynamic Allocation Exit. This is a subfunction of the DFSMS/MVS subsystem request (SSREQ 55) that the MVS JCL Interpreter and dynamic allocation functions issue for calling DFSMS ACS routines for management of the data set requested.

**IDRC**— Improved Data Recording Capability.

**IML**— *See* Initial Microprogram Load.

**Improved Cartridge Recording Capability (ICRC)**— An improved data recording mode that, when enabled, can increase the effective cartridge data capacity and the effective data rate when invoked.

**index**— A function performed by the cartridge scratch loader that moves cartridges down the input or output stack one cartridge position. A scratch loader can perform multiple consecutive indexes.

**INISH deck**— A set of JES3 initialization statements.

**Initial Microprogram Load (IML)**— A process that activates a machine reset and loads system programs to prepare a computer system for operation. Processors having diagnostic programs activate these programs at IML execution. Devices running  $\mu$ -software reload the functional  $\mu$ -software usually from a floppy diskette at IML execution.

**Initial Program Load (IPL)**— A process that activates a machine reset and loads system programs to prepare a computer system for operation. Processors having diagnostic programs activate these

programs at IPL execution. Devices running  $\mu$ -software reload the functional  $\mu$ -software usually from a floppy diskette at IPL execution.

**initial value**— A value assumed until explicitly changed. It must then be explicitly specified in another command to restore the initial value. An initial value for the HSC is the value in effect when the product is installed.

**inline diagnostics**— Diagnostic routines that test subsystem components while operating on a time-sharing basis with the functional  $\mu$ -software in the subsystem component.

**input stack**— The part of the cartridge loader where cartridges are premounted.

**intervention required**— Manual action is needed.

**IPL**— *See* Initial Program Load.

**ips**— Inches per second.

**IVP**— Installation Verification Programs. A package of programs that is run by a user after the library is installed in order to verify that the library is functioning properly.

## J

**JCL**— *See* Job Control Language.

**Job Control Language**— Problem-oriented language designed to express statements in a job that are used to identify the job or describe its requirements to an operating system.

**journal**— The log associated with journaling. The log (stored in a data set) contains a record of completed work and changes to the control data set since the last backup was created.

**journaling**— A technique for recovery that involves creating a backup control data set and maintaining a log of all changes (transactions) to that data set.

**JST**— Job Summary Table (JES3).

## K

**KB**— Kilobyte, thousand ( $10^3$ ) bytes.

**keyword parameter**— In command and utility syntax, operands that include keywords and their related values (*See* positional parameter).

Values are concatenated to the keyword either by an equal sign, “KEYWORD=value,” or by parentheses, “KEYWORD(value).” Keyword parameters can be specified in any order. The HSC accepts (tolerates) multiple occurrences of a keyword. The value assigned to a keyword reflects the last occurrence of a keyword within a command.

## L

**LAN**— *See* Local Area Network.

**LCU**— *See* Library Control Unit.

**LED**— *See* Light Emitting Diode.

**LIBGEN**— The process of defining the configuration of the automated library to the host software.

**library**— An installation of one or more ACSs, attached cartridge drives, volumes placed into the ACSs, host software that controls and manages the ACSs and associated volumes, and the library control data set that describes the state of the ACSs.

**library control data set**— *See* control data set.

**Library Control Unit (LCU)**— The portion of the LSM that controls the picking, mounting, dismounting, and replacing of cartridges.

**Library Management Unit (LMU)**— The portion of the ACS that manages from one to sixteen LSMs and communicates with the host CPU.

**Library Storage Module (LSM)**— The storage area for cartridges plus the robot necessary to move the cartridges. The term LSM often means the LCU and LSM combined.

**Light Emitting Diode (LED)**— An electronic device used mainly as an indicator on status panels to show equipment on/off conditions.

**Linear Tape Open (LTO)**— A technology developed jointly by HP, IBM, and Seagate for new tape storage options. LTO technology is an open format, which means that users have multiple sources of products and media.

**LMU**— *See* Library Management Unit.

**LMUPATH**— An HSC control statement contained in the definition data set specified by the LMUPDEF command. An LMUPATH statement allows users to define network LMU attachments.

**LMUPDEF**— An HSC command used to load the definition data set that contains LMUPATH control statements.

**load point**— The beginning of the recording area on magnetic tape.

**loader**— *See* Cartridge Scratch Loader.

**Local Area Network (LAN)**— A computer network in which devices within the network can access each other for data transmission purposes. The LMU and attached LCUs are connected with a local area network.

**logical ejection**— The process of removing a volume from the control data set without physically ejecting it from its LSM location.

**Logical End Of Tape**— A point on the tape where written data normally ends.

**LONG**— (1) A value that can be specified on the MEDia parameter and that includes only enhanced capacity cartridge system tapes (not to be confused with LONGitud). (2) An alias of ECART. (3) *See* Enhanced Capacity Cartridge System Tape.

**LONGitud**— (1) A generic value that can be specified on the RECtech parameter and includes all 18-track and 36-track devices. (2) A generic value that can be specified on the MEDia parameter and includes all standard and enhanced capacity cartridge system tapes.

**LSM**— *See* Library Storage Module.

**LSMid**— An LSMid (*lsm-id*) is a hexadecimal value that consists of the ACSid and LSM number separated by a colon (i.e., AA:LL, where AA is the ACSid and LL is the LSMid). The LSMid differentiates an LSM from every other LSM in a library.

**LSM number**— A method used to identify an LSM. An LSM number is the result of defining the SLIACS macro LSM parameter during a LIBGEN.

The first LSM listed in this parameter acquires the LSM number of 00 (hexadecimal), the second LSM listed acquires a hexadecimal number of 01, and so forth, until all LSMs are identified (maximum of 24 or hexadecimal 17).

**LTO**— *See* Linear Tape Open.

**LTOx**— A media type designating either an LTO data cartridge with a capacity between 10GB and 400GB or an LTO cleaning cartridge.

## M

**machine initiated maintenance**— *See* ServiceTek.

**magnetic recording**— A technique of storing data by selectively magnetizing portions of a magnetizable material.

**magnetic tape**— A tape with a magnetizable surface layer on which data can be stored by magnetic recording.

**magnetic tape drive**— A mechanism for moving magnetic tape and controlling its movement.

**maintenance facility**— Hardware contained in the CU and LMU that allows a CSE and the RDC to run diagnostics, retrieve status, and communicate with respective units through their control panels.

**management class**— A collection of management attributes, assigned by the storage administrator, that are used to control the allocation and use of space by a data set.

**manual mode**— A relationship between an LSM and all attached hosts. LSMs operating in manual mode have been modified offline and require human assistance to perform cartridge operations.

**master LMU**— The LMU currently controlling the functional work of the ACS in a dual LMU configuration.

**MB**— Megabyte, million ( $10^6$ ) bytes.

**MDS**— Main Device Scheduler (JES3).

**MEDia**— The parameter used to specify media type.

This is not to be confused with MEDIA1 or MEDIA2, which are values that can be specified on the MEDia parameter.

**MEDIA1**— (1) A value that can be specified on the MEDIA parameter and that includes only standard capacity cartridge tapes. (2) An alias of Standard.

**MEDIA2**— (1) A value that can be specified on the MEDIA parameter and that includes only enhanced capacity cartridge system tapes. (2) An alias of ECART. (3) *See* Enhanced Capacity Cartridge System Tape.

**media capacity**— The amount of data that can be contained on storage media and expressed in bytes of data.

**media mismatch**— A condition that occurs when the media value defined in a VOLATTR control statement does not match the media value recorded in the CDS VAR record.

**micro-software**— *See*  $\mu$ -software under Symbols.

**MIM**— Multi-Image Manager. Third-party software by Computer Associates International, Inc.

**mixed configurations**— Installations containing cartridge drives under ACS control and cartridge drives outside of library control. These configurations cause the Host Software Component to alter allocation to one or the other.

**MODEL**— The parameter used to specify model number.

**modem**— Modulator/demodulator. An electronic device that converts computer digital data to analog data for transmission over a telecommunications line (telephone line). At the receiving end, the modem performs the inverse function.

**monitor**— A device that observes, records, and verifies selected system activities to determine significant departure from expected operation.

**MSM**— Multiple Sessions Management. Third-party software by Computer Associates International, Inc.

## N

**Near Continuous Operation (NCO)** — Facilities and techniques that allow customers to make dynamic changes to the library that do not disrupt the library hardware and environment. In most cases,

users can perform these procedures without requiring the HSC to be terminated and restarted.

## O

**OCR**— Optical Character Recognition.

**operating system (OS)**— Software that controls the execution of programs that facilitate overall system operation.

**output stack**— The part of the cartridge loader that receives and holds processed cartridges.

**over-limit cleaning cartridge**— A cleaning cartridge that has been used more than the value (limit) specified by either the MNTD MAXclean or VOLATTR MAXclean settings. This kind of cartridge may not be able to adequately clean a tape transport, however, it can be mounted and will attempt to execute the cleaning process. *See also* spent cleaning cartridge.

**over-use cleaning cartridge**— A cartridge that has a usage (select) count over the MAXclean value (*see* over-limit cleaning cartridge) or that has used up its cleaning surface (*see* spent cleaning cartridge).

## P

**paired-CAP mode**— The two forty-cell CAPs in an enhanced CAP function in paired-CAP mode as a single eighty-cell CAP.

**PARMLIB control statements**— Parameter library (PARMLIB) control statements allow you to statically specify various operation parameters which take effect at HSC initialization. Identifying your system requirements and then specifying the appropriate control statements permits you to customize the HSC to your data center.

**pass-thru port (PTP)**— A mechanism that allows a cartridge to be passed from one LSM to another in a multiple LSM ACS.

**PCAP**— *See* priority CAP.

**P/DAS**— Peer-to-Peer Remote Copy Dynamic Address Switching. An IBM capability to non-disruptively swap PPRC volumes.

**Peer-to-Peer Remote Copy (PPRC)**— An IBM capability to mirror disk volumes from one storage subsystem to another.

**physical end of tape**— A point on the tape beyond which the tape is not permitted to move.

**playground**— The playground is a reserved area of cells where the robot deposits cartridges that it finds in its hands during LSM initialization. Normal LSM initialization recovery processing moves cartridges from the playground cells to either their home cells or their intended destinations, but under abnormal circumstances cartridges may be left in playground cells.

**positional parameter**— In command and utility syntax, operands that are identified by their position in the command string rather than by keywords (*See* keyword parameter).

Positional parameters must be entered in the order shown in the syntax diagram.

**PowderHorn (9310) LSM**— A high-performance LSM featuring a high-speed robot. The PowderHorn has a capacity of up to approximately 6000 cartridges.

**PPRC**— *See* Peer-to-Peer Remote Copy.

**primary CDS**— The active control data set. It contains the inventory of all cartridges in the library, the library configuration, information about library hardware and resource ownership across multiple processors, and serves as a vehicle of communication between HSCs running on multiple processors.

**priority CAP (PCAP)**— A one-cell CAP that is part of an enhanced CAP. A PCAP allows a user to enter or eject a single cartridge that requires immediate action.

*See also* Cartridge Access Port, standard CAP, enhanced CAP, WolfCreek CAP, WolfCreek optional CAP, or TimberWolf CAP.

**Program Temporary Fix (PTF)**— A unit of corrective maintenance delivered to a customer to repair a defect in a product, or a means of packaging a Small Programming Enhancement (SPE).

**Program Update Tape (PUT)**— A tape containing a collection of PTFs. PUTs are shipped to customers

on a regular basis under the conditions of the customer's maintenance license.

**PTF**— *See* Program Temporary Fix.

**PTP**— *See* pass-thru port.

**PUT**— *See* Program Update Tape.

## Q

**QSAM**— *See* Queued Sequential Access Method.

**Queued Sequential Access Method (QSAM)**— An extended version of the basic sequential access method (BSAM). When this method is used, a queue is formed of input data blocks that are awaiting processing or output data blocks that have been processed and are awaiting transfer to auxiliary storage or to an output device.

## R

**RACF**— *See* Resource Access Control Facility.

**RDC**— *See* Remote Diagnostics Center.

**Recording Density**— The number of bits in a single linear track measured per unit of length of the recording medium.

**RECtech**— The parameter used to specify recording technique.

**RedWood**— (1) The program name of the StorageTek transport that supports a helical recording technique. (2) *See* SD-3.

**Remote Diagnostics Center (RDC)**— The Remote Diagnostics Center at StorageTek. RDC operators can access and test StorageTek systems and software, through telecommunications lines, from remote customer installations. Also referred to as the Central Support Remote Center (CSRC).

**Resource Access Control Facility (RACF)**— Security software controlling access to data sets.

## S

**SCP**— *See* System Control Program.

**scratch tape subpool**— A defined subset of all scratch tapes. Subpools are composed of one or more ranges of VOLSERS with similar physical



characteristics (type of volume {reel or cartridge}, reel size, length, physical location, etc.). Some installations may also subdivide their scratch pools by other characteristics, such as label type (AL, SL, NSL, NL).

The purpose of subpooling is to make sure that certain data sets are built only within particular ranges of volumes (for whatever reason the user desires). If a volume which does not belong to the required subpool is mounted for a particular data set, it is dismounted and the mount reissued.

**SD-3**— The model number of the StorageTek transport that supports a helical recording technique.

**SDLT**— *See* SuperDLT.

**SDLTx**— A media type designating an SDLT data cartridge with a capacity of either 125GB or 160GB.

**secondary CDS**— The optional duplicate copy of the primary CDS.

**secondary recording**— A technique for recovery involving maintaining both a control data set and a copy (secondary) of the control data set.

**SEN** — *See* Significant Event Notification.

**SER**— Software Enhancement Request.

**ServiceTek (machine initiated maintenance)**— A unique feature of the ACS in which an expert system monitors conditions and performance of subsystems and requests operator attention before a potential problem impacts operations. Customers can set maintenance threshold levels.

**servo**— A device that uses feedback from a sensing element to control mechanical motion.

**Shared Tape Allocation Manager (STAM)**— Third-party software by Computer Associates International, Inc.

**Significant Event Notification (SEN)** — An HSC facility that allows an application to request notification of specific HSC and VTCS events.

**Silverton**— *See* 4490 Cartridge Subsystem.

**SL3000 library**— *See* StreamLine (SL3000) library.

**SL8500 library**— *See* Streamline (SL8500) library.

**Small Programming Enhancement (SPE)**— A supplement to a released program that can affect several products or components.

**SMC**— Storage Management Component.

**SMF**— System Management Facility. An MVS facility used to record system actions which affect system functionality.

**SMP**— System Modification Program.

**SMP/E**— *See* System Modification Program Extended.

**SMS**— Storage Management Subsystem.

**SPE**— *See* Small Programming Enhancement.

**special use cartridge**— A generic description for a type of cartridge used on T9840A drives. These include:

- T9840A cleaning cartridge
- T9840A microcode load cartridge
- T9840A dump collection cartridge.

When an attempt is made to mount a special use cartridge, LMU error response code 1012 is generated.

The error code is defined as “load failure for special use cartridge.”

If the error code is received for a special use cleaning cartridge, it is either ejected or marked as unusable, and it is retained in the ACS (depending on the MNTD EJtauto setting). The HSC does not mount unusable cartridges.

**spent cleaning cartridge**— A cleaning cartridge that has exhausted its cleaning material and can no longer be used to clean tape transports. *See also* over-limit cleaning cartridge.

**SSD**— Solid state disk.

**STAM**— *See* Shared Tape Allocation Manager.

**Standard**— (1) A value that can be specified on the MEDIA parameter and that includes only standard capacity cartridge tapes. (2) *See* Cartridge System Tape.

**standard CAP**— A standard CAP has a capacity of twenty-one cartridges (three rows of seven cells

each). An LSM access door with a standard CAP contains cell locations for storing cartridges.

*See also* Cartridge Access Port, enhanced CAP, priority CAP, WolfCreek CAP, WolfCreek optional CAP, or TimberWolf CAP.

**standard (4410) LSM**— An LSM which provides a storage capacity of up to approximately 6000 cartridges.

**standby**— The status of a station that has been varied online but is connected to the standby LMU of a dual LMU ACS.

**standby CDS**— The optional data set that contains only one valid record, the Database Heartbeat (DHB). The DHB contains the names of the control data sets recorded by the HSC and is used to identify the correct primary, secondary, and standby CDS.

**standby LMU**— The redundant LMU in a dual LMU configuration that is ready to take over in case of a master LMU failure or when the operator issues the SWitch command.

**station**— A hardware path between the host computer and an LMU over which the HSC and LMU send control information.

**STD**— (1) A value that can be specified on the MEDia parameter and that includes only standard capacity cartridge tapes. (2) An alias of Standard.

**STK1**— A generic value that can be specified on the MEDia and RECtech parameters and includes all types of T9840A cartridges and recording techniques.

**STK1R**— Value that can be specified on the MEDia and RECtech parameters and includes only the specified type of T9840A cartridge or recording technique. STK1R can be abbreviated as R.

**STK1U**— Value that can be specified on the MEDia parameter and includes the specified types of T9840A, T9840B, and T9840C cleaning cartridges. STK1U can be abbreviated as U.

**STK1Y**— Value that can be specified on the MEDia parameter and includes only the specified type of T9840D cleaning cartridge. STK1Y can be abbreviated as Y.

**STK2**— A generic value that can be specified on the MEDia parameter and includes all types of 9940 cartridges and recording techniques.

**STK2P**— Value that can be specified on the MEDia and RECtech parameters and includes only the specified type of 9940 cartridge or recording technique. STK2P can be abbreviated as P.

**STK2W**— Value that can be specified on the MEDia parameter and includes only the specified type of 9940 cleaning cartridge. STK2W can be abbreviated as W.

**storage class**— A named list of storage attributes that identify performance goals and availability requirements for a data set.

**storage group**— A collection of storage volumes and attributes defined by the storage administrator.

**Storage Management Component (SMC)**— Required NCS software component that performs the allocation function for NCS, replacing the functions previously performed by HSC and MVS/CSC. The SMC resides on the MVS host with HSC and/or MVS/CSC, and communicates with these products to determine policies, volume locations, and drive ownership.

**StreamLine (SL3000) library**— A modular library that can scale from 200 to 4500 cartridges in mainframe, Windows, UNIX, and supercomputer environments. The SL3000 utilizes hot swap components and multiple robots.

**StreamLine (SL8500) library**— A modular library that can scale from 1,500 to over 200,000 cartridges in mainframe, Windows, UNIX, and supercomputer environments. The SL8500 utilizes hot swap components and multiple robots.

**StreamLine CAP**— The StreamLine CAP contains 3, 13-cell removable magazines. You can also add an optional CAP that has the same configuration.

**SuperDLT**— The next generation of DLT (Digital Linear Tape) products, which remains a standard for mid-range operating systems.

**switchover**— The assumption of master LMU functionality by the standby LMU.

**SYNCSORT**— Third-party software by Syncsort, Inc.; a sort, merge, copy utility program.

**System Control Program**— The general term to describe a program which controls access to system resources, and allocates those resources among executing tasks.

**system-managed storage**— Storage that is managed by the Storage Management Subsystem, which attempts to deliver required services for availability, performance, space, and security applications.

**System Modification Program Extended**— An IBM-licensed program used to install software and software maintenance.

## T

**T10000 Tape Drive**— A cartridge tape drive that features a 500GB (T10000A), 1TB (T10000B), or 5TB (T10000C) cartridge capacity and data transfer rates up to 120MB/sec. In addition, the T10000 offers media reusability for at least two generations and device-based encryption.

**tape cartridge**— A container holding magnetic tape that can be processed without separating it from the container.

**tape drive**— A device that is used for moving magnetic tape and includes the mechanisms for writing and reading data to and from the tape.

**tape unit**— A device that contains tape drives and their associated power supplies and electronics.

**TAPEREQ**— An SMC control statement that is contained in the definition data set specified by the TREQDEF command. A TAPEREQ statement defines a specific tape request. It is divided into two parts, the input: job name, step name, program name, data set name, expiration date or retention period, and an indication for specific requests or nonspecific (scratch) requests; and the output: media type and recording technique capabilities.

**TDMF™**— Transparent Data Migration Facility. A product from Softek Storage Solutions Corp. that allows two disk devices to be non-disruptively swapped with each other.

**Timberline**— *See* 9490 Cartridge Subsystem.

**Timberline EE**— *See* 9490EE Cartridge Subsystem.

**TimberWolf (9740) LSM**— A high performance LSM that provides a storage capacity of up to 494 cartridges. Up to 10 drives (STD, 4490, 9490, 9490EE, T9840A, and SD-3) can be configured. TimberWolf LSMs can only attach to other TimberWolfs.

**TimberWolf CAP**— The TimberWolf CAP contains either a 10-cell removable magazine or a 14-cell permanent rack. It is not necessary to define a configuration; the HSC receives CAP information directly from the LMU.

*See also* Cartridge Access Port, standard CAP, enhanced CAP, priority CAP, WolfCreek CAP, or WolfCreek optional CAP.

**TP**— Tape-to-Print.

**transaction**— A short series of actions with the control data set. These actions are usually related to a specific function (e.g., Mount, ENter).

**transport**— An electromechanical device capable of threading tape from a cartridge, moving the tape across a read/write head, and writing data onto or reading data from the tape.

**TREQDEF**— An SMC command that is used to load the definition data set that contains TAPEREQ control statements.

**Tri-Optic label**— An external label attached to the spine of a cartridge that is both human and machine readable.

**TT**— Tape-to-Tape.

## U

**unit affinity**— A request that all cartridges be mounted on a single drive (either for read or write purposes), usually to reduce the number of drives needed for a job.

**unit parameter value**— A JCL term meaning the value of a JCL UNIT parameter. The value can be a single address of a drive, an esoteric list, or a generic list.

**UNITATTR**— An SMC control statement that defines the transport's media type and recording technique capabilities.

**utilities**— Utility programs. The programs that allow an operator to manage the resources of the library and to monitor overall library performance.

## V

**VAR**— *See* Volume Attribute Record.

**VAT**— *See* Volume Attribute Table Entry.

**Virtual Storage Manager (VSM)**— A storage solution that virtualizes volumes and transports in a VTSS buffer in order to improve media and transport use.

**Virtual Tape Control System (VTCS)**— The primary host code for the Virtual Storage Manager (VSM) solution. This code operates in a separate address space, but communicates closely with HSC.

**Virtual Tape Storage Subsystem (VTSS)**— The DASD buffer containing virtual volumes (VTVs) and virtual drives (VTDs). The VTSS is a StorageTek RAID 6 hardware device with microcode that enables transport emulation. The RAID device can read and write "tape" data from/to disk, and can read and write the data from/to a real tape drive (RTD).

**virtual thumbwheel**— An HSC feature that allows read-only access to a volume that is not physically write-protected.

**VOLATTR**— An HSC control statement that is contained in the definition data set specified by the VOLDEF command. A VOLATTR statement defines to the HSC the media type and recording technique of the specified volumes.

**VOLDEF**— An HSC command that is used to load the definition data set that contains VOLATTR control statements.

**VOLSER**— A six-character alphanumeric label used to identify a tape volume.

**volume**— A data carrier that is mounted or dismounted as a unit. (*See* cartridge).

**Volume Attribute Record (VAR)**— An HSC internal record that contains the data base-resident information of a cartridge entered into the library.

**Volume Attribute Table Entry (VAT)**— An HSC internal table that contains entries to the intransit record token and the Volume Attribute Record (VAR). The VAT is used as the communications area for internal service calls.

## W

**WolfCreek (9360) LSM**— A smaller capacity high-performance LSM. WolfCreek LSMs are available in 500, 750, and 1000 cartridge capacities (model numbers 9360-050, 9360-075, and 9360-100, respectively). WolfCreek LSMs can be connected by pass-thru ports to 4410, 9310, or other WolfCreek LSMs.

**WolfCreek CAP**— The standard WolfCreek CAP contains a 20-cell magazine-style CAP and a priority CAP (PCAP).

*See also* Cartridge Access Port, standard CAP, enhanced CAP, priority CAP, WolfCreek optional CAP, or TimberWolf CAP.

**WolfCreek optional CAP**— The WolfCreek optional CAP contains a 30-cell magazine-style CAP which is added to the standard WolfCreek CAP.

*See also* Cartridge Access Port, standard CAP, enhanced CAP, priority CAP, WolfCreek CAP, or TimberWolf CAP.

**Write Tape Mark (WTM)**— The operation performed to record a special magnetic mark on tape. The mark identifies a specific location on the tape.

**WTM**— *See* Write Tape Mark.

**WTO**— Write-to-Operator.

**WTOR**— Write-to-Operator with reply.

## Z

**ZCART**— (1) Cartridge system tape with a length of 2200 feet that can be used only with 9490EE Cartridge Drives. (2) A value that can be specified on the MEDIA parameter and that includes only 36-track 9490EE cartridge system tapes. (3) *See also* Extended Enhanced Tape.

## Symbols

**μ-software**— Microprogram. A sequence of microinstructions used to perform preplanned functions and implement machine instructions.

## Numerics

**18-track**— A recording technique that uses 18 tracks on the tape. The tape is written in only the forward motion.

**18track**— A generic value that can be specified on the RECtech parameter and includes all 18-track transports.

**3480**— (1) A value that can be specified on the MEDia parameter and that includes only standard capacity cartridge tapes. (2) An alias of Standard.

**3480X**— The 3480 upgrade that supports ICRC.

**3490**— The IBM cartridge drive that replaced the 3480X and supports ICRC but not 36-track or long tape. It is equivalent to the IBM 3480X.

**3490E**— (1) The IBM cartridge drive that replaced the 3490 and supports ICRC, 36-track, and long tape. It reads 18-track but does not write 18-track. (2) A value that can be specified on the MEDia parameter and that includes only enhanced capacity cartridge system tapes. (3) An alias of ECART.

**3590**— The IBM cartridge drive that supports 128-track recording and holds 10GB of uncompressed data. It has the same form factor as a 3490E.

**36-track**— A recording technique that uses 36 tracks on the tape. 18 tracks of data are written in the forward motion and then an additional 18 tracks in the backward motion for a total of 36.

**36track**— A generic value that can be specified on the RECtech parameter and includes all 36-track transports.

**36Atrack**— A value that can be specified on the RECtech parameter and includes only 4490 (Silverton) 36-track transports.

**36Btrack**— A value that can be specified on the RECtech parameter and includes only 9490 (Timberline) 36-track transports.

**36Ctrack**— A value that can be specified on the RECtech parameter and includes only 9490EE (Timberline EE) transports.

**4410 LSM**— *See* standard LSM.

**4480 Cartridge Subsystem**— Cartridge tape transports that provide read/write capability for 18-track recording format. The StorageTek 4480 Cartridge Subsystem is equivalent to a 3480 device.

**4490 Cartridge Subsystem**— Cartridge tape transports that provide read/write capability for 36-track recording format and extended capacity tape. 4490 transports can also read data recorded in 18-track format. The StorageTek 4490 Cartridge Subsystem is equivalent to a 3490E device.

**3000 library**— *See* StreamLine Library (SL3000).

**8500 library**— *See* StreamLine (SL8500) library.

**9310 LSM**— *See* PowderHorn LSM.

**9360 LSM**— *See* WolfCreek LSM.

**9490 Cartridge Subsystem**— Cartridge tape transports that provide read/write capability for 36-track recording format and extended capacity tape and provide improved performance over the 4490 Cartridge Subsystem. 9490 transports can also read data recorded in 18-track format. The StorageTek 9490 Cartridge Subsystem offers better performance (faster data transfer rate, faster load/unload) than a 3490E device.

**9490EE Cartridge Subsystem**— A high-performance tape transport that provides read/write capability for Extended Enhanced tape (EETape) cartridges. It is functionally equivalent to the IBM 3490E device.

**9740 LSM**— *See* TimberWolf LSM.

**T9840A Cartridge Subsystem**— A high performance tape transport for enterprise and open systems environments that reads and writes T9840A cartridges. T9840As can be defined in 10-drive and 20-drive panel configurations. The T9840A can perform as a standalone subsystem with a cartridge scratch loader attached, or it can be attached to a StorageTek ACS.

**T9840B**—The StorageTek cartridge transport that reads and writes T9840B cartridges.

**T9840C**— The StorageTek cartridge transport that reads and writes T9840C cartridges.

**T9840D**— The StorageTek cartridge transport that reads and writes T9840D cartridges

**T9940A**— The StorageTek capacity-centric cartridge transport capable of reading and writing 60GB T9940A cartridges.

**T9940B**— The StorageTek capacity-centric cartridge transport capable of reading and writing 200GB T9940B cartridges.

# Index

---

## Numerics

4480 Cartridge Subsystem, defined 193  
4490 Cartridge Subsystem, defined 193  
9490 Cartridge Subsystem, defined 193  
9490EE Cartridge Subsystem, defined 193

## A

access method, defined 179  
ACS *See* Automated Cartridge System  
ACSDRV 45  
ACSid, defined 179  
ACSLIST 37  
ADDRESS 62  
ADJACNT 56  
AL 41  
ALL 35  
allocation, defined 179  
assembler and linkage editor JCL 70  
Automated Cartridge System (ACS), defined 179  
automated space calculation, DASD space 22

## B

backup utility recommendation 84  
BASE 94, 95, 96, 97  
base service level, HSC 103  
BDAM, defined 179  
BOTH 34  
BSAM, defined 179

## C

CA DYNAM/TLMS 11  
CA-1 (TMS) 11  
calculating DASD space 21

calculating SL3000 library cartridge capacity 76  
calculating SL8500 library cartridge capacity 76  
CAP *See* Cartridge Access Port  
CAPid, defined 180

cartridge  
    capacity calculation for SL3000 library 23  
    capacity calculation for SL8500 library 23  
    capacity, calculating for SL3000 library 76  
    capacity, calculating for SL8500 library 76  
    defined 180  
    ECART, defined 182  
    over-limit cleaning cartridge, defined 187  
    over-use cleaning cartridge, defined 187  
    special use cartridge, defined 189  
    spent cleaning cartridge, defined 189  
    ZCART, defined 192

Cartridge Access Port (CAP)  
    defined 180  
    ID (syntax identifier) 156  
    standard, defined 189  
    TimberWolf, defined 191  
    WolfCreek optional, defined 192  
    WolfCreek, defined 192

Cartridge Drive (CD), defined 180

Cartridge Scratch Loader (CSL), defined 180

cartridges  
    loading into LSM manually 124  
    loading into the library 124  
    planning migration to the library 119

CD *See* Cartridge Drive

CDS *See* control data set

CDS *See* control data set

client/server drive mapping, defining 63

CLNPRFX 37

coexistence, HSC scenarios 165

COLD 95

commands, elements 155

COMPRFX 38

configuration library checklist 127

- configuration mismatches 101
- configurations, library 131
- configuring unit addresses 15
- connected mode, defined 180
- contention lockout situations 20
- Control Data Set (CDS)
  - allocation map, defined 180
  - data blocks, defined 180
  - defined 180
  - directory, defined 180
  - free blocks, defined 180
  - pointer blocks, defined 180
  - recovery area, defined 181
  - subfile, defined 181
- control data set (CDS)
  - creating a 6.0 and 6.1 CDS 163, 167
  - definition of types 16
  - initialization JCL 73
  - journal requirements 171
  - journals 17
  - primary 16
  - recovery strategies 16
  - secondary 16
  - shared DASD 19
  - standby CDS 17
- Control Unit (CU), defined 181
- CONTROL-T Tape Management System 11
- CST, defined 181
- CU *See* Control Unit

## D

- DASD
  - automated space calculation 22
  - calculating space 21
  - planning 16
  - sharing 19
- Database Heartbeat (DHB) record, defined 181
- DD statements, descriptions 99
- defining
  - esoterics 14
  - HSC control statements 89
  - LSM pass-thru port relationships 12
- definition data set control statements 89
- DEFRAG utility 19
- device group, defined 182
- device number, defined 182
- DF/SORT 11
- DFP (Data Facility Product), defined 182
- DFSMS
  - ACS routine, defined 182

- defined 182
- Dialog 96
- directed allocation, defined 182
- disconnected mode, defined 182
- discussion of configuration tasks 1
- DOMed, defined 182
- DOOR 56
- down-level migration 178
- DRIVE 53
- drive exclusion, defined 182
- drive loaded, defined 182
- drive panel, defined 182
- drive prioritization, defined 182
- DRIVEid, defined 182
- DRVELST 53, 60
- DRVHOST 42
- dual LMU, defined 182
- dump, defined 182
- duplicate copy, CDS 16
- Dynamic Device Reconfiguration (DDR), defined 182
- dynamic hardware reconfiguration
  - requirements before running 167, 171
  - restriction 167

## E

- ECART
  - defined 182
  - external media label requirements 119
- ECCST, defined 183
- Eid 96
- EJCTPAS 41
- eject, defined 183
- eligible device list, defined 183
- Enhanced CAP (ECAP), defined 183
- Enhanced Capacity Cartridge System Tape (ECCST), defined 183
- esoteric, defined 183
- esoterics
  - address configuration 13
  - library configuration 14
  - nonlibrary configuration 14
- ETAPE, defined 183
- examples
  - HOSTID parameter in SLILIBRY 36
  - LIBGEN
  - SLIVERFY 71



- library configurations 131
- PROC for START command 97
- SLIACS macro statement, SLIACS
  - example 48
- SLIALIST macro statement 44
- SLIDLIST 61
- SLIDRVS macro statement 67
- SLILSM macro statement 58
- SLIRCVRY macro 35
- SLISTATN macro statement 50

EXEC

- parameters
  - BASE 94
  - COLD 95
  - Dialog 96
  - Eid 96
  - Fid 96
  - INIT 95
  - Member 96
  - PARM 94
  - RECONFIG 97
  - RESET 95
  - SSYS 94

EXEC Statement Parameters 94

EXEC Statement Syntax 94

Extended Enhanced Tape (EETape), defined 183

ExtendedStore, Library, defined 183

external media label requirements

- ECART 119
- helical 120
- STK2 (9940) 121
- ZCART 119

## F

FDRPAS, defined 183

Fid 96

forced termination of the HSC 106

full service level, HSC 103

FUTRACS 42

FUTRLSM 48

## G

Generation Data Groups (GDG) separation, defined 184

## H

hardware
 

- dynamic reconfiguration 167, 171
- HSC support dependencies 169

helical external media, label requirements 120

Helical, defined 184

Host Software Component (HSC)
 

- coexistence scenarios 165
- defined 184
- defining client/server drive mapping 63
- defining HSC control statements 89
- EXEC, parameters 94
- executing the START procedure 100
- forced termination 106
- hardware support dependencies 169
- initialization order with SMC 128, 176
- initializing 93
- initializing, under the Master Subsystem 103
- installation scenarios
  - production environment 167
  - verification environment 166
- migration and coexistence considerations 167
- migration scenarios 165
- START Procedure 93
- start task procedure 26
- starting HSC using the SSYS parameter 103
- starting the HSC to the base service level 103
- starting the HSC to the full service level 103
- terminating the HSC 105

host system, defined 184

HOSTDRV 60

HOSTID 36

host-id 36

HOSTid, defined 184

HSM, processing problems 19

## I

I/O Device Reserve Considerations 19

identification, library 156

Improved Cartridge Recording Capability (ICRC), defined 184

Index, defined 184

INISH deck, defined 184

INIT 95

Initial Microprogram Load (IML), defined 184

Initial Program Load (IPL), defined 184

initial value, defined 185

initialization order, HSC/SMC 128, 176

initializing

- control data set, JCL 73

- control data sets 73

- the HSC 93

- the HSC under the Master Subsystem 103

input stack, defined 185

installation

- configuration planning 9

- DASD planning 16

- HSC scenarios 166

- IPLing the system 26
- issuing the START command 102
- non-library esoterics 14
- planning, overview 1
- pre-execution tasks 25
- PROC for START command example 97
- recovery strategies for CDS 16
- Installation Verification Programs (IVP), defined 185
- installing, testing the installation 107
- IPL requirements 26
- IPLing the System 26
- Issuing the START Command 102

## J

- JCL DD Statements, descriptions 99
- JES example, HOSTID for SLILIBRY 36
- Job Control Language (JCL)
  - defined 185
- job step return codes 70
- JOURNAL 34
- journaling
  - CDS and journal requirements 171
- journaling, defined 185
- journals, CDS 17

## K

- keyword parameter, defined 185

## L

- labels, tri-optic, verification 119
- LAN, defined 185
- LCU *See* Library Control Unit
- LIBGEN
  - assembler and linkage editor JCL 70
  - defined 185
  - esoterics and address configuration 13
  - job step return codes 70
  - library configuration file 27
  - macros
    - relationship to a library configuration 29
    - SLIACS 45
    - SLIALIST 44
    - SLIDLIST 60
    - SLIDRIVS 62
    - SLIENDGN 69
    - SLILIBRY 36
    - SLILSM 51
    - SLISTATN 49
  - procedure for library generation 27

- SLIVERFY 71
- verifying the library generation 71

### library

- configuration checklist 7, 127
- configurations 131
- defined 185
- esoterics 14
- modifications 3

- Library Control Unit (LCU), defined 185

- library identification 156

- Library Management Unit (LMU)
  - defined 185
  - standby, defined 190

- Library Storage Module
  - calculating DASD space for future LSMs 22

- Library Storage Module (LSM)
  - defined 185
  - number, defined 186
  - preallocating CDS space for SL8500 LSMs 48
  - relationship definition with pass-thru port 12
  - SLIACS parameter 47
  - standard (4410), defined 190
  - TimberWolf (9740), defined 191
  - WolfCreek (9360), defined 192

- libtype 37

- lists, conventions 157

- LMU *See* Library Management Unit

- LMUPATH control statement
  - defined 186

- LMUPDEF command and control statement
  - defined 186

### loading

- cartridges into LSM manually 124
- cartridges into the LSM using the ENter command 124

- lockout problems 20

- logical ejection, defined 186

- LONGItud, defined 186

- LSM *See* Library Storage Module

- lsm0 52

- LSMid, defined 186

## M

### macros

- SLIACS 45
- SLIALIST 44
- SLIDLIST 60
- SLIENDGN 69
- SLILIBRY 36
- SLILSM 51
- SLISTATN 49

- MAJNAME 37
- manual mode
  - defined 186
- master LMU
  - defined 186
- media capacity, defined 187
- media mismatch, defined 187
- MEDia, defined 186
- Member 96
- migration
  - applications to library use 125
  - coexistence processes 163
  - down-level 178
  - HSC migration and coexistence considerations 167
  - HSC scenarios 165
  - planning 119
  - up-level 173
- missing interrupt handler (MIH) 20
- missing interrupt interval (MITIME) 20
- MODEl, defined 187
- modifying LSMs online 100
- modifying the library 3
- multiple hosts startup considerations 101

## N

- NCO *See* Near Continuous Operation
- Near Continuous Operation (NCO)
  - defined 187
  - preallocating CDS space for SL8500 LSMs 48
- NL 41
- NONE 34
- nonlibrary esoterics, MSP configuration 14
- NSL 41

## O

- output stack, defined 187
- over-limit cleaning cartridge
  - defined 187
- over-use cleaning cartridge
  - defined 187
- overview
  - LIBGEN macros 28
  - of configuration tasks 1

## P

- P/DAS, defined 187
- Paired-CAP mode, defined 187

- parameter library (PARMLIB) control statements 90

- Parameters 49

- parameters
  - 050 52
  - 075 52
  - 100 52
  - 4410 52
  - 9310 52
  - 9360 52
  - 9740 52
  - ACSDRV 45
  - ACSLIST 37, 44
  - ADDRESS 49, 62
  - ADJACNT 56
  - AL 41
  - ALL 35
  - BOTH 34
  - CLN 37
  - CLNPRFX 37
  - COMPRFX 38
  - DOOR 56
  - DRIVE 53
  - DRVELST 53, 60
  - DRVHOST 42
  - EJCTPAS 41
  - FUTRACS 42
  - FUTRLSM 48
  - HOSTDRV 60
  - HOSTID 36
  - JOURNAL 34
  - label 34
  - LSM 47, 52
  - MAJNAME 37
  - NL 41
  - NONE 34
  - NSL 41
  - PASTHRU 54
  - SCRLABL 41
  - SHADOW 34
  - SL 41
  - SL3000 53
  - SLIACS 45
  - SLIENDGN 69
  - SLIRCVRY 34
  - SMF 37
  - STANDBY 35
  - STATION 46
  - station 49
  - TCHNIQE 34
  - TYPE 52
  - WINDOW 57

- PARMLIB control statements 90

- pass-thru port (PTP)
  - relationship definition 12

- pass-thru port (PTP), defined 187

- PASTHRU 54

- Peer-to-Peer Remote Copy (PPRC), defined 188
- physical plan, verification 9
- plan components
  - DASD planning 16
  - DASD sharing plan 19
  - esoterics and address configuration definitions 13
  - pass-thru port (PTP) and LSM definitions 12
  - physical plan verification 9
  - system software verification 10
- planning
  - calculating DASD space 21
  - cartridge migration to the library 119
  - configuration 1
  - DASD sharing 19
  - DASD space for shadowing and journaling 19
  - DASD, automated space calculation 22
- playground, defined 188
- positional parameter, defined 188
- PowderHorn (9310) LSM, defined 188
- pre-execution tasks 25
- prefix 37
- primary CDS 16, 78
  - defined 188
- priority CAP (PCAP), defined 188
- problems
  - DEGRAG, with VM HSC 19
  - MSP running under VM 20
  - processing HSM 19
- PTFs, deinstallation 178
- ptppanel0 54

## Q

- Queued Sequential Access Method (QSAM), defined 188

## R

- ranges, conventions 157
- RECONFIG 97
- reconfiguration, dynamic hardware 167, 171
- reconfiguring the library 3
- recovering the CDS 17
- recovery strategies, control data set 16
- RECtech, defined 188
- Remote Diagnostics Center (RDC), defined 188
- requirements
  - CDS and journaling 171
  - DASD sharing 19
  - for utility usage 172
- RESET 95

## S

- SCRLABL 41
- secondary CDS 16
  - defined 189
- service levels
  - starting the HSC to the base service level 103
  - starting the HSC to the full service level 103
- ServiceTek, defined 189
- Shadow CDS, secondary CDS 17
- shadowing 17
- Significant Event Notification (SEN)
  - defined 189
- SL 41
- SL3000 library
  - calculating cartridge capacity 23, 76
  - calculating DASD space for 21
  - calculating DASD space for future LSMs 22
  - drive panel numbering 63
  - SLILSM requirement 51
  - storage cell capacity 85
- SL8500 library
  - calculating cartridge capacity 23, 76
  - calculating DASD space for 21
  - drive panel numbering 65
  - Near Continuous Operation (NCO), SLIACS FUTRLSM
    - parameter 48
  - SLILSM example 59
  - storage cell capacity 84
- SLIACS
  - parameters
    - FUTRLSM 48
    - LSM 47
    - SLIACS 45
    - STATION 46
  - purpose 45
  - syntax 45
- SLIALIST
  - example 44
  - parameters
    - acslst 44
  - purpose 44
  - syntax 44
- SLICREAT
  - executing 77
  - verifying completion 80
- SLIDLIST
  - example 61
  - parameters
    - HOSTDRV 60
  - purpose 60
  - syntax 60
- SLIDRIVS

- example 67
- parameters
  - ADDRESS 62
- purpose 62
- SL3000 library drive panel numbering 63
- SL8500 library drive panel numbering 65
- syntax 62
- SLIENDGN 69
  - parameters 69
  - purpose 69
  - syntax 69
- SLIEXERS 117
- SLILIBRY
  - parameters
    - ACSLIST 37
    - CLNPRFX 37
    - COMPRFX 38
    - DRVHOST 42
    - EJCTPAS 41
    - examples 36
    - FUTRACS 42
    - HOSTID 36
    - MAJNAME 37
    - SCRLABL 41
    - SLILIBRY 36
  - purpose 36
  - syntax 36
- SLILSM
  - example 58
  - parameters
    - 050 52
    - 075 52
    - 100 52
    - 3000 53
    - 4410 52
    - 9310 52
    - 9360 52
    - 9740 52
    - ADJACNT 56
    - DOOR 56
    - DRIVE 53
    - DRVELST 53
    - LSM 52
    - PASTHRU 54
    - TYPE 52
    - WINDOW 57
  - purpose 51
- SLIRCVRY 34
  - example 35
  - macro 34
  - parameters
    - ALL 35
    - BOTH 34
    - JOURNAL 34
    - label 34
    - NONE 34
    - SHADOW 34
    - SLIRCVRY 34
    - STANDBY 35
    - TCHNIQE 34
  - purpose 34
  - syntax 34
- SLISTATN
  - example 50
  - parameters
    - ADDRESS 49
    - station 49
  - purpose 49
  - syntax 49
- SLIVERFY 71
- SMC, initialization order with HSC 128, 176
- SMF 37
- software
  - support 165
  - support for down-level HSC releases 10
- special use cartridge, defined 189
- spent cleaning cartridge
  - defined 189
- SSYS, starting HSC using the SSYS parameter 103
- standard (4410) LSM, defined 190
- standard CAP, defined 189
- STANDBY 35
- standby CDS
  - creating 78
  - defined 190
  - recovery 17
- standby LMU
  - defined 190
- standby, defined 190
- START command, issuing 102
- START PROC DD statements, descriptions 99
- START procedure 100
- start task procedure
  - HSC
    - coding and cataloging 26
    - cold start 95
- START, HSC 93
- starting
  - HSC using the SSYS parameter 103
  - the HSC to the base service level 103
  - the HSC to the full service level 103
- STATION 46
  - station, defined 190
- STK1 (T9840), external media label requirements 120
- STK2 (9940), external media label requirements 121
- stopping the HSC 105

- storage
  - class, defined 190
  - group, defined 190
- storage cell capacity
  - for 4410, 9310, and ExtendedStore LSMs 82
  - for 9360 LSMs 82
  - for SL3000 libraries 85
  - for SL8500 libraries 84
  - for TimberWolf 9740 LSMs 83
- summary
  - of configuration tasks 1
  - of LIBGEN macros 28
- support, software level verification 10
- symbols,  $\mu$ -software, defined 193
- SYNCSORT 11
- syntax
  - elements 155
  - HSC EXEC 94
- system support, software level verification 10

## T

- T9840A Cartridge Subsystem, defined 193
- T9840B Cartridge Subsystem, defined 194
- T9840C Cartridge Subsystem, defined 194
- T9940A Cartridge Subsystem, defined 194
- T9940B Cartridge Subsystem, defined 194
- TCHNIQE 34
- terminating, the HSC 105
- test programs 117
- test programs, SLIEXERS 117
- testing the installation 107
- TimberWolf (9740) LSM, defined 191
- TimberWolf CAP, defined 191
- transport, defined 191
- tri-optic label verification 119
- Tri-Optic label, defined 191
- TYPE 52

## U

- unit addresses, configuring 15
- unit affinity, defined 191
- up-level migration 173
- utility usage requirements 172

## V

- verifying
  - library generation 71
  - successful completion of SLICREAT 80
  - the installation 107
- virtual media, HSC support for 170
- Virtual Thumbwheel, defined 192
- VOLSER
  - defined 192
- volume, defined 192
- VSM, with HSC 170

## W

- WINDOW 57
- WolfCreek (9360) LSM, defined 192
- WolfCreek CAP, defined 192
- WolfCreek optional CAP, defined 192

## Z

- ZCART
  - external media label requirements 119
- ZCART, defined 192