

**Oracle Utilities Smart Grid Gateway
Adapter for Silver Springs Networks**

Configuration Guide

Release 2.0.0 Service Pack 8

E29540-02

November 2012

Copyright © 1999, 2012 Oracle and/or its affiliates. All rights reserved.

Primary Author: TUGBU Documentation

Contributing Author: TUGBU Documentation

Contributor: TUGBU Documentation

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this software or related documentation is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS

Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Contents

Chapter 1

Overview.....	1-1
What Is This Book?.....	1-2
Other Documentation.....	1-2
Oracle Utilities Application Framework Configuration Tools.....	1-4

Chapter 2

General Configuration	2-1
Understanding the Adapter.....	2-2
Understanding the Adapter Processing.....	2-3
Initial Measurement Data Load and Device Events.....	2-3
Device Communication	2-5
Configuring a Silver Spring Networks Head-End System	2-12
XAI Inbound Services.....	2-12
XAI Senders.....	2-13
Outbound Message Types	2-14
External System.....	2-14
Service Provider	2-15
Processing Methods for Service Provider.....	2-15
Configuring Silver Spring Networks Extendable Lookups	2-18
Silver Spring Networks Device Event Mapping	2-18
Silver Spring Networks UOM Code to Standard UOM Mapping.....	2-18
Silver Spring Networks Interval Status Code to Condition Mapping.....	2-19
Extending the Adapter for Silver Spring Networks.....	2-20

Appendix

Glossary	3-1
-----------------------	------------

Index

Chapter 1

Overview

This chapter provides an overview of this configuration guide and an introduction to the Oracle Utilities Smart Grid Gateway adapter for Silver Spring Networks, including the following:

- **What Is This Book?**
- **Other Documentation**
- **Oracle Utilities Application Framework Configuration Tools**

What Is This Book?

This guide describes how to configure the Oracle Utilities Smart Grid Gateway adapter for Silver Spring Networks. It is intended for implementers and system administrators responsible for configuration and initial setup of the application.

The Oracle Utilities Smart Grid Gateway adapter for Silver Spring Networks is based on the Oracle Utilities Application Framework (OUAF). For information about using and configuring basic Framework functions, see the Oracle Utilities Application Framework documentation. This guide only covers configuration of functions specific to the Oracle Utilities Smart Grid Gateway adapter for Silver Spring Networks.

The body of this guide presents conceptual information to help you understand how the system works as well as how the various configuration options affect system functionality. Once you have an understanding of the system's capabilities, you can plan your data setup and design any customizations you want to implement.

When you are ready to implement your design, use **Chapter 2: General Configuration** to guide you through the setup process of admin data. This section lists each object that can be configured, defines any prerequisites for configuration.

This guide includes the following chapters:

- **Chapter 1: Overview** (this chapter) provides an overview of the Oracle Utilities Smart Grid Gateway adapter for Silver Spring Networks architecture and of the configuration tools and process used in implementing the product.
- **Chapter 2: General Configuration** provides an overview of some general configuration options used by the Oracle Utilities Smart Grid Gateway adapter for Silver Spring Networks.

Other Documentation

This section describes other documentation provided with the Oracle Utilities Smart Grid Gateway adapter for Silver Spring Networks.

Installation Documentation

Installation documentation describes the steps involved in the installation and initial set up of the system, and includes the following documents:

- Oracle Utilities Smart Grid Gateway Quick Install Guide
- Oracle Utilities Smart Grid Gateway DBA Guide
- Oracle Utilities Smart Grid Gateway Installation Guide

User Documentation

User documentation provides conceptual information and procedures related to working with the various objects used in the system, and includes the following documents:

- Oracle Utilities Application Framework Business Process Guide
- Oracle Utilities Application Framework Administration Guide
- Oracle Utilities Meter Data Framework User's Guide
- Oracle Utilities Smart Grid Gateway User's Guide

Supplemental Documentation

Supplemental documentation provides technical information related to system administration tasks and include the following documents:

- Oracle Utilities Smart Grid Gateway Server Administration Guide

- Oracle Utilities Smart Grid Gateway Batch Server Administration Guide
- Oracle Utilities Smart Grid Gateway Configuration Guide

The Oracle Utilities Smart Grid Gateway adapter for Silver Spring Networks uses Oracle Service Bus (OSB) and Oracle Business Process Execution Language (BPEL) as middleware components. These tools are part of the Oracle SOA Suite. See the Oracle SOA Suite Documentation library (<http://www.oracle.com/technetwork/middleware/soasuite/documentation/index.html>) for more information about using these tools.

Embedded Help

Oracle Utilities Smart Grid Gateway, like all Oracle Utilities Application Framework applications, provides extensive internal documentation. For example, detailed descriptions of system objects are included in the objects' maintenance portals. The lifecycle of each business object is described on the Lifecycle tab and depicted in flow diagrams on the Summary tab. This information is extremely useful for implementers and system administrators.

Embedded help is provided for all non-obvious fields in most portals and zones. If a field has associated help text, a ? icon appears next to the field when the zone is displayed.

Online Help

Oracle Utilities Smart Grid Gateway also includes context-sensitive help for all the user interface screens users will typically work with as they use the system. Online help contains conceptual information and procedures related to working with the various objects used in the system.

The online help is divided into the following three sections:

- Oracle Utilities Application Framework: Describes the features and functions of the application framework (F1)
- Oracle Utilities Meter Data Framework: Describes the features and functions provided in the meter data framework (D1)
- Oracle Utilities Smart Grid Gateway: Describes the features and functions provided in the smart grid gateway application (D7)

Oracle Utilities Application Framework Configuration Tools

Please refer to the general configuration guide for information on the Oracle Utilities Application Framework (OUAF) configuration tools that can be used to create and customize system entities, such as business objects, portals, zones, and UI maps. Refer to the Oracle Utilities Application Framework configuration tools documentation for instructions on using tools such as:

- **Configuration Process Overview**
- **Data Areas**
- **Algorithms**
- **Entity Naming Conventions**

This configuration guide does not duplicate the concepts and procedures presented in the Oracle Utilities Application Framework configuration tools documentation; rather, it will identify the specific objects used by the Oracle Utilities Smart Grid Gateway adapter for Silver Spring Networks that can be configured and customized using the configuration tools, as well as application parameters and objects that can be managed within the application components themselves.

This guide assumes that all individuals responsible for system configuration and implementation will be familiar with the Oracle Utilities Application Framework and will have completed training on the Oracle Utilities Application Framework Configuration Tools.

Chapter 2

General Configuration

This chapter provides details on the components and configurations required for the Smart Grid Gateway adapter for Silver Spring Networks including the following:

- **Understanding the Adapter**
- **Understanding the Adapter Processing**
- **Configuring a Silver Spring Networks Head-End System**
- **Configuring Silver Spring Networks Extendable Lookups**
- **Extending the Adapter for Silver Spring Networks**

Understanding the Adapter

The Oracle Utilities Smart Grid Gateway Adapter for Silver Spring Networks supports communication with the Silver Spring Networks UtilityIQ application, including measurement data and device event loading, and command messaging in support of commissioning, connect, disconnect, decommissioning, status check, and on-demand read. The following table describes the attributes of the adapter:

Attribute	Details
Currently Supported Version	Utility IQ 4.5
Protocol	Proprietary
Market(s)	Worldwide
Architecture	RF WAN (mesh) based on Access Points

The adapter uses Oracle Service Bus (OSB) and Oracle Business Process Execution Language (BPEL) to facilitate communication between Oracle Utilities Smart Grid Gateway and the Silver Spring Networks UtilityIQ application.

The following functionality is included:

Measurement Data and Device Event Loading - data parsing and transformation via Oracle Service Bus from Silver Spring Networks format into the Oracle Utilities Meter Data Framework unified format for measurement data and device events.

Measurement Data and Device Event Processing - configurable mapping for Silver Spring Networks status codes and device event names to Oracle Utilities Meter Data Framework standard values.

Smart Meter Command Processing - sending/receiving messages to/from the Silver Spring Networks application to initiate smart meter commands from Oracle Utilities Smart Grid Gateway. The Silver Spring Networks adapter supports the following types of commands and communications:

- **Meter Commissioning** - business objects and BPEL processes to support issuing meter commissioning commands.
- **Remote Connect** - business objects and BPEL processes to support issuing remote connect commands.
- **Remote Disconnect** - business objects and BPEL processes to support issuing remote disconnect commands
- **Meter Decommissioning** - business objects and BPEL processes to support issuing meter decommissioning commands.
- **On-Demand Read** - business objects and BPEL processes to support issuing on-demand read commands.

Understanding the Adapter Processing

This section provides details concerning the OSB processing, BPEL Processes, and OUAF objects supplied as part of the base package. This information illustrates how the base package objects were designed, and can serve as the basis for any customizations you create as part of your implementation.

This section includes:

- **Initial Measurement Data Load and Device Events**
- **Device Communication**

Initial Measurement Data Load and Device Events

The initial measurement data load and subsequent device event processing use OSB to poll for, parse, and transform the head-payloads into the Oracle Utilities Smart Grid Gateway service format. Payloads contain measurements and meter events in some head-end specific format OSB then places each service call into a JMS queue within the Oracle Utilities applications. The JMS client consumes the entries and invokes the respective services in parallel then a service creates initial measurements with data in a common format with head-end-specific processing as needed. A second service creates device events with data in a common format.

Initial Measurement

The usage data exported from the AMI head-end system as a file in Silver Spring Networks XML format is loaded into Oracle Utilities as initial measurement data. The following OSB projects, delivered in the base product, help manage the usage processing:

1. SGG-D7-SSNXML-BASE contains components responsible for “actual” processing of incoming data. It should not be modified during configuration. This project can be upgraded without affecting the customization and environment settings added to SGG-D7-SSNXML-CM.
2. SGG-D7-SSNXML-CM allows for customization and simplifies future upgrades.

The runtime configuration settings for the SGG-D7-SSNXML-CM project are stored in the xquery file EnvironmentSettings.xq. You can use this file to adjust initial measurement data processing. For example, if you want to load raw data you would specify “true” for the content of the populateRawIMD element.

The following table describes the elements included in the EnvironmentSettings.xq file:

Element	Description
populateRaw	Determines if the initial measurement data is populated as raw data. Valid values are: <ul style="list-style-type: none"> • true • false
callPreProcessing	Determines if the preprocessing proxy service is called. Valid values are: <ul style="list-style-type: none"> • true • false
callPostProcessing	Determines if the postprocessing proxy service is called. Valid values are: <ul style="list-style-type: none"> • true • false

Element	Description
destinationRootElementInterval	Holds the name of XAI inbound service for the interval IMD seeder.
destinationRootElementScalar	Holds the name of XAI inbound service for the scalar IMD seeder. In most cases it is the same as destinationRootElementInterval.
destinationRootElementEvent	Holds the name of XAI inbound service for the Device Event seeder.

Device Events

The device event data exported from the head-end system as a file in Silver Spring Networks CSV format is loaded into Oracle Utilities as a Device Event. One of your configuration tasks is to customize the device events processing.

The required functionality is delivered in the base product as two OSB projects:

1. SGG-D7-CSV-BASE contains components responsible for “actual” processing of incoming data. It can be upgraded in future without affecting the customization and environment settings that done in SGG-D7-CSV-CM project.
2. SGG-D7-CSV-CM allows the customization and simplifies the future upgrades.

Base Package Business Objects

The Silver Spring Networks adapter base package includes the following initial measurement and device event business objects:

Business Object Name	Description
D7-InitialLoadIMDInterval	SSN - Initial Load IMD - Interval Used when loading Silver Spring Network (SSN) interval measurements into the system for the first time.
D7-InitialLoadIMDScalar	SSN - Initial Load IMD - Scalar Used when loading Silver Spring Network (SSN) scalar measurements into the system for the first time.
D7-DeviceEventMappingLookup	SSN - Device Event Mapping
D7-HeadendUOMLookup	SSN - UOM Code to Standard UOM Mapping
D7-IntStsCodeToCondMapLookup	SSN - Interval Status Mapping This is a child BO of Interval Status Code to Condition Mapping

Silver Spring Networks Device Event Mapping BO

The Silver Spring Networks head-end system is capable of sending a large selection of device events. The adapter maps these events into standard Oracle Utilities Smart Grid Gateway event names and categories. To meet this end, a Silver Spring Networks-specific extendable lookup business object, D7-DeviceEventMappingLookup, holds device event names specific to Silver Spring Networks.

Device Communication

The basic communication for all business processing is essentially the same. A communication request is sent from the Oracle Utilities application to Silver Spring Networks. This request would be for a connect/disconnect, commission/decommission, measurement data, device status check, or an on-demand read. The designated BPEL process transforms the request from Oracle Utilities format to Silver Spring Networks format and invokes the related Silver Spring Networks web service. Silver Spring Networks then returns a reply, and the BPEL process transforms the reply message back to the appropriate format so that Oracle Utilities can receive the response. The following sections describe the key components in this processing, including:

- **Communication Flows**
- **Base Package Business Objects**
- **External System**
- **Outbound Message Types**
- **XAI Configuration**
- **BPEL Processes**

Communication Flows

The table below lists the communications created for each Silver Spring Networks command:

Command	Outbound Communication	Inbound Communication	Completion Event
Remote Connect	SSN-Connect or Disconnect	<ul style="list-style-type: none"> • SSN – Connect or Disconnect Response • Remote Provisioning Job (Get Status) 	Connect Device Completion Event
Remote Disconnect	SSN-Connect or Disconnect	SSN – Connect or Disconnect Response	Disconnect Device Completion Event
Device Commissioning	SSN- Replace Location		Device Commissioning Completion Event
Device Decommissioning	SSN- Replace Device At Location (Decomm)		Device Decommissioning Completion Event
On-Demand Read (Scalar)	SSN – Add Meter Read Job (Scalar)	SSN – Meter Read Response (Scalar)	Create IMD Completion Event
On-Demand Read (Interval)	SSN – Add Meter Read Job (Interval)	SSN – Meter Read Response (Interval)	Create IMD Completion Event

Command	Outbound Communication	Inbound Communication	Completion Event
Device Status Check	SSN – Add Ping job	SSN – Ping Job Response	

Base Package Business Objects

The Silver Spring Networks Adapter base package includes the following communication business objects:

Business Object Name	Description
D7-AddMeterReadJobInterval	SSN - Add Meter Read Job (Interval)
D7-AddMeterReadJobScalar	SSN - Add Meter Read Job (Scalar)
D7-AddPingJob	SSN - Add Ping Job
D7-ConnectDisconnect	SSN - Connect or Disconnect
D7-ConnectDisconnectResp	SSN - Connect or Disconnect Response
D7-GetStatus	SSN - Get Status
D7-GetStatusResponse	SSN - Get Status Response
D7-MeterReadResponseInterval	SSN - Meter Read Response (Interval)
D7-MeterReadResponseScalar	SSN - Meter Read Response (Scalar)
D7-PingJobResponse	SSN - Ping Job Response
D7-ReplaceDeviceAtLocForDecomm	SSN - Replace Device At Location (Decomm)
D7-ReplaceLocation	SSN - Replace Location

Silver Spring Event Data Mapping

The Silver Spring event file format maps as follows into the business object, D1-DeviceEventMappingLookup:

Silver Spring Flat File Field	Device Event Seeder BO Element	Comments
Transaction ID (from Header record)	External Source Identifier	This is the file name.
Device Identifier	External Device Identifier	
Event Name	External Event Name	
Event Creation Date/Time	Event Date/Time	

Silver Spring Flat File Field	Device Event Seeder BO Element	Comments
Device Type	External Device Type	This element has no real bearing on the device type within MDM/SGG. Its valid values include (although the element itself is free-form): Meter Collector Router
Service Location ID	External Service Location ID	
Communication Module Serial Number	External Communication Module Identifier	
Event Category ID	External Event Category	
Event Severity	External Event Severity	Valid values include (although the element itself is free-form): Alert Information
Status Value	External Status Value	This represents additional information that relates to the event itself.
Status Date/Time	External Status Date/Time	The date & time at which the additional information referenced above had occurred.

External System

You must create an External System for each external system to which Oracle Utilities Smart Grid Gateway will send messages. Each external system defines a set of outbound message types that will be sent to that system. Each external system outbound message type also specifies the following:

- The processing method used to send the message (Batch, XAI, or Real-time)
- The corresponding XAI senders
- Batch Control (if Processing Method is set to Batch)
- Message XSL, W3C Schema, and Response XSL (as applicable)

Outbound Message Types

Acknowledgement and response messages are sent and received validating that commands have been transmitted.

XAI Configuration

The XML Application Integration (XAI) utility allows you to configure your system to receive information from and to send information to external applications using XML. The Silver Spring Networks adapter for Smart Grid Gateway uses one XAI inbound service to map device events. This is the same XAI inbound service used by the D1 application.

XAI Inbound Services

XAI inbound systems define the details of how messages are received from an external system, including the inbound communication business object (or business service or service script) to be invoked when the response message is received. As in the case of inbound communication business objects, the set of XAI inbound services you need to create is based on the types of messages the system is designed to send.

The Oracle Utilities Smart Grid Gateway adapter for Silver Spring Networks includes the following XAI inbound services:

XAI Inbound Service	Description
D1-BulkRequestHeader	<p>Bulk Request Header</p> <p>Schema Name: D1-BulkRequestHeader</p>
D1-BulkRequestUpdate	<p>Bulk Request Update</p> <p>Schema Name: D1-BULKUPD</p>
D1-BulkResponse	<p>Bulk Response</p> <p>Schema Name: D1-BulkResponse</p>
D1-DeviceEventSeeder	<p>Used for upload of device events.</p> <p>Schema Name: D1-DeviceEventSeeder.</p> <p>The Device Event Seeder business object serves as a means of adding device events both from outside the application and from online. Its pre-processing algorithms determine the device event type - which in turn defines the device event BO that should be used to create the device event.</p> <p>If a device event type can't be determined, the device event is created using this BO. Such a device event can then be re-processed - and if successful, a new device event is created.</p>
D1-DeviceStatusCheck	<p>Device Status Check</p> <p>Schema Name: D1-DeviceStatusCheck</p> <p>This service is invoked by the integration layer to instantiate a Device Status Check command.</p>
D1-InitialLoadIMD	<p>Used by OSB to instantiate an IMD</p> <p>Schema Name: D1-IMDSeeder.</p> <p>The IMDSeeder business object is used to determine the type of initial measurement business object to instantiate when receiving usage readings from a head-end system.</p>

XAI Inbound Service	Description
D1-RemoteConnect	<p>Remote Connect</p> <p>Schema Name: D1-RemoteConnect</p> <p>This service is invoked by the integration layer to instantiate a Remote Connect command.</p>
D1-RemoteDisconnect	<p>Remote Disconnect</p> <p>Schema Name: D1-RemoteDisconnect</p> <p>This service is invoked by the integration layer to instantiate a Remote Disconnect command.</p>
D7-ConnectDisconnectResponse	<p>Connect Disconnect Response</p> <p>Schema Name: D7-ConnectDisconnectResp</p> <p>Retrieves response for Remote provisioning Job Connect or Disconnect commands.</p>
D7-GetStatusResponse	<p>D7-GetStatusResponse</p> <p>Schema Name: D7-GetStatusResponse</p> <p>Retrieve response from the Get Status command.</p>
D7-MeterReadResponseInterval	<p>SSN - Meter Read Response (Interval)</p> <p>Schema Name: D7-MeterReadResponseInterval</p>
D7-MeterReadResponseScalar	<p>SSN - Meter Read Response (Scalar)</p> <p>Schema Name: D7-MeterReadResponseScalar</p>
D7-PingJobResponse	<p>SSN - Ping Response</p> <p>Schema Name: D7-PingJobResponse</p> <p>Retrieves response from the Ping Job Response command.</p>

XAI Senders

XAI senders define the details of how messages are sent to an external system. As in the case of outbound communication business objects and outbound message types, the set of XAI senders you need to create is based on the types of messages the system is designed to accept.

BPEL Processes

These processes are responsible for performing the conversion from Oracle Utilities format to Silver Spring Networks format, invoking process callouts and invoking the remote endpoint to trigger the device events.

OnDemandRead Composite Process - Provides access points to edge application and handles data between edge application and head end system. It invokes sequence of web methods to head end system and retrieves meter read and send it back to Edge application.

ConnectDisconnect Composite Process - Performs the conversion from Oracle Utilities format to SSN format, invokes process callouts, and invokes the remote endpoint to trigger the connect event. A second, asynchronous reply will call back into the OUAF layer when the status change is completed at the head-end system. Another asynchronous reply will call back into the OUAF layer to send Meter Read Results.

CommissionDecommission Composite Process - Performs the conversion from Oracle Utilities format to SSN UIQ format, invokes process callouts, and invokes the remote endpoint to trigger the commission or decommission of meter.

DeviceStatusCheck Composite - Performs the conversion from Oracle Utilities format to SSN format, invokes process callouts, and makes a call via a proxy to the head-end system starting the Meter Ping operation. In an ideal scenario, the job status is returned as completed and the results are acquired and sent back to OUAF. If the job takes longer, OUAF will initiate a second request that will poll the head end system for the job status. When the job is completed, the results are returned to OUAF.

Common Composite - Contains two main classes of operations: Proxies and ProcessCallouts. Proxies are simple mediators that forward a web service call to a preset endpoint. No transformations are performed. They are convenient because they allow head end URLs and security to be set in a single composite. ProcessCallouts are points of customization which allow users to modify data and/or initiate some external business process.

BulkRequest Composite - Provides access points to requesting application. It decouples the bulk request into single commands for each meter/device in the request and sends it to edge application for processing.

Web Services

The following web services are all defined in the Silver Spring Networks head-end system.:

- **CommissionDecommissionService**
 - **BPEL Process:** CommissionDecommission
 - **Operation:** ReplaceDeviceAtLocation
 - **Endpoint URL:** http://<EM_SERVER>:<EM_SERVER_PORT>/soa-infra/services/SSN/CommissionDecommission/CommissionDecommissionService
- **CommissionDecommissionService**
 - **BPEL Process:** CommissionDecommission
 - **Operation:** ReplaceLocation
 - **Endpoint URL:** http://<EM_SERVER>:<EM_SERVER_PORT>/soa-infra/services/SSN/CommissionDecommission/CommissionDecommissionService
- **ConnectDisconnectService**
 - **BPEL Process:** ConnectDisconnect
 - **Operation:** AddRemoteProvisioningJob
 - **Endpoint URL:** http://<EM_SERVER>:<EM_SERVER_PORT>/soa-infra/services/SSN/ConnectDisconnect/ConnectDisconnectService
- **DeviceStatusCheckService**
 - **BPEL Process:** DeviceStatusCheck
 - **Operation:** AddPingJob
 - **Endpoint URL:** http://<EM_SERVER>:<EM_SERVER_PORT>/soa-infra/services/SSN/DeviceStatusCheck/DeviceStatusCheckService
- **AddMeterReadJobService**
 - **BPEL Process:** AddMeterRead
 - **Operation:** AddMeterReadJob
 - **Endpoint URL:** http://<EM_SERVER>:<EM_SERVER_PORT>/soa-infra/services/SSN/OnDemandRead/AddMeterReadJobService
- **OnDemandReadService**
 - **BPEL Process:** OnDemandRead
 - **Operation:** GetJobStatus
 - **Endpoint URL:** http://<EM_SERVER>:<EM_SERVER_PORT>/soa-infra/services/SSN/OnDemandRead/OnDemandReadService

Configuring a Silver Spring Networks Head-End System

This section outlines the configuration required for the Oracle Utilities Smart Grid Gateway Adapter for Silver Spring Networks to communicate with the Silver Spring Networks UtilityIQ. This includes:

- **XAI Inbound Services**
- **XAI Senders**
- **Outbound Message Types**
- **External System**
- **Service Provider**
- **Processing Methods for Service Provider**

XAI Inbound Services

XAI inbound services define the details of how messages are received from an external system. This includes incoming usage and device events, as well as messages sent from the Silver Spring Networks UtilityIQ application in response to a command request.

The following XAI Inbound Services must be configured in your system. If these are not present in your configuration, add them. Refer to the Oracle Utilities Application Framework documentation for more information about creating XAI inbound services.

XAI Inbound Service Name	Description	Schema Type	Schema Name
D1-BulkRequestHeader	Bulk Request Header	Business Object	D1-BulkRequestHeader
D1-BulkRequestUpdate	Bulk Request Update	Business Object	D1-BULKUPD
D1-BulkResponse	Bulk Response	Business Object	D1-BulkResponse
D1-DeviceEventSeeder	Device Event Seeder	Business Object	D1-DeviceEventSeeder
D1-DeviceStatusCheck	Device Status Check	Business Object	D1-DeviceStatusCheck
D1-InitialLoadIMD	Used by OSB to instantiate an IMD	Business Object	D1-IMDSeeder
D1-PayloadErrorNotif	Payload Error Notification	Business Object	D1-PayloadErrorNotif
D1-PayloadStatistics	Payload Statistics	Business Object	D1-PayloadStatistics
D1-PayloadSummary	Payload Summary	Business Object	D1-PayloadSummary
D7-ConnectDisconnectResponse	Connect Disconnect Response	Business Object	D7-ConnectDisconnectResp
D7-GetStatusResponse	Get Status Response	Business Object	D7-GetStatusResponse
D7-MeterReadResponseInterval	SSN - Meter Read Response (Interval)	Business Object	D7-MeterReadResponseInterval
D7-MeterReadResponseScalar	SSN - Meter Read Response (Scalar)	Business Object	D7-MeterReadResponseScalar
D7-PingJobResponse	SSN - Ping Response	Business Object	D7-PingJobResponse

XAI Senders

XAI senders define the details of how messages are sent to an external system, such as messages containing device command requests. An XAI sender should be configured for each command.

The following XAI Senders must be configured in your system. If these are not present in your configuration, add them. Refer to the Oracle Utilities Application Framework documentation for more information about creating XAI senders.

XAI Sender	Description	Operation	Service
D7-DECOMM	SSN Replace Device at Location for Decommission	ReplaceDeviceAtLocation	CommissionDecommissionService
D7-COMM	SSN Replace Location - Commission	ReplaceLocation	CommissionDecommissionService
D7-ADDJOB	SSN Add Meter Read Job	AddMeterReadJob	AddMeterReadJobService
D7-ADDPING	SSN Add Ping Job	addPingJob	DeviceStatusCheckService
D7-CONNECT	SSN Connect Device	AddRemoteProvisioningJob	ConnectDisconnectService
D7-GTSTATUS	SSN Get Status	AddRemoteProvisioningJob	ConnectDisconnectService

Note: The following apply to all of the above XAI senders:

Main Tab:

- **Invocation Type:** Real-time
- **XAI Class:** RTHTTPSNDR (Sender routes message via HTTP real-time)
- **MSG Encoding:** UTF-8 message encoding

Context Tab:

- **HTTP Header:** SOAPAction:http://xmlns.oracle.com/ouaf/ssn/<OPERATION>
- **HTTP Login User:** <USER_ID>
- **HTTP Login Password:** <PASSWORD>
- **HTTP Method:** POST
- **HTTP URL 1:** http://<EM_SERVER>:<EM_SERVER_PORT>/soa-infra/services/SSN/<SERVICE>

where:

- **<OPERATION>**: the operation performed by the XAI Sender (see Operation column in the table above)
- **<USER_ID>**: the user ID used to log into WebLogic Enterprise Manager
- **<PASSWORD>**: the password used to log into WebLogic Enterprise Manager
- **<EM_SERVER_IP>**: the machine name or IP address of server where the WebLogic Enterprise Manager is installed
- **<EM_SERVER_PORT>**: the port where the WebLogic Enterprise Manager is installed
- **<SERVICE>**: the service invoked by the XAI Sender (see Service column in the table above)

Outbound Message Types

Outbound message types define specific types of messages sent to an external system, such as messages containing device command requests.

The following outbound message types must be configured in your system. If these are not present in your configuration, add them. Refer to the Oracle Utilities Application Framework documentation for more information about creating outbound message types.

Outbound Message Type	Description
D7-COMMS	Replace Device At Location
D7-OB MSG TY	Outbound Message Type SSN

Note: The following apply to all of the above outbound message types:

- **Business Object:** D1-OutboundMessage (Outbound Message)
- **Priority:** Priority 50

External System

External systems represent external applications with which the Smart Grid Gateway will exchange messages or data. In the case of the Smart Grid Gateway adapters, external systems represent the head-end systems with which the adapters communicate.

An external system that represents the Silver Spring Networks UtilityIQ must be present in your system. If this is not present in your configuration, add it, along with the following Outbound Message Types. Refer to the Oracle Utilities Application Framework documentation for more information about creating external systems.

External System - Silver Spring Networks:

- **External System:** Silver Spring Networks
- **Description:** Silver Spring Networks
- **Outbound Message Types:**

Outbound Message Type	XAI Sender
D7-OB MSG TY (Outbound Message Type SSN)	XAI sender associated with the Outbound Message Type

Note: The following apply to all of the above outbound message types:

- **Processing Method:** Real-time
- **Message XSL:** D7-Request.xsl
- **Response XSL:** D7-Response.xsl

Service Provider

Service providers represent external entities that serve various roles relative to the application, including head-end systems, billing systems to which the application sends bill determinant data, market participants in a deregulated environment, outage management systems that receive meter event data from the application, or other parties that require or provide information to the system. The head-end systems that collect and send measurement data and meter events to the application are defined as service providers.

A service provider that represents the Silver Spring Networks UtilityIQ must be present in your system. If this is not present in your configuration, add it. Refer to the Oracle Utilities Meter Data Framework documentation for more information about creating service providers.

Service Provider - Silver Spring Networks:

- **Service Provider:** Silver Spring Networks
- **Description:** Silver Spring Networks
- **External Reference ID:** Silver Spring Networks
- **External System:** Silver Spring Networks
- **Our Name/ID in Their System:**
- **AMI Device ID Type:** Internal Meter Number
- **Pre-Commissioning Device ID Type:**
- **AMI Measuring Component ID Type:** Channel ID

Processing Methods for Service Provider

Processing methods define the format or means by which a service provider receives and/or sends data from and/or to the application, including bill determinants, usage data, or device events. Processing methods are also used to define how to create information internal to the application such as initial measurement data and device events. Processing methods can also be used to define how command requests are sent to the Silver Spring Networks UtilityIQ.

The following types of processing methods must be configured for the Silver Spring Networks service provider. Refer to the Oracle Utilities Meter Data Framework documentation for more information about configuring processing methods.

Initial Measurement Creation

Initial measurement creation processing methods define the business objects used to create initial measurements. The IMD Seeder XAI Inbound Service uses this processing method to determine which type of initial measurement business object to instantiate when receiving usage from the Silver Spring Networks UtilityIQ.

Processing Method - Initial Measurement Creation

- **Service Provider:** Silver Spring Networks
- **Processing Role:** Initial Measurement Creation
- **Description:** Silver Spring Networks Initial Measurement Creation
- **Status:** Active
- **Default Processing Method:**
 - **Business Object:** D7-InitialLoadIMDInterval (Silver Spring Networks Initial Load IMD - Interval)
- **Override Processing Method:**
 - **Measuring Component Type:** Electric Residential kWh Scalar

- **Business Object:** D7-InitialLoadIMDScalar (Silver Spring Networks Initial Load IMD - Scalar)

Device Event Mapping

Device event mapping processing methods define how head-end-specific device events are mapped to standard device event names. The Device Event Seeder XAI Inbound Service uses this processing method to determine which type of device event business object to instantiate when receiving device events from the Silver Spring Networks UtilityIQ.

Processing Method - Device Event Mapping

- **Service Provider:** Silver Spring Networks
- **Processing Role:** Device Event Mapping
- **Description:** Silver Spring Networks Device Event Mapping
- **Status:** Active
- **Default Processing Method:**
 - **Business Object:** D7-DeviceEventMappingLookup (Silver Spring Networks Device Event Mapping)
- **Override Processing Method:** based on implementation-specific requirements

Commands

Command processing methods define how command requests are sent to a head-end system. More specifically, they define the type of outbound communication business object to create for each type of command, and the outbound message type to send to the head-end system.

The following types of command processing methods can be configured for the Silver Spring Networks service provider, based on the requirements of each implementation.

Device Commission

- **Service Provider:** Silver Spring Networks
- **Processing Role:** Device Commission
- **Description:** Silver Spring Networks Device Commission / Replace Location
- **Status:** Active
- **Processing Method:**
 - **Default Business Object:** D7-ReplaceLocation (Silver Spring Networks Replace Location)
 - **Default Outbound Message Type:** Silver Spring Networks Commissioning Outbound Message Type

Device Decommission

- **Service Provider:** Silver Spring Networks
- **Processing Role:** Device Decommission
- **Description:** Silver Spring Networks Replace Device at Location - Decommission
- **Status:** Active
- **Processing Method:**
 - **Default Business Object:** D7-ReplaceDeviceAtLocForDecomm (Silver Spring Networks - Replace Device At Location (Decomm))
 - **Default Outbound Message Type:** Outbound Message Type SSN

Device Status Check

- **Service Provider:** Silver Spring Networks
- **Processing Role:** Device Status Check
- **Description:** Add Ping Job
- **Status:** Active
- **Processing Method:**
 - **Default Business Object:** D7-AddPingJob (Silver Spring Networks - Add Ping Job)
 - **Default Outbound Message Type:** Outbound Message Type SSN

Remote Connect

- **Service Provider:** Silver Spring Networks
- **Processing Role:** Remote Connect
- **Description:** Remote Provisioning Job -Connect
- **Status:** Active
- **Processing Method:**
 - **Default Business Object:** D7-ConnectDisconnect (Silver Spring Networks - Connect or Disconnect)
 - **Default Outbound Message Type:** Connect Device

Remote Disconnect

- **Service Provider:** Silver Spring Networks
- **Processing Role:** Remote Disconnect
- **Description:** Silver Spring Networks Disconnect
- **Status:** Active
- **Processing Method:**
 - **Default Business Object:** D7-ConnectDisconnect (Silver Spring Networks - Connect or Disconnect)
 - **Default Outbound Message Type:** Initiate Connect Disconnect

Verify Command

- **Service Provider:** Silver Spring Networks
- **Processing Role:** Verify Command
- **Description:** Silver Spring Networks Get Status
- **Status:** Active
- **Processing Method:**
 - **Default Business Object:** D7-GetStatus (Silver Spring Networks - Get Status)
 - **Default Outbound Message Type:** Get Status

Configuring Silver Spring Networks Extendable Lookups

This section outlines some of the extendable lookups that must be configured for use with the Silver Spring Networks adapter. These include:

- **Silver Spring Networks Device Event Mapping**
- **Silver Spring Networks UOM Code to Standard UOM Mapping**
- **Silver Spring Networks Interval Status Code to Condition Mapping**

Refer to the Oracle Utilities Application Framework documentation for more information about working with extendable lookups.

Silver Spring Networks Device Event Mapping

The Silver Spring Networks Device Event Mapping extendable lookup is used to determine which type of device event business object to instantiate when receiving device events from the Silver Spring Networks UtilityIQ.

Each value defined for the Silver Spring Networks Device Event Mapping extendable lookup should include the following:

- **Head-End System Event Name:** The event name used by the Silver Spring Networks UtilityIQ
- **Description:** A description of the device event
- **Status:** The status of the lookup value (can be Active or Inactive)
- **Standard Event Name:** The standard event name for device events of this type, from the “Standard Event Name” extendable lookup.

Example: The Silver Spring Networks “Tampering” device event name could be mapped to the “Device Tampering” standard device event name as follows:

- **Head-End System Event Name:** Tampering
- **Description:** Tampering Detected
- **Status:** Active
- **Standard Event Name:** Device Tampering

Silver Spring Networks UOM Code to Standard UOM Mapping

Usage received from Silver Spring Networks may use utility-specific unit of measures (UOMs). These custom UOMs must be mapped to standard UOM codes. The Silver Spring Networks UOM Code to Standard UOM Mapping extendable lookup is used to determine how to map Silver Spring Networks UOM codes to standard UOM codes when receiving usage from the Silver Spring Networks UtilityIQ.

Each value defined for the Silver Spring Networks UOM Code to Standard UOM Mapping extendable lookup should include the following:

- **Head-End Unit of Measure:** The unit of measure code used by the Silver Spring Networks UtilityIQ
- **Description:** A description of the unit of measure code.
- **Status:** The status of the lookup value (can be Active or Inactive)
- **Unit of Measure:** The unit of measure defined in the system. See Defining Units of Measure in the *Oracle Utilities Meter Data Framework User's Guide* for more information about creating UOM codes for use with Oracle Utilities Smart Grid Gateway.

Example: The Silver Spring Networks “KWH” unit of measure code could be mapped to the “Kilowatt Hours” standard UOM code as follows:

- **Unit of Measure:** Kilowatt Hours
- **Head-end UOM:** kWh
- **Description:** Silver Spring Networks Kilowatt Hours

Silver Spring Networks Interval Status Code to Condition Mapping

Interval usage received from the Silver Spring Networks UtilityIQ can include Silver Spring Networks interval status codes that indicate the status or condition of the interval value. These interval status codes must be mapped to standard condition codes in the system. The Silver Spring Networks Interval Status Code to Condition Mapping extendable lookup is used to determine how to map Silver Spring Networks interval status codes to standard status codes when receiving usage from the Silver Spring Networks UtilityIQ.

Each value defined for the Silver Spring Networks Interval Status Code to Condition Mapping extendable lookup should include the following:

- **Interval Status:** The Silver Spring Networks interval status code
- **Description:** A description of the interval status code.
- **Status:** The status of the lookup value (can be Active or Inactive)
- **Condition:** The condition code to which the interval status code is to be mapped, from the Measurement Condition extendable lookup.

Example: The Silver Spring Networks “Missing” interval status code could be mapped to the “Missing” condition code as follows:

- **Interval Status:** Missing
- **Condition:** Missing
- **Description:** Silver Spring Networks Missing

Extending the Adapter for Silver Spring Networks

The Oracle Utilities Smart Grid Gateway Adapter for Silver Spring Networks supports a number of commands, including:

- Commission Device
- Decommission Device
- Device Status Check
- On-Demand Read
- Remote Connect
- Remote Disconnect

The Adapter for Silver Spring Networks can be extended to support additional commands provided by the Silver Spring Networks UtilityIQ. See **Creating Custom Commands** on page 9-26 of the *Oracle Utilities Smart Grid Gateway Configuration Guide* for more information about adding commands to the Silver Spring Networks adapter.

Appendix

Glossary

This glossary provides definitions of commonly used terms.

Command Effective Date/Time

The date and time when a device command becomes effective.

Command Expiration Date/Time

The date and time when a device command expires.

Commissioning

A command issued to establish communication between a device and the head-end system. The goal is to ensure connectivity has been established with the device, that any information needed to communicate with the meter has been defined in both Oracle Utilities Smart Grid Gateway and the head end system, and the meter will begin capturing usage and events.

Decommissioning

A command issued to inform the head-end system when a meter needs to be removed from a service point, so that no further reads or events will arrive from the meter. Decommissioning is invoked when a meter must be removed or deactivated. The goal is to stop any communication between the device and the head-end system.

Head-End System

A system that collects measurement data and meter events for eventual submission to the application. Many devices can communicate to the application through a single head-end system. A utility may have numerous head-end systems through which they communicate with devices.

On-Demand Read

A request for the most up-to-date reading from a particular meter. It is not guaranteed to return immediately; it could require a person to manually read the meter. The purposes are to check the meter's operational status and/or obtain a more recent reading than is currently available.

Payload

An upload component which contains measurements and meter events in a format specific to the

head-end. Payloads are part of the initial upload of measurement data.

Remote Connect

A command issued when a meter needs to be connected at a service point.

Index

A

Adapter 2-2
 processing 2-3

B

BPEL Processes 2-10
 CommissionDecommission 2-10
 ConnectDisconnect 2-10
 OnDemandRead 2-10
 ProcessCallout 2-10
Business Objects 2-4, 2-6
 D7-AddMeterReadJobInterval 2-6
 D7-AddMeterReadJobScalar 2-6
 D7-AddPingJob 2-6
 D7-ConnectDisconnect 2-6
 D7-ConnectDisconnectResp 2-6
 D7-DeviceEventMappingLookup 2-4
 D7-GetStatus 2-6
 D7-GetStatusResponse 2-6
 D7-HeadendUOMLookup 2-4
 D7-InitialLoadIMDInterval 2-4
 D7-InitialLoadIMDScalar 2-4
 D7-IntStsCodeToCondMapLookup 2-4
 D7-MeterReadResponseInterval 2-6
 D7-MeterReadResponseScalar 2-6
 D7-PingJobResponse 2-6
 D7-ReplaceDeviceAtLocForDecomm 2-6
 D7-ReplaceLocation 2-6

C

Communication Processes 2-5

D

Device Event Mapping 2-5
Device Events 2-4

E

External System 2-7

G

General Configuration 2-1

I

Inbound Services 2-8
 D1-BulkRequestHeader 2-8
 D1-BulkRequestUpdate 2-8
 D1-BulkResponse 2-8
 D1-DeviceEvent 2-8
 D1-DeviceStatusCheck 2-8
 D1-InitialLoadIMD 2-8
 D1-RemoteConnect 2-9
 D1-RemoteDisconnect 2-9
 D7-ConnectDisconnectResponse 2-9
 D7-GetStatusResponse 2-9
 D7-MeterReadResponseInterval 2-9
 D7-MeterReadResponseScalar 2-9
 D7-PingJobResponse 2-9
Initial Measurement 2-3

O

Oracle Service Bus 2-3
OUAF 2-5
Overview 1-1

W

Web Services 2-11
 AddMeterReadJobService 2-11
 CommissionDecommissionService 2-11
 ConnectDisconnectService 2-11
 DeviceStatusCheckService 2-11
 OnDemandReadService 2-11

X

XAI
 configuration 2-7
 inbound services 2-8
 senders 2-10

