

ORACLE

Partner

**XPLM**®

# Installation & Administration Guide

PTC Creo Parametric integration  
for  
Oracle Agile PLM

Valid for product version: 3.6.5

Published: 30.08.2024 | Build: 714 | Revision: 26174d5c8

---

XPLM Solution GmbH

Altmarkt-Galerie

Altmarkt 25

01067 Dresden

Office: +49 351 82658-0

Fax: +49 351 82658-88

Web: [www.xplm.com](http://www.xplm.com)

## Legal information

### Non-disclosure

The information in this document is to be treated confidentially.

### Licensing

XPLM Solution GmbH (XPLM) does not issue licenses for the software components to be integrated. These licenses must be obtained from the respective software manufacturer. To license the integration software from XPLM, a software usage and maintenance contract must be concluded.

### Support

For Oracle Agile Engineering Collaboration support, contact the Oracle Global Customer Support (GCS) at [www.oracle.com/support](http://www.oracle.com/support), or My Oracle Support at <https://support.oracle.com>.

### Handling personal data

Compliance with the applicable data protection laws is very important to XPLM. Against the background of the EU General Data Protection Regulation (GDPR), XPLM informs about the processing of personal data in its privacy policies and contracts. The extent to which XPLM comes into contact with personal data from the customer environment while providing services depends on the customer's IT systems and the data transmitted to XPLM. XPLM is generally not interested in gaining access to personal data from the customer environment. If this cannot be avoided, the customer is responsible for such personal data and must enter into a GDPR-compliant data processing agreement with XPLM.

**Information exchange:** The integration software exchanges information between the systems involved in the form of attributes. What is contained in these attributes is left to the customer's definition.

The exchanged attribute information is saved in files or objects of the authoring system.

**Log files:** To record activities of the integration functions, external log files are stored by the integration software on the user's computer. These log files can also contain information from Windows environment variables, for example the user and computer name.

The creation of log files, their log level and storage location must be set up in advance. Directories with log files can be deleted, but new log files are created when the integration software is used again.

**Support tickets:** When submitting a support ticket in the event of problems with the integration software, information such as first and last name, email address, etc. can be transmitted to XPLM support. For more information on this topic, see *Legal Notices > Privacy Policy* in the support portal.

## Table of Contents

<b>Legal information.....</b>	<b>ii</b>
<b>Glossary.....</b>	<b>7</b>
<b>1      Introduction.....</b>	<b>8</b>
1.1      About this document.....	8
1.2      Naming conventions.....	9
1.3      Overview of the integration.....	9
1.4      Supported file types.....	10
1.4.1      Additional file types.....	10
<b>2      System requirements.....</b>	<b>12</b>
2.1      Required installation media.....	12
2.2      Installing and upgrading Java Runtime Environments.....	13
<b>3      Installation.....</b>	<b>14</b>
3.1      Installing the integration.....	14
<b>4      Initial setup.....</b>	<b>16</b>
4.1      PTC Creo Parametric.....	16
4.1.1      Starting the Integration.....	16
4.1.2      Connector Configurations.....	17
4.1.3      Setup the root workspace.....	17
4.2      Oracle Agile PLM.....	19
4.2.1      Required Server Configuration.....	19
4.2.1.1      Enabling Class Objects Attributes.....	19
4.2.1.2      Required Designs Class Configurations.....	20
4.2.1.3      Required Parts Class Configurations.....	21
4.2.1.4      Required Documents Class Configurations.....	22
4.2.1.5      Control Upload File Types and File Association Table.....	22
4.2.1.6      Enabling Duplicate Find Numbers.....	23
4.2.1.7      Allowing MCAD Engineers to See Checkout Users.....	23
4.2.2      Login Access Administration in Agile PLM.....	24
4.2.3      Enabling HTTPS for Engineering Collaboration Clients.....	25
4.2.3.1      Using self signed server certificate.....	25
4.2.4      Enabling WSS for Engineering Collaboration Clients.....	26
<b>5      Configuration.....</b>	<b>27</b>

5.1	PTC Creo Parametric.....	27
5.1.1	Managing Format Files.....	27
5.1.1.1	Configurations for Format Files.....	27
5.1.1.2	Viewable Creation for Format Files.....	27
5.1.2	Handling of Standard Parts.....	27
5.1.2.1	Configuring the Standard Parts Directory.....	28
5.1.2.2	Saving Standard Parts.....	28
5.1.2.3	Loading Standard Parts.....	29
5.1.2.4	Renaming Standard Parts.....	29
5.1.2.5	Viewable Creation for Standard Parts.....	29
5.1.2.6	Standard Parts Without Collaboration Files.....	29
5.1.3	Strict CAD Modification Workflow.....	30
5.1.3.1	Activating the Feature.....	30
5.1.3.2	Changes to the Creo Parametric Workflow.....	30
5.1.4	Transfer BOM Find Number Functionality.....	30
5.1.4.1	Configure Transfer BOM FindNumbers.....	30
5.1.4.2	File Property Holding the Agile PLM Item Number.....	31
5.1.4.3	BOM Table.....	31
5.1.5	Save Modified.....	31
5.2	Oracle Agile PLM.....	32
5.2.1	EC Web Connector Administration.....	32
5.2.1.1	Oracle PD Cloud Functionality.....	32
5.2.1.2	Filtering SubClasses and AutoNumber Generators Displayed by the MCAD GUI.....	32
5.2.1.3	Preferences Settings.....	34
5.2.1.4	Property Value Preferences.....	37
5.2.1.5	Customizing Quick View Attributes.....	37
5.2.1.6	Re-reading Design Attributes.....	38
5.2.2	Language and Localization Administration.....	39
5.2.2.1	Agile PLM User and Data Language.....	39
5.2.2.2	EC Web Components.....	39
5.2.2.3	CAD Connector Components.....	40
5.2.3	Mapping.....	40
5.2.3.1	Mapping Editor.....	40
5.2.3.2	MCAD-MAPPING folders.....	45
5.2.3.3	Mapping the Sub-Class for New Objects to Agile PLM (TARGET_CLASS Attributes).....	45
5.2.3.4	Mapping Empty Values to and from Agile PLM Fields.....	45
5.2.3.5	Mapping Values on Save As.....	46

5.2.3.6	Mapping read only Item BOM attributes.....	47
5.2.4	Template Management.....	48
5.2.4.1	Template Structures in Agile PLM.....	49
5.2.4.2	Create a Template Structure in Agile PLM.....	50
5.2.4.3	Disable Autonumber Use for New Design Objects.....	50
5.2.4.4	Adding Template Files to the Structure.....	51
5.2.4.5	Subtypes.....	52
5.2.4.6	Structure Resolution.....	53
5.2.5	Viewable Files Management.....	53
5.2.5.1	How to Configure Viewable Formats Creation.....	53
5.2.5.2	Viewable File Naming.....	54
5.2.5.3	Model Viewable Combo Box Options.....	55
5.2.5.4	Activate Viewable Creation on the Preferences Dialog.....	56
5.2.5.5	Manage viewable files in the local workspace.....	57
5.2.6	Thumbnail Support.....	58
5.2.6.1	Activating Thumbnails.....	58
5.2.6.2	AutoVue configuration for CAD thumbnails.....	58
5.2.6.3	Transfer Creo Parametric thumbnails to Agile PLM.....	58
5.2.6.4	Thumbnails in the Load Preview.....	59
5.2.6.5	Configure Thumbnail size in Agile PLM.....	59
5.2.7	Check Out Attributes functionality.....	60
<b>6</b>	<b>Update.....</b>	<b>62</b>
6.1	Modifying installation.....	62
6.2	Repairing installation.....	63
6.3	Updating installation.....	64
<b>7</b>	<b>Uninstallation.....</b>	<b>66</b>
7.1	Removing installation.....	66
<b>8</b>	<b>Troubleshooting.....</b>	<b>67</b>
8.1	Troubleshooting integration problems.....	67
8.2	License errors.....	67
8.3	Solving issues in mixed environments.....	67
8.4	Resolving common errors.....	68
8.5	Logging.....	74
8.5.1	Web Component Logs.....	74
8.5.2	TCL Connector Logs.....	75

<b>9</b>	<b>References.....</b>	<b>77</b>
9.1	Configuration files.....	77
9.1.1	CAXConfig.xml.....	77
9.1.1.1	Basic Section.....	77
9.1.1.2	ConnectionProperties Section.....	78
9.1.1.3	BrowserDisplay Section.....	80
9.1.1.4	FlowControl Section.....	84
9.1.1.5	DateFormats Section.....	87
9.1.1.6	TableDisplay Section.....	88
9.1.1.7	WorkspaceTableDisplay Section.....	89
9.1.1.8	OverrideConfiguration Section.....	89
9.1.1.9	Viewables Section.....	89
9.1.1.10	WorkspaceDeleteViewables Section.....	90
9.1.1.11	PartFamilies Section.....	90
9.1.1.12	ChangeProperties Section.....	92
9.1.1.13	FileNaming Section.....	96
9.1.1.14	READONLY_FF_FIELDS Section.....	97
9.1.1.15	READONLY_ITEM_FIELDS Section.....	97
9.1.1.16	CAX_NAMES_BY_ID Section.....	97
9.1.2	extensions.xml.....	97
9.1.3	AcpCustomer9.ini.....	98
9.1.3.1	Initialize Section.....	99
9.1.3.2	ProEToAgile Sections.....	105
9.1.3.3	AgileToProE Sections.....	106
9.1.3.4	AgileGetProperties Sections.....	107
9.1.4	ACP.cfg.....	109
9.2	Tools and add-ons.....	111
9.2.1	Batch Queue Admin.....	112
9.2.1.1	Batch Queue Solution.....	112
9.2.1.2	Batch Queue Admin.....	113
9.2.2	Batch Server.....	116
9.2.3	Encryption Helper.....	118
9.2.3.1	Introduction.....	118
9.2.3.2	Usage.....	118
9.3	Silent-mode installation.....	119
9.4	Working with overlay packages.....	123

## Glossary

### **Application Programming Interface (API)**

Defines a set of routines, communication protocols and tools for building software. In general, they are clearly defined methods for communication between different components.

### **Bill of Materials (BOM)**

Defines a list of assemblies, sub-assemblies, items and their quantities needed to produce a final product.

### **BOM position**

Defines a position in the BOM with unique identification, name, quantity and other characteristics.

### **Connector**

Defines a central interface component of each XPLM integration. The integration uses connectors for each participating application to exchange data via their API.

### **Datamodel**

Defines objects and their relationships in a PLM system that are managed by the integration to store data from an authoring application.

### **Dynamic Link Library (DLL)**

Defines a file with a library of functions and other information that can be accessed by a Windows program.

### **Java Runtime Environment (JRE)**

Defines a runtime environment for Java technology. It is used to execute Java applications largely independently of the underlying operating system.

### **Payload**

Defines the data contained within an API request. The description is borrowed from the transportation industry, where a truck carries its cargo (its payload) to a location. The truck, as with the API request, is always the same, but the payload changes with each request.

### **Product Lifecycle Management (PLM)**

Defines systems and processes for managing data during the development of a product from creation through manufacturing to maintenance and disposal.

### **Revision**

Defines a released object state in Agile PLM that cannot be modified.

### **Script engine**

Defines the central component in each integration. It contains the integration logic for processing and forwarding the information and data coming from the connectors.

### **User Interface (UI)**

Defines a (usually) graphical interface through which a user interacts with the computer.

### **Version**

Defines an incremental counter of each object modification in Agile PLM on check-in.

### **x86/x64**

Defines the processor architecture in a computer and thus also the performance of applications. x86 corresponds to 32-bit and x64 corresponds to 64-bit.

# 1 Introduction

## 1.1 About this document

You are reading the Installation and Administration Guide of the .

### Purpose

This document describes how to install and set up the integration.

### Target audience

This document is intended for system administrators in the company who install, adapt and deploy the integration. In addition, system administrators should also read the User Guide to familiarize themselves with the user interface and functions.

### How to read this document

This document is structured chronologically and you should read it in the order of the chapters described. If you skip chapters, you will miss important information.

Where appropriate, cross-references to other chapters are listed. To quickly return to where you came from after clicking such a link, click the **Back** button in your PDF viewer. Try it right now with [this link!](#)

### Notes used



This note highlights additional information about the current content.



This note highlights important instructions.



This note highlights from which integration version a feature was introduced or updated.

### PDF recommendations

You can read this document in all supported PDF viewers, including PDF browser plugins. Check the following recommendations about copying code and searching for text strings.

#### Copying code

```
<XPlmConnector>
  <Properties>
    ...
  </Properties>
</XPlmConnector>
```

Not all PDF viewers support proper copying of code. If you open this document in Firefox, Acrobat Reader, or Acrobat and copy the above code, the lines will be pasted without indents and even in one line only, depending on the version of the PDF viewer.

Browsers that copy code correctly are Chrome, Edge and Brave. Keep your browsers and Acrobat tools always up to date.

#### Searching for text strings



Long text strings, for example variables, are sometimes manually wrapped in this document to fit in a table cell. When you search for such terms in this document, Acrobat Reader and Acrobat cannot interpret a line break, which results in the entire term not being found. Therefore, always open the PDF in one of the above browsers and search there.

## 1.2 Naming conventions

In addition to the terms already listed in the glossary, the following naming conventions are used in this document. Familiarize yourself with these names. You will find them throughout the document.

Form Used	Generally refers to
Agile PLM	Oracle Agile PLM
Creo Parametric	PTC Creo Parametric
Item	Item in Agile PLM
Attribute	Object property in Agile PLM
Parameter	Property in the component

## 1.3 Overview of the integration

The integration is the interface between Creo Parametric and Agile PLM and is designed for seamless and efficient data exchange between both applications.


The integration is focused on a Creo Parametric-centric workflow that enables the Creo Parametric user to work with Agile PLM-based data managed directly from the Creo Parametric menu or ribbon bar.

The integration uses the API from both applications. It is designed to extend existing Creo Parametric and Agile PLM functionality. The handling of Creo Parametric structure and objects is done in Creo Parametric itself. Agile PLM manages Creo Parametric objects and structures that are important in the design and approves a possible workflow for individual design objects.

The main functions of the integration consist of saving, loading and item operations. Each of these operations has a certain effect on Agile PLM structures.

The integration also supports the Agile PLM system's Check Out mechanism to avoid data loss due to unresolved access conflicts. Concurrent engineering is supported through the Check Out of individual objects and structures in Agile PLM.

Functionalities of the integration are available via additional toolbars or extended menus in Creo Parametric.

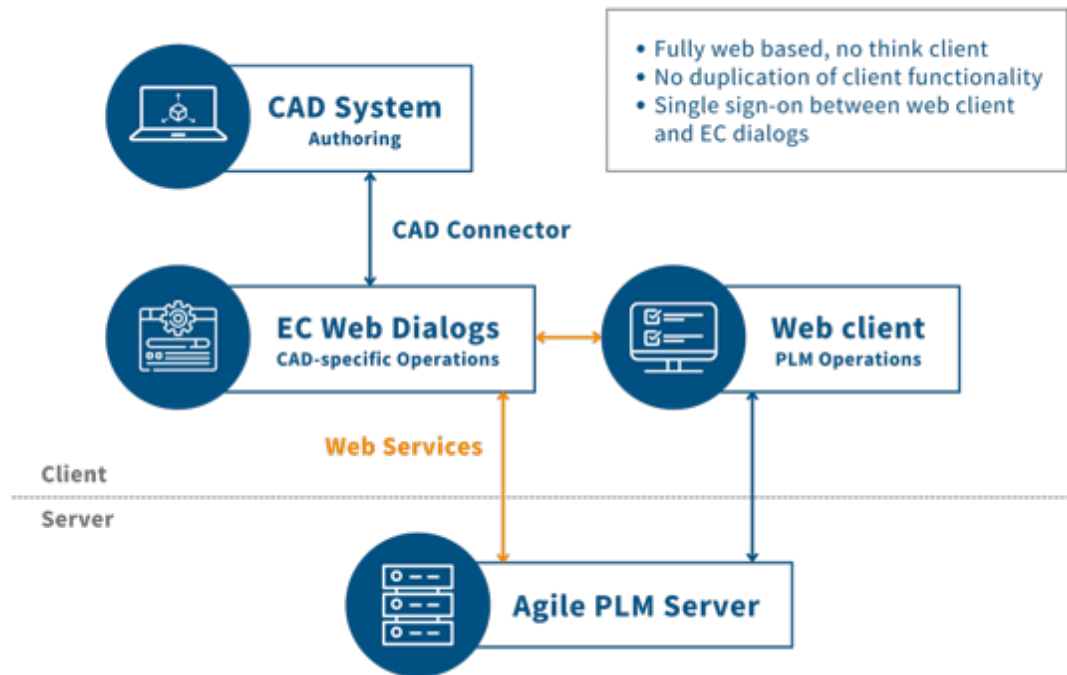

## 1.4 Supported file types


The Creo Parametric connector supports the following file types:

File type	File extension
Part	.prt
Assembly	.asm
Drawing	.drw
Format	.frm
Notebook	.lay

### 1.4.1 Additional file types

Additionally the integration saves a structure file (STR/NamedRefName=SD2STR) in the dataset.

It contains the CAD structure information of the assembly item and is created/updated during the save process to Agile PLM.

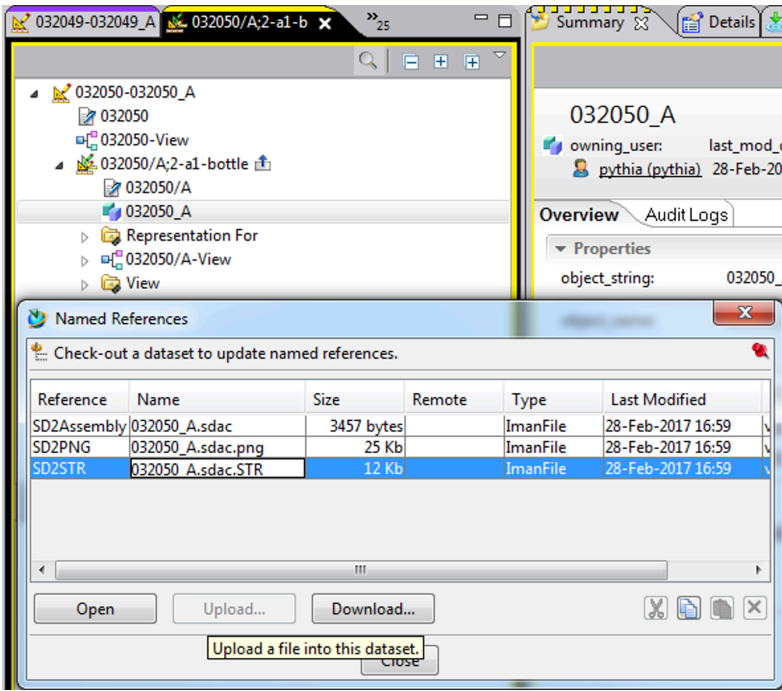

## 2 System requirements

Before installing the integration, check that all requirements are met.



### Supported versions and special requirements

- Official support: The version is supported by the latest integration. Issues are fixed immediately.
- Limited support: The version is generally supported by the latest integration, but has not been explicitly tested. Issues are fixed only if they occur in the official versions.

Name	Official support	Limited support	Special requirements
Oracle Agile PLM	9.3.6 RUP 15 & 27	9.3.5 HF 11 9.3.6 RUP 1-14/16-26	An administrator account is required during installation and setup of the integration.  The Agile PLM environment must be configured for Creo Parametric.  A personal login for Agile PLM is available to the end-user.  A compatible browser for using Agile PLM is required.
PTC Creo Parametric	8.0-11.0	2.0-7.0	The user has been granted any necessary privileges to use the application.

### Client-side requirements

To install and run the integration on the client computer, the following is needed:

- Windows 10/11 x64 with local administrator rights
  -  The integration runs on Windows 11, but applications to be integrated may not be compatible. Check the application on the manufacturer's website for compatibility with Windows 11.
- Creo Parametric in a supported version
- Microsoft .NET Framework 4.7.2
- Java Runtime Environment 8 (x86 & x64)
  -  Since release 3.6.5, only 64bit JREs are required for installation.

## 2.1 Required installation media

Prior to installation, make sure that you have all installation media available.

### What you need

- Installer `OraclePLM-OEM-*.7z.exe`

### Download location

Log in to the *Oracle Software Delivery Cloud* at <https://edelivery.oracle.com> or *My Oracle Support* at <https://support.oracle.com> and download the installation media. If you don't have an account yet, contact the *Oracle Global Customer Support (GCS)* via [www.oracle.com/support](http://www.oracle.com/support).



In *Oracle Software Delivery Cloud*, the ZIP archive mentioned above is named using a unique numerical identifier that does not reflect the package type mentioned above. Please refer to the information given in *Software Delivery Cloud* to identify the packages.

## 2.2 Installing and upgrading Java Runtime Environments

Since integration versions 3.4.3.0, 3.5.0.11 and 3.6.0.0, the installer no longer includes the Java Runtime Environments (JREs) necessary for running the integration and therefore, you must manually install them.

### Installation

Only Java 8 is supported. Install the JREs for 32-bit and 64-bit JREs before installing the integration. You can download the required JREs from <https://java.com>.

The installed JREs should then be automatically detected by the installation wizard. However, you can manually define the installation directories of the corresponding JREs during the installation process if required or if the installation wizard cannot detect them automatically.



Since version 3.6.5, JREs for 32-bit are no longer required before installation of the integration.

### Upgrade

The JRE installation directories are version dependent. After updating the JREs, it is necessary to also update the following environment variables that are used by the integration to locate the JREs:

- XPLMJavaX64
- XPLMJavaX86

To update the variables, execute the script `%xPlmRootDir%\accessories\Set_Java_Paths.bat` with administrator rights.

After the update, run the command `set x` in a Windows command prompt and check that the variables show the correct path to the JRE. Set it manually if not correct.

## 3 Installation

### 3.1 Installing the integration

Make sure that all installation media and licenses are available, and then start the installation.

#### About this task

With this unified installer, you can install XPLM products in the same installation directory and use them in parallel. You can update all components individually without affecting the functionality of other installed products.




The following procedure applies to a new installation. To update an existing installation, see [Updating installation](#) (p. 64) for more information.




You can install, modify, repair, or uninstall also in silent-mode. See [Silent-mode installation](#) (p. 119) for more information.

#### Procedure

1. Copy the installer archive `OraclePLM-OEM-*.7z.exe` to the client computer running Creo Parametric.
2. Close all open applications related to the integration.
3. Extract the archive and start `Setup-*.exe` with administrator rights.
4. Install any Visual C++ runtimes that you are prompted for.  
→ The runtimes are installed, and the installation wizard appears.
5. Click **Next** to start the wizard.  
→ The step *License agreement for end-users* appears.
6. Accept the license agreement and click **Next**.  
→ The step *Installation path* appears.
7. Enter the installation directory and click **Next**.
  - The default installation directory is under `C:\Program Files`. To avoid later file access problems due to insufficient permissions, change the path to a writable location that is not protected by Windows.
  - If another product is already installed, you cannot change the installation directory. The product installed first defines this path for other products.
  - If you have received an overlay package from XPLM, or want to apply your own, enable the option **Apply custom files after installation** and enter the path to the overlay. Overlays contain customized files that overwrite the installed files as the last step. See [Working with overlay packages](#) (p. 123) for more information.
  - To backup the existing installation, enable the option **Backup current installation**. Define the backup scope first. Then click **Browse** and select a backup directory.

 Always create a backup when you update or change an installation. This makes it easier to compare and merge the files later.  
→ The step *Java paths* appears.
8. Define the path to the x86/x64 Java runtimes used by the integration and click **Next**.  
→ The step *MCAD components* appears.

9. Select the application(s) to be integrated. If required, select additionally a version or other settings. Click **Next**.  
→ The step *Tool components* appears.
10. Select additional helper tools or add-ons that you can use in the scope of this installation and click **Next**.
  - Batch Queue Admin
  - Batch Server
  - Encryption Helper→ The step *Ready to install* appears.
11. To start installation, click **Install**.

 During installation, a progress dialog is shown with detailed information on each MSI currently installed. If there are installation issues, the process stops and you can examine the error in the lower dialog section. If required, click **Save to log** and send the log file to [support@xplm.com](mailto:support@xplm.com) for further investigation. This new progress dialog is available from installer versions 24.3.3.606 onwards.

For older installers, a common CMD window with the progress is shown. Do not click into this window or installation cannot proceed. To continue if you clicked in, press **Enter** or **Esc**.
12. To close the wizard after installation, click **Finish**.
13. To finalize the installation, restart the system.

## Result

Installation is complete and the environment variable `xPlmRootDir` points to the installation directory. You can find log files for all installed components in the directory `C:\ProgramData\XPLM Solution GmbH\logs`.

## What to do next

Complete tasks for initial setup.

### Related links

[Tools and add-ons](#) (p. 111)


## 4 Initial setup

### 4.1 PTC Creo Parametric

#### 4.1.1 Starting the Integration

After the installation has finished, a shortcut of the startup script is added to desktop for standard Creo Parametric installations .

With this shortcut the Agile PLM integration can be started together with the desired Creo Parametric version without further configurations.

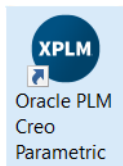

The shortcut also gives the following additional information under the **Target** attribute in the **Shortcut** tab of the **Properties window**:

- Creo Parametric version by year
- Configuration file

For example:

```
"C:\Program Files\XPLM Solution GmbH\OraclePLM\acp\com\acp_start.bat" 2020 acp.cfg
```

#### Non-Standard Installation

If you do not have a default installation of Creo Parametric, you need to manually configure the start up script that should be used depending on the version selected during installation.

**Configuration file:** `acp.cfg`

The startup script that should be used to start Creo Parametric needs to be adjusted. To do so, define the path of the correct installation of Creo Parametric in the `AcpStartCreo` option setting.

For example:

```
AcpStartCreo=!Program Files!\PTC\Creo 8.0.0.0\Parametric\bin\parametric.exe
```

#### Upgrade

In case you upgrade the Creo Parametric version, the MCAD connector needs to know which Creo Parametric version to use.

**Configuration file:** `acp.cfg`

Therefore, adjust the option setting `AcpCreoV` accordingly . The `AcpCreoV` option uses a specific key for every supported Creo Parametric version.

The connector can be also reconfigured to use a different version of Creo Parametric by changing the version parameter of the system call in the **Target** attribute of the shortcut startup script.

When you adjust the `acp.cfg` file, the version given in the shortcut is then ignored and the one defined in the configuration file is used.



## Customize the Addin Menu

**Configuration file:** `protk.dat`

You can customize the the integration ribbon menu in the `%xPlmRootDir%\acp\com\protk.dat` file.

```
rbn_path acp_ribbon_common.rbn
startup dll
end
```

### Possible values

- **Default value:** `rbn_path acp_ribbon_common.rbn`
- **Mode specific:** `rbn_path acp_ribbon_mode.rbn`



If you delete `rbn_path` from `protk.dat`, the integration menu will be removed from Creo Parametric.

### Related links

[ACP.cfg](#) (p. 109)

## 4.1.2 Connector Configurations

This section provides a complete summary of configuration files available for the Creo Parametric connector.

The following files are important for the connector:

- `acp.cfg` - basic system configurations. File is located in the `%xPlmRootDir%\acp\com` directory
- `AcpCustomer9.ini` - Mapping and configuration settings. File is located in the `%xPlmRootDir%\acp\ini` directory
- `config.pro` - base configuration of the Creo Parametric connector. File is located in the `%xPlmRootDir%\acp\com` directory. **No changes required.**
- `CAXConfig.xml` - controls general and numbering options for load and save. This file is located in the `components\ini` subdirectory.



Configuration files may change content between connector releases. When upgrading to a new release, incorporate the option settings from the previous release's configuration files into the new version of these files. Therefore, any text processing merging application can be used. Failure to do so might cause unintended behavior of the connector. Please contact XPLM consulting for more information on customer reserved functionality.

## 4.1.3 Setup the root workspace

The integration sets the root workspace automatically.

**Configuration file:** `Acp.cfg`

Configure the root workspace by setting these values:

- User directories

```
AcpUserRoot=C:\AgileEC
```

- **Optional:** Workspace root

```
# using %AcpUserRoot%\wspaces if not set
#CAX_WORKSPACE_ROOT=D:\AcpWork
```

**Related links**

[ACP.cfg](#) (p. 109)

## 4.2 Oracle Agile PLM

### 4.2.1 Required Server Configuration

This section provides a complete summary of configuration options required for the MCAD connector.

The MCAD connector requires an essential minimum set of fields enabled to work properly. Make sure all the fields listed in the following chapters are visible and enabled on your Agile PLM server and for all users that should work with the connector. You may need to enable additional fields according to the desired property mapping.

In most cases, the attribute name is predefined, although it may be disabled by default.



Do not change API names of Heading attributes.

Make sure the **User Roles** and **Modify Privileges** are setup for the login user to **discover**, **modify** and **read** all the fields mentioned in the following chapters.

Agile PLM may not explicitly support **Modify** privileges for all the attributes given in the following chapters. For such attributes, **Read** and **Discovery** privileges are sufficient.



Large text attributes are currently not supported


#### 4.2.1.1 Enabling Class Objects Attributes


The MCAD connector requires an essential minimum set of fields enabled to work properly.

##### About this task

This use case describes how to enable Class Objects Attributes on the Java Client.

##### Procedure

1. On the Java Client, navigate to the **Admin** tab and expand the **Data Settings** options by clicking on the plus (+) sign besides the folder name.
2. Double click on **Classes**  
→ A dialog is opened displaying all the available Class Objects in Oracle Agile PLM.
3. Navigate to the desired Class object and double click on it.  
→ Another dialog is opened with the selected Class object as the header. The dialog has several tabs that provide more information about the Class Object. These may include **General Information**, **User Interface Tabs**, **Lifecycle Phases**, **Process Extensions**, **Event Subscribers** and **History**
4. Navigate to the **User Interface Tabs**.  
→ A list of available tabs is displayed.
5. Double click on the desired tab (for example Title Block) from the list displayed.  
→ Another dialog is opened displaying two tabs; **General Information** and **Attributes**  
 More tabs may be available.
6. Go to the **Attributes** tab  
→ A list of available attributes is displayed in tabular form.

7. Double click on the desired attribute  
→ Another dialog is opened displaying all the option settings available for the selected attribute.  
 Use the **Base ID** of the attribute to identify the desired attribute as the **Name** of the attribute may have been changed.
8. Set the option setting **Visible** to **Yes**
9. **Optional:** Set other options as required.
10. Click **Save**

### Result

The attribute has been enabled in Oracle Agile PLM.

#### 4.2.1.2 Required Designs Class Configurations

Ensure the following attributes are enabled;

##### Designs - Page Two

- Local Flag (ID: 1301)
- Part Number (ID: 1302)
- Model Type (ID: 1332)
- Model Reference (ID: 1333)
- Link Type (ID: 1334)
- Link Reference (ID: 1335)
- Design System (ID: 2007)
- Design System Identifier (ID: 2008)
- Filetype (ID: 2009)
- Subtype (ID: 2010)
- Family (ID: 2011)
- Variant (ID: 2012)
- Drawing Name (ID: 2013)
- Frame ID (ID: 2014)
- Name Format (ID: 2015)
- Project Name (ID: 2016)
- CAD Filename (ID: 2017)
- File Path (ID: 2019)

##### Designs - Files

- **File Category** (ID: 2000008509) - with a list of available values containing the **Source** and **Viewable** values.

##### Designs- Structure

- Quantity (ID: 2000008325)
- Component Type (ID: 2000008330)
- Model Name (ID: 2000008376)
- Identifier (ID: 2000008377)
- Component (ID: 2000008378)

- Reference (ID: 2000008379)
- Configuration (ID: 2000008380)

### Designs - Where Used - Design

- Version (ID: 2000008501)
- Component Type (ID: 2000008508)
- Model Name (ID: 2000009311)
- Identifier (ID: 2000009312)
- Component (ID: 2000009313)
- Reference (ID: 2000009314)
- Configuration (ID: 2000009315)

### Designs - Relationships

- Link Type (ID: 5846)
- Published Change (ID: 5847)
- CAD Model (ID: 5861)
- CAD Parent Model (ID: 5862)
- Relationship Type (ID: 2000007912)
- Number (ID: 2000007927)
- Version (ID: 2000008523)

#### 4.2.1.3 Required Parts Class Configurations

Ensure the following attributes are enabled and configured as follows;

##### Parts - Title Block

- Number (ID: 1001)



We recommend that you set the attributes **Include Characters** to **All** and **MaxLength** to **75**.  
However, you can define the allowable characters and **MaxLength** as desired in your organisation.

##### Parts - BOM

- Item Number (ID: 1011)
- BOM Quantity (ID: 1035)
- CAD Filename (ID: 1341)
- Identifier (ID: 2175)
- Component (ID: 2176)
- Reference (ID: 2177)



We recommend that you keep the attributes **Maxlength** and **Max System Length** to their default settings or make sure they allow long enough values to avoid BOM publishing errors (for example Maxlength should have at least 150 characters for CAD Filename (ID: 1341)).

##### Parts - Relationships

- Link Type (ID: 5846)
- Published Change (ID: 5847)
- Number (ID: 2000007927)

### Parts - Changes - Pending Changes

- Change Category (ID: 2156)
- Lifecycle Phase (ID: 2000009590)
- Workflow (ID: 2000009595)

#### 4.2.1.4 Required Documents Class Configurations

Ensure the following attributes are enabled when using Documents classes as Items for Drawings:

##### Documents - Relationship

- Link Type (ID: 5846)
- Published Change (ID: 5847)
- Number (ID: 2000007927)

##### Documents - Pending Changes

- Change Category (ID: 2156)
- Lifecycle Phase (ID: 2000009590)
- Workflow (ID: 2000009595)

##### Documents - BOM Attributes

Since BOM are rather uncommon for Documents classes, usually no configuration of the BOM tab is required. However, if BOM should be used, the following configuration needs to be implemented.

- BOM Quantity (ID: 1035)
- CAD Filename (ID: 1341)
- Identifier (ID:2175)
- Component (ID: 2176)
- Reference (ID:2177)


#### 4.2.1.5 Control Upload File Types and File Association Table

The MCAD connector does not verify the **Control Upload File Types** setting and the related **File Association** table in Oracle Agile PLM. Thus, you must ensure that the file types, which can be uploaded to Oracle Agile PLM, match the file types of the CAD system(s) in use.

##### About this task

This task describes how to set up **Control Upload File Types** and optionally **File Association** table Oracle Agile PLM Java Client.

##### Procedure

1. On the Java Client, navigate to the **Admin** tab and expand the **System Settings** options by clicking on the plus (+) sign besides the folder name.
2. Double click on **Viewers and Files**  
→ A dialog named **Viewers and Files** is opened displaying the **General Information** tab.
3. Set **Control Upload File Types** to **No** on the General Information's tab  
 This is the recommended setting.

4. **Optional:** Set **Control Upload File Types** to **Yes** on the General Information's tab

5. **Optional:** Go to the **File Association** tab and verify that all the file types supported by the CAD system is use are listed and checked.

### Result

**Control Upload File Types** and related **File Association** are set.

#### 4.2.1.6 Enabling Duplicate Find Numbers

Oracle Agile PLM Find Numbers can be used in Creo Parametric Drawings for BOM Balloons.

### About this task

This use case describes how to enable the feature Duplicate Find Numbers on Agile PLM Java Client.

### Procedure

1. On the Java Client, navigate to the **Admin** tab and expand the **System Settings** options by clicking on the plus (+) sign besides the folder name.
2. Double click on **Smart Rules**  
→ A dialog named **Smart Rules** is opened displaying the **General Information** tab.
3. Set the option **DuplicateFindNumbers** to **Allow**

### Result

Duplicate Find Numbers have been enabled in Agile PLM.

#### 4.2.1.7 Allowing MCAD Engineers to See Checkout Users

Per default, Agile PLM is configured to not allow non-administrator users to see the content of the **Checkout User** attribute within the Designs class object.


### About this task

This use case describes how to activate read-level access to the Checkout User attribute (Design.Title Block).



It is recommended to allow all MCAD users to **read** and **discover** this attribute to avoid conflicting access to Design objects.

### Procedure

1. On the Java Client, navigate to the **Admin** tab and expand the **User Settings** options by clicking on the plus (+) sign besides the folder name.
2. Double click on **Roles**  
→ A dialog named **Roles** is opened.
3. Set the filter criteria **Match If** to **Show All** and Click **Apply** on the Roles dialog.  
→ A list of all available Roles is displayed in tabular form.
4. From the list, double click on **Design Engineer**  
→ Another dialog giving more information about the Design Engineer Role is displayed.  
 Your organization might have this role renamed.
5. Go to **Privileges** tab

6. Click the **Add Privileges** icon (first icon on the left)  
→ A pop-up dialog **Select Privileges** is opened and may display already enabled privileges on the right hand section of the dialog called **Selected**. The **Choices** section is empty.
7. Set the filter criteria **Match If** to **Contains** and manually enter *Users* to the **Value** text field and then Click **Apply**.  
→ A list of all matching Privileges matching the query criteria is displayed in tabular form in the **Choices** section.
8. Select **Discover Users - Discovery** and click the arrow pointing right in the middle of the two sections.  
→ The **Discover Users - Discovery** privilege is moved to the **Selected** section.
9. Select **Read Users - Read** and click the arrow pointing right in the middle of the two sections.  
→ The **Read Users - Read** privilege is moved to the **Selected** section.
10. Click **OK**

### Result

The Privileges **Discover Users - Discovery** and **Read Users - Read** have been added to the Design Engineer Role and are displayed in the Privileges tab. MCAD users can now see which other user is currently working on a checked out Design object.

## 4.2.2 Login Access Administration in Agile PLM

This section provides detailed information about all necessary steps to enable login restriction for defined client versions that connect to the Agile PLM server.

### About this task

All steps need to be executed as an administrator user that has rights to modify roles and privileges.

### Procedure

1. Create a new **FileFolder** subclass, for example *MCAD-Access*. This subclass should not have an AutoNumber assigned as the numbers need to be entered manually. This could also be a Designs subclass, but for separation purposes and easier configuration, a FileFolder subclass is recommended.
2. Find any existing **Discovery** privileges for File Folders (for example **Discover All File Folders**) and modify the criteria to exclude the new File Folder class created in step 1. This prevents any non-admin user to modify the access setup. It might be required to create a new criteria because the existing one could not be modified.
3. Create a new object in subclass **MCAD-Access**, for example *MCAD-3.2.0.0.130701*, for each version you want the user(s) to grant access to. The new object number needs to be prefixed with **MCAD-** and the version number is the same as displayed in the Web Components status line in the bottom of the dialogs.
4. Create a new privilege for **Discovery**, for example *Connect with MCAD 3.2.0.0* with criteria *Discover MCAD 3.2.0.0* on object type **MCAD-Access** and the condition *MCAD-Access Title Block.Number Equal To MCAD-3.2.0.0.130701*.
5. Add this privilege to the user's CAD specific role, for example **CAD Designer**.
6. Remove the privilege **Discover All File Folders** from that same role. This is vital as otherwise this privilege overwrites any restrictions created in step #4.



7. More specific privileges on certain file folders could be added to the user's role if needed.
8. To secure the access to the **MCAD-Access** subclass, any write privileges for non-admin users should be revoked on any object of that subclass.

To be backwards compatible or to allow customers to use MCAD without any **MCAD-Access** setup, the client is connected successfully if the **MCAD-Access** subclass or the version-specific FileFolder does not exist.

The latter requires having the appropriate **MCAD-Access** FileFolder created before an MCAD version, other than the ones already set up in the system, is passed to the user. For any MCAD version for which the access should be rejected, a corresponding FileFolder object needs to be created, but no discover privilege should be assigned to the user's role for this object.

### 4.2.3 Enabling HTTPS for Engineering Collaboration Clients

If the MCAD connectors or custom client applications utilizing the Agile PLM Core and EC Services need to use the HTTPS protocol instead of the HTTP protocol, some additional work and configuration needs to be done.

#### 4.2.3.1 Using self signed server certificate

This description assumes that the server side (either the application server itself or an HTTPS proxy server) is already configured to run with HTTPS. This should be validated with the help of the Agile PLM Web Client.

To make the client-side work properly with the HTTPS server, you must import the server's Certificate Authority (CA) certificate into a Java keystore (.JKS) for the clients and a client certificate needs to be generated with the help of this CA certificate. Please consult the corresponding documentation for more information.

#### Configuring the MCAD Connectors for HTTPS

**Configuration file:** `acx.bat`

To make use of the keystore client file, certain Java startup parameters need to be added to the MCAD's JVM startup call (defined in `acx.bat`). This enables the Java application to validate the client certificate with the one from the server and then establish an HTTPS trusted and secure connection.

The Client's Java keystore file should be stored in the `%xPlmRootDir%\ini` directory.

Modify the `acx.bat` startup script by adding the following line:

```
set HTTPS_OPTS=-Djavax.net.ssl.trustStore=%CAX_ROOT%\ini\plm-client.jks
-Djavax.net.ssl.trustStorePassword=Agile123
-Djavax.net.ssl.trustStoreType=jks
```

where

- `plm-client.jks` is the Java Keystore file for the client
- `Agile123` is the keystore password



The code above shows how to use the required parameters on a Windows system only, as the CAD connectors are only supported on Windows systems.

The following line should be modified to use the `HTTPS_OPTS` definition. The variable `%HTTPS_OPTS%` could be included in the command line at any location, but it should be after the variable `%JAVA_HEAP_SIZE%`.

```
start /b "%JAVA_HOME%\bin\javaw.exe" %JAVA_HEAP_SIZE% %HTTPS_OPTS%  
-Dcom.xplm.agile.Language=EN ...
```

## Configuring custom client applications for HTTPS

To make use of the certificates in the keystore and the client file, certain Java system properties needs to be added into the custom client code. This enables to Java application to validate the client certificate with the one from the server and then establish an HTTPS trusted and secure connection.

The files Java keystore file (*plm-client.jks*) should be copied into the client application's directory, but could essentially reside anywhere on the local file system.

The code below shows how to use the required properties for the Java programming language, but this should work similarly on any other programming language, for example C#.

```
System.setProperty("javax.net.ssl.trustStore", "plm-client.jks");  
System.setProperty("javax.net.ssl.trustStorePassword", "Agile123");  
System.setProperty("javax.net.ssl.trustStoreType", "jks");
```



In Java, the value for the property `javax.net.ssl.trustStoreType` does not need to be set as it is `jks` by default. But it might be necessary in other programming languages.

This also works with other programming languages that could be used to generate the client stubs for the web services. Please consult the corresponding documentation for more details.

### 4.2.4 Enabling WSS for Engineering Collaboration Clients

Since Oracle Agile PLM 9.3.4, Web Service Security (WSS) is supported. This is a core feature of the WebLogic application server to allow setting policies for web service clients to access web services with certain authentication methods only. For further information, please see the corresponding documentation for your WebLogic version on <http://docs.oracle.com>.

## Configuring the MCAD Connectors for WSS

The MCAD connectors automatically detect if WSS is enabled for the Core Services and EC Services and use the required client-side policy. As WSS requires HTTPS to be used, you must first enable HTTPS for MCAD.

For WSS, it is usually only required to use One-Way Authentication and not Two-Way Authentication (called Mutual Authentication). With One-Way Authentication the client would only need to import the server certificate if the server certificate is self-signed. If the server certificate had been issued by a Certificate Authority (CA) so that it is considered as trusted, this is not needed.



For any web services client with enabled web service security, only the policy `oracle/wss_username_token_over_ssl_client_policy` is supported. As this policy requires SSL, the WebLogic application server must be configured to serve HTTPS requests.

## 5 Configuration

### 5.1 PTC Creo Parametric

#### 5.1.1 Managing Format Files

Format files (.frm) provide template (including title block, borders etc.) for Creo Parametric drawing files.

Creo Parametric drawings reference the format files to which they are linked. The Creo Parametric connector can handle the drawings including the referenced format files in Agile PLM. Usually, format files are managed through a synchronized folder, drive, or network share that is available to all Creo Parametric clients.

##### 5.1.1.1 Configurations for Format Files

Drawing format handling is activated by default.

- **Configuration file:** `AcpCustomer.ini`
- **Parameter:** `AcpSaveDrwFrm` | `AcpCreateUseDrwTemplateFrm`

To deactivate drawing format file handling, change the following configuration settings in the Initialize section of `AcpCustomer.ini`

- Set `AcpSaveDrwFrm` to `0`
- Set `AcpCreateUseDrwTemplateFrm` to `0`

##### Related links

[AcpCustomer9.ini](#) (p. 98)

##### 5.1.1.2 Viewable Creation for Format Files

If drawing format file handling is active, the Creo Parametric connector supports viewable file creation for format files.

- **Configuration file:** `AcpCustomer.ini`
- **Parameter:** `AcpViewFileGenerationFRM`

To enable viewable creation for format files, add the optional setting `AcpViewFileGenerationFRM` to the `[Initialize]` section of `AcpCustomer.ini` file and set it to `1`.

The viewable files will then be created according to the settings given in the `CAXConfig.xml` and the Preferences dialog.

##### Related links

[Viewable Files Management](#) (p. 53)  
[AcpCustomer9.ini](#) (p. 98)

#### 5.1.2 Handling of Standard Parts

The Creo Parametric connector provides additional functionality to manage Standard Parts.



This feature was introduced in release 3.6.4.6 of the Creo Parametric connector.

### 5.1.2.1 Configuring the Standard Parts Directory

To use the Standards Parts feature, you must configure the directory in which the Standard Parts are stored.

#### Settings in AcpCustomer9.ini

- **Configuration file:** %xPlmRootDir%\acp\ini\AcpCustomer9.ini

In section [Initialize], add the following settings:

- **Optional:** Identify objects via Parameters

```
AcpLibraryPartIdent = LIBRARY
AcpLibraryPartValue = y
```

- Identify Standard part by source directory (config.pro setting pro\_library\_dir)

```
AcpLibraryPartCheckCreoLibDir = 1
```

- Settings for Save (from 3.6.4.2)

```
AcpLibraryPartUseObjectNameForId = 0
AcpLibraryPartNotCheckModify = 1
```

In section [ProEToAgile.Create] and [ProEToAgile.Update] sections, add the following mapping configuration if not available:

```
# CAX_LIBRARY = 2015
2015 = Std.LibraryPart.None
```

#### Settings in config.pro

- **Configuration file:** %xPlmRootDir%\acp\com\config.pro

- **Parameter:** pro\_library\_dir and search\_path



Creo Parametric does not have a default Toolbox Library available, but you can create a Toolbox library to store Standard parts.

Add pro\_library\_dir and search\_path parameters to the config.pro file and set value to chosen Toolbox library path.

The Creo Parametric connector can support any directory, thus the configuration can be adapted to support Standard part directories in any other place on the file system if the Creo Parametric system supports it.

#### Related links

[AcpCustomer9.ini](#) (p. 98)

### 5.1.2.2 Saving Standard Parts

You can save Standard Parts to Agile PLM with normal save functions.

The Standard Parts are saved to Design objects with unique Design Number in Agile PLM.

Standard Parts are flagged on the Agile PLM Web Client with the value *TOOLBOX* in the **Design.PageTwo.Name Format** attribute.

Once saved to Agile PLM and thus Agile PLM-known, Standard Parts are not affected by the MCAD connector's **Save As** function. This means, that no new Design number is assigned to them in case that they are selected and the **Save As** button is clicked.

### 5.1.2.3 Loading Standard Parts

Standard parts are loaded the same way as any other Creo Parametric files.

Standard Parts loaded to the active workspace are displayed in the Workspace manager and have .CLB files assigned to them. They do not cause any conflicts related to the separate Toolbox Library outside of the workspace that might exist, since both Creo Parametric files (the standard part file in the active workspace and the standard part file in the Toolbox Library) link to the same Design object in Agile PLM.

Since release 3.6.5.1, additional functionality is added to the Creo Parametric connector where you can define whether Standard Parts should be downloaded from Agile PLM or not.

■ **Configuration file:** %xPlmRootDir%\acp\ini\AcpCustomer9.ini

By default, Standard parts are downloaded to the local workspace. To disable download of Standard Parts from Agile PLM to the local workspace, add the following configuration to the [Initialize] section of AcpCustomer9.ini

```
AcpLibraryPartSkipFileGet = 1
```

**Related links**

[AcpCustomer9.ini](#) (p. 98)

### 5.1.2.4 Renaming Standard Parts

Standard parts never get renamed by the Creo Parametric connector.

The corresponding Renaming on Save and Renaming on Load functions have no effect on Standard parts.

### 5.1.2.5 Viewable Creation for Standard Parts

You can configure the creation of viewables during save of Standard parts regardless of the viewable related option settings selected in the Preferences dialog.

■ **Configuration file:** %xPlmRootDir%\acp\ini\AcpCustomer9.ini

To disable viewable creation for Standard Parts during save, add the following configuration to the [Initialize] section of AcpCustomer9.ini

```
AcpLibraryPartSkipViewFileGeneration = 1
```

**Related links**

[AcpCustomer9.ini](#) (p. 98)

### 5.1.2.6 Standard Parts Without Collaboration Files

The Creo Parametric connector supports concurrent use of Standard Parts.

When saving Standard parts to Agile PLM, the Creo Parametric connector queries the Agile PLM system for the file name of the Standard part. If the query returns a result, the MCAD connector re-assigns the corresponding Design object to the Standard Part in question. This way, Standard Part that had been saved to Agile PLM before can be linked to their Design objects even without having a .CLB file assigned.

This functionality also allows several users that utilize the same set of Standard Parts (but not on a shared location, like a network drive) to work with Standard Parts without having to worry about conflicts regarding the concurrent usage of those files.

### 5.1.3 Strict CAD Modification Workflow

Since release 3.6, the MCAD connectors supports a strict CAD modification workflow based on Agile PLM checkout status. If enabled, users are restricted from modifying Agile PLM -known Creo Parametric objects unless they have reserved/checked out the Creo Parametric objects in Agile.

#### 5.1.3.1 Activating the Feature

The strict CAD modification workflow feature is deactivated per default.

It can be activated by changing the option settings as follows:

In `%xPlmRootDir%\acp\ini` directory, add the following settings in `AcpCustomer9.ini` file, under the `[Initialize]` section;

```
AcpMenuAddCheckOutStatus = 1
AcpNotifySave = 1
```

#### Related links

[AcpCustomer9.ini](#) (p. 98)

#### 5.1.3.2 Changes to the Creo Parametric Workflow

If activated, the Strict CAD modification workflow feature introduces several changes to how users work with the Creo Parametric connector.

The feature models the **Check Out** status of an object in Agile PLM to the corresponding Creo Parametric object in the Creo Parametric system and prevents users from making or saving modifications to non-checked out objects.

To prevent users from making or saving modifications to non-checked out objects, the connector activates the Creo Parametric system's read-only mode implicitly whenever users open or load an Agile PLM managed Creo Parametric object that is not checked out for them. See User Guide for more information.

### 5.1.4 Transfer BOM Find Number Functionality

The Creo Parametric connector is capable of transferring BOM find numbers to Agile PLM.

#### 5.1.4.1 Configure Transfer BOM FindNumbers

**Configuration file:** `AcpCustomer9.ini`

To activate the **Transfer BOM Find Numbers** Agile menu item, add the following configuration to the `[ Initialize ]` section of `AcpCustomer9.ini`.

```
AcpMenuAddDrawingBom = 1
```

You can configure the column layout within the BOM table in the `[AcpDrwBomTab.DEFAULT]` section under `Column mapping`.

```
# Column mapping
AcpDrwBomTabColumnNUMBER = 2
AcpDrwBomTabColumnFIND_NO = 1
AcpDrwBomTabColumnQUANTITY = 3
AcpDrwBomTabColumnDESCRIPTION = 4
```

**Related links**[AcpCustomer9.ini](#) (p. 98)**5.1.4.2 File Property Holding the Agile PLM Item Number**

In order to assign find numbers to actual Item objects, each Creo Parametric file needs to hold a file property (called Parameter) containing the Item number of its corresponding Item object.

Per default, the file property `AGILE_PARTID` is used.

It is required to populate the Item number to the file property mentioned above before executing **Transfer BOM find numbers**. For the `AGILE_PARTID` property, it is done automatically (no mapping definition needs to be set up in the Mapping Editor) when performing **Update Properties**.

**5.1.4.3 BOM Table**

The next step is to create a suitable BOM table in a Creo Parametric drawing.

The BOM table must consist a minimum of four columns. A **find number**, **quantity**, **description** and **Part ID** column which contains the Item number of the related Item objects in this case. For details on how to define which table column contains which piece of information, refer to the Adjusting the Column Indices chapter below.

**5.1.5 Save Modified**

**Save Modified** function reduces the quantity of data sent to Agile PLM during a save process and thus improves performance.

- **Configuration file:** `AcpCustomer9.ini`
- **Parameter:** `AcpMenuAddSaveModified`

**Save Modified** function uses an API function provided by the Creo Parametric system to list all the Creo Parametric elements that are locally modified.

However, this menu function is hidden by default. Change the option setting `AcpMenuAddSaveModified` to `1` in the `[Initialize]` section of the `AcpCustomer9.ini` file to add this function to the integration menu.

**Related links**[AcpCustomer9.ini](#) (p. 98)

## 5.2 Oracle Agile PLM

### 5.2.1 EC Web Connector Administration

This section provides a complete summary of configuration options available for the EC Web connector.

#### 5.2.1.1 Oracle PD Cloud Functionality

Since release 3.6.1, the MCAD connector comes with a special mode of operation for Oracle PD Cloud.

The option setting is available for MCAD administrators **only** in the **PLM Mode** drop-down list in the Preferences dialog. See User Guide for more information.

Option	Description
Oracle PLM	Normal connector behavior for Agile PLM.  This is the default functionality for Agile PLM. Item and Item Change creation works normally.
CAD4Cloud	Alternative connector behavior when using Oracle PD Cloud.  This mode of operation hides most Item related controls in the MCAD connector GUI and is intended to be used when using the MCAD connector to connect to PD Cloud via an Agile PLM server. Item creation in PD Cloud is then taken over by Agile PLM.  When activated, this mode prevents the MCAD connector from creating and processing Items and Item Changes. Item related information are not displayed and also not transferred to or from Agile PLM.
Oracle PLM Hybrid Cloud	Works like <b>Oracle PLM</b> mode but uses PD Cloud hyperlinks for the Item related controls of the MCAD connector's GUI instead of Agile PLM hyperlinks.



The MCAD connector needs to be restarted after changing the **PLM Mode** value

The Fusion URL text field in the Preferences dialog is used to define the URL that points to the PD Cloud service. The MCAD connector uses the URL given in this text field to navigate to Item objects stored in PD Cloud in *CAD4Cloud* and *Hybrid Cloud* modes.

#### 5.2.1.2 Filtering SubClasses and AutoNumber Generators Displayed by the MCAD GUI

The MCAD connector allows you to filter out Design, Item and Change subclasses as well as AutoNumber generators which should not be displayed in the GUI.

**Configuration file:** **CaxConfig.xml**

You can define filters in the MCAD connector to display only desired Design, Item or Change subclasses or AutoNumber generators. This way, certain Agile PLM object subclasses and AutoNumbers can be hidden from normal users to prevent unintended use. Additionally, you can also filter by file type (file ending). For any CAD file ending a separate set of filter criteria can be defined, if required.



These settings affect Create Object dialog, the Preferences dialog, the Save Preview window and the Save As override dialog. The subclass and number generator filtering is configured based on a `name` - and `value` XML syntax:

- **Name:** A filter identifier optionally concatenated with the CAD file ending for the CAD files in which to apply the filter setting, for example `DisplayedDesignClassesSLDPRT` (file type specific filtering setting) or `DisplayedDesignClasses` (not file type specific setting).
- **Value:** Use `All` to not applying any filtering. Use a comma-separated list of the classes or number generators (display names) that should be displayed, for example:  
`Design,Construction,Prototype`

The Preferences dialog is not affected by file type specific filtering settings, except for the **Drawing Item** Subclass combo box.

File type specific filtering settings should be added to the `OverrideConfiguration` structure of the `CaxConfig.xml`. Refer to the example given below for a template on how a file type specific filtering setting might be configured.

```
<Structure>
  <Name>OverrideConfiguration</Name>
  <FieldCollection>
    <Field><Name>DisplayedDesignClasses</Name><Value>All</Value></Field>
    <Field><Name>DisplayedItemClasses</Name><Value>All</Value></Field>
    <Field><Name>DisplayedChangeClasses</Name><Value>All</Value></Field>
    <Field><Name>DisplayedDesignAutoNumbers</Name><Value>All</Value></Field>
    <Field><Name>DisplayedItemAutoNumbers</Name><Value>All</Value></Field>
    <Field><Name>DisplayedChangeAutoNumbers</Name><Value>All</Value></Field>
  </FieldCollection>
</Structure>
```

Filter Identifier	Description
DisplayedDesignClasses	List of Design classes that display in UI <b>Possible values:</b> Comma separated list of design classes (display names) or <code>All</code> .
DisplayedItemClasses	List of Item classes that display in UI <b>Possible values:</b> Comma separated list of item classes (display names) or <code>All</code> .
DisplayedChangeClasses	List of Change classes that display in UI <b>Possible values:</b> Comma separated list of change classes (display names) or <code>All</code> .
DisplayedDesignAutoNumber	List of Design AutoNumbers that display in UI <b>Possible values:</b> Comma separated list of Autonumber generators (display names) or <code>All</code> .

Filter Identifier	Description
DisplayedItemAutoNumber	List of Item AutoNumbers that display in UI <b>Possible values:</b> Comma separated list of autonumber generators (display names) or <code>All</code> .
DisplayedChangeAutoNumber	List of Change AutoNumbers that display in UI <b>Possible values:</b> Comma separated list of autonumber generators (display names) or <code>All</code> .

#### Example of File Ending Specific OverrideConfiguration Settings

```
<Structure>
  <Name>OverrideConfiguration</Name>
  <FieldCollection>
    <Field><Name>DisplayedDesignClasses</Name><Value>All</Value></Field>
    <Field><Name>DisplayedItemClasses</Name><Value>All</Value></Field>
    <Field><Name>DisplayedChangeClasses</Name><Value>All</Value></Field>
    <Field><Name>DisplayedDesignAutoNumbers</Name><Value>All</Value></Field>
    <Field><Name>DisplayedItemAutoNumbers</Name><Value>All</Value></Field>
    <Field><Name>DisplayedChangeAutoNumbers</Name><Value>All</Value></Field>

    <Field><Name>DisplayedDesignClassesSLDPRT</Name><Value>DesignClass1</Value></Field>
    <Field><Name>DisplayedDesignClassesSLDASM</Name><Value>DesignClass1</Value></Field>
    <Field><Name>DisplayedDesignClassesSLDDRW</Name>
      <Value> DesignClass1,DesignClass2</Value></Field>
    <Field><Name>DisplayedItemClassesSLDPRT</Name><Value>ItemClass1</Value></Field>
    <Field><Name>DisplayedItemClassesSLDASM</Name><Value>ItemClass2</Value></Field>
    <Field><Name>DisplayedItemClassesSLDDRW</Name>
      <Value>ItemClass1,ItemClass2</Value></Field>
  </FieldCollection>
</Structure>
```

#### 5.2.1.3 Preferences Settings

The preferences are stored in Agile PLM in a Design object called **MCAD-CONFIG-PROE**

Only users with administrative rights and roles can update the template `Preferences.xml`.

The `Preferences.xml` is stored locally first and only an administrator can change the template and upload it to Agile PLM. This is done using the **Save** button in the Preferences dialog. You can also reset the template manually by checking out the MCAD-CONFIG-PROE Design object in Web Client, adding your local `Preferences.xml` to the files tab, and checking the object back in after upload. The next time a normal user logs in, the new template is downloaded. In case the system cannot generate the MCAD-CONFIG-PROE Design object automatically, create it with this name in the Agile PLM system.


To lock an entry from user modification, you need to edit the `Preferences.xml`. The template in Agile PLM must also be replaced manually. Search for a section called `GeneralDefaults`, which contains several `FieldCollections`. Each collection describes one default. There are 3 fields with `name / value` pairs for each default. See proceeding table for optional settings:

Name	Value
CAX_NAME	Internal setting name (for instance, DesignClass)
Default	The default setting as a string
Editable	<p>Determines whether the preference is editable or not</p> <p><b>Possible values: true/false</b></p> <p>If set to <code>false</code>, even the administrator gets a setting, that is not editable anymore.</p>

### Preferences Dialog

The Preferences dialog can be accessed through

- the integration menu
- the toolbar menu button on Save and Load previews
- expanding the left side panel of the save and load preview
- expanding the Preferences pane of the Create Object dialog

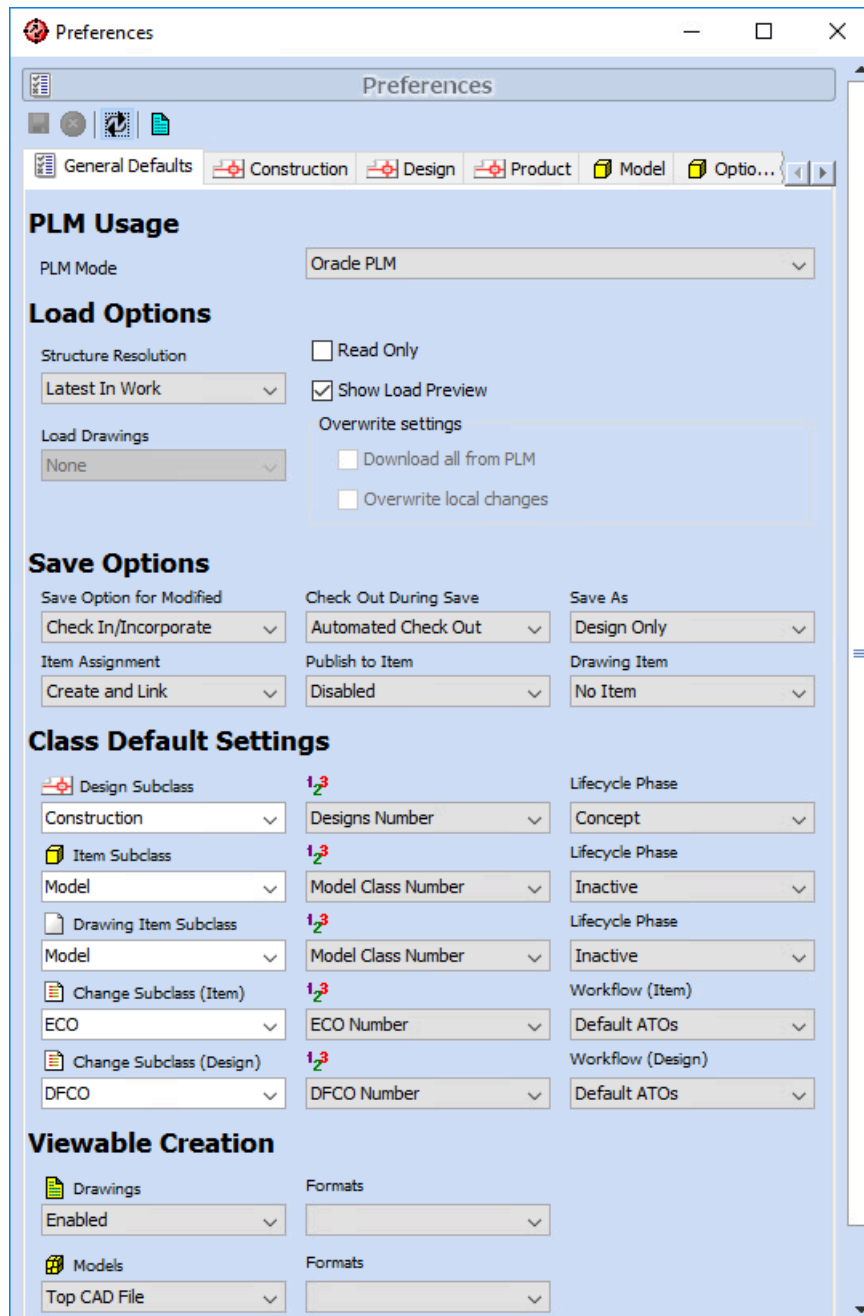

The Preferences dialog has the following sections;


- **PLM Usage** - The PLM Mode drop-down list defines the mode of operation for the MCAD connector.
- **Load Options** - define the behaviour of the connector during load operations.
- **Save Options** - define the behavior during save operations.
- **Class Default Settings** - defines the default sub-classes and default AutoNumber sources for all Items, Designs and Change orders created by Creo Parametric integration
- **Viewable Creation** - defines the types of viewable files that are automatically created and attached in Agile PLM along with the native file. See [Viewable Files Management](#) (p. 53)
- **Property Value Preferences** - define the properties that are mapped between Creo Parametric and Agile PLM, as part of the save process. See [Property Value Preferences](#) (p. 37)

See User Guide for more information.

#### 5.2.1.4 Property Value Preferences

Each Design and Item class is represented in the preferences to configure the mapping of symbolic CAX properties to fields in Agile PLM. You can set up the mapping interactively.

The preferences are saved into a **MCAD-CONFIG-PROE** File Folder object in Agile PLM if the current user is a member of the admin group. The values must be set in each subclass independently.

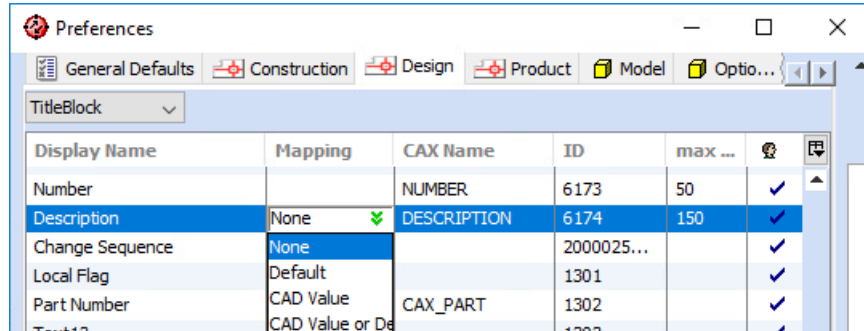

Additionally, each field may get a value default mapping.

The **Property Value Preferences** section of the Preferences dialog allows you to pre-define the properties that are mapped between Creo Parametric and Agile PLM, as part of the save process. By setting these preferences appropriately, you can reduce the use of the interactive save dialog and speed up the save process. The four mapping options are:

- **None** – No value is to be set for this property.
- **Default** – Use the value in the Default column.
- **CAD Value** – Use the value defined in the Creo Parametric properties, based upon the mapping defined by your administrator.
- **CAD Value or Default** – Use the value defined in the Creo Parametric properties, but if no value exists then use the default value in the Default column.

#### 5.2.1.5 Customizing Quick View Attributes

The MCAD connector supports customizing the attributes, which are displayed in the Quick View dialog window.

**Configuration file:** `CAXConfig.xml`

To change the appearance, add the following `QuickViewDisplay` structure to `CaxConfig.xml`:

```
<Structure>
  <Name>QuickViewDisplay</Name>
  <FieldCollection>
    <Field><Name>CAX_FIL_NAME</Name><Value>1</Value></Field>
    <Field><Name>COMPONENTTYPE</Name><Value>1</Value></Field>
    <Field><Name>NUMBER</Name><Value>1</Value></Field>
    <Field><Name>REV</Name><Value>1</Value></Field>
    <Field><Name>REVISION</Name><Value>1</Value></Field>
    <Field><Name>DESCRIPTION</Name><Value>1</Value></Field>
    <Field><Name>LABEL</Name><Value>1</Value></Field>
    <Field><Name>LIFECYCLEPHASE</Name><Value>1</Value></Field>
    <Field><Name>CHECKOUTUSER</Name><Value>1</Value></Field>
    <Field><Name>Item.NUMBER</Name><Value>1</Value></Field>
    <Field><Name>Item.REV</Name><Value>1</Value></Field>
    <Field><Name>Item.ECO</Name><Value>1</Value></Field>
    <Field><Name>Item.LIFECYCLEPHASE</Name><Value>1</Value></Field>
    <Field><Name>Item.DESCRPTION</Name><Value>1</Value></Field>
    <Field><Name>CAX_MODEL_TYPE</Name><Value>1</Value></Field>
    <Field><Name>CAX_MODEL_REF</Name><Value>1</Value></Field>
    <Field><Name>CAX_LINK_TYPE</Name><Value>1</Value></Field>
    <Field><Name>CAX_LINK_REF</Name><Value>1</Value></Field>
    <Field><Name>CAX_TYPE</Name><Value>1</Value></Field>
  </FieldCollection>
</Structure>
```

Additional attributes can be added to the structure as required. Make sure to assign the value `1` to each XML Field.



The Quick View dialog only displays attributes, which are set to visible in the class configuration of the Preferences dialog.

#### 5.2.1.6 Re-reading Design Attributes

The MCAD connector supports re-reading a predefined list of design attributes during check out.

Attributes that have been updated in Agile PLM during or before check out are thus correctly displayed.

Only Design attributes (**Title Block and Page 2**) are supported.

If used in conjunction with a PX: The event subscriber used needs to have the following values selected:

- Trigger Type = Pre Execution
- Mode = Synchronous

The attributes need to be listed in the `CheckoutAttributes` Transaction in `%xPlmRootDir%\OraclePLM\jar\agile9\agile934ws_proxy.jar..\com\xplm\agile93\ws\cad\xml\Agile93Templates.xml`, see example below.

```
<Transaction>
  <!-- Please extend the list only, do not remove the provided fields -->
  <Aliasname>CheckoutAttributes</Aliasname>
  <Import>
    <Parameter>
      <FieldCollection>
        <!-- snip -->
        <Field>
          <Name>6388</Name>
          <Value></Value>
        </Field>
        <!--Description-->
        <Field>
          <Name>6174</Name>
          <Value></Value>
        </Field>
        <!--Field>
          <Name>6178</Name>
          <Value></Value>
        </Field-->
      </FieldCollection>
    </Parameter>
  </Import>
</Transaction>
```

## 5.2.2 Language and Localization Administration

This section provides information about how to setup the GUI languages for the integration.

Languages are set up on three different components:

- The Agile PLM user language
- EC Web Components
- The CAD connector

All are independent from each other

### 5.2.2.1 Agile PLM User and Data Language

The setup is done in the user preferences settings in Agile PLM.

The preferred user language controlled the data values which are displayed in EC dialogs and transferred between Creo Parametric and Agile PLM.

### 5.2.2.2 EC Web Components

The EC Web Component dialogs are localized.

- **Configuration file:** `acx.bat`
- **Valid Values:** `EN`, `FR`, `DE`

The desired language on runtime is defined using a switch in `(components)\com\acx.bat`.

```
:DEFAULT_AGILE_START  
  
set CAX_JAVA_OPTIONS=%JAVA_HEAP_SIZE% -Dcom.xplm.agile.Language=EN -Dlog4j.config....
```

Use the disconnect session command or restart the Creo Parametric Tool after changing the setting.

### 5.2.2.3 CAD Connector Components

The language of the Add-In in Creo Parametric can be configured in the following way:

- **Configuration file:** `Acp.cfg`
- **Parameter:** `LANG`
- **Valid Values:** `usascii, french, japanese, german, Chinese_cn`

Example:

```
LANG=usascii
```

#### Related links


[ACP.cfg](#) (p. 109)

## 5.2.3 Mapping

### 5.2.3.1 Mapping Editor

This section provides a complete summary of the options that are available in the Mapping Editor.

The Mapping Editor is used to define mappings of Creo Parametric properties to Agile PLM fields during save. It is used for mapping of Agile PLM values to Creo Parametric properties or the drawing title block as well.

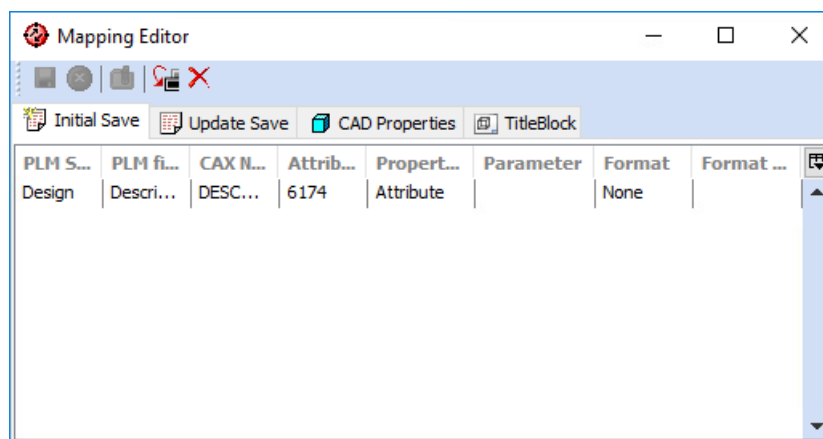


### Using the Mapping Editor

The Mapping editor is opened by pressing the **Property Mapping Editor** icon (blue page button) on the Preferences dialog.




The button is only visible to user with Administrative roles and privileges in Agile PLM.



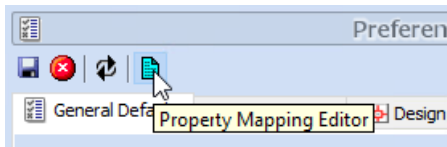





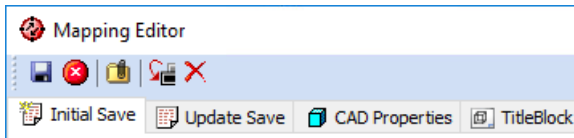


### Mapping Editor Toolbar

The toolbar of the Mapping Editor has the following functionality:



Command	Description
Save 	Saves the mapping definitions  The local save doesn't make the mapping available to all users and is lost if you restart the integration.
Upload to PLM 	Save and upload the mapping definition to Agile PLM and make it available to all users.  All other client machines must re-login using the <b>Disconnect Session</b> command to download the updated mapping.
Cancel 	Cancel all changes to the mappings and reread the latest saved mapping.
Insert Mapping 	Add a row into the current active mapping tab
Delete Mapping 	Remove a selected row in the current active mapping tab

### Mapping Creo Parametric properties to Agile PLM fields

The **Initial Save** and **Update Save** tabs define the mappings of Creo Parametric properties to and from Agile PLM fields.

For Creo Parametric objects that are not known in Agile PLM, the mapping in the **Initial Save** tab is used. The **Update Save** tab is used for Creo Parametric objects that already have an assigned Agile PLM object.






For Creo Parametric connector, the **Update Save** tab is also executed for objects that are not yet known to Agile PLM.

Both sections are configured the same way but may contain different settings. For instance, on **Initial Save** the predefinition of the Design number or the assigned Item number is important. On **Update Save** tab, there is only the need to map attributes like dimensions or descriptions.

The following columns are available:

Column	Description
PLM SuperClass	Switches between the target Agile PLM superclass objects; Design or Item

Column	Description
PLM Field	Depending on the selected PLM superclass object, the available Agile PLM fields are filtered from the current class configuration. Only visible and editable fields in Agile PLM are available.
CAX Name	Displays additional information about the PLM Field selected.  This column is read only in the initial and update save tabs.
Attribute ID	Displays additional information about the PLM Field selected.  This column is read only
Property Type	This column lets you select from Creo Parametric internal integration parameters and from Creo Parametric properties.  If you set the value to <b>Attribute</b> , you must specify a Creo Parametric property name in the Parameter column.
Parameter	You can specify a Creo Parametric property name in this column.  A parameter with the given name is searched in the configuration specific properties first. If there is no configuration specific property with that name, the standard or custom properties of the file are scanned.
Format	Provide basic formatting options for values mapped. See <a href="#">Formatting values during mapping</a> (p. 44) for more details.
Format Parameter	Provide basic formatting options for values mapped See <a href="#">Formatting values during mapping</a> (p. 44) for more details.

The available property types are CAD dependent and listed in the table below.

Property Type	Purpose
ModelFullName	File name including path
ModelName	File name with extension but without path
ModelExtension	File extension
ModelType	File type, equal to the CAD file extension in most CAD systems
ModelPath	File path location
ModelNameOrConfiguration	File name or configuration name
ModelNameAndConfiguration	File name plus configuration name
ObjectName	File name without path and extension
ObjectName.Type	File name without path
CreatingSystem	CAD version the file is created with
Attribute	Retrieve the CAD Property defined in the Parameter column
String	Set the string defined in the Parameter column

Property Type	Purpose
Code	Execute the CAD callback code defined in the Parameter column
\$USER	Set the current login user name as value
\$USERID	Set the current login user ID as value
Configuration	Configuration name
ModelConfigurationNames	Contained configuration names
ModelStamp	Internal timestamps of the file
ModelFamilyType	Part family type or configuration type
ModelFamily	Part family or configuration master or generic
ModelLinkType	Linked references type
ModelLinks	Linked source file
SimplifiedRep	Simplified representation identifier
DrawingModel	Model assigned to the drawing
DrawingModelName	Model name assigned to the drawing
DrawingModelType	Model extension assigned to the drawing
HelperPartIdent	Helper part property



Where updates in the Creo Parametric connector are written into both Creo Parametric and Agile PLM, we recommend mapping attributes in the **Initial Save**, **Update Save** and **CAD Properties**. If the names of the attributes are changed in Agile PLM, you must manually recreate the mappings in the Mapping editor.


### Mapping Agile PLM values to Creo Parametric Properties

The mapping of Agile PLM values back into Creo Parametric properties is defined in **CAD Properties** and **TitleBlock** tabs.

The **CAD Properties** tab defines the mappings to Creo Parametric properties. Some CAD systems support special logic for drawing title blocks, especially if the displayed texts in the drawing cannot be linked to CAD properties. For this use case the second **TitleBlock** tab is used by some CAD tools.

The following columns are available:

Column	Description
Property Name	The name of the target Creo Parametric property. This could be a Creo Parametric file attribute or Creo Parametric property or configuration-specific property
PLM SuperClass	Switches between the target Agile PLM superclass objects; Design or Item
PLM Field	Depending on the selected PLM superclass object, the available Agile PLM fields are filtered from the current class configuration. Only visible and editable fields in Agile PLM are available.

Column	Description
CAX Name	Set with the default symbolic name or the attribute ID if no such symbolic name exists.  <b>CAX Name</b> column is editable to support editing complex legacy logic for data extraction in drawing title blocks.
Format	Provide basic formatting options for values mapped See <a href="#">Formatting values during mapping</a> (p. 44) for more details.
Format Parameter	Provide basic formatting options for values mapped See <a href="#">Formatting values during mapping</a> (p. 44) for more details.

### Formatting values during mapping

The **Format** and **Format Parameter** columns provide basic formatting options for values mapped between Creo Parametric and Agile PLM and vice versa.

Valid format options are listed in the table below. The date formats work only if the value to be formatted is given in an integer value.


Format	Description
None	No formatting action is executed
toLowerCase	Convert the value to lower case characters
toUpperCase	Convert the value to uppercase characters
subString	Cut a sub string from the value with the start and end index defined in the Format Parameter column. Valid values are for example 0-end, 3-end, 0-50.
Prefix	Append the prefix defined in the Format Parameter column in front of the value
Suffix	Append the suffix defined in the Format Parameter column at the end of the value
Code	Execute the CAD callback code defined in the Format Parameter column to format the value
DateFormat DD.MM.YYYY HH:MI:SS	Format the Date like 15.12.2010 23:30:00
DateFormat DD.MM.YYYY	Format the Date like 15.12.2010
DateFormat DD.MM.YY	Format the Date like 15.12.10
DateFormat DD-MM-YY	Format the Date like 15-12-10
DateFormat MM/DD/YY	Format the Date like 12/15/10
DateFormat DD-MMM-YY	Format the Date like 15-Dec-2010

See [DateFormats Section](#) (p. 87) for more details on how to manually modify the date format.

5.2.3.2 MCAD-MAPPING folders

Describes how mapping is handled.


The system creates a design in Agile PLM called `MCAD-MAPPING-Creo Parametric` and attaches the mapping to that Design. On the next login of any user with the same Creo Parametric system, the mapping is downloaded automatically and used on the client machine.

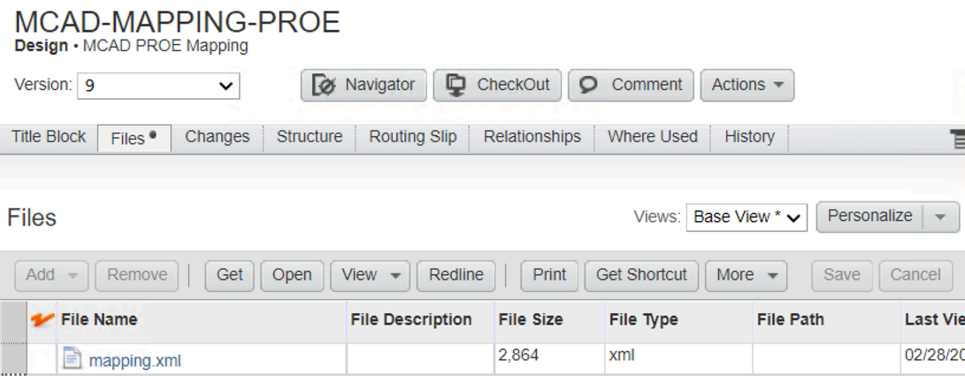


5.2.3.3 Mapping the Sub-Class for New Objects to Agile PLM (TARGET\_CLASS Attributes)

The MCAD connector provides a feature that allows you to define the class assignment of an object through mapping.

When creating objects in Agile PLM, the class assignment of an object is usually taken from the corresponding pre-set value in the Preferences dialog. However, there is also a way to define the class assignment of an object through mapping: The `TARGET_CLASS` attributes listed in the **PLM field** columns of the Mapping Editor control the sub-class that is used when creating an object through the MCAD connector. An example is given below.

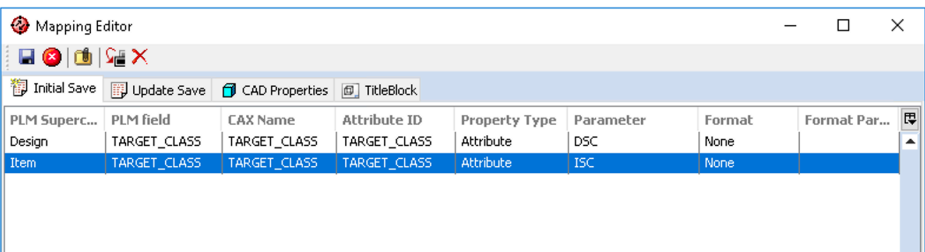

The `TARGET_CLASS` attributes should only be used during object creation, means in the **Initial Save** tab of the Mapping Editor.

 If `TARGET_CLASS` mapping is not set or CAD file property defining the sub-class is empty (=null string) the default class from the Preferences dialog is used.

5.2.3.4 Mapping Empty Values to and from Agile PLM Fields

Since version 3.6.1, the MCAD connector allows mapping empty values to and from Agile PLM attributes.

**Configuration file:** `CaxConfig.xml`

Every attribute that should be allowed to contain empty values needs to be added to one of the following white-lists:

FF_WHITE_SPACE_LIST	For objects of the <b>File Folders</b> base-class or any sub-class thereof.
ITEM_WHITE_SPACE_LIST	For objects of the <b>Items</b> base-class or any sub-class thereof.

CHANGE_WHITE_SPACE_LIST	For objects of the <b>Changes</b> base-class or any sub-class thereof.
-------------------------	--

Each of the white-list represents an XML `Structure` object containing a list of `Fields`.

- The value `1` indicates that empty values are allowed for the corresponding Agile PLM attribute
- The value `0` means that empty values are not allowed.

If an attribute is not listed in the white list, the MCAD connector implicitly assumes that empty values are not allowed as well.

The `Name` tag of the XML `Field` must contain the **Base ID** of the Agile PLM attribute in question.

Example:

```
<Structure>
  <Name>FF_WHITE_SPACE_LIST</Name>
  <FieldCollection>
    <Field><Name>6174</Name><Value>1</Value></Field> <!-- empty values allowed -->
    <Field><Name>1303</Name><Value>0</Value></Field> <!-- empty values not allowed -->
  </FieldCollection>
</Structure>
```

Related links

[CAXConfig.xml](#) (p. 77)

5.2.3.5 Mapping Values on Save As

In MCAD release 3.5.0.0, the functionality for customizing attribute assignments in the MCAD connector has been removed from the product (Preferences dialog, sub-class tabs).

This was done to prevent incompatibilities to the default MCAD data model which could be introduced by improper configurations. However, the attribute customization also allowed customers to extend the data model of MCAD to their needs, for example, by configuring an attribute to which MCAD would write the source object of a Save As process. Since MCAD 3.5.0.0, this functionality is not available any longer.

To restore the previously available functionality regarding the Save As source object, a new mapping functionality was introduced to the MCAD connector.

**Configuration file:** `CaxConfig.xml`

This mapping functionality allows users to define attributes to which the source objects of a Save As process should be written during the execution of that process.

```
<Structure>
  <Name>CAX_NAMES_BY_ID</Name>
  <FieldCollection>
    <Field><Name>ObjectType.AttributeID</Name><Value>CAX_COPY_FROM</Value></Field>
    <Field><Name>ObjectType.AttributeID</Name><Value>CAX_COPY_FROM</Value></Field>
  </FieldCollection>
</Structure>
```

`ObjectType` is the type of object to which the value should be written. This can be `FF` (FileFolder or Design) or `Item` (any kind of Item). `AttributeID` is the attribute ID of the target PLM attribute. The actual function value `CAX_COPY_FROM` defines the source object of an MCAD Save As process. For Design objects this is the Design number, for Items the Item number.

Example configuration:

```
<Structure>
  <Name>CAX_NAMES_BY_ID</Name>
  <FieldCollection>
    <Field><Name>FF.2471842</Name><Value>CAX_COPY_FROM</Value></Field>
    <Field><Name>Item.1301</Name><Value>CAX_COPY_FROM</Value></Field>
  </FieldCollection>
</Structure>
```

### List of automatically handled attributes on Save As

The following attributes are handled automatically on Save As and should not be mapped:

Title block tab, Page 1 and Page 2:

- Design number
- Revision
- Version
- Check out status
- CAD filename
- Design system
- File type
- Part number

Relationship tab:

- Link type

Structure tab:

- Identifier
- Component
- Revision
- Version
- Quantity

#### 5.2.3.6 Mapping read only Item BOM attributes

Since release 3.6.4.3, the MCAD connector allows mapping read only Item BOM attributes.

**Configuration file:** `CaxConfig.xml`

The new structure `READONLY_BOM_FIELDS` is introduced. It is absent by default and must be manually added. This XML structure defines all Item BOM fields which should not be updated by the MCAD connector (read-only fields), defined by their field ID.

```
<Structure>
  <Name>READONLY_BOM_FIELDS</Name>
  <!-- Values are not used -->
  <FieldCollection>
    <Field><Name></Name><Value></Value></Field>
  </FieldCollection>
</Structure>
```



Only attribute ID's may be used.

Though the XML definition is based on a `name-and-value` syntax, the `value` field itself is not evaluated by the connector.

The `Name` tag of the XML `Field` must contain the **Base ID** of the Agile PLM attribute in question.

The IDs or CAX names listed in the structure will be filtered out by BOM CUO actions.

#### Related links

[CAXConfig.xml](#) (p. 77)

## 5.2.4 Template Management

This section provides detailed information about all necessary steps to enable object creation using templates saved in Agile PLM.

The Create Object dialog is used create new objects simultaneously in Creo Parametric and Agile PLM using template files stored in Agile PLM. The dialog is displayed by the **Agile > Create** command within the integration menu.



**Agile Create Object**

**Details**

**Template**

Filetype of Template: any

Template File: DESIGN0100108

**Item**

Item Number: [ ]

Item Description: [ ]

Model Class Number: Model

Model: Model

**Design**

☐ Design is a Helperpart

Design Number: [ ]

Design Description: [ ]

File Name: [ ]

**Preferences**

**File Name**

Workspaces

Default

Current Workspace: Default

☐ Mandatory only

**Property**

Create Date

Last Modified Date

Incorporated

Checkout User

Checkout Location

Checkout Date

☐ Mandatory only

**Property**

Shippable Item

Part Subtype

MakeBuy

Product Line(s)

Overall Compliance

Mass

New Object Cancel

See User Guide for more information.

#### 5.2.4.1 Template Structures in Agile PLM

The Create Object dialog uses a certain data structure in the Agile PLM as the basis of object creation.

All templates that should be available to the user must be stored in that structure. The structure must be named `SITE-START-PROE` where `SITE` is a variable that can be defined in the `CAXConfig.xml` file, its default value is `MCAD` if it is not defined in that file.

It is possible to store template structures of more than one CAD system in Agile PLM. If the `SITE` variable is assigned for each client, subdivisions of the same CAD can use templates in the same PLM without interfering each other. For example `LONDON-START-PROE` and `ROME-START-PROE` may exist in the same Agile PLM for Creo Parametric clients with the different `SITE` variables `LONDON` and `ROME` where the `LONDON` division can only use the structure `LONDON-START-PROE` and vice versa.

The `SITE` variable is assigned by editing the file `%xPlmRootDir%\CAXConfig.xml`. To set the value, after the beginning of the first occurrence of the line `FieldCollection` edit the following line:

```
<Field><Name>SITE</Name><Value>Custom_site_value</Value></Field>
```

`Custom_site_value` is the string that defines the site, here you can enter any string desired, but it must not contain spaces. Save the `CAXConfig.xml` after finishing the edit. These steps must be repeated for each client that should belong to a site.

#### 5.2.4.2 Create a Template Structure in Agile PLM

You must create valid template structures in Agile PLM to use the Create New object feature.

##### About this task

This task describes how to create a Template Structure in Agile PLM.



You must have the appropriate rights and roles to create new Design Objects in Agile PLM.

##### Procedure

1. Login to the Agile PLM Web Client .
2. Click on the **Create New** drop-down list and select **File Folders > Designs**.  
→ A pop-up window opens
3. On the pop-up window, select the type **Design** and enter the appropriate name of the template structure in the **Number** field for example `MCAD-START-PROE`.
4. Click **Save**.

##### Result

A Template structure has been created in Agile PLM and can be loaded with Creo Parametric files.

#### 5.2.4.3 Disable Autonumber Use for New Design Objects

To use create template structures in Agile PLM, you must switch off forced AutoNumber usage when creating new Design objects in Agile PLM.

##### Before you start



You must have access Java Client access and privileges associated with an Administrator type role.

##### About this task

This task describes how to disable forced AutoNumber use when creating new Design objects in Agile PLM.

##### Procedure

1. Log in to Agile PLM Java Client.
2. In the tab pane on the upper left-hand side, choose the **Admin** tab.
3. In the feature tree within that tab, open the node **Data Settings**.
4. Double click on the sub-node **Classes**.  
→ The **Classes** window is opened.

5. In the **Classes** window, select and double click on the subclass **Design**.  
→ **Subclass:Design** window is opened.
6. In the **General Information** tab set the option **AutoNumber Required** to **No**.
7. Click **Save**.

## Result

Autonumber use when creating new Design objects has been disabled in Agile PLM.

## What to do next

Either return to the Agile PLM Web Client to create the new Design **MCAD-START-PROE** or create it from the Java Client.

Once the Design object is created. Repeat step 6 and 7 but set the value back to **Yes** and then close the Java Client.

### 5.2.4.4 Adding Template Files to the Structure

A template file is a normal Creo Parametric file that is made available in a template structure in Agile PLM. When you use the Create Object frame for object creation, the selected template file is downloaded to your workspace, renamed and opened in Creo Parametric. Due to this, template files can be created in the same way as any other Creo Parametric file.

## Before you start

You must first create the Design template structure for example, **MCAD-START-PROE** in Agile PLM.


Create a Creo Parametric file that will be used as the template and save it to your local workspace.

## About this task

This use case describes how to add a template file to the template structure in Agile PLM.

## Procedure

1. On Agile PLM Web Client, navigate to your template structure.  
→ Agile PLM Web Client displays the design object of the template structure.
2. Click **CheckOut**  
→ The Design object of the template structure has been checked out.
3. Go to the **Structure** tab of the Design Object and Click **Add**.  
→ A text field opens.
4. In the text field, click on the button **Create to add**.  
→ A pop-up window opens.
5. In the pop-up window select a **Type** and enter a **Number**. Optionally, you can also add a **Description**
6. Click **Add**.  
→ A new Design object for a template is created.
7. Click on the Number of the newly created Design object to open it.  
→ Agile PLM Web Client displays the newly created Design object.
8. Go to the **Files** tab of the created template file object and upload a Creo Parametric file.

- a) Click **Add**.
    - The **File Upload Selector** pop-up opens.
  - b) Click **Browse for Files**.
    - Windows File explorer opens.
  - c) Search and select a Creo Parametric file for upload and click **Open**.
    - The selected file is added to the **File Upload Selector** window.
  - d) Click **Upload**.
    - The Creo Parametric file is attached to the **Files** tab of the newly created template file object. That Creo Parametric file becomes the template file.
-  The template file object is a Design object in the template structure, not the structure itself which is a Design object itself!
- e) Select the **Title Block** tab and enter at least the properties **Design System** and **Filetype**. All other properties can optionally be left empty.
    - The **Design System** is the name of the CAD from which the template file was created
    - **Filetype** is the file ending of the template file in uppercase (without a dot).
  - f) **Optionally:** Fill in the **Subtype** to assign a subtype to the template file.
  - g) Save the changes made to that template object.

## Result

The template structure is operational and template creation is possible from the Create Object dialog.

### Related links


[Template Structures in Agile PLM](#) (p. 49)

[Subtypes](#) (p. 52)

### 5.2.4.5 Subtypes

A subtype is a Creo Parametric file type that extends, or in other words, specializes another Creo Parametric file type.


Every subtype file has the same file ending as its supertype and acts as a normal Creo Parametric file. However, in Agile PLM a subtype behaves slightly different. Every subtype is defined by the string that is entered in the **Subtype** property in the **Title Block** tab of a Design object. If a Design should not be assigned to a subtype, the property field can be left empty.

 A valid subtype entry must consist of at least two characters (spaces do not count as characters in this case). If only one character is entered in that property field, it is treated as if it was empty.

To create a new subtype, you need to assign a string that was not already used by a Design object in the template structure. It is not necessary to create a new Design object when creating a new subtype. Changing, or deleting the subtype of an already existing Design is also possible. To do so, you need to change or delete the entry of the field **Subtype** in the Design's **Title Block**. Likewise, the subtype of a Design object can be changed to an already existing subtype by simply changing the **Subtype** property. It is possible to assign the same subtype to template objects of different file types as well.

Every subtype that is used in the template structure gets its separate entry in the **Filetype of Template** combo box in the Create Object dialog. The entry is displayed the same way as the entry for the supertype with the name of the subtype appended. If a subtype entry is selected, only the template files that belong to the selected file type **and** the selected subtype are displayed in the **Template File** combo

box. However, if the entry for the supertype is selected, all template files of the selected file type are displayed, no matter to which subtype they belong.


 The entry for a supertype in the **Filetype of Template** combo box does only appear if there is at least one template file of the corresponding file type that does not belong to a subtype.

Subtypes enable you to separate template files from each other according to certain criteria. They may be used to provide templates of the same file type to the user in a structured way, for example separated by projects, locations, names of clients and so on. In fact, every property that can be expressed as a string could be used as a subtype making a finely graded template classification possible.

5.2.4.6 Structure Resolution

The Create functionality of MCAD does not perform any kind of structure resolution for the elements of the template structure.

Therefore, when a template is downloaded, only the actual Creo Parametric file selected in the Create Object dialog is downloaded and opened in the Creo Parametric regardless of its structure.

 This also accounts for Creo Parametric format files. Due to this, format files should be managed outside of the Agile PLM and the MCAD connector. For details, refer chapter Managing Format Files .

5.2.5 Viewable Files Management

Viewable files are 2D or 3D interchange file formats that are automatically created and attached in Agile PLM along with the native Creo Parametric file.

5.2.5.1 How to Configure Viewable Formats Creation

You can define the viewable file formats available in the Preferences dialog and hence the viewable formats created by the MCAD connector.

**Configuration file:** `CAXConfig.xml`

**Structure:** Viewables

The supported viewable types are defined in the `Viewables` structure in a semi-colon separated list:

```
<Structure>
  <Name>Viewables</Name>
  <FieldCollection>
    <Field><Name>ViewablesDrawing</Name><Value>PDF;TIF;CGM</Value></Field>
    <Field><Name>ViewablesModel</Name><Value>CGR;WRL;STEP;IGES;3DXML;JT;PDF</
Value></Field>
  </FieldCollection>
</Structure>
```

Setting	Description
ViewablesDrawing	Defines viewable file types for drawing files visible in the Preferences dialog.  <b>Possible values:</b> List of viewable file endings (use semi-colons as list separator).

Setting	Description
ViewablesModel	<p>Defines viewable file types for 3D models files visible in the Preferences dialog.</p> <p><b>Possible values:</b> List of viewable file endings (use semi-colons as list separator).</p>

The supported formats include:

Drawing Formats	Model Formats
<ul style="list-style-type: none"><li>■ PDF</li><li>■ TIF</li><li>■ PVZ</li><li>■ DXF</li><li>■ DWG</li><li>■ STEP</li></ul>	<ul style="list-style-type: none"><li>■ STEP</li><li>■ IGES</li><li>■ X_T (needs license for converter scripts)</li><li>■ PDF (3DPDF, due to limitations only created for the root element of the assembly structure currently open in Creo Parametric)</li><li>■ PVZ</li></ul>



The MCAD connector uses the Creo Parametric's PDF generation tool by default. So any settings to control what ends up in the PDF should be described in the Creo Parametric tool's documentation.

**Related links**  
[Viewables Section](#) (p. 89)

5.2.5.2 Viewable File Naming

You can configure the file names that should be used for viewable files created by the MCAD connector.

**Configuration file:** CAXConfig.xml

**Structure:** FileNaming

Depending on the file extension different rules are possible. However, for each file extension only one rule is supported. The Field `Name` represents the file ending of the viewable file while the Field `Value` represents the actual naming rule.

```
<Structure>
  <Name>FileNaming</Name>
  <FieldCollection>
    <Field><Name>PDF</Name><Value>%Item.NUMBER%_%Item.REV%.PDF</Value></Field>
    <Field><Name>STP</Name><Value>%Item.NUMBER%_%Item.REV%.STP</Value></Field>
    <!--Field><Name>JT</Name><Value>%NUMBER%_%REV%.JT</Value></Field-->
    <Field><Name>PNG</Name><Value>thumbnail.png</Value></Field>
  </FieldCollection>
</Structure>
```



Some CAD systems use the file ending .STEP/IGES instead of .STP/IGS for STEP/IGES viewables. In this case, the rule defined for STP/IGS is not applied for viewable files with the file ending .STEP/IGES. Therefore, you must also provide a naming rule for .STEP/IGES files.

The file naming rule is parsed during the file transfer process and can contain values from the Design object or from the Item object:

- **Design Values:** `%NUMBER%_%REV%.JT` - combines Design Number and Version.
- **Item Values:** `%Item.NUMBER%_%Item.REV%.JT` - combines Item Number and Revision.
- **Fix Values:** `thumbnail.png` - does not contain values from the the Design or Item objects.

Since version 3.4, it is possible to remove file endings from any valid Agile PLM data set using the `_ROOT` extension. Appending the `_ROOT` flag to an attribute removes its CAD file ending. For example:

**Definition:**

```
<Field><Name>PDF</Name><Value>%NUMBER%_Item.Number%.PDF</Value></Field>
```

- **Resulting filename:** `DESIGN123456.SLDPRT_PART1234.PDF`

**Definition:**

```
<Field><Name>PDF</Name><Value>%NUMBER_ROOT%_Item.Number%.PDF</Value></Field>
```

- **Resulting filename:** `DESIGN123456_PART1234.PDF`

If one of the values is missing or commented out, the standard viewable naming rule is applied. The rule uses the file name of the Creo Parametric file, from which the viewable file originated and the revision.

```
<!-- Field><Name>PDF</Name><Value>%Item.NUMBER%_Item.REV%.PDF</Value></Field -->
```



Renaming the JT viewables can cause problems. Therefore, it is commented out by default.

When you have Designs without Item objects, we recommend that you use `%NUMBER_ROOT%_REVISION%.xxx` to ensure that you have an understandable file name. In this case, the Design must have a revision value.

## Sheet Number Handling

The connector is also able to handle creating multiple viewables for the same model for example multi-sheet drawings. where each created file gets a unique filename based on the sheet number.

Example for PDF viewables for a multi-sheet drawing where multiple PDF files are generated:

```
<Field><Name>DXF</Name><Value>%Item.NUMBER%_Item.REV%_SHEET_NO%.PDF</Value></Field>
```

### Related links

[FileNaming Section](#) (p. 96)

### 5.2.5.3 Model Viewable Combo Box Options

Since release 3.6.4, only the options **Top CAD file** and **Disabled** are available by default for the Models combo box in the Viewable Creation section of the Preferences dialog.

The options **All CAD Files**, **All Parts** and **All Assemblies** were removed but can be activated if desired.

**Configuration file:** `CAXConfig.xml`

**Structure:** `BrowserDisplay`

You can configure the valid options by adding the following `Field` to the `BrowserDisplay` structure:

```
<Field><Name>ModelViewableOptions</Name><Value>TOP</Value></Field> <!-- values: TOP, ALL, ASSEMBLIES, PARTS -->
```

You can also add more than one option by using semi colons to separate the list:

```
<Field><Name>ModelViewableOptions</Name><Value>TOP;PARTS;ASSEMBLIES</Value></Field>
```


The Field `Value` represents the actual option to be added. Valid options include:


- TOP - for **Top CAD file**
- ALL - for **All CAD Files**
- ASSEMBLIES - for **All Assemblies**
- PARTS - for **All Parts**

5.2.5.4 **Activate Viewable Creation on the Preferences Dialog**

The types of viewable files that are automatically created are controlled in the Preferences dialog **Viewable Creation** section.

You can activate viewable creation for 2D and 3D files. This can be set independently for Drawings and Models (part and assembly files) and can be set to generate the viewable files for all CAD files, only the top CAD file, or no CAD files. See [Model Viewable Combo Box Options](#) (p. 55) for more details.


 Additional configuration may be necessary to automatically create the viewable files.

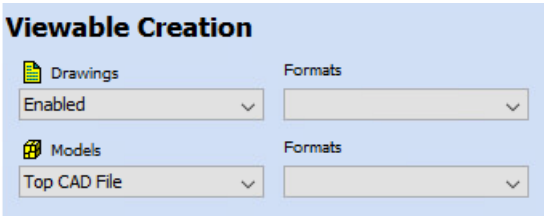


The combo boxes titled **Drawings** and **Models** define in which situations the viewables selected in the **Formats** combo boxes should be created. If no format is selected, no viewables are created regardless of the selected option in these combo boxes.


Option	Description
Drawings	<p>Controls viewable generation for 2D model files.</p> <p>Valid options include:</p> <ul style="list-style-type: none"><li>■ <b>Enabled</b> - viewables of the selected formats are generated for drawing files.</li><li>■ <b>Disabled</b> - No viewables are generated for drawing files.</li></ul>



Option	Description
Models	<p>Controls viewable generation for 3D model files.</p> <p>Valid options are:</p> <ul style="list-style-type: none"><li>■ <b>Top CAD file</b> - viewables of the selected formats are generated only for the top Creo Parametric file in the structure.</li><li>■ <b>All CAD Files</b> - viewables of the selected formats are generated for all Creo Parametric files in the structure.</li><li>■ <b>All Parts</b> - viewables of the selected formats are generated only for part files.</li><li>■ <b>All Assemblies</b> - viewables of the selected formats are generated only for assembly files.</li><li>■ <b>Disabled</b> - No viewables files are generated.</li></ul> <p> Since release 3.6.4, only the options <b>Top CAD file</b> and <b>Disabled</b> are available by default.</p>

 Enabling viewable generation for 3D models can cause a huge load to processes in the Creo Parametric session on save and have a huge impact on the save performance. It is NOT recommended to enable and set as default for all users.

The **Formats** combo boxes launch a pop up dialog that displays all available viewable formats. The pop-up lets you select the desired formats to be created.

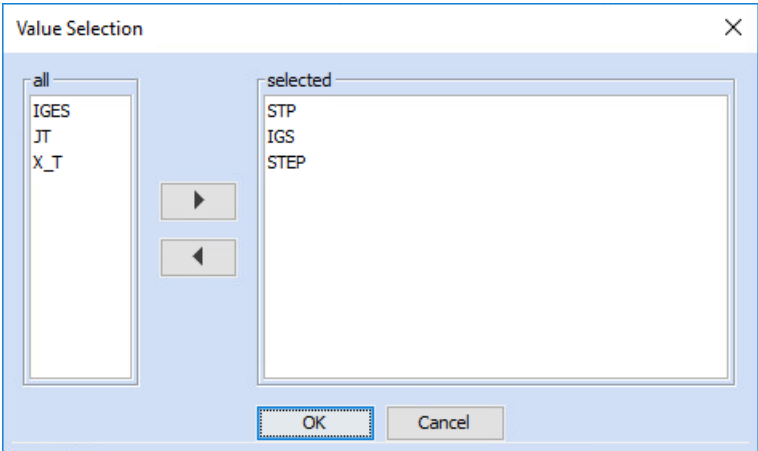

**Related links**

- [BrowserDisplay Section](#) (p. 80)
- [Viewables Section](#) (p. 89)

5.2.5.5 **Manage viewable files in the local workspace**

You can configure and define the viewable file types (file endings) that should be deleted by the context menu item **Remove Viewables** available in the Workspace Manager.

**Configuration file:** CAXConfig.xml

**Structure:** WorkspaceDeleteViewables

The **Remove Viewables** function deletes viewable files stored locally in the selected workspace.

See [WorkspaceDeleteViewables Section](#) (p. 90) for more information.

## 5.2.6 Thumbnail Support

Inside the Web Components thumbnails are extracted from the Creo Parametric native file.

The Creo Parametric system stores thumbnail views into the Creo Parametric binary data that are extracted using the same routines used by Windows Explorer.

The connector does not generate the thumbnail content but retrieves it from Creo Parametric files. Please refer to the documentation of your Creo Parametric tool on how to enable thumbnail generation in the Creo Parametric files. The connector extracts the same thumbnail visible in the thumbnail view of Windows Explorer.

The thumbnails are only held locally and are shown inside the Workspace Manager in small icons. A bigger fly-out is shown on the small icon, on a node in the browser views or on the file name columns in the table views. In the Load Preview the thumbnail from Agile PLM is downloaded if no local thumbnail is available. In all other dialogs, only thumbnails generated locally are used.

### 5.2.6.1 Activating Thumbnails

The MCAD connectors support the thumbnail functionality of Agile PLM.

#### About this task

This use case describes how to activate Thumbnails on Agile PLM Java Client.

#### Procedure

1. On the Java Client, navigate to the **Admin** tab and expand the **Server Settings** options by clicking on the plus (+) sign besides the folder name.
2. Double click on **Preferences**  
→ The Preferences dialog is opened displaying the **General Information** tab.
3. Change the option setting **Thumbnail Display** to **Enabled** from the drop down list.
4. Change the option setting **Thumbnail and Streaming File Pre-Generation** to **Enabled** from the drop down list.

#### Result

Thumbnails are activated.

### 5.2.6.2 AutoVue configuration for CAD thumbnails

To show the Creo Parametric thumbnail in the Web Client you should disable the generation of thumbnails in AutoVue for the Creo Parametric native file formats and enable the .PNG file rendering in AutoVue only.

Otherwise, the AutoVue generated thumbnails can overwrite the Creo Parametric thumbnail. Since the Creo Parametric file is not loaded for thumbnail generation, this reduces the load on the AutoVue server and database.

### 5.2.6.3 Transfer Creo Parametric thumbnails to Agile PLM

To transfer thumbnails to Agile PLM, you must configure the connector.

- **Configuration file:** `CAXConfig.xml`
- **Parameter:** `UploadThumbnails`
- **Default Value:** `ecs`

The option setting `UploadThumbnails` is used to control the transfer of thumbnails to Agile PLM. The possible values include:

Value	Description
ecs	If set to <code>ecs</code> , an API function is used to store the thumbnails in the Agile PLM database to prevent file transfer overhead. This is the default value.
fileserver	If set to <code>fileserver</code> , Creo Parametric thumbnails are transferred to Agile PLM by uploading them to the file vault. A preview .PNG file is visible in the <b>Files</b> tab of the Design object in this case.
false	If set to <code>false</code> , the thumbnail transfer to Agile PLM is switched off.

5.2.6.4 Thumbnails in the Load Preview

The thumbnails in the load preview use the Agile PLM thumbnails if available and download the file from the vault on demand (on a show fly out request).

If local files and thumbnails are available on the local disk already, then the thumbnail file is not downloaded from Agile PLM and the local representation is used.

5.2.6.5 Configure Thumbnail size in Agile PLM

Additionally, you can configure the size of the Thumbnail image in Agile PLM.

- **Configuration file:** `CAXConfig.xml`
- **Parameter:** `THUMBNAILS`

The default configuration is set in the internal `OraclePLM\jar\agile9\ag93ws_connector.jar\com\xplm\agile93\cax\xml\CAXConfig.xml` file and should NOT be changed:

```
<Structure>
  <Name>THUMBNAILS</Name>
  <FieldCollection>
    <Field><Name>OMIT_GENERATION</Name><Value>>false</Value></Field>
    <Field><Name>DEFAULT</Name><Value>200X200</Value></Field>
  </FieldCollection>
</Structure>
```

The external `OraclePLM\ini\CAXConfig.xml` can be extended to overwrite the default settings by adding a `Structure` called `THUMBNAILS` as follows:

```
<Structure>
  <Name>THUMBNAILS</Name>
  <FieldCollection>
    <Field><Name>DRW</Name><Value>100x300</Value></Field>
    <Field><Name>ASM</Name><Value>250X150</Value></Field>
  </FieldCollection>
</Structure>
```

where

- `Name` is the file extension in capital letters
- `Value` is Width x Height of the image in pixels



If the thumbnail size is reconfigured, thumbnail folders must be deleted for the changes to take effect. For example, delete `C:\AgileEC\wspaces\Default\.thumbnails`, otherwise the connector reuses the cached thumbnails.

## 5.2.7 Check Out Attributes functionality

This functionality re-reads a pre-defined list of Design attributes when executing a Check Out by the MCAD connector.

### About this task



Since release 3.6.3.1, you can configure the attributes re-read from Agile PLM when the MCAD connector executes a Check Out.

The IDs of attributes to re-read are listed in the transaction `CheckOutAttributes` in the internal file `Agile93Templates.xml` in the package `com\xplm\agile93\ws\cad\xml`.



Do not remove the provided default attributes, you can only extend the list by adding required IDs.

The IDs are restricted on **TitleBlock** and **Page Two** Design attributes because the **Page Three** attributes are special for each subclass and they are not presented in the main table in the Save Preview.

If used in conjunction with a PX: The event subscriber used needs to have the following values selected:

- Trigger Type = Pre Execution
- Mode = Synchronous



You need administrative rights on the workstation to make the following changes.

### Procedure

1. Copy `%xPlmRootDir%\jar\agile9\ag934ws_proxy.jar` archive to a directory with write access for example `C:\Users\%USERPROFILE%\Documents\` folder
  - a) Open the archive with 7-Zip, and navigate to the `xml` folder for example: `C:\Users\%USERPROFILE%\Documents\ag934ws_proxy.jar\com\xplm\agile93\ws\cad\xml\`
  - b) Copy the `Agile93Templates.xml` file out of the archive for example by dragging and dropping to your Documents folder.
  - c) Open the `Agile93Templates.xml` file in a text editor and extend the transaction `CheckOutAttributes` by adding `Fields` with the **Base ID** of the required Design attributes. For example:

```
<!-- Description -->
<Field>
  <Name>6174</Name>
  <Value></Value>
</Field>
<!-- Text13 -->
<Field>
  <Name>1303</Name>
  <Value></Value>
</Field>
```

- d) Save the changes made to `Agile93Templates.xml`.

- e) Copy the `Agile93Templates.xml` file back into the archive. You can do this by dragging and dropping the file back into the archive open in 7-Zip.

- 2. Restore the `a934ws_proxy.jar` archive to its original location.

## Result

The configured Design attributes are now set to be re-read when the connector performs Check Out of the corresponding Design Objects.



Mapped CAD values can be overwritten if they are listed in the `CheckOutAttributes` transaction.

## 6 Update

### 6.1 Modifying installation

Complete these steps to modify an existing installation and add for example new components or remove existing.



#### About this task

During modification, no existing files are overwritten and only missing files are added.



You can install, modify, repair, or uninstall also in silent-mode. See [Silent-mode installation](#) (p. 119) for more information.

#### Procedure

1. Close all open applications related to the integration.
2. Start the current installer `Setup-*.exe` with administrator rights. If this file is no longer available, start `Setup-*.msi` directly from the directory `C:\ProgramData\XPLM Solution GmbH\packages`. Alternatively, you can also start the installer from Windows:
  - a) In the system settings, go to *Apps & Features* and search for the entry **XPLM Setup for ...**.
  - b) Select the entry and click **Modify**.→ Visual C++ runtimes are checked/installed again and the installation wizard appears.
3. Click **Next** to start the wizard.  
→ The step *Modify, repair or remove installation* appears.
4. Click **Modify**.  
→ The step *Installation path* appears.
5. In this step, you cannot change the installation path, but applying overlay packages or making backups are possible.
  - The default installation directory is under `C:\Program Files`. To avoid later file access problems due to insufficient permissions, change the path to a writable location that is not protected by Windows.
  - If another product is already installed, you cannot change the installation directory. The product installed first defines this path for other products.
  - If you have received an overlay package from XPLM, or want to apply your own, enable the option **Apply custom files after installation** and enter the path to the overlay. Overlays contain customized files that overwrite the installed files as the last step. See [Working with overlay packages](#) (p. 123) for more information.
  - To backup the existing installation, enable the option **Backup current installation**. Define the backup scope first. Then click **Browse** and select a backup directory. Always create a backup when you update or change an installation. This makes it easier to compare and merge the files later.
6. Click **Next** and update components, if required.  
→ The step *Ready to install* appears.
7. To start installation, click **Install**.  
 During installation, a progress dialog is shown with detailed information on each MSI currently installed. If there are installation issues, the process stops and you can examine the error in the

lower dialog section. If required, click **Save to log** and send the log file to [support@xplm.com](mailto:support@xplm.com) for further investigation. This new progress dialog is available from installer versions 24.3.3.606 onwards.

For older installers, a common CMD window with the progress is shown. Do not click into this window or installation cannot proceed. To continue if you clicked in, press **Enter** or **Esc**.

8. To close the wizard after installation, click **Finish**.

## Result

The installation is modified. Start the product and verify everything works as expected.

### Related links

[Working with overlay packages](#) (p. 123)

## 6.2 Repairing installation

Complete these steps to repair an existing installation if the product does not work correctly, for example fixing missing or corrupt files, or incorrect shortcuts and registry entries.

### About this task

During repair, existing files are overwritten and components registered again.



You can install, modify, repair, or uninstall also in silent-mode. See [Silent-mode installation](#) (p. 119) for more information.

### Procedure

1. Close all open applications related to the integration.
2. Start the current installer `Setup-*.exe` with administrator rights. If this file is no longer available, start `Setup-*.msi` directly from the directory `C:\ProgramData\XPLM Solution GmbH\packages`. Alternatively, you can also start the installer from Windows:
  - a) In the system settings, go to *Apps & Features* and search for the entry **XPLM Setup for ...**.
  - b) Select the entry and click **Modify**.→ Visual C++ runtimes are checked/installed again and the installation wizard appears.
3. Click **Next** to start the wizard.  
→ The step *Modify, repair or remove installation* appears.
4. Click **Repair**.  
→ The step *Installation path* appears.
5. In this step, you cannot change the installation path, but applying overlay packages or making backups are possible.
  - The default installation directory is under `C:\Program Files`. To avoid later file access problems due to insufficient permissions, change the path to a writable location that is not protected by Windows.
  - If another product is already installed, you cannot change the installation directory. The product installed first defines this path for other products.
  - If you have received an overlay package from XPLM, or want to apply your own, enable the option **Apply custom files after installation** and enter the path to the overlay. Overlays contain customized files that overwrite the installed files as the last step. See [Working with overlay packages](#) (p. 123) for more information.

- To backup the existing installation, enable the option **Backup current installation**. Define the backup scope first. Then click **Browse** and select a backup directory.



Always create a backup when you update or change an installation. This makes it easier to compare and merge the files later.

6. Click **Next**.

→ The step *Ready to install* appears.

7. To start installation, click **Install**.



During installation, a progress dialog is shown with detailed information on each MSI currently installed. If there are installation issues, the process stops and you can examine the error in the lower dialog section. If required, click **Save to log** and send the log file to [support@xplm.com](mailto:support@xplm.com) for further investigation. This new progress dialog is available from installer versions 24.3.3.606 onwards.

For older installers, a common CMD window with the progress is shown. Do not click into this window or installation cannot proceed. To continue if you clicked in, press **Enter** or **Esc**.

8. To close the wizard after installation, click **Finish**.

9. **Optional:** Carefully compare and merge the changes from the backup directory with the newly installed files.

## Result

The installation is repaired. Start the product and verify everything works as expected.

### Related links

[Working with overlay packages](#) (p. 123)

## 6.3 Updating installation

Complete these steps to update an existing installation.

### About this task

XPLM strongly recommends using appropriate services for an update. This ensures that existing functionality and modifications are correctly transferred to the new product. Contact <https://support.oracle.com> for assistance.



You can install, modify, repair, or uninstall also in silent-mode. See [Silent-mode installation](#) (p. 119) for more information.

### Procedure

1. Close all open applications related to the integration.
2. Start the new installer `Setup-*.exe` with administrator rights.  
→ Visual C++ runtimes are checked/installed again and the installation wizard appears.
3. Click **Next** to start the wizard.  
→ The installer detects an existing installation and shows a message.
  - If the existing installation is compatible with the unified installer, you can proceed. At the start of the installation, the old components are removed first and the new ones are installed afterwards.

How to identify if the existing installation is already compatible with the unified installer technology?



- The directory `C:\ProgramData\XPLM Solution GmbH` exists.
- The registry entry `HKLM\SOFTWARE\XPLM Solution GmbH\{00000000-0000-0000-0000-000000000000}` exists.
- If the existing installation is not compatible with the unified installer, it will first be uninstalled completely. Before you continue, manually back up the existing installation directory `%xPlmRootDir%`. Then proceed with installation.



In both cases, files with the prefix `customer_` are not affected by the update. All other files are overwritten with the new files.

4. Click **Next**.

→ The step *License agreement for end-users* appears.

5. Accept the license agreement and click **Next**.

→ The step *Installation path* appears.

6. If an existing and compatible installation was found, you cannot change the installation path in this step, but applying overlay packages or making backups are possible.

- The default installation directory is under `C:\Program Files`. To avoid later file access problems due to insufficient permissions, change the path to a writable location that is not protected by Windows.
- If another product is already installed, you cannot change the installation directory. The product installed first defines this path for other products.
- If you have received an overlay package from XPLM, or want to apply your own, enable the option **Apply custom files after installation** and enter the path to the overlay. Overlays contain customized files that overwrite the installed files as the last step. See [Working with overlay packages](#) (p. 123) for more information.
- To backup the existing installation, enable the option **Backup current installation**. Define the backup scope first. Then click **Browse** and select a backup directory.



Always create a backup when you update or change an installation. This makes it easier to compare and merge the files later.

7. Click **Next** and update components, if required.

8. To start installation, click **Install**.



During installation, a progress dialog is shown with detailed information on each MSI currently installed. If there are installation issues, the process stops and you can examine the error in the lower dialog section. If required, click **Save to log** and send the log file to [support@xplm.com](mailto:support@xplm.com) for further investigation. This new progress dialog is available from installer versions 24.3.3.606 onwards.

For older installers, a common CMD window with the progress is shown. Do not click into this window or installation cannot proceed. To continue if you clicked in, press **Enter** or **Esc**.

9. To close the wizard after installation, click **Finish**.

10. Carefully compare and merge the changes from the backup directory with the newly installed files.

## Result

The installation is updated. Start the product and verify everything works as expected.

### Related links

[Working with overlay packages](#) (p. 123)

## 7 Uninstallation

### 7.1 Removing installation

Complete these steps to remove an installation.

#### About this task

To uninstall an installation, you need the setup and component MSIs. If you installed correctly, they are located in the directory `C:\ProgramData\XPLM Solution GmbH\packages`.



The Windows uninstall feature is not supported. However, you can start the MSIs from Windows and use the installer's uninstall function.



You can install, modify, repair, or uninstall also in silent-mode. See [Silent-mode installation](#) (p. 119) for more information.

#### Procedure

1. Close all open applications related to the integration.
2. Start the current installer `Setup-*.exe` with administrator rights. If this file is no longer available, start `Setup-*.msi` directly from the directory `C:\ProgramData\XPLM Solution GmbH\packages`. Alternatively, you can also start the installer from Windows:
  - a) In the system settings, go to *Apps & Features* and search for the entry **XPLM Setup for ...**.
  - b) Select the entry and click **Modify**.  
→ Visual C++ runtimes are checked/installed again and the installation wizard appears.
3. Click **Next** to start the wizard.  
→ The step *Modify, repair or remove installation* appears.
4. Click **Remove**.  
→ The step *Remove of the installation* appears.
5. Click **Remove** to remove the installation.
6. To close the wizard after installation, click **Finish**.
7. Check the directory `%xPlmRootDir%` for leftover directories and files, and delete them manually.

#### Result

The installation is removed.

## 8 Troubleshooting

### 8.1 Troubleshooting integration problems

#### About this task

In case of integration problems, proceed as follows:

#### Procedure

1. Close all related programs.
2. Activate logging.
3. Restart the integration and reproduce the problem.
4. Send an email with the problem description and attached log files to Oracle Global Customer Support (GCS) at [www.oracle.com/support](http://www.oracle.com/support), or My Oracle Support at <https://support.oracle.com>.

#### Related links

[Logging](#) (p. 74)

### 8.2 License errors

If you encounter license issues that affect the integration, see the configured log file for more information. The following table will help you to solve license issues.

### 8.3 Solving issues in mixed environments

If you plan to use ECAD and MCAD integrations together on the same client computer, several installation and licensing issues may occur.

Naming conventions for integration versions:

- Before ECAD product version 1.0.0, the separate FlexLM licensing mechanism was used together with the license file `license.dat`. We call such ECAD integrations the **first generation**.
- Starting with ECAD product version 1.0.0, the separate local license mechanism, called License Client, is used together with the license file `*.lic`. We call such ECAD integrations the **second generation**.
- Starting with ECAD product version 1.2.0, the official MCAD installer is used, which already contains and installs License Client. We call such integrations the **third generation**.
- Starting from 2022, a unified installer based on the third generation is gradually being introduced for all XPLM products. We call such integrations the **fourth generation**. Integrations installed with this installer can run fully in parallel with other products on the same client computer, eliminate redundancies in certain core components, and provide improved uninstall and upgrade behavior.



The integration described here corresponds to the fourth generation.


Issue	Solution
How can I identify an installed integration version?	<ul style="list-style-type: none"> <li>■ First generation ECAD: <ul style="list-style-type: none"> <li>□ In the installation directory of the integration, the license file <code>license.dat</code> exists.</li> </ul> </li> <li>■ Second generation ECAD: <ul style="list-style-type: none"> <li>□ The environment variable <code>xPlmRootDir</code> exists and points to the installation directory of License Client where the license file <code>*.lic</code> is located. Typical locations for the license file in second-generation products are <code>%xPlmRootDir%\LicenseClient\xml</code> or <code>%xPlmRootDir%\xcl\xml</code>.</li> <li>□ The integration itself is not installed under the <code>xPlmRootDir</code> path but in another directory.</li> <li>□ In the installation directory of the integration, the file <code>uninst.exe</code> exists.</li> </ul> </li> <li>■ Third generation ECAD/MCAD: <ul style="list-style-type: none"> <li>□ The integration is installed under the <code>xPlmRootDir</code> path.</li> <li>□ In the installation directory <code>xPlmRootDir</code>, the shortcut <code>Uninstall_*</code> exists.</li> <li>□ MCAD and certain ECAD installers are named <code>xxx_&lt;version&gt;_x64.msi</code>.</li> <li>□ ECAD installers in general are named <code>Integrate2_&lt;PLM&gt;_&lt;ECAD&gt;_&lt;version &amp; build&gt;.exe</code></li> </ul> </li> <li>■ Fourth generation ECAD/MCAD: <ul style="list-style-type: none"> <li>□ The integration is installed under the <code>xPlmRootDir</code> path.</li> <li>□ In the installation directory <code>xPlmRootDir</code>, there is no shortcut <code>Uninstall_*</code>.</li> <li>□ MCAD installers are named <code>&lt;PLM&gt;_&lt;MCAD&gt;_&lt;version&gt;.7z.exe</code>.</li> <li>□ ECAD installers are named <code>&lt;PLM&gt;_&lt;ECAD&gt;_&lt;version&gt;.7z.exe</code>.</li> <li>□ The directory <code>C:\ProgramData\XPLM Solution GmbH</code> exists.</li> <li>□ The registry entry <code>HKLM\SOFTWARE\XPLM Solution GmbH\{00000000-0000-0000-0000-000000000000}</code> exists.</li> </ul> </li> </ul>

## 8.4 Resolving common errors

Following table shows a list of errors that may occur and possible solutions to resolve these errors.

Errors	Possible Reason(s) and Solution(s)
<b>Installation errors</b>	
Error message <i>.NET 4.x not detected</i> is displayed.	<p><b>Reason:</b> Systems requirement Microsoft .NET Framework is not installed or the required version is missing</p> <p><b>Solution:</b> Install or update the .NET Framework to the requested version.</p>

Errors	Possible Reason(s) and Solution(s)
<i>This upgrade is not possible due to compatibility reasons error displayed during installation</i>	<p><b>Reason:</b> Some versions of the MCAD connector cannot be upgraded automatically as the underlying architecture of the setup wizard might have changed.</p> <p><b>Solution:</b> Completely uninstall the previous version of the MCAD connector that is installed on the environment in question and afterwards run the setup wizard of the new MCAD connector version.</p>
Batch Installation: Missing component causes XPLM connector error	<p><b>Reason:</b> From Creo Parametric version 7 and later, the installer automatically enables the API-Toolkits component <b>Legacy Toolkit Application Runtime</b> automatically for install. However when installing Creo Parametric 7 and later in batch mode, one has to specifically enable this component for installation</p> <p>If this component is not installed, the following binaries are missing from the code tree:</p> <ul style="list-style-type: none"> <li>■ ucore46.dll</li> <li>■ ucore64.dll</li> <li>■ udata46.dll</li> <li>■ udata64.dll</li> </ul> <p>hence <code>creotk.dat</code> cannot be registered with the following message:  Creo Toolkit registry file C:\ecpusr_creo7\emp8120732\creotk.dat: application 'ECP_V40' failed to start; see trailfile for details.</p> <p><b>Solution/Workaround:</b> When using batch mode/silent installation, specifically enable the component <b>Legacy Toolkit Application Runtime</b> for installation</p>
<b>Connection errors</b>	


Errors	Possible Reason(s) and Solution(s)
Login dialog does not appear	<p><b>Reason:</b> If it occurs on Windows 10 environment, could be 8.3 MS DOS file naming being deactivated. Use the following command (<b>requires a command prompt with elevated privileges!</b>) to verify if 8.3 file naming is activated on the system in question;</p> <pre>fsutil 8dot3name query C:</pre> <p> This assumes that drive <b>C:</b> is the drive on which the MCAD connector is installed. Adjust the drive to your specific environment.</p> <p><b>Solution:</b> If 8.3 file naming is deactivated, the problem can be solved by uninstalling the MCAD connector and deleting all files and directories that have been written by the installation wizard (usually, this means the directory <b>C:\Program Files\XPLM Solution GmbH\</b> and all its contents). Next, activate 8.3 file naming using the following command (<b>requires a Windows command prompt with elevated privileges!</b>);</p> <pre>fsutil behavior set disable8dot3 0</pre> <p>After that, reinstall the MCAD connector and verify that the login dialog appears</p>
Login dialog appears but connection is not established	<p><b>Reason:</b> If the URL ends with a forward slash (/), connection is not possible</p> <p><b>Solution:</b> Check the URL entered in the login dialog and ensure it does not end with a forward slash (/)</p>
Login failed pop up message opens in the background	<p>If a user enters the wrong credentials and attempts to login, it may happen that the <i>Login failed</i> pop up message is opened in the background leaving the Creo Parametric system unresponsive.</p> <p><b>Workaround:</b> Pressing <b>Alt-Tab</b> will let you navigate to the background dialog and close it.</p>
RUP 20 breaks compatibility with the MCAD connector for the first time	<p><b>Reason:</b> Older MCAD connector versions do not work with RUP 20 due to an update of certain server-side libraries which breaks backwards compatibility. Servers running an RUP version older or equal than RUP 19 remain compatible with the MCAD connector.</p> <p><b>Solution:</b> MCAD version 3.6.4.1 (or later) is required for Agile 9.3.6 RUP 20</p>

Errors	Possible Reason(s) and Solution(s)
MCAD connector can not connect to servers running Agile 9.3.6 RUP 20 (or newer) as well as to servers running RUP 19 (or older)	<p><b>Reason:</b> The libraries <code>httpclient.jar</code>, <code>httpcore.jar</code>, <code>slf4j-api.jar</code> (from RUP20 and above) are unavailable on the Agile PLM server for customers using older RUP versions.</p> <p><b>Solution:</b> To allow using of local jars, the java option has to be specified in <code>acx.bat</code> <code>-Dfsclient.local=TRUE</code></p> <p>For each jar the location can be provided using java options in <code>acx.bat</code> as below. The default locations are used if java options are not provided.</p> <pre> -Dfsclient.jar=&lt;full_path_to_jar&gt; Default: &lt;CAX_ROOT&gt;/jar/agile9/ecfsclient.jar  -DhttpClient.jar=&lt;full_path_to_jar&gt; Default: &lt;CAX_ROOT&gt;/jar/commons/httpclient.jar  -Dhttpcore.jar=&lt;full_path_to_jar&gt; Default: &lt;CAX_ROOT&gt;/jar/commons/httpcore.jar  -Dslf4j-api.jar=&lt;full_path_to_jar&gt; Default: &lt;CAX_ROOT&gt;/jar/commons/slf4j-api.jar </pre>
Login dialog appears and disappears immediately.	<p><b>Reason:</b> The EC Client uses the call of <code>tasklist.exe /fo csv /nh</code> to check whether the calling CAD process is still running. Some machines provide incorrect output for the call.</p> <p><b>Solution:</b> Check whether the call works outside of EC Client;</p> <ol style="list-style-type: none"> <li>1. Start command prompt.</li> <li>2. Call the command <code>tasklist.exe /fo csv /nh</code></li> </ol> <p>the output contains the current list of running processes.</p> <p>If the output contains error messages <code>Invalid class</code>, the issue has to be solved by local administrator. The proposed solutions is to disable <code>jabswitch</code></p> <ul style="list-style-type: none"> <li>■ Exit CAD if open</li> <li>■ Open a CMD window</li> <li>■ Go to the java x64 bin folder</li> <li>■ Call: <code>jabswitch-disable</code></li> <li>■ Go to the java x86 bin folder</li> <li>■ Call: <code>jabswitch-disable</code></li> </ul> <p>Further information can be found under:</p> <ul style="list-style-type: none"> <li>■ <a href="#">Microsoft WMI – Invalid Class Error</a></li> <li>■ <a href="#">How to fix "Invalid Class" error when monitoring a process</a></li> <li>■ <a href="#">Tasklist error in Windows 10 Pro</a></li> </ul>
<b>User interface errors</b>	

Errors	Possible Reason(s) and Solution(s)
Some characters are not correctly displayed on the Save Preview and Workspace Manager	<p><b>Reason:</b> This is a known issue where <b>Non-Latin</b> CAD file name characters are not correctly displayed on the Save Preview/Workspace Manager in Windows systems</p> <p><b>Solution:</b> Install the corresponding Language Pack. For Example, Korean characters are displayed as boxes. This is because Java does not use the Windows 10 font (Malgun Gothic) for displaying Korean characters which is available without the Korean Language Pack installed. In this case, installing the Korean Language Pack resolves the issue.</p>
<b>Errors while saving</b>	
Save Preview does not appear or crashes	<p><b>Reason:</b> This error may occur when there are errors in the <code>CAXConfig.xml</code> file.</p> <p>Removing any of the attributes configured in the <code>TableDisplay</code> section for example, will cause the Save Preview dialog to deadlock.</p>
Error message <i>"Failed to update structure # Error adding rows to Structure table: String value..... exceeds the maximum length of 50 characters. # Design is already checked out # Design is already checked out #"</i>	<p><b>Reason:</b> Reference Attribute in the Design Structure is system limited to 50 characters.</p> <p><b>Solution:</b> This issue needs to be solved in Agile PLM and is not a connector issue. Oracle provides SQL scripts that can be used to extend the attribute fields to more characters as needed. Contact Oracle support for more information.</p>
Java process unexpectedly terminates after a Save Process	<p><b>Reason:</b> This is an installer issue caused by lack of memory to process the request. The error cannot be fixed/compensated. The Java process has to be stopped and restarted at the next connection to the Agile PLM. A modal user notification message added.</p> <p>If Java process cannot fork a new system processes it will be terminated with a message: <code>Java has to be terminated due to &lt;Exception Message Placeholder Unknown Error&gt;!</code> The login data will be requested again at the next connection to the PLM.</p> <p><b>Workaround:</b> Users will be simply asked to login at the next Agile PLM action.</p>
<b>Errors while loading</b>	
<p>Loading does not work when clicking <b>Load in CAD</b> in the Load Preview.</p> <p>No error message is displayed, the process just fails silently.</p>	<p><b>Reason:</b> This error may occur when there are Characters that are not allowed in Windows in a file name. For example having quotation marks (") in the <b>CAD Filename</b> attribute of one or more of the Designs attempted to load from Agile PLM.</p> <p><b>Solution:</b> The values in the <b>CAD Filename</b> attribute need to be corrected manually in this case. Refer to <b>Doc ID 2798278.1</b> for more information.</p>



Errors	Possible Reason(s) and Solution(s)
Load Preview does not appear after clicking Load to CAD in the web client.	<p>Check if Windows UAC is activated and the browser is started with admin privileges. In this case, do not start the browser with admin privileges.</p> <p>Check the file association of .CADXML files. InvokeCallback.exe must be the default application for opening such files. You can set this with the <b>Open with</b> dialog in Windows.</p> <p>If you are not able to set InvokeCallback.exe as the default application for opening .CADXML files, it maybe that the InvokeCallback.exe is incorrectly registered, if the wrong path is given in the Windows registry under <code>HKEY_CLASSES_ROOT\Applications\InvokeCallback.exe\shell\edit\command</code></p> <p>In this case, Windows does not allow users to select an application (.exe file) in the <b>Open with</b> dialog.</p> <p>Correcting the startup path under the above mentioned registry key is required to resolve the issue in this case.</p>
<b>Errors during Object Creation</b>	
Error message <i>No templates found in database. New objects cannot be created until templates are created in the database.</i>	<p><b>Reason:</b> No valid templates available in Agile PLM.</p> <p><b>Solution:</b> Make sure that the template structure in Agile PLM has been properly created and contains files.</p>
A template object does not appear in the Template File combo box although it is part of the template structure in Agile PLM.	<p><b>Reason:</b> Damaged template objects in Agile PLM are not displayed in the Create Object dialog, neither in the <b>Filetype of Template</b> combo box nor in the <b>Template File</b> combo box.</p> <p><b>Solution:</b> Check if all properties of the template object's Title Block are properly set. Refer to the chapters <a href="#">Adding Template Files to the Structure</a> and <a href="#">Subtypes</a> for more information.</p>
Template files that contain family tables do not work	<p><b>Reason:</b> CAD files with family tables of any kind (such as Generics and Instances ) should not be used as template files because references between or within these files cannot be resolved when downloading a template file using the Create function. Due to this it is not guaranteed that the family tables work in the downloaded template.</p> <p><b>Solution:</b> Do not use family tables in template files.</p>
Java process crashes when using Create repeatedly	<p><b>Reason:</b> Creo Parametric and the connector deadlock if users start the Create dialog directly after having started Creo Parametric, close it and then open it again. This issues has been reported for users with Windows 10 version 1607 .</p> <p><b>Solution:</b> Upgrade Windows 10 to version 1909</p>
<b>Item and BOM related errors</b>	

Errors	Possible Reason(s) and Solution(s)
Error message <i>Error updating rows of BOM table: BOM Table is Read Only! #</i>	<p><b>Reason:</b> This error may appear when saving/publishing the BOM.</p> <p><b>Solution:</b></p> <p>Check the configuration of the Agile fields in the BOM tab: Item Number (ID: 1011), BOM Quantity (ID: 1035), CAD Filename (ID: 1341), Identifier (ID:2175), Component (ID: 2176), Reference (ID:2177).</p> <p>These fields must be visible (enabled). If they are not, the BOM does not get published.</p> <p> Until Agile 9.3.4, no error message is issued by EC services if these fields are not enabled/accessible.</p> <p>Also check if those fields allow long enough values (e.g., at least 150 chars for CAD Filename).</p>
<b>File transfer errors</b>	
Files cannot be transferred. Max number of attempts exceeded	<p><b>Reason:</b> This error message can have a number of reasons;</p> <ul style="list-style-type: none"> <li>■ <b>File server not running or not configured correctly</b> <ul style="list-style-type: none"> <li>□ Check that the file server is running by attempting to upload and download files via the Web Client.</li> </ul> </li> <li>■ <b>File Size Mismatch</b> <ul style="list-style-type: none"> <li>□ The file sizes defined in Agile PLM and the actual file size in the vault are different. If this is the case, an error message in the <code>a9handlers.log</code> should be visible. The <b>Oracle Utility vault</b> tool can be used to fix this error.</li> </ul> </li> <li>■ <b>Incompatible MCAD and Server version</b> <ul style="list-style-type: none"> <li>□ Check that your server version is supported by the MCAD version in use.</li> </ul> </li> <li>■ <b>Missing privileges</b> <ul style="list-style-type: none"> <li>□ Check that the user has the required privileges to download the files from Agile PLM</li> </ul> </li> <li>■ <b>Corrupted migrated data</b> <ul style="list-style-type: none"> <li>□ In this case the data corruption needs be fixed.</li> </ul> </li> </ul>

## 8.5 Logging

The MCAD connectors for Agile PLM provides component specific logging.

### 8.5.1 Web Component Logs

Complete these steps to enable debug logging.

#### About this task

**Configuration file:** `%xPlmRootDir%\ini\Logfile.xml`

This use case describes how to activate web component logging in debug mode. The Web Component log files are written to `%USER_HOME%\AgileCache\` directory on the users workstation.

## Procedure

1. Close the Creo Parametric system and make sure all MCAD processes especially the Java process have terminated.
2. Go to `%USER_HOME%\AgileCache\` and delete all the `.log` files. These include:
  - `a9handlers2.log` - Contains Java Exceptions thrown during program execution.
  - `a9proxy2.log` - Contains logging information on the client-server communication.
  - `a9gui2.log` - Contains GUI related logging information.
  - `a9_performance2.log` - Contains performance related logging information.
  - `a9_cad_proxy2.log` - interface between CAD Script Engine and Java Module
  - `a9ccon2.log`
  - `a9_ft2.log` - Contains logging information for file transfer utility.



This log file was added in version 3.6.4.4 of the Creo Parametric connector.



It is highly recommended to delete or rename the log files before starting to capture logging output to prevent overly long log files.

3. Go to `%xPlmRootDir%\ini` and make the following changes:
  - a) Rename `Logfile.xml` to `Logfile.xml_STD`
  - b) Rename `Logfile.xml_DEBUG` to `Logfile.xml`
4. Restart the Creo Parametric system including the MCAD connector.

## Result

Web component logging in debug mode is now activated on your workstation.

## What to do next

Logging messages are continuously written to the log files. After capturing the required logging output, revert the changes made in Step 3 above. Debug logging may cause a huge load on the system affecting performance.

### 8.5.2 TCL Connector Logs

Logging is turned off by default.

## About this task

This use case describes how to enable logging for the Creo Parametric connector.

## Procedure

1. Open `AcpCustomer9.ini` in a text editor, for example Notepad ++
2. In the `Initialize` section set `ACPDebug` to `1`.
3. Set `JNI_DEBUG` to `1`.
4. Save changes.

## Result

Logging for the Creo Parametric connector is enabled on your workstation.

## What to do next

After capturing the required logging output, deactivate logging by setting `ACPDebug` back to `0`

The main log file (`acp.log`) is written to the `C:\AgileEC\log` directory.

## 9 References


### 9.1 Configuration files

#### 9.1.1 CAXConfig.xml

The `CAXConfig.xml` file controls general and numbering options for load and save. The different sections control the communication between client and server, logic for display in the client, parameters for part families and the numbering schemes and change process.



##### 9.1.1.1 Basic Section

Setting	Description
SITE	<p>Defines the global parameter for the MCAD connector configuration. MCAD connectors with different <code>SITE</code> setting use different configuration objects in Agile PLM.</p> <p><b>Default:</b> MCAD</p> <p><b>Possible Values:</b> Any string value</p>
checkRequired	<p>If set to <code>true</code>, the MCAD connector verifies that all Agile PLM fields labeled as mandatory contain a value. If not, an error message is displayed to the user during save.</p> <p><b>Default:</b> false</p> <p><b>Possible Values:</b> true   false</p>
NonExistingPartsFromCAD	<p>This option setting only affects property mapping.</p> <ul style="list-style-type: none"><li>■ If set to <code>allowed</code>, a property mapping towards the Item number can be used to create new Item objects, if the value mapped to the Item number does not identify an existing Item.</li><li>■ If set to <code>remove</code>, Item objects are not created in this case.</li></ul> <p><b>Default:</b> allowed</p> <p><b>Possible Values:</b> allowed   removed</p>
AllowManualItemNumber	<p>Makes the Item Number text field in the Details pane editable (true) or non-editable (false).</p> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p>
VersionsToSearch	<p>Defines how many older Design versions are searched if a <b>Where used</b> query is executed. Only retrieves Design versions which are older than the selected one.</p> <p><b>Default:</b> 10</p> <p><b>Possible Values:</b> Any integer value</p>


Setting	Description
VersionsToSearchFromCAD	<b>Default:</b> 10 <b>Possible Values:</b> Any integer value
RelationsFromCAD	<b>Default:</b> true <b>Possible Values:</b> true   false
DocumentSupport	Defines if sub-classes of the Documents class are visible in the MCAD connector (For example in the Preferences dialog). <b>Default:</b> false <b>Possible Values:</b> true / false  Entry does not exist in default installation and must be manually added to the configuration file.

### 9.1.1.2 ConnectionProperties Section

Setting	Description
timeout	Defines the timeout value for web services responses from the Agile PLM server in milliseconds. <b>Default:</b> 900000 <b>Possible Values:</b> Any number value
bulksize	The server calls are divided into packages of this number of objects per call, depending on the server and network performance (use 20 for slower environments and 100 for faster ones). <b>Default:</b> 50 <b>Possible Values:</b> 20   50   100
call-threads	Fallback value for the thread related option settings <code>call-threads-get</code> , <code>call-threads-cuo-save</code> , <code>call-threads-cuo-commit</code> . If no value is given for any of these previously named option settings, the value given for <code>call-threads</code> is used. <b>Default:</b> 4 <b>Possible Values:</b> 1   2   4
call-threads-get	Number of concurrent threads for <b>GET</b> requests with which the EC services interface is called. <b>Default:</b> 4 <b>Possible Values:</b> 1   2   4



Setting	Description
call-threads-cuo-save	<p>Number of concurrent threads for save requests with which the EC services interface is called.</p> <p><b>Default:</b> 2</p> <p><b>Possible Values:</b> 1   2</p>
call-threads-cuo-commit	<p>Number of concurrent threads for commit requests, structure and relationships creating requests, BOM requests with which the EC services interface is called.</p> <p><b>Default:</b> 2</p> <p><b>Possible Values:</b> 1   2</p>
UploadThumbnails	<p>Controls thumbnail upload to Agile PLM.</p> <ul style="list-style-type: none"> <li>■ <b>fileserver</b> – upload the Creo Parametric thumbnail from the client to the vault and attach the .PNG to the Design in Agile PLM. To display the thumbnail in Agile PLM configure AutoVue to: <ul style="list-style-type: none"> <li><input type="checkbox"/> NOT render the Creo Parametric native files for thumbnails</li> <li><input type="checkbox"/> Render .PNG files for thumbnails</li> </ul> </li> <li>■ <b>false</b> – no thumbnail is uploaded from the Creo Parametric client to the server.</li> <li>■ <b>ecs</b> – hand over the thumbnail to Agile PLM via web service</li> </ul> <p><b>Default:</b> ecs</p> <p><b>Possible Values:</b> false   fileserver   ecs</p>
resolution_max_depth	<p>This is a hidden setting. It needs to be added to <b>CaxConfig.xml</b> manually in case that it should be changed.</p> <p> We strongly advice against changing this setting.</p> <p>Defines the depth of the structure resolution that is executed when loading from Agile PLM. In other words, how many levels of an assembly structure are retrieved from Agile PLM:</p> <ul style="list-style-type: none"> <li>■ <b>0</b> - only retrieve the root element</li> <li>■ <b>1</b> - retrieve the root element and the first level of child objects</li> <li>■ <b>2</b> - retrieve the root element and two levels of child elements</li> <li>■ <b>50</b> - retrieve any number of levels</li> </ul> <p><b>Default:</b> 50</p> <p><b>Possible Values:</b> 0   1   2   50</p> <p> Since Agile 9.3.6 RUP 10, the default value for this option setting should be used. If CaxConfig.xml contains a different value for this option setting, we recommend deleting this option setting from CaxConfig.xml to apply the default.</p>





## 9.1.1.3 BrowserDisplay Section




Setting	Description
HideSuccessSummary	<p>If set to <code>true</code>, the Save Summary dialog is only displayed for save processes where errors occurred.</p> <p>If set to <code>false</code>, the Save Summary dialog is displayed at the end of each save process.</p> <p><b>Default:</b> false</p> <p><b>Possible Values:</b> true   false</p>
LazyLoad	<p>Activates or de-activates the MCAD connector's LazyLoad feature.</p> <ul style="list-style-type: none"> <li>■ If set to <code>true</code> (activated)- Agile PLM information in the MCAD GUI is only retrieved from Agile PLM and displayed on user request (click the object to initiate the process).</li> <li>■ If set to <code>false</code> (de-activated) - all Agile PLM information for all objects visible in the MCAD GUI is retrieved and displayed as soon as a GUI widget appears on screen.</li> </ul> <p>Thus, activated LazyLoad may shorten onset times especially for many Agile PLM-known Creo Parametric objects.</p> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p>
Tree.Menu.Zip	<p>Defines, if the <b>Zip and Upload Workspace</b> context menu item is visible in Workspace Manager.</p> <ul style="list-style-type: none"> <li>■ <code>true</code> - show the context menu item</li> <li>■ <code>false</code> - hide the context menu item</li> </ul> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p>
Tree.Menu.Removal	<p>Defines, if the <b>Delete Workspace</b> context menu item is visible in Workspace Manager.</p> <ul style="list-style-type: none"> <li>■ <code>true</code> - show the context menu item</li> <li>■ <code>false</code> - hide the context menu item</li> </ul> <p><b>Default:</b> false</p> <p><b>Possible Values:</b> true   false</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>



Setting	Description
AllowExistingChangesOnly	<p>Defines the behaviour of the connector when assigning Change Orders via the Assign Change dialog when manually entering a Change number into the Change number field.</p> <ul style="list-style-type: none"> <li>■ <code>true</code> if the provided number exists in Agile PLM with the assigned workflow in the appropriate state and the type matching selection - The Change Order is assigned otherwise an error message is displayed.</li> <li>■ <code>false</code> <ul style="list-style-type: none"> <li>□ if the provided number does not exist in Agile PLM - a new Change Order is created and assigned</li> <li>□ if the provided number exists in Agile PLM with the assigned workflow in the appropriate state and the type matching selection - Change Order is assigned otherwise an error message is displayed.</li> </ul> </li> </ul> <p><b>Default:</b> false</p> <p><b>Possible Values:</b> true   false</p>
DisableChangesAutonumbers	<p>Activates or de-activates the Change autonumber button in the Save Preview dialog or Assign Change dialog window.</p> <ul style="list-style-type: none"> <li>■ <code>true</code> - de-activates the button</li> <li>■ <code>false</code> - activates the button</li> </ul> <p><b>Default:</b> false</p> <p><b>Possible Values:</b> true   false</p>
ShowTreeView	<p>Defines the pre-set value for showing or hiding the tree view widget. This value only defines the default value of this option setting. The value is overwritten by the user-specific option setting in the <code>\$HOME/AgileCache/GUIConfig.xml</code> configuration file.</p> <ul style="list-style-type: none"> <li>■ <code>true</code> - pre-set value to show the Tree View widget</li> <li>■ <code>false</code> - pre-set value to hide the Tree View widget</li> </ul> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p>
WorkspaceFolderClass	<p>Defines the class of the Agile PLM object that is used for uploading workspace folders via the MCAD connector's <b>Zip and Upload Workspace</b> functionality.</p> <p><b>Default:</b> Design</p> <p><b>Possible Values:</b> Any Agile PLM class object</p>

Setting	Description
WorkspaceFolderAutonumber	<p>Defines the autonumber generator which is used to retrieve the Design number for the object that is used for uploading workspace folders via the MCAD connector's <b>Zip and Upload Workspace</b> functionality.</p> <p><b>Default:</b> Design Number</p> <p> Removing both entries causes the MCAD connector to create Design objects with a number derived from the current user name and time stamp.</p>
WorkspaceFolderDescription	<p>Defines the description given to the Design object created when uploading workspace folders via the MCAD connector's <b>Zip and Upload Workspace</b> functionality. The order of the values does not play any role.</p> <p><b>Default:</b> host;path;file</p>
ShowFlyoutInBrowser	<p>Activates or de-activates the thumbnail fly-out dialog in the MCAD connector's tree view widget.</p> <ul style="list-style-type: none"> <li>■ <code>true</code> - activates the thumbnail fly-out dialog</li> <li>■ <code>false</code> - de-activates the thumbnail fly-out dialog</li> </ul> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p>
ShowFlyoutInList	<p>Activates or de-activates the thumbnail fly-out dialog in the MCAD connector's list view widget.</p> <ul style="list-style-type: none"> <li>■ <code>true</code> - activates the thumbnail fly-out dialog</li> <li>■ <code>false</code> - de-activates the thumbnail fly-out dialog</li> </ul> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p>
SinglePortThreshold	<p>This option setting defines how many references a structure needs to have to be displayed in single port mode.</p> <p>Single port mode is a more compact view of the references in the Save Preview that is automatically enabled if there are more than the number of references given in the <code>SinglePortThreshold</code> option are displayed in the Tree View/Graph View.</p> <ul style="list-style-type: none"> <li>■ <code>true</code> - activates single port mode</li> <li>■ <code>false</code> - de-activates single port mode</li> </ul> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>

Setting	Description
ModelViewableOptions	<p>Defines the combo box options for model viewable creation in the Preferences dialog.</p> <p><b>Default:</b> TOP</p> <p><b>Possible Values:</b> TOP / ALL / ASSEMBLIES / PARTS</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p> <p>See <a href="#">Model Viewable Combo Box Options</a> (p. 55) for more information.</p>
ShowCheckInOption	<p>Defines if a separate Check In save option should be displayed in the Java dialogs context menus.</p> <p>Setting this option setting to <code>true</code> causes the MCAD GUI to display a separate Check In save option without Incorporate in addition.</p> <p><b>Default:</b> false</p> <p><b>Possible Values:</b> true   false</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
DesignTableHeight	<p>Since release 3.6.4.3 the connector allows resizing the height of the panes in the Side Panel of the Save Preview.</p> <p>This option setting configures the height of the <b>Design Properties Table</b> in the side panel of the Save Preview. The values are integer and provides the height for property panes in pixels. The value can be set between 150 and 500 pixels otherwise it will be set to the max/min value respectively.</p> <p><b>Default:</b> 250</p> <p><b>Possible Values:</b> Any pixel Integer value between 150 and 500</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
ItemTableHeight	<p>Since release 3.6.4.3 the connector allows resizing the height of the panes in the Side Panel of the Save Preview.</p> <p>This option setting configures the height of the <b>Item Properties Table</b> in the side panel of the Save Preview. The values are integer and provides the height for property panes in pixels. The value can be set between 150 and 500 pixels otherwise it will be set to the max/min value respectively.</p> <p><b>Default:</b> 250</p> <p><b>Possible Values:</b> Any pixel Integer value between 150 and 500</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>


Setting	Description
WorkspaceTableHeight	<p>Since release 3.6.4.3 the connector allows resizing the height of the panes in the Side Panel of the Save Preview.</p> <p>This option setting configures the height of the <b>Workspace Table</b> in the side panel of the Save Preview. The values are integer and provides the height for property panes in pixels. The value can be set between 150 and 500 pixels otherwise it will be set to the max/min value respectively.</p> <p><b>Default:</b> 305</p> <p><b>Possible Values:</b> Any pixel Integer value between 150 and 500</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
SearchColumn	<p>Defines the default search criterion for the search feature in the Workspace Manager.</p> <p><b>Default:</b> DESCRIPTION</p> <p><b>Possible Values:</b> Any property value available in the Workspace tab column headers.</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
ShowServerLoadDrawing	<p>Defines if Load Drawings Check Box should be displayed in the Load preview.</p> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>



#### 9.1.1.4 FlowControl Section

This section controls behavior during processes during the Save and Load Preview windows.

Setting	Description
cleanUnreserved	<p>Reverts the save option to <b>do not save</b> for all Creo Parametric objects, that are not checked out by the current user if the <b>Force User Checkout</b> option is activated.</p> <ul style="list-style-type: none"><li>■ <code>true</code> - revert the save option</li><li>■ <code>false</code> - do not revert the save option</li></ul> <p><b>Default:</b> false</p> <p><b>Possible Values:</b> true   false</p>

Setting	Description
AllowCheckoutOfNonLatest	<p>Permits users to check out a Design version which is not the latest one in Agile PLM via the MCAD connector.</p> <ul style="list-style-type: none"><li>■ <code>true</code> - check out of a non-latest Design version is allowed</li><li>■ <code>false</code> - check out of a non-latest Design version is not allowed</li></ul> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p>
HelperPartAttachment	<p>Defines, if attachments should be published for helper parts during the Publish to Item process.</p> <ul style="list-style-type: none"><li>■ <code>true</code> - publish attachments for helper parts</li><li>■ <code>false</code> - do not publish attachments for helper parts</li></ul> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p>
HelperPartBOM	<p>Defines, if the BOM should be published for helper parts during the Publish to Item process.</p> <ul style="list-style-type: none"><li>■ <code>true</code> - publish the BOM for helper parts</li><li>■ <code>false</code> - do not publish the BOM for helper parts</li></ul> <p><b>Default:</b> false</p> <p><b>Possible Values:</b> true   false</p>
InstanceBOM	<p>Defines, if the BOM should be published for instances of part families (configurations) during the Publish to Item process.</p> <ul style="list-style-type: none"><li>■ <code>true</code> - publish the BOM for part family instances</li><li>■ <code>false</code> - do not publish the BOM for part family instances</li></ul> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p>
GenericBOM	<p>Defines, if the BOM should be published for the generic of a part family during the Publish to Item process.</p> <ul style="list-style-type: none"><li>■ <code>true</code> - publish the BOM for the generic</li><li>■ <code>false</code> - do not publish the BOM for the generic</li></ul> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p>

Setting	Description
SuppressUpdateFromBOM	<p>Suppresses the attribute update during BOM creation for existing child elements of a BOM structure (<b>Title Block, Page Two, Page Three</b>) during BOM creation.</p> <ul style="list-style-type: none"> <li>■ <code>true</code> - suppress attribute update</li> <li>■ <code>false</code> - allow attribute update</li> </ul> <p><b>Default:</b> false</p> <p><b>Possible Values:</b> true   false</p>
DrawingResolutionAction	<p>Defines the <b>Save option</b>, that is applied to any drawing Design object added to the Save Preview dialog using the <b>Save As</b> confirmation pop-up.</p> <p>The Save As confirmation pop-up appears every time a Save As is executed in the Save Preview, allowing users to have the MCAD connector perform a where-used query in Agile PLM to add drawings related to the structure displayed in the Save Preview.</p> <p><b>Default:</b> Save As</p> <p><b>Possible values:</b> Save As   Check In   Save   Ignore</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
ExcludeInstancesFromDFCO	<p>Since release 3.6.2.1 the connector allows adding file-less Design objects to DFCOs by generating dummy files on the fly when assigning a DFCO through the MCAD connector. Has no effect for CAD systems that represent part family instances/configuration by individual files. The part family/configuration instances for these CAD systems are always added to DFCOs.</p> <ul style="list-style-type: none"> <li>■ <code>true</code> - do not add part family instances/configurations to DFCOs</li> <li>■ <code>false</code> - add part family instances/configurations to DFCOs</li> </ul> <p><b>Default:</b> true</p> <p><b>Possible Values:</b> true   false</p>
SaveReservedOnly	<p>If set to <code>true</code> and Preference setting <b>Check Out During Save</b> is set to <b>Automated Check Out</b>, an effective <b>Save Option</b> will be set only for designs that are checked out by the current user.</p> <p><b>Default:</b> false</p> <p><b>Possible values:</b> true   false</p>

Setting	Description
ExistingItemWorkflow	<p>Since release 3.6.4.6, the connector allows deactivating <i>Item already exists</i> pop up prompts while assigning existing items in Agile PLM through the <i>Save preview</i>.</p> <ul style="list-style-type: none"><li>■ ExistingItemDef - No <i>Item already exists</i> pop up prompts are displayed. Item is directly assigned and CAD properties are kept by default.</li><li>■ NONE - <i>Item already exists</i> pop up prompts are shown each time an existing item is assigned to confirm assignment and to choose the property values to be kept.</li></ul> <p><b>Default:</b> NONE</p> <p><b>Possible values:</b> NONE   ExistingItemDef</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
FF_REUSE_CLASS_BY_SAVE_AS ITEM_REUSE_CLASS_BY_SAVE_AS	<p>If set to <code>true</code>, for File Folders or Items respectively the sub-class assignment is based on the existing sub-classes of the source objects of the Save As process overriding the default classes selected in the <i>Preferences dialog</i>.</p> <p><b>Default:</b> false</p> <p><b>Possible values:</b> true   false</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>

9.1.1.5 DateFormats Section

Defines a set of date and time formatting parameters based on the Java `SimpleDateFormat` specification. These formatting definitions can be applied to date and time values mapped between Creo Parametric and Agile PLM.

```
<Structure>
  <Name>DateFormats</Name>
  <FieldCollection>
    <Field><Name>yyyy-MM-dd HH:mm:ss z</Name><Value>CAD</Value></Field>
    <Field><Name>yyyy-MM-dd</Name><Value>CAD</Value></Field>
    <Field><Name>dd.MM.yyyy HH:mm:ss z</Name><Value>CAD</Value></Field>
    <Field><Name>dd.MM.yyyy</Name><Value>CAD</Value></Field>
  </FieldCollection>
</Structure>
```

You can override these settings by configuring the `mapping.xml` file. For example:

```
<Field>
  <Name>FORMAT_TYPE</Name>
  <Value>DateFormat MM/dd/yyyy</Value>
</Field>
```

**Related links**[MCAD-MAPPING folders](#) (p. 45)**9.1.1.6 TableDisplay Section**

This section contains all columns that should be displayed in the tables of the Save and Load Preview windows.



The fields initially listed here should not be deleted, this may cause errors in program execution.

However, it is possible to add additional PLM fields to customize the view. To add an additional column to the table a new `field` must be added to the `FieldCollection` of the `TableDisplay` section.

A `field` of a PLM Design object is added by insertion of a new line of XML code that can be derived from the following example:

```
<Field><Name>FieldID</Name><Value>0</Value></Field>
```

If a PLM field of an Item object should be used, the string `Item.FieldID` must be used as field name instead of just `FieldID`:

```
<Field><Name>Item.FieldID</Name><Value>0</Value></Field>
```

The name of the field must contain the `FieldID` (internal ID) of the PLM field that should be added, its value must always be `0` (zero) by convention. The `FieldID`, also called **Base ID**, can be found in the Agile Java Client (**Data Settings > Classes > Double-click on a Design or Part class > User Interface Tabs > Double-click on a list entry > Attributes tab > Column: Base ID**).

After having added one or more column entries the file `%USERHOME%\GUIConfig.xml` must be deleted to make the changes appear in the GUI.

The following code example shows the `TableDisplay` section with two customized columns. To the tables the PLM fields `1305` of the Design object and `1313` of the Item object were added as separate columns:

```
<Structure>
  <Name>TableDisplay</Name>
  <FieldCollection>
    <!-- snip -->
    <!-- Customized fields: -->
    <Field><Name>1305</Name><Value>0</Value></Field>
    <Field><Name>Item.1313</Name><Value>0</Value></Field>
  </FieldCollection>
</Structure>
```



To make fields editable in the Save Preview the `Value` tag is set to `1` instead of `0`.

Not all `fields` are supported to be editable while others are always editable. The following fields are always **read-only**, regardless of the corresponding `Value` tag:

- CAX\_FIL\_NAME
- CAX\_FULL\_NAME
- IS\_INCORPORATED
- DCO • DCO\_SEQUENCE



- DCO\_STATUS
- CHECKOUTUSER
- WORKFLOW\_STATUS
- CAX\_MODIFIED
- PLM\_MODIFIED
- SAVED
- HAS\_PRIVILEGE
- FILTER
- ASSIGNED
- CAX\_MODEL\_TYPE
- CAX\_MODEL\_REF
- CAX\_LINK\_TYPE
- CAX\_LINK\_REF
- CAX\_TYPE

To remove columns from the Save and Load Preview windows, delete the corresponding field from the `FieldCollection` of the `TableDisplay` section. The column must be removed from both the external `OraclePLM\ini\CAXConfig.xml` and the internal `OraclePLM\jar\agile9\ag93ws_connector.jar\com\xplm\agile93\cax\xml\CAXConfig.xml` files.



To add columns only external `CAXConfig.xml` should be modified.

To control the columns visible in the Save Preview and Load preview windows, click on the drop-down button on the right-hand side after the last column, and select and deselect columns as needed.

#### 9.1.1.7 WorkspaceTableDisplay Section

This section contains information on the columns of the table displayed in the Workspace Manager window.

It can be manipulated in the same way as the `TableDisplay` section. Refer to [TableDisplay Section](#) (p. 88) for details, all information given in this chapter apply for the `WorkspaceTableDisplay` section as well, apart from the functionality of the `Value` tags. `Fields` displayed in the Workspace Manager are **never** editable.

#### 9.1.1.8 OverrideConfiguration Section

The MCAD connectors allow filtering the sub-classes and number generators available in the GUI based on CAD file types.

See [Filtering SubClasses and AutoNumber Generators Displayed by the MCAD GUI](#) (p. 32) for more information.

#### 9.1.1.9 Viewables Section

This section controls the viewable types that can be created by the MCAD connector.

The supported viewable types are defined in a semi-colon separated list.

Setting	Description
ViewablesDrawing	Defines viewable file types for drawing files visible in the Preferences dialog. <b>Possible values:</b> List of viewable file endings (use semi-colons as list separator).
ViewablesModel	Defines viewable file types for 3D models files visible in the Preferences dialog. <b>Possible values:</b> List of viewable file endings (use semi-colons as list separator).

Refer to [How to Configure Viewable Formats Creation](#) (p. 53) for more details.

#### 9.1.1.10 WorkspaceDeleteViewables Section




Defines the viewable file types (file endings) the MCAD connector's **Delete Viewables** functionality deletes from a workspace folder.

The viewable types defined in the `value` tag in this section should match those given the `viewables` section.


Setting	Description
ViewablesDrawingExtensions	Defines the drawing file formats, which should be deleted from the local workspace by the <b>Remove Viewables</b> function in the Workspace Manager.
ViewablesModelExtensions	Defines the 3D file formats, which should be deleted from the local workspace by the <b>Remove Viewables</b> function in the Workspace Manager.

#### 9.1.1.11 PartFamilies Section

Setting	Description
FamilySelection	If set to <code>true</code> , operations (for example, Check Out) applied to a component of a part family (configuration) through the MCAD connector are implicitly applied to all other components of the same part family. <b>Default:</b> false <b>Possible values:</b> true   false

Setting	Description
FamilyInstanceNumbering	<p>Defines the numbering schema for Design objects of instances of part families (configurations).</p> <ul style="list-style-type: none"> <li>■ <b>GENERIC_INDEX</b> – Instances get the same Design number as the part family generic assigned, appended with a numerical index.</li> <li>■ <b>GENERIC_CONFIG</b> – Instances get the same Design number as the part family generic assigned, appended with the CAD specific name of the instance.</li> <li>■ <b>false</b> – Instances get independent Design numbers assigned.</li> </ul> <p><b>Default:</b> GENERIC_INDEX</p> <p><b>Possible values:</b> GENERIC_INDEX   GENERIC_CONFIG   false</p>
CountDelimiter	<p>Separator character used for appending part family (configurations) related appendices (see FamilyInstanceNumbering) or indices for multiple drawings which are related to the same model (see DrawingNumberFromModel).</p> <p><b>Default:</b> _</p>
PartInstanceDashNumbering	<p><code>true</code> - the Part item corresponding to part family instance get the suffix from the design instance (like <i>P001-001</i>,...)</p> <p><code>false</code> - the Part item corresponding to part family instances get own item numbers, no instance suffix.</p> <p><b>Default:</b> false</p> <p><b>Possible values:</b> true   false</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
PartGenericHasDashNumber	<p><code>true</code> – the Item object corresponding to the generic Design gets a number with dash assigned. For example, <i>P001-000</i> for generic and <i>P001-001</i> for instances.</p> <p><code>false</code> - the Item object corresponding to the generic Design does not get a number with dash assigned. For example, <i>P001</i> for generic and <i>P001-001</i> for instances.</p> <p><b>Default:</b> false</p> <p><b>Possible values:</b> true   false</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
PartInstanceDelimiter	<p>Separator character between the number and the counter for part variants</p> <p><b>Default:</b> -</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>


## 9.1.1.12 ChangeProperties Section

Setting	Description
InitialRevision	Initial Item revision value. <b>Default:</b> Introductory
RevisionSequence	<p>Defines the proposed Revision values the MCAD connector implicitly assigns to Change objects on Change creation.</p> <p>You can have more than one <code>RevisionSequence</code> based on <code>LifeCyclePhases</code>. For example <code>RevisionSequence_Preliminary</code></p> <p><b>Default:</b> Introductory,A,B,C,D,E,F,G,H,I,J,K,L,M....</p> <p><b>Possible values:</b> List of Revision values (strings) separated by comma</p> <p> The RevisionSequence must always start with the value <code>Introductory</code> as that is the value implicitly used by the server.</p>
RevisionSequenceEditor	<p>Defines, if the MCAD connector provides a combo box (drop down list) for editing the Item Revision columns. The entries of the combo box are taken from the option setting <code>RevisionSequence</code>.</p> <p>If set to <code>false</code> and if the Revision field is editable, users can enter free text into the Revision field.</p> <p><b>Default:</b> false</p> <p><b>Possible values:</b> true   false</p>
SetLifecyclePhase	<p>Defines, if the MCAD connector provides a combo box (drop down list) for editing the <b>LifeCyclePhase</b> column.</p> <p>If set to <code>false</code> and if the LifecyclePhase field is editable, users can enter free text.</p> <p><b>Default:</b> true</p> <p><b>Possible values:</b> true   false</p>
DesignRevisionLogic	<p>Comma-separated list of the following values. If set the value controls the following behavior:</p> <ul style="list-style-type: none"> <li>■ <code>increment</code> - increase minor number on checkout</li> <li>■ <code>editable</code> - the Design revision field is editable in the save preview.</li> <li>■ <code>publish</code> - the Design revision is reset on publish to fit the item revision code. The minor revision is calculated or reset.</li> <li>■ <code>noparentheses</code> - remove any parentheses from the design revision</li> </ul> <p><b>Default:</b> editable,publish,noparentheses</p>

Setting	Description
InitialDesignRevision	<p>If no Item object is assigned to a Design, this value defines the <code>Item Revision</code> string displayed for the versions of this Design object.</p> <p><b>Default:</b> 1</p> <p><b>Possible values:</b> Any string value</p>
DesignRevisionForIntroductory	<p>Defines the string, that replaces the <code>Introductory</code> Item Revision in the Design version drop-down list. By changing this option setting, it is possible to use other string values for representing the Introductory Revision.</p> <p><b>Default:</b> 1</p> <p><b>Possible values:</b> Any string value</p>
AssignChangeCheckout	<p>If <code>true</code>, this triggers an implicit check out of the related Design object when assigning a Change object. Does not work if <b>ForceUserCheckout</b> is set to <code>true</code>.</p> <p><b>Default:</b> false</p> <p><b>Possible values:</b> true   false</p>
VersionSeparator	<p>Separator character used for separating the major and minor Item Revision displayed in the Design version drop-down list. Has no effect if the minor version is de-activated.</p> <p><b>Default:</b> .</p>
PartDesignNumbering	<p>If set to <code>true</code>, on Item number retrieval (for example, when pressing the Item autonumber button), the MCAD connector implicitly assigns the retrieved Item number to the Design number of the related Design object.</p> <p><b>Default:</b> true</p> <p><b>Possible values:</b> true   false</p>
DrawingNumberFromModel	<p>Defines the numbering schema for Design objects of CAD drawings: If set to true, the Design number of the drawing's Design object gets a number equal to the Design number of the underlying model, appended with a numerical index.</p> <p><b>Default:</b> true</p> <p><b>Possible values:</b> true   false</p>
PushPartRevisionToDesign	<p>If set to <code>true</code>, when changing the Item Revision in the MCAD connector's GUI, the changed Revision is automatically transferred to the Item Revision displayed in the Design version drop-down list.</p> <p><b>Default:</b> true</p> <p><b>Possible values:</b> true   false</p>

Setting	Description
PushDesignRevisionToPart	<p>If set to <code>true</code>, when changing the Design version in the MCAD connector's GUI, the changed version is automatically transferred to the Item Revision.</p> <p><b>Default:</b> <code>true</code></p> <p><b>Possible values:</b> <code>true</code>   <code>false</code></p>
PublishAttachments	<p>Defines the attachment types, identified by their file ending, that are attached to an Item object when executing a publish process.</p> <p><b>Default:</b> <code>any</code></p> <p><b>Possible values:</b> <code>any</code>   Comma separated list of file endings (without “.”), for example <code>PDF, STEP, IGES, IGS</code></p>
PublishAttachmentType	<p>The value in this option setting is written to the <b>Attachment Type</b> PLM field when executing a publish process. If set to <code>NONE</code>, nothing is written to that field.</p> <p><b>Default:</b> <code>NONE</code></p> <p><b>Possible values:</b> <code>none</code>   Any string except <code>none</code></p>
PublishIntroductory	<p>If set to <code>true</code>, the MCAD connector also executes publish processes for Items without assigned Change objects (means for Items with <code>Introductory</code> Item Revision).</p> <p><b>Default:</b> <code>true</code></p> <p><b>Possible values:</b> <code>true</code>   <code>false</code></p>
PublishPartSite	<p>Defines the <code>Site</code> to which BOM changes are written when executing a publish process, if <b>Sites</b> are enabled in Agile PLM. Use the value <code>none</code> if <b>Sites</b> are disabled.</p> <p><b>Default:</b> <code>none</code></p> <p><b>Possible values:</b> <code>none</code>   Any string except <code>none</code></p>
MaxDesignNumberLength	<p>Defines the maximum allowed length of the Design number field values. Any Design number entries longer than the specified length are truncated by the MCAD connector.</p> <p><b>Default:</b> <code>50</code></p> <p><b>Possible values:</b> Any integer value</p>

Setting	Description
AllowedNumberCharacters	<p>Defines a set of characters which may be used for Item and Design numbers. The MCAD connector replaces any character not contained within this list with underscores (" _ ") in the Item and Design number fields. Use the value <code>ANY</code> to disable this functionality. This functionality does not affect autonumber assignment, Autonumber retrieved from Agile PLM are never changed by the MCAD connector.</p> <p><b>Default:</b> <code>ANY</code></p> <p><b>Possible values:</b> <code>ANY</code>   Set of characters without delimiters, for example:</p> <pre>abcdefghijklmnopqrstuvwxyz1234567890</pre>
Change_Category	<p>Defines the default Change Category value for Item Change Orders created by the MCAD connector.</p> <p><b>Default:</b> <code>none</code></p> <p><b>Possible values:</b> Any string except <code>none</code>, which exists in the drop-down list of the Change Category attribute for Item Changes in Agile PLM.</p>
PublishErrorHandling	<p>Defines the behavior of the MCAD connector if errors during the publish process occur.</p> <ul style="list-style-type: none"><li>■ If set to <code>ERROR</code>, the save, check in and publish process is completely cancelled if an error occurs.</li><li>■ If set to <code>WARNING</code>, an error report is displayed in the Save Summary window and only the publish process is cancelled, not the save or check in.</li></ul> <p><b>Default:</b> <code>WARNING</code></p> <p><b>Possible values:</b> <code>ERROR</code>   <code>WARNING</code></p>
PublishIntegerQuantities	<p>If set to <code>true</code>, the MCAD connector transfers quantity values (Design structure, BOM) in integer representation instead of a number with a decimal place.</p> <p><b>Default:</b> <code>false</code></p> <p><b>Possible values:</b> <code>true</code>   <code>false</code></p>

Setting	Description
LCPPolicy	<p>Since release 3.6.4.6, you can defines the Life-cycle phase (LCP) set when assigning changes through the <i>Save Preview</i>.</p> <ul style="list-style-type: none"><li>■ <code>DEFAULT</code> - The LCP of an assigned change is set to the default Life-cycle phase defined in the <i>Preferences dialog</i></li><li>■ <code>OLD</code> - The new LCP of an assigned change is gotten from the previous version if not empty or set to <code>Preliminary</code>, otherwise, it is gotten from default LCP value set in the <i>Preferences dialog</i>.</li></ul> <p> If item has an pending ECO created from <i>Introductory</i> revision, the LCP will be set to <code>Preliminary</code> because it is the old LCP for such ECOs.</p> <p><b>Default:</b> DEFAULT</p> <p><b>Possible values:</b> DEFAULT   OLD</p>

9.1.1.13 FileNaming Section

This section provides the configurations for the file names that should be used for viewable files created by the MCAD integration.

Depending on the file extension different rules are possible. However, for each file extension only one rule is supported. The Field `Name` represents the file ending of the viewable file while the Field `Value` represents the actual naming rule.

```
<Structure>
  <Name>FileNaming</Name>
  <FieldCollection>
    <Field><Name>PDF</Name><Value>%Item.NUMBER%_%Item.REV%.PDF</Value></Field>
    <Field><Name>STP</Name><Value>%Item.NUMBER%_%Item.REV%.STP</Value></Field>
    <!--Field><Name>JT</Name><Value>%NUMBER%_%REV%.JT</Value></Field-->
    <Field><Name>PNG</Name><Value>thumbnail.png</Value></Field>
  </FieldCollection>
</Structure>
```

Refer to [Viewable File Naming](#) (p. 54) for more information.




### 9.1.1.14 READONLY\_FF\_FIELDS Section

This XML structure defines all File Folder PLM fields which should not be updated by the MCAD connector (read-only fields), defined by their field ID.

Though the XML definition is based on a `name-and-value` syntax, the `value` field itself is not evaluated by the connector.

```
<Structure>
  <Name>READONLY_FF_FIELDS</Name>
  <FieldCollection>
    <Field><Name>2000025502</Name><Value></Value></Field>
    <Field><Name>2000025503</Name><Value></Value></Field>
    <!-- snip -->
  </FieldCollection>
</Structure>
```

 The fields already defined in this section should not be removed from `CaxConfig.xml` file.

### 9.1.1.15 READONLY\_ITEM\_FIELDS Section

This XML structure defines all Item fields which should not be updated by the MCAD connector (read-only fields), defined by their field ID.

Though the XML definition is based on a `name-and-value` syntax, the `value` field itself is not evaluated by the connector.

```
<Structure>
  <Name>READONLY_ITEM_FIELDS</Name>
  <FieldCollection>
    <Field><Name>YYY</Name><Value></Value></Field>
  </FieldCollection>
</Structure>
```

### 9.1.1.16 CAX\_NAMES\_BY\_ID Section

Allows executing an attribute mapping during save as operations.

Refer to [Mapping Values on Save As](#) (p. 46) for more information.

## 9.1.2 extensions.xml

This file consists of lists all supported file extensions.

The following table provides details of `Structures` available in the file.

Structure	Description
CAD_EXTENSIONS	Defines the list of all CAD file extensions supported by the integration.
CAD_DRAWING_EXTENSIONS	Defines the list of drawing CAD file extensions supported by the integration.

Structure	Description
CAD_BOM_IGNORE_EXTENSIONS	Defines the list of CAD file extensions which should not be included in the BOM.
CAD_DEPENDING_EXTENSIONS	Defines the list of dependent CAD files that are also added to the Design object.
CAD_HELPER_EXTENSIONS	Defines the list of part file extensions which should not be included in the BOM.
OFFICE_EXTENSIONS	Defines the list of Microsoft Office filename extensions supported by the integration.
BOM_HELPER	Lists values for <code>CAX_SUBTYPE</code> property to identify files as Helper Parts
CAD_EXTERNAL_REFERENCES	Lists values for <code>CAX_IDENT</code> property to identify external references.

### 9.1.3 AcpCustomer9.ini

This is the main file for controlling the behavior of the Creo Parametric connector.

This file is structured in several sections. The first line of a section starts with a left square bracket followed by a space and its name again followed by a space and the right square bracket. Each section starts with the section name. A comment line starts with the # sign.



Do not leave blank lines in this file.

Section	Description
Initialize	Common switches to control the behavior of the Creo Parametric Connector
ProEToAgile.Create	This mapping section is used for initial creation of design objects using the Save command.
ProEToAgile.Update	This section is used when the existing design objects are updated via the Save command.
AgileToProE.ProE	Defines those Agile PLM attributes that are saved automatically into all Creo Parametric files, during the Save command.
AgileToProE.PRT	Defines those Agile PLM attributes that are saved automatically into Creo Parametric PRT files, during the Save command.
AgileToProE.DRW	Defines those Agile PLM attributes that are saved automatically into Creo Parametric DRW files, during the Save command.
AgileToProE.ASM	Defines those Agile PLM attributes that are saved automatically into Creo Parametric ASM files, during the Save command.
AgileGetProperties.PRT	Defines those Agile PLM attributes that are saved into Creo Parametric PRT files, when using the Update Properties command.
AgileGetProperties.DRW	Defines those Agile PLM attributes that are saved into Creo Parametric DRW files, when using the Update Properties command.



Section	Description
AgileGetProperties.ASM	Defines those Agile PLM attributes that are saved into Creo Parametric ASM files, when using the Update Properties command.




### 9.1.3.1 Initialize Section




The following table provides details of parameters available in the `Initialize` section.



Parameter	Description
AcpDebug	<ul style="list-style-type: none"><li>0 - no Debug</li><li>1 - write full debug info to <code>AcpUser\log\acp.log</code> (bad performance)</li></ul> <b>Default:</b> 0 <b>Possible values:</b> 0   1
AcpTimer	<ul style="list-style-type: none"><li>0 - off</li><li>1 - key events</li><li>2 - key events plus Creo Parametric events</li><li>3 - all timer events</li></ul> <b>Default:</b> 0 <b>Possible values:</b> 0   1   2   3
AcpTimerWriteMessage	<ul style="list-style-type: none"><li>0 - write AcpTimer comment to <code>trail.txt</code></li><li>1 - put AcpTimer message in Creo Parametric</li></ul> <b>Default:</b> 0 <b>Possible values:</b> 0   1
AcpTimerWriteLog	<ul style="list-style-type: none"><li>0 - off</li><li>1 - write AcpTimer info to <code>AcpUser\log\acp_timer.log</code></li></ul> <b>Default:</b> 0 <b>Possible values:</b> 0   1
JNI_DEBUG	<ul style="list-style-type: none"><li>0 - no JNI Debug</li><li>1 - write JNI debug info to <code>%USERPROFILE%\AgileCache\AglProxy.log</code></li></ul> <b>Default:</b> 0 <b>Possible values:</b> 0   1
AcpInitialRenameObject	<ul style="list-style-type: none"><li>0 - no Creo Parametric file renaming</li><li>1 - Creo Parametric file rename during initial check in</li></ul> <b>Default:</b> 1 <b>Possible values:</b> 0   1

Parameter	Description
AcpSaveDrwFrm	<ul style="list-style-type: none"> <li>0 - ignore Creo Parametric drawing formats (FRM)</li> <li>1 - Creo Parametric drawing formats (FRM) are stored in Agile PLM</li> </ul> <p><b>Default:</b> 1</p> <p><b>Possible values:</b> 0   1</p>
AcpSaveLay	<ul style="list-style-type: none"> <li>0 - ignore Creo Parametric layouts (LAY)</li> <li>1 - Creo Parametric layouts (LAY) are stored in Agile PLM</li> </ul> <p><b>Default:</b> 1</p> <p><b>Possible values:</b> 0   1</p>
AcpHelpPartIdent	<p>Name of Creo Parametric parameter used to identify helper parts. These objects are saved into Agile PLM as design objects, but are filtered out when create Item/BOM</p> <p><b>Default:</b> ITEM</p> <p><b>Possible values:</b> ITEM</p>
AcpHelpPartValue	<p>Value for helper part parameter</p> <p><b>Default:</b> N</p> <p><b>Possible values:</b> N</p>
AcpHelpPartSkeletonCheck	<ul style="list-style-type: none"> <li>0 - use AcpHelpPartIdent / AcpHelpPartValue settings to identify skeleton parts as helper parts</li> <li>1 - Automatically identify skeleton parts as helper parts. Skeleton parts are filtered out when create Item/BOM</li> </ul> <p><b>Default:</b> 1</p> <p><b>Possible values:</b> 0   1</p>
AcpReadFindNumber	<ul style="list-style-type: none"> <li>0 - not reading FindNo during Update properties</li> <li>1 - reading FindNo during Update properties and provide parameter AGILE_FIND_NO for use with Pro/REPORT</li> </ul> <p><b>Default:</b> 1</p> <p><b>Possible values:</b> 0   1</p>
AcpCreateInterchangeRelation	<ul style="list-style-type: none"> <li>0 - not creating additional relation for components of interchange ASMs</li> <li>1 - create additional relation for components of interchange ASMs during Save</li> </ul> <p><b>Default:</b> 1</p> <p><b>Possible values:</b> 0   1</p>



Parameter	Description
AcpLoadUpdateDrwProperties	<ul style="list-style-type: none"> <li>0 - No action after load a DRW from Agile PLM</li> <li>1 - automated call of function <b>Update properties</b> after load a DRW from Agile PLM</li> </ul> <p><b>Default:</b> 1</p> <p><b>Possible values:</b> 0   1</p>
AcpLoadUpdateDrwPropMode	<p>if <code>AcpLoadUpdateDrwProperties</code> is set to 1 - define mode for <b>Update properties</b> CURRENT(default)</p> <p><b>Default:</b> FLAT</p> <p><b>Possible values:</b> FLAT   RECURSIVE</p>
AcpFamilyCheckVerify	<ul style="list-style-type: none"> <li>0 - Do NOT check family instance verify status before saving</li> <li>1 - Check family instance verify status before saving</li> </ul> <p><b>Default:</b> 0</p> <p><b>Possible values:</b> 0   1</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
AcpSaveShowMissingDrwModel	<ul style="list-style-type: none"> <li>0 - Does NOT display external references of a simplified representation within the Save Preview</li> <li>1 - Displays all objects of the simplified representation</li> </ul> <p><b>Default:</b> 0</p> <p><b>Possible values:</b> 0   1</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
AcpUseCacheForId	<ul style="list-style-type: none"> <li>0 - Does NOT check for .CLB file</li> <li>1 - If .CLB file is deleted, the related objects are marked as unknown</li> </ul> <p><b>Default:</b> 1</p> <p><b>Possible values:</b> 0   1</p>
AcpMenuAddSaveModified	<ul style="list-style-type: none"> <li>0 - Disables the menu item for the Save Modified function</li> <li>1 - Enables the menu item for the Save Modified function</li> </ul> <p><b>Default:</b> 0</p> <p><b>Possible values:</b> 0   1</p> <p>See User Guide for more information.</p>

Parameter	Description
AcpAddFilesAppend	<p>Defines a list of file extensions: Files that correspond to the file name of a file being checked in to Agile PLM during a save process but with the file extension given in the list are uploaded to the Files tab as viewables.</p> <p>For example: When checking in Myassembly.ASM, the files Myassembly.EMN and Myassembly.EMP are uploaded to Agile PLM in addition.</p> <p><b>Default:</b> EMN;EMP</p> <p><b>Possible values:</b> Semi-colon separated list of file extensions (without dot)</p>
AcpSaveCheckAllowWrongRegen	<p>This option setting is responsible for the behavior of the connector related to failures in regeneration in Creo Parametric. The following settings are now available:</p> <ul style="list-style-type: none"> <li>0 - Do not allow save, if current structure contains any failure in regeneration</li> <li>1 - Allow save, if current structure contains any failure in regeneration</li> <li>2 - Allow save, if current structure contains a failure in regeneration on any level in the structure except the first level</li> </ul> <p><b>Default:</b> 0</p> <p><b>Possible values:</b> 0   1   2</p> <p> Values 1 and 2 can lead to incomplete or corrupt structures.</p>
AcpMdlTreeMenuDefinition	<ul style="list-style-type: none"> <li>NONE - Deactivates the Contextual Menu items on the Model tree for the Creo Parametric</li> </ul> <p>Default entries for the Contextual Menu Items are stored in <code>%xPlmRootDir%\acp\ini\AcpMenuMdlTree.xml</code></p> <p><b>Default:</b> NONE</p> <p><b>Possible values:</b> NONE</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
AcpViewFileGenerationFRM	<ul style="list-style-type: none"> <li>0 - No viewable creation for format files are created.</li> <li>1 - Enables Viewable creation for format files (based on ACX property settings)</li> </ul> <p><b>Default:</b> 0</p> <p><b>Possible values:</b> 0   1</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>

Parameter	Description
AcpLoadCheckForDuplicates	<ul style="list-style-type: none"> <li>0 - no check is performed for files with the same name.</li> <li>1 - when loading, the connector checks for files with the same name and sends out a warning message before the CheckOut request and can cancel the loading process. If duplicate files are found, only the first file found is fetched, for all other files no CheckOut request is made.</li> </ul> <p><b>Default:</b> 0</p> <p><b>Possible values:</b> 0   1</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
AcpCreateUseDrwTemplateFrm	<ul style="list-style-type: none"> <li>1 - the frame of the drawing template is used.</li> <li>0 - the frame of the drawing template is not used.</li> </ul> <p><b>Default:</b> 1</p> <p><b>Possible values:</b> 0   1</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
AcpMenuAddDrawingBom	<p>Hides or reveals the <b>Transfer BOM Find Numbers</b> menu button within the integration menu.</p> <ul style="list-style-type: none"> <li>0 - Hides the menu button.</li> <li>1 - Reveals the menu button.</li> </ul> <p><b>Default:</b> 0</p> <p><b>Possible values:</b> 0   1</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
AcpLibraryPartIdent	<p>Defines the name used to identify library parts</p> <p><b>Default:</b> LIBRARY</p>
AcpLibraryPartValue	<p>Defines the value for a library part parameter</p> <p><b>Default:</b> y</p> <p><b>Possible values:</b> y   n</p>
AcpLibraryPartCheckCreoLibDir	<p>Identifies Library part by source directory (<code>config.pro</code> setting <code>pro_library_dir</code>)</p> <p>Also applies to objects from subdirectories</p> <p><b>Default:</b> 0</p> <p><b>Possible values:</b> 0   1</p>

Parameter	Description
AcplibraryPartUseObjectNameForId	Using file name as Design Number for library parts during Create (if Design Number is not mapped) <b>Default:</b> 1 <b>Possible values:</b> 0   1
AcplibraryPartInitialRename	Controls the renaming of Standard Parts during the initial save. <ul style="list-style-type: none"><li>0 - Standard parts are not renamed during initial save to Agile PLM</li><li>1 - Standard parts are renamed during initial save to Agile PLM</li></ul> <b>Default:</b> 0 <b>Possible values:</b> 0   1
AcplibraryPartNotCheckModify	Ignore Modify of Library objects <b>Default:</b> 0 <b>Possible values:</b> 0   1
AcplibraryPartSkipViewFileGeneration	Controls generation of viewable files during save of Standard Parts. <ul style="list-style-type: none"><li>0 - Enables generation of viewables files during save of Standard Parts.</li><li>1 - Disables generation of viewables files during save of Standard Parts.</li></ul> <b>Default:</b> 0 <b>Possible values:</b> 0   1  Entry does not exist in default installation and must be manually added to the configuration file.
AcplibraryPartSkipFileGet	Defines whether Standard Parts should be downloaded from Agile PLM to the local workspace during load function <ul style="list-style-type: none"><li>0 - Standard Parts are loaded to the local workspace.</li><li>1 - Standard Parts are not loaded to the local workspace.</li></ul> <b>Default:</b> 0 <b>Possible values:</b> 0   1  Entry does not exist in default installation and must be manually added to the configuration file.



Parameter	Description
AcpSaveForceStructureUpdate	<p>Allows automatic update of part-part references when activated.</p> <ul style="list-style-type: none"><li>■ 0 - Structure update as before (no extra calls).</li><li>■ 1 - Force structure update for PRT components.</li></ul> <p><b>Default:</b> 0</p> <p><b>Possible values:</b> 0   1</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>
AcpCallbackDeleteFilesInSession	<p>Determines the behaviour of the integration when an attempt is made to delete files that are currently in session via the Workspace Browser.</p> <ul style="list-style-type: none"><li>■ 0 - Deletion of files in session is prevented with an appropriate message for each open file.</li><li>■ 1 - Deletion of files currently in session is allowed.</li></ul> <p><b>Default:</b> 0</p> <p><b>Possible values:</b> 0   1</p> <p> Entry does not exist in default installation and must be manually added to the configuration file.</p>

### 9.1.3.2 ProEToAgile Sections

These sections defines mapping configurations from Creo Parametric to Agile PLM on Save.

Each mapping consists of a pair of objects. The right side of the pair defines information that can be extracted from Creo Parametric. Here Creo Parametric is the source of the attribute value. The left side of the pair defines the attribute value's target location in Agile PLM.

There are several configuration options for the right-hand side that define what kind of data should be extracted from Creo Parametric, and what kind of transformation can be applied to the data. Each right-side attribute consists of three sections, for example:

```
DESCRIPTION = Std.ObjectName-Type.ToUpper
```

The first section is either `Std` or `Par`.

`Std` refers to Creo Parametric system attributes such as file name, object type, version of Creo Parametric that is being used, and so forth.

Std.CreSystem	Creo Parametric version such as Creo Parametric 3.0
Std.VerStamp	Timestamp
Std.FileName	File name such as <i>BOLT.PRT</i>
Std.ObjectName	Creo Parametric file name without the extension such as <i>BOLT</i>

Std.ObjectName-Type	Object name with the type appended. This creates an easy way to differentiate an assembly from a part.  Examples include <i>BOLT-PRT</i> , <i>BOLT-ASM</i> , or <i>BOLT-DRW</i> .
Std.ObjectType	Creo Parametricobject type.  Possible values are PRT, ASM, DRW, or FRM.

`Par` is a reference to user-defined parameter in Creo Parametric, such as MATERIAL, DESCRIPTION, or ENGINEER. These types of mappings are only useful where the Creo Parametric file has a parameter corresponding to the name mentioned in the mapping.

Finally, the final suffix is a description of how the data should be modified. The following modifiers are possible:

ToUpper	Transfer all characters to uppercase
ToLower	Transfer all characters to lowercase
None	Do not modify the data
Range-<idx1>-<idx2>	Range of the string from position idx1 to idx2 For example <i>Part.PartNumber.Range-0-2</i>
Prefix	Prefix to be added in front of the string For example <i>Par.PartNumber.PrefixPRT</i>
Suffix	Suffix to append to the string For example <i>Par.PartNumber.SuffixPRT</i>

There are two special values that are used on the left side of these mappings. In the `[ProEToAgile.Create]` section, you use the value `CAX_NEW_NUMBER` to represent the number field that is assigned to the newly created Design object.

The following example shows mapping a Creo Parametric parameter `NAME` to the Agile PLM attribute `DESCRIPTION` and the Creo Parametric version to Agile PLM attribute `CAX_CRE_SYSTEM`:

DESCRIPTION	Par.NAME.None
CAX_CRE_SYSTEM	Std.CreSystem.None

9.1.3.3 AgileToProE Sections

These sections are used to define mappings from Agile PLM to Creo Parametric which occur automatically during the save process.

As this adds time to the save process, the list of attributes should be kept to the bare minimum that absolutely needs to be kept synchronized. Other attributes can be synchronized using **Update Properties** as described in [AgileGetProperties Sections](#) (p. 107).

The format of this section is:

```
DocNumber = NUMBER
```

Where the left side value is the name of the Creo Parametric parameter to be updated, and the right side is the Agile PLM attribute value to be used as the source.

#### 9.1.3.4 AgileGetProperties Sections

These sections are used to define mappings from Agile PLM to Creo Parametric, which occur when the user runs the **Update Properties** command manually.

For standard attributes the format of this section is:

```
CAD Parameter = <Source Table Field>.Format
```

Where the left side value is the name of the Creo Parametric parameter to be updated, and the right side is the Agile PLM attribute value to be used as the source.

For example:

```
Agile_Des = DESCRIPTION.ToUpper
```

For part history and change history attributes, which are arranged in a table, the format of this section is:

```
CAD Parameter = <Filter Table>_Field,<Filter Value>,<Filter>,<Source Table>_Field.Format
```

For example:

```
Agile_CreUser = History_Action,Create,first,History_User.None HIS_RELDATE_1 = Change  
History_Status,Released,last,Change History_Rel Date_int.Date01
```

Where the left side value is the name of the Creo Parametric parameter to be updated, and the right side specifies how to find the desired row and column in the table below:

Section	Represents	Example
<Filter Table>	Agile PLM tab name to search	Title Block
Field	Desired column to search	Action
<Filter Value>	Value to detect in the column	Create
<Filter>	Which row to select, with these options: <ul style="list-style-type: none"> <li>■ first</li> <li>■ first+n n=integer value</li> <li>■ last</li> <li>■ last-n n=integer value</li> </ul>	first
<Source Table>	Agile PLM tab name to retrieve value from	History
Field	Desired column to retrieve value from	User
Format	Text processing	None

#### Options for Format

The Format string allows you to perform additional processing on the text string being passed back into Creo Parametric. This includes predefined formats and general TCL format procedures.

Format	Description
None	no processing
ToLower	convert the value to lower case
ToUpper	convert the value to uppercase
Range-x-y	sub-string of the value from index <code>x</code> to index <code>y</code> ( <code>y</code> may be numeric or <code>end</code> )
Date01	convert int date format to "%d.%m.%y %H:%M:%S" For example: 01.01.2007 00:00:00
Date02	convert int date format to "%d.%m.%Y" For example: 01.01.2007
Date03	convert int date format to "%d.%m.%y" For example: 01.01.07
Date04	Convert int date format to "%d-%m-%y" For example: 01-01-07
Date05	Convert int date format to "%m/%d/%y" For example: 01/01/07
Date06	Convert int date format to "%d-%b-%y" For example: 01-Jan-07
Prefix <code>str</code>	append a prefix <code>str</code> to the value
Suffix <code>str</code>	append a suffix <code>str</code> to the value

### TCL format procedures

Any registered (tclIndex) TCL procedure that gets the current value as input and returns the formatted string. For instance:

```
proc MyFormat { value } {  
    set formattedvalue $value  
    return $formattedvalue  
}
```

### Mapping Part Attributes

In addition to mapping attributes from the Creo Parametric document back into Creo Parametric, you can map attributes from the corresponding Part object that has been associated to the Design object. In order to specify a part attribute, simply prefix the attribute value with `PART`.

This example shows how to map both the Document Number and Part Number into Creo Parametric:

```
Agile_DocId = NUMBER.None
```

```
Agile_PartId = PART:NUMBER.None
```



Please contact XPLM consulting for more information on customer reserved functionality.

### 9.1.4 ACP.cfg

Contains basic system parameters.

Parameter	Description
Connector settings	
AcpUserRoot	User directories <b>Default:</b> C:\AgileEC
CAX_WORKSPACE_ROOT	Setting for workspace root (optional) if AcpUserRoot value is not set <b>Default:</b> D:\AcpWork
AcpCustomerIni	Custom specific ini file. <b>Default:</b> AcpCustomer9.ini
AcpAgl	AgileVersion <b>Default:</b> Agile9
CAX_JAVA_OPTIONS=-Dcom.xplm.agile.Language	AgileEC Language <b>Default:</b> EN <b>Possible values:</b> DE   FR
Environment settings	
AcpJava	Java runtime settings (optional) <b>Default:</b> !AcpRoot!\jre_64
AglJarDir	Directory for AGL Tools specific jar files (optional) <b>Default:</b> !AcpRoot!\jar
AcpAcxCommand	Start script for EC Client (optional) <b>Default:</b> !AcpRoot!\com\acx.bat
AcpStartCust	Custom specific start action (optional) <b>Default:</b> !AcpRoot!\com\xacp_cust.bat
Creo settings	
PROTK_DELAYINIT_ALWAYS_INIT	internal settings <b>Default:</b> 1

Parameter	Description
Creo Parametric	Defines the Creo Parametric versions by year <b>Example:</b> Creo Parametric 8.0 -> 2021
AcpCreoV	Defines the Creo Parametric version to use. This setting overrides Installer settings (optional) <b>Example:</b> 2021
AcpStartCreo	Defines the start up script <b>Example:</b> !ProgramFiles!\PTC\Creo 8.0.0.0\Parametric\bin\parametric.exe
AcpCreoPsf	Define Creo Parametric PSF (optional) <b>Default:</b> parametric.psf
LANG	Defines the language of the Add in <b>Default:</b> usascii <b>Possible values:</b> usascii   french   japanese   german   Chinese_cn
Internal settings	
ACP_COPY_CONFIG	<ul style="list-style-type: none"><li>■ 1 - copy config.pro to User directory</li><li>■ 0 - do not copy</li></ul> <b>Default:</b> 1 <b>Possible values:</b> 0   1
ACP_COPY_PROTK	<ul style="list-style-type: none"><li>■ 1 - copy protk.dat to User directory</li><li>■ 0 - do not copy</li></ul> <b>Default:</b> 1 <b>Possible values:</b> 0   1

## 9.2 Tools and add-ons

This chapter provides a basic understanding of the tools that come with the installer or are available separately as add-ons.

- [Batch Queue Admin](#) (p. 112)
- [Batch Server](#) (p. 116)
- [Encryption Helper](#) (p. 118)

## 9.2.1 Batch Queue Admin




Please consult XPLM services for setup and configuration of this component.

### 9.2.1.1 Batch Queue Solution

The XPLM Batch Queue Solution is an entire generic solution for processing batch operations.

The XPLM Batch Queue Solution is an independent flexible extendable solution for described process. It will provide the tools for running batching process which can be freely defined. This means it is not restricted to only run viewable generation inside a Batch Client. It is also possible to define and implement Batch Clients for CAD independent customers' requirements.

#### Architecture

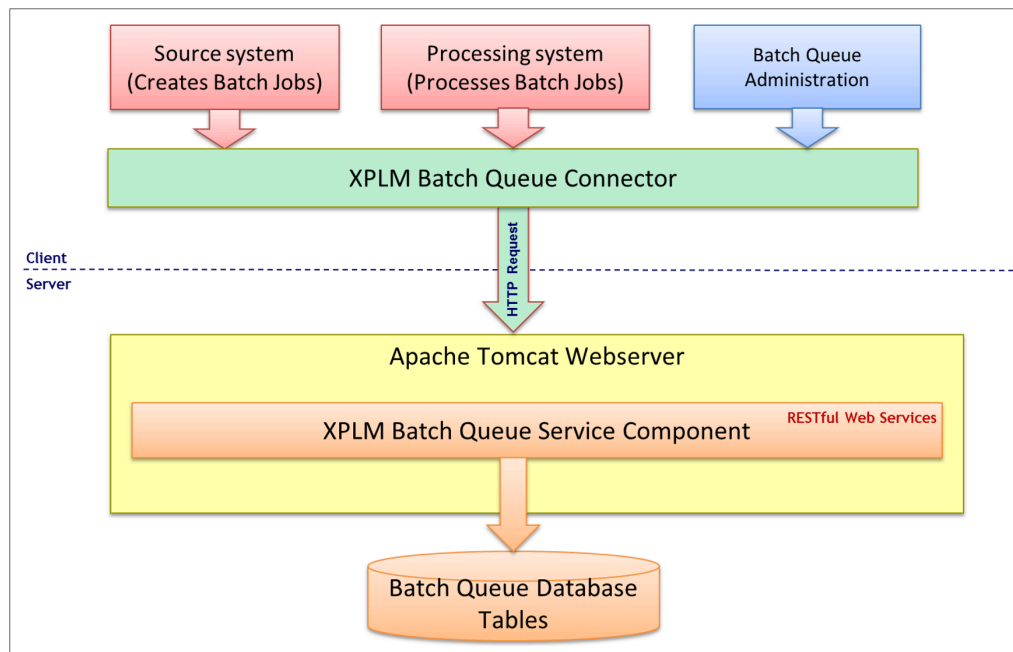

#### Components

- **XPLM Batch Queue Service Component:** This is the base component. It is a set of RESTful Web Services which are hosted in a webServer and hold data in a relational database (Batch Queue Database Tables).
- **XPLM Batch Queue Connector:** This is a library which provides functions for data exchange between XPLM Generic Batch Queue and Batch Queue consuming applications.
- **XPLM Batch Queue Administration:** Provides a means to manage batch jobs.
- **Source system:** This is the trigger for working with the Batch Queue. For example, it can be a PLM System which adds a job in the queue via the XPLM Batch Queue Connector during a release process. This process is the PUT-process of the queue and executed asynchronously by the GET-process of the queue.
- **Processing system:** This is the system responsible for pooling and handling the job. This process is the GET-Process of the queue and is executed asynchronously to the PUT-Process. There are two kinds of processing systems available.
  - **Script-Engine based processing systems** - These products will take use of the XPLM Batch Server as pooling service to a Batch Queue. In case of the XPLM Generic Batch Queue Solution the XPLM Batch Server uses the implementation of the XPLM Generic Batch Queue Handler.



- ❑ **Product integrated processing systems** -These products will own their pooling service and worker service in one solution. For example, this is usually the case for non COM based CAD Systems.

### 9.2.1.2 Batch Queue Admin

The Batch Queue Administration tool provides a means to manage batch jobs via a dialog.

The Batch Queue Administration tool allows:

- Viewing jobs and history entries
- Retrieving jobs and history entries according to certain search criteria
- Changing the status of jobs
- Editing configured fields for jobs and saving this data to the Batch Queue
- Deleting jobs and history entries

XPLM Batch Queue Administration dialog has two main tabs:


- Batch Queue tab - shows search criteria and hit lists for jobs stored in the queue table
- History tab - Using the standard Batch Queue service configuration, all modifying operations on Batch Queue jobs (INSERT, UPDATE, and DELETE) cause a new entry in the history table.
  - ❑ During INSERT and UPDATE the system will store a queue table entry. After the operations the system will create history entries.
  - ❑ During the operation DELETE the system will save the queue table entry as a history entry before deletion.










It is possible to follow up any change for a job entry in the history table. This leads to much more entries in the history table than in the queue table and makes a regular deletion of history entries necessary.

### Functional overview

The menu bar contains the following functions

Function	Description
<div>Search</div> <div></div>	<p>Pressing the button <b>Search</b> will start a searching by using the currently set search criteria. If the system found jobs or history entries corresponding to the entered search criteria, the search criteria table will be collapsed and the hit list will be shown</p> <p>You can define the search criteria by entering values based on the properties given in the column headers. The system will then display all jobs or history entries which apply to the entered values.</p> <p>It is possible to use several search conditions to find jobs. The following wild-card characters are supported within the search fields:</p> <ul style="list-style-type: none"><li>■ % - used to specify any number of arbitrary characters for example <code>Source Obj. Type = D%</code></li><li>■ _ - used to specify a single arbitrary character for example source <code>System = Ag_le</code></li><li>■   - used to specify several values for one field for example <code>Job Type = STEP PDF</code></li></ul>

Function	Description
Show history 	<p>Shows the history of selected jobs.</p> <p>The system will automatically enter the JOB_IDs as search criteria in the history tab, start the history search and switch to the view of the history tab.</p>
Save all changes 	<p>Saves all changes made to the job definitions. Some columns are editable. You may modify the values in these columns to change the job definition depending on the job status. To edit a value, double click in the cell and enter the new value.</p> <p>In the standard configuration, jobs can be edited if the status is not <b>2. Working</b>.</p> <p>The following columns are editable:</p> <ul style="list-style-type: none"> <li>■ Job Type</li> <li>■ Job Priority</li> <li>■ Proc. site</li> <li>■ Target Obj. Type</li> <li>■ Target Obj. Number</li> <li>■ Target Obj. Version</li> <li>■ Job Parameters</li> </ul> <p> Press <b>Save all changes</b> after all necessary are made.</p>
Restart job	<p>Resets the status of the selected job(s) to <b>0 - Pending</b> if the current job status allows the transition.</p> <p>In the standard configuration, jobs can be restarted if they are in status <b>1 - Success</b>, <b>3 - Error</b> and <b>4 - Deferred</b>.</p>
Defer job	<p>Resets the status of the selected job(s) to <b>4 - Deferred</b> if the current job status allows the transition.</p> <p>In the standard configuration, jobs can be restarted if they are in status <b>0 - Pending</b>, <b>2 - Working</b> and <b>3 - Error</b>.</p>
Delete job 	<p>Deletes selected job(s) with a confirmation dialog if the current job status allows it.</p> <p>In the standard configuration, jobs can be deleted if they are in status <b>0 - Pending</b>, <b>1 - Success</b>, <b>3 - Error</b> and <b>4 - Deferred</b>.</p> <p>After deletion the deleted jobs can be found in the history table if writing history entries is not switched off for the action <b>Delete</b> in the Batch Queue service configuration.</p>

Function	Description
Purge	Deletes selected job(s) or all loaded jobs if no job is selected with the status <code>1 - Success</code> .  After deletion the deleted jobs can be found in the history table if writing history entries is not switched off for the action <b>Delete</b> in the Batch Queue service configuration.
Stop processing	Shows a list of configured processing systems for which the job processing can be stopped.  For example: Selecting the menu entry for one processing system (for example SolidWorks) the XPLM Batch Queue Administration Tool will create a new job with type EXIT for this system. Whenever the program processing jobs for SolidWorks are executed, this specific job with the type EXIT will stop the program. In the example, the program must be restarted to start processing of SolidWorks jobs again.
Show/Hide search criteria 	This function expands or collapses the search criteria view. The search criteria row will either be hidden or displayed.
Delete History Entries for Job	Deletes the history entries for selected job(s) with a confirmation dialog.
Clear search criteria 	Removes entered values in the search fields.
Max.Hits	Shows the search limit. It is configured to <b>500</b> by default but you can change the value to any positive integer or zero (0).   When the value is set to 0 or is empty, all hits that match the search criteria will be found and may take a very long time for the table entries to load and be displayed.



The functions are also available in the context menu (except for search functions).

## Job status

A job can have one of the following statuses

1. Pending
2. Working
3. Success
4. Error
5. Deferred

All changing functions described above in Toolbar section can be enabled or disabled in the configuration depending on the job status. Status transitions to *Pending* (Function **Restart job**) and *Deferred* (Function **Defer job**) can also be enabled or disabled in the configuration depending on the current job status.

**Job status standard configuration**

Status	Allow Edit	Allow delete	Allow Purge
Pending	Yes	Yes	No
Success	Yes	Yes	Yes
Working	No	No	No
Error	Yes	Yes	No
Deferred	Yes	Yes	No

**Job Status transitions**

Only status *Pending* and *Deferred* are allowed as destination status (Status to).

Status change is performed using functions **Restart Job** (set status to *Pending*) and **Defer job** (set status to *Deferred*)


Status From	Status To
Pending	Deferred
Success	Deferred
Working	Deferred
Error	Pending
Deferred	Pending

### 9.2.2 Batch Server

The XPLM Batch Server is used in the XPLM Batch Queue Solution as a pooling tool for getting batch job requests from a Batch Queue and passes it over to a Batch Client tool for processing the batch job requests and transfer feedback back to the Queue.



Please consult XPLM services for setup and configuration of this component.

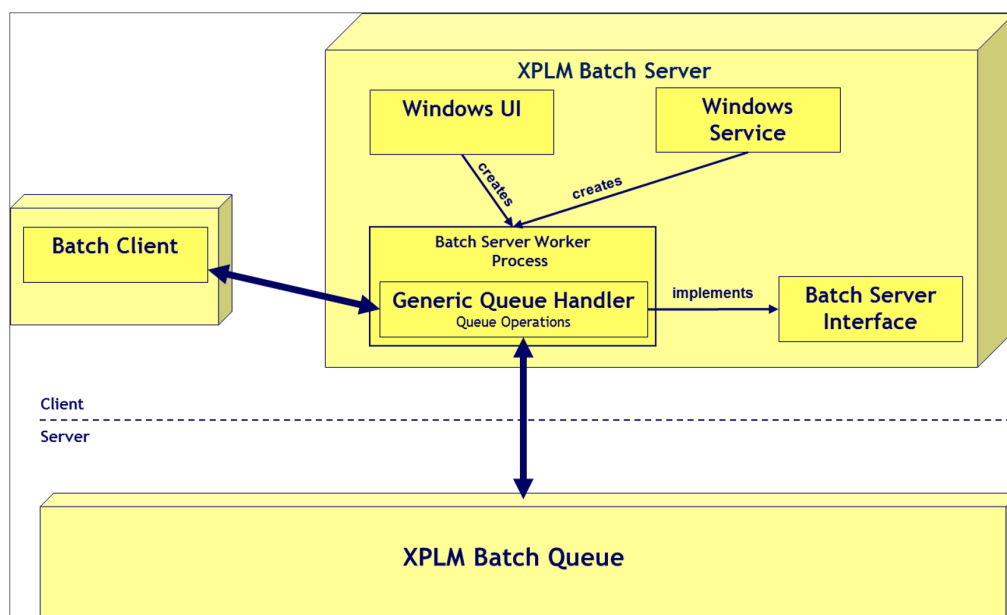**Architecture**

XPLM Batch Server acts as communicator between the Batch Client and the Queue as a pooling tool (as kind of watch dog).


It consists of three components: a UI-Component, a common interface and tool library and a Batch Server Worker Component with the implementation of a Batch Queue Handler.

### Batch Process

The Batch server process is based on an asynchronously execution.

The Source System, for example, a PLM-System does not notify client machines directly. It adds a batch job into the Batch Queue, for example, during a release process. Requests are asynchronously processed on a special client machine that is polling a job queue via a queue connector with configurable search criteria.

If a job is found, the XPLM Batch Server retrieves all relevant information from the Batch Queue and passes the job to Batch Client.

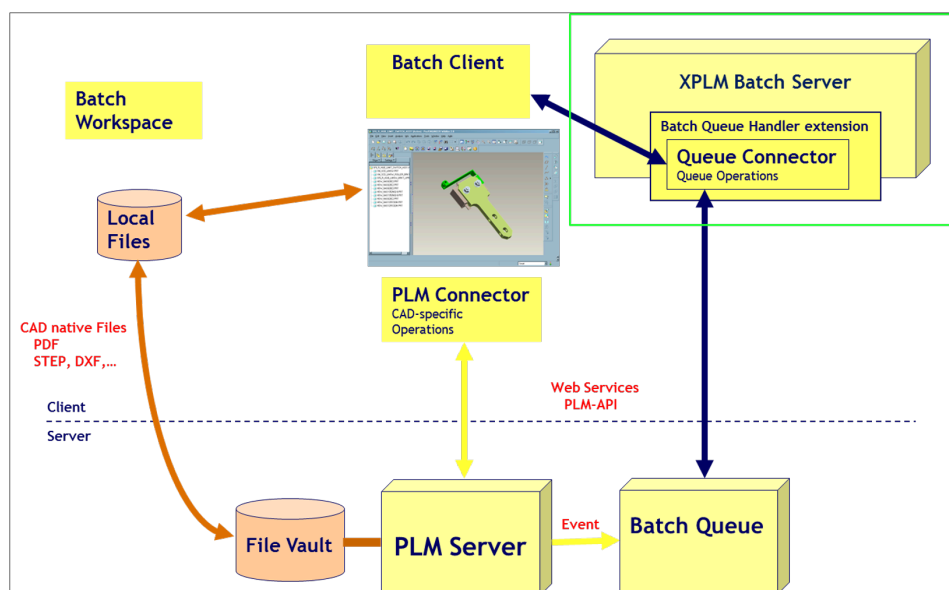

In Batch Mode the load is performed before that Task (for example PDF) is dispatched.

## 9.2.3 Encryption Helper

### 9.2.3.1 Introduction


The Encryption Helper is used to encrypt fields that must not be read in plain text, for example passwords.

You can encrypt required passwords and other information to prevent the value from appearing as plain text in configuration files. This is true for most configuration files, at least for login parameters and for regular transactions written in the current data model.



Make sure that you keep the original password in a safe place if you want to encrypt it. It is not possible to recover the original value after encryption.

Figure 1: User interface

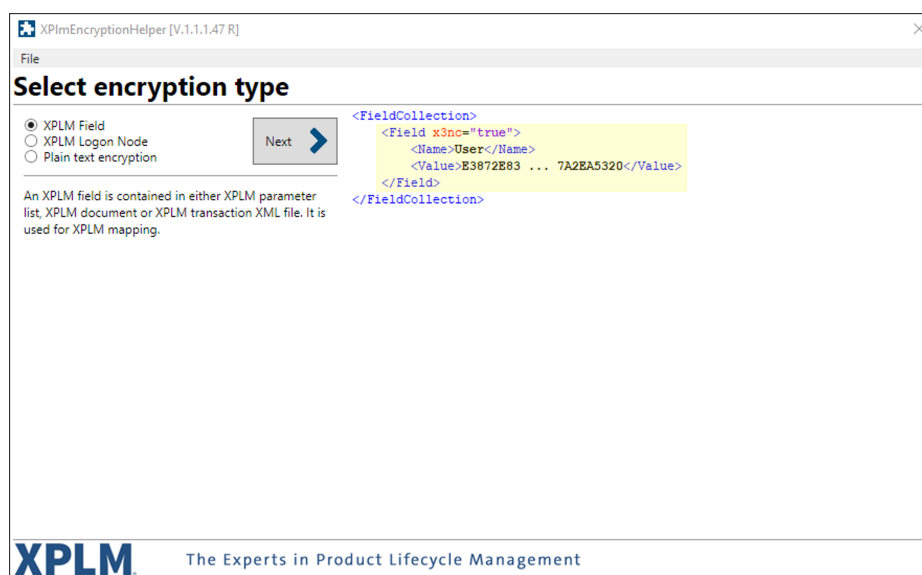

### 9.2.3.2 Usage

The application is installed from the integration installer in the step *Tool components*. After installation, a shortcut to start the application is placed on the desktop.

#### About this task

The Encryption Helper can encrypt a defined field, a logon node or just any plain text. It provides examples on how to use the encrypted information.

#### Procedure

1. Start Encryption Helper via the shortcut on the desktop.
2. Select an encryption type and click **Next**. Click **Back** to select another type.
3. **XPLM Field**: Enter the name of the field and its value, and click **Encrypt**.
4. **XPLM Logon Node**: Enter the name of the field and its value, and click **Encrypt**.
5. **Plain text encryption**: Enter the plain text and click **Encrypt**.

#### Result

The entered information is encrypted. Click **Copy** to copy the information to the clipboard and use it in the desired file.

## 9.3 Silent-mode installation

You can also install this XPLM product in silent-mode. Silent-mode has the advantage that you can easily install the product from a batch file without showing the installer GUI. Alternatively, you can start the installer with preset options, allowing it to be installed in a controlled manner by the user or by other automated installation routines.

The installer packages are all of type Windows Installer (MSI) and require corresponding parameters for silent-mode installation.

The Visual C++ runtimes are normal executables. Always install all x64/x86 runtimes that come with the installer package.

### Understanding installer structure

When you start an installation using the installer, required files are copied first to the directory `C:\ProgramData\XPLM Solution GmbH` and are executed from this location.

```
XPLM Solution GmbH
├── cmd
├── log
└── packages
```

- `cmd`: Contains the batch files `Setup-*_admin.bat` and `Setup-*_user.bat`.
  - The file `Setup-*_user.bat` contains the copy commands for the required MSIs from the original location to the directory `C:\ProgramData\XPLM Solution GmbH\packages`.
  - The file `Setup-*_admin.bat` installs the individual MSIs from this new location with the parameters as defined in the installer.
- `log`: Contains log files of each installed component.
- `packages`: Contains copies of all MSIs used for installation, modification or uninstallation.



Use the definitions in the files `Setup-*_user.bat` and `Setup-*_admin.bat` as the basis for a silent-mode installation. The command line calls already contain the required component MSIs and parameters as selected in the installer.

### General command line calls

Installing Visual C++ runtimes:

```
vcredist_*.exe /quiet
```

Uninstalling Visual C++ runtimes:

```
vcredist_*.exe /quiet /uninstall
```

Installing or modifying MSIs:

```
msiexec /i <fileName>.msi /quiet <parameter>=<value>
```

Repairing MSIs:

```
msiexec /i <fileName>.msi /quiet INSTALLMODE=Restore
```

Uninstalling MSIs:

```
msiexec /x <fileName>.msi /quiet REMOVE_SECURE=1
```

Using preset options in the installer (`Setup-*.exe`):

```
Setup-*.exe <parameter>=<value>
```

Using preset options in the installer (`Setup-*.msi`):

```
msiexec /i Setup-*.msi <parameter>=<value>
```

## Creating a batch file for silent-mode installation

This example is intended as a general guideline for creating an installation script in silent mode. It assumes that the MSIs used for the installation are stored on a network share.

1. On a test computer, extract the main archive and start the file `Setup-*.exe` with administrator rights.
2. Select required components and settings, and finish installation.
3. Copy the entire contents from the extracted archive to a network share, for example `\\myShare`.
4. Create a new batch file locally, for example `silent.bat`.
5. Add the installation commands for the C++ runtimes to this file, for example:

```
REM *** install c++ runtimes ***
\\myShare\vc_redist_14.38.33130.0_x64\vc_redist_14.38.33130.0_x64.exe /quiet
\\myShare\vc_redist_14.38.33130.0_x86\vc_redist_14.38.33130.0_x86.exe /quiet
```

6. Go to the directory `C:\ProgramData\XPLM Solution GmbH\cmd`.
7. Open the file `Setup-*_user.bat` and copy all *robocopy* commands into your batch file. Change the path in the first argument (the source) to point to the network share, for example:

```
REM *** copy from network share to client ***
robocopy "\\myShare\packages" "C:\ProgramData\XPLM Solution GmbH\packages" ←
Core_23.0.0.538.msi
...
```

8. Open the file `Setup-*_admin.bat` and copy the command line calls for installing the MSIs into your batch file. Change the path of the MSI to point to the network share, for example:

```
REM *** installing msi ***
msiexec /i "\\myShare\packages\Core_*.msi" /passive ←
CALLED_BY=Setup-* ←
INSTALLDIR="C:\Program Files\XPLM Solution GmbH\" ←
BATCH_ADMIN="C:\ProgramData\XPLM Solution GmbH\cmd\Setup-*_admin.bat" ←
GUI_LOG_FILE="C:\ProgramData\XPLM Solution GmbH\log\Setup-*_gui.log" ←
JAVA_JNI=0 ←
JAVA_JNI_X86="" ←
JAVA_JNI_X64="" ←
...
```



In the above example, line breaks were inserted to show readable content. Usually, each `msiexec` call would be on one line. You can further clean-up each call by deleting the information marked red, as it is not required in your batch file.

9. To test silent installation, use a clean client computer, copy the batch file `silent.bat` to it and run it with administrator rights.



## Parameters usage

- If no parameters are defined, default settings apply. In the following tables, default settings are underlined.
- If you use parameters in the scope of `Setup_*.exe/msi`, use them with the provided prefix, for example `COR_JAVA_JNI`.



You cannot use the setup files `Setup_*.exe/msi` for silent-mode installation. For this you must use the individual component MSIs. However, you can use parameters in `Setup_*.exe/msi` to preset options when installing in GUI-mode.

- Use parameters without prefix to define settings within the scope of component MSIs, for example `Core_*.msi`.
- Use the following parameters to control either GUI-mode or silent-mode installation:
  - `none`: GUI-mode
  - `/quiet`: Silent-mode without GUI
  - `/passive`: Silent-mode with additional progress indication

## Parameter for silent-mode & GUI-mode

The following parameters apply to silent mode as well as to the presetting of options in GUI mode.

Table 1: Component MSI & Setup EXE/MSI

Prefix	Parameter	Value	Description and use
	INSTALLDIR	Path to a valid directory	Defines the path of the installation directory. Available in all MSIs.
	INSTALLMODE	<u>Change</u>   Restore	Defines the installation mode after the installation is already completed and the installer is restarted. <ul style="list-style-type: none"><li>■ Change = Modify</li><li>■ Restore = Repair</li></ul> Available in all MSIs.
	REMOVE_SECURE	<u>0</u>   1	Enables uninstallation. This corresponds to <b>Remove</b> in the installer. Available in all MSIs.
COR_	JAVA_JNI	<u>0</u>   1	Enables Java support for the product. Available in Core MSI and all Setup EXE/MSI using this component.
COR_	JAVA_JNI_X86	Path to a valid directory	Defines the path to the Java installation directory (x86) Available in Core MSI and all Setup EXE/MSI using this component.

Prefix	Parameter	Value	Description and use
COR_	JAVA_JNI_X64	Path to a valid directory	Defines the path to the Java installation directory (x64) Available in Core MSI and all Setup EXE/MSI using this component.
COR_BAT_	SERVER	0   1	Enables Batch Server. Available in Core-BatchServer MSI and all Setup EXE/MSI using this component.
COR_BAT_	ADMIN	0   1	Enables Batch Queue Admin. Available in Core-BatchServer MSI and all Setup EXE/MSI using this component.
COR_BAT_	SERVER_TYPE	INTERFACE   SERVICE	Defines if Batch Server should run with GUI or as service. Available in Core-BatchServer MSI and all Setup EXE/MSI using this component.
AA9_PRO_	VERSION	Version as shown in installer, more versions separated by semicolon	Defines the Creo Parametric version. Available in OraclePLM-CreoParametric MSI and all Setup EXE/MSI using this component.
AA9_PRO_	BATCH	0   1	Enables Creo Parametric bulk/batch support. Available in OraclePLM-CreoParametric MSI and all Setup EXE/MSI using this component.
PRO_	VERSION	Version as shown in installer, more versions separated by semicolon	Defines the Creo Parametric version. Available in CreoParametric MSI and all Setup EXE/MSI using this component.

### Parameter for GUI-mode



The following parameters apply exclusively to the presetting of options in GUI-mode and not to silent-mode.

Table 2: All MSIs

Parameter	Value	Description and use
BACKUP_FILES	Path to a valid directory	Defines a location for the backup.

Parameter	Value	Description and use
BACKUP_TYPE	FULL   CONFIG	Defines the backup scope. <ul style="list-style-type: none"><li>■ FULL = full backup of %xPlmRootDir%.</li><li>■ CONFIG = backup of configuration directory only, for example %xPlmRootDir%\xml.</li></ul>
CUSTOM_FILES	Path to a valid directory	Defines the path to a directory containing an overlay package with custom files to be copied after installation.

Table 3: Setup EXE/MSI

Parameter	Value	Description and use
	0   1	Enables Batch Server. Available in all Setup EXE/MSI using this component.
COR_ENC	0   1	Enables Encryption Helper. Available in all Setup EXE/MSI using this component.

Table 4: Setup-OraclePLM-MCAD EXE/MSI

Parameter	Value	Description
AA9_ACD	0   1	Enables AutoCAD Mechanical.
AA9_INV	0   1	Enables Inventor.
AA9_PRO	0   1	Enables Creo Parametric.
AA9_SED	0   1	Enables Solid Edge.

## 9.4 Working with overlay packages


An overlay package contains custom files with modified configuration. In the installer, you can select an option to apply an overlay as the last step of the installation process, copying the custom files over the installed files.


### Supported overlay features in the installer

First familiarize yourself with the features that are supported for overlays when using the installer.



The following features are available from installer versions 24.3.3.606 onwards. For older installers, the legacy behaviour applies. This behaviour has some limitations, see column **Legacy** for more information.

Feature	Description	Legacy
Directory or archive support	<p>An overlay can be referenced in form of an archive (zip, 7z or 7z.exe), or as a directory.</p> <p> When extracting an overlay archive, a double directory structure is often created, for example myOverlay\myOverlay\xml. If you select an overlay directory in the installer, always select the directory that corresponds to the level of the installation directory.</p>	Only directories and no archives can be referenced.

Feature	Description	Legacy
Local or network support	You can reference an overlay from the local disk or from a network share.	
Multiple installation directories	<p>Certain products require multiple installation directories. Usually core components are installed in the main installation directory, whereas other parts are installed in a different path.</p> <p>You can reference these individual paths in the overlay, so that the content is copied to the correct location when the overlay is applied.</p> <p>For this, add the installation parameter as first directory in the overlay structure, for example:</p> <ul style="list-style-type: none"> <li>■ <code>myOverlay\INSTALLDIR</code>: When applying the overlay, the directory <code>INSTALLDIR</code> is resolved to the main installation directory <code>%xPlmRootDir%</code>.</li> <li>■ <code>myOverlay\&lt;PREFIX&gt;_PATH</code>: When applying the overlay, the directory <code>&lt;PREFIX&gt;_PATH</code> is resolved to another installation directory.</li> </ul> <p>See <a href="#">Silent-mode installation</a> (p. 119) for installation parameter.</p>	
Custom scripts	<p>When applying an overlay, you can also run a script with custom actions.</p> <p>For this, create the directory <code>script</code> in the overlay and save the script <code>custom.bat</code> in it.</p> <p>If the product requires multiple installation directories, add the installation parameter again as first directory in the overlay structure, for example:</p> <ul style="list-style-type: none"> <li>■ <code>myOverlay\INSTALLDIR\script\custom.bat</code></li> <li>■ <code>myOverlay\&lt;PREFIX&gt;_PATH\script\custom.bat</code></li> </ul> <p>When applying the overlay, the script is first copied to the directory <code>C:\ProgramData\XPLM Solution GmbH\custom_files\&lt;DATE-TIME&gt;</code> for backup purposes. Then it is copied to the directory <code>script</code> in <code>%xPlmRootDir%</code> or the alternative installation directory and executed from there.</p> <p> In installers from version 24.4.4.628 onwards, you also have access to all environment variables in your script that were written during the installation.</p>	

Feature	Description	Legacy
Auto-detection	<p>Overlay archives or directories are automatically recognized if they are located next to or in the extracted setup directory and contain the string <i>overlay</i> in any written form in their name, for example:</p> <ul style="list-style-type: none"><li>■ Example 1 (overlay as 7-Zip archive next to extracted setup) <pre>&lt;EXTRACTED INSTALLER DIR&gt; myOverlay.7z</pre></li><li>■ Example 2 (extracted overlay next to extracted setup) <pre>&lt;EXTRACTED INSTALLER DIR&gt; myOverlay</pre></li><li>■ Example 3 (overlay as ZIP archive in extracted setup) <pre>myOverlay.zip packages vcredist_*_x64 vcredist_*_x86 Setup-*.exe</pre></li><li>■ Example 4 (extracted overlay in extracted setup) <pre>myOverlay packages vcredist_*_x64 vcredist_*_x86 Setup-*.exe</pre></li></ul> <p>If the overlay exists as shown in the above examples, and the installer is started for the first time, the option <b>Apply custom files after installation</b> is automatically enabled with the correct path.</p> <p>When the installer is restarted, it checks whether the applied overlay is still in its original location and automatically enables the option with the correct path. For example, put the overlay to a network share and it is always referenced from this location, see also best practices.</p>	Only directories and no archives can be auto-detected. The overlay directory must be named <i>custom_files</i> .

Best practices with overlays

- To create an overlay, copy modified files to a new directory with the string *overlay* in its name. Also create relevant sub-directories as in the original location from where you copied the files, for example *myOverlay\xml*.
- To apply an overlay in the installer, enable the option **Apply custom files after installation** and navigate to the overlay. Depending on the overlay type, make sure that you select either **Directories** or **Archive Files** in the selection dialog. If you have placed the overlay for auto-detection, the option is automatically enabled with the correct path.

- To apply an overlay manually, copy from the overlay directory the modified files to the directory `%xPlmRootDir%` and its related sub-directories, for example from `C:\temp\myOverlay\xml` to `%xPlmRootDir%\xml`.
- For deployment to clients, it is best to store the overlay on a network share. This allows you to update modified configuration on a regular basis and apply the overlay via your preferred method.

### How to apply an overlay in silent-mode

There are no parameters for applying an overlay package in silent-mode, because the copying process is not triggered by an MSI installation. You can only use certain parameters to preselect options in the installer. But, you can use *Robocopy* commands to copy the overlay content from a network share directly to the installation directory.

1. Copy the overlay to a network share, for example `\\myShare\myOverlay`.
2. In your own batch file for silent-mode, add the copy operation to the installation directory as the last step, for example:
3. Test your batch file on a clean client computer.
4. Check that the overlay was applied correctly and that the product is working.