



# Sun StorEdge™ Traffic Manager 3.1 Software Installation Guide

---

For the IBM AIX Operating System

Sun Microsystems, Inc.  
[www.sun.com](http://www.sun.com)

Part No. 817-3679-10  
October 2003, [Revision A](#)

[Send comments about this document to: docfeedback@sun.com](mailto:docfeedback@sun.com)

Copyright 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, CA 95054 U.S.A. All rights reserved.

This product or document is distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, Solaris, SSTM, and Sun StorEdge are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

Federal Acquisitions: Commercial Software—Government Users Subject to Standard License Terms and Conditions.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

---

Copyright 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, CA 95054 Etats-Unis. Tous droits réservés.

Ce produit ou document est distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, Solaris, SSTM, et Sun StorEdge sont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE "EN L'ETAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISEE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFAÇON.



# Contents

---

**Contents**   iii

**Figures**   vii

**Tables**   ix

**Preface**   xi

- 1. Sun StorEdge Traffic Manager Software Overview**   1
  - About the Sun StorEdge Traffic Manager Software   1
    - System Configuration   2
    - Asymmetric Device Path Management Description   2
      - Failover   2
        - Automatic Failover by Error Detection   3
        - Manual Failover Initiated by the User activate Command   3
        - Manual Failover Initiated by User restore Command   3
        - Automatic Failback Initiated by an Automatic Restore   3
      - Symmetric Device Path Management Description   4
    - Hub and Switch Configurations   4
  - 2. Installing, Removing, and Starting the Sun StorEdge Traffic Manager Software**   5

Installing the Software on the IBM AIX Operating System	5
Preparing for Installation	6
Uninstalling the Software	10
Starting the Sun StorEdge Traffic Manager Application Software	13
Starting the Sun StorEdge Traffic Manager Application Software GUI	14
<b>3. Log File Information</b>	<b>17</b>
Listing IBM AIX Error Log Entries for Sun StorEdge Traffic Manager	17
Accessing the Log Files	19
Accessing the Log Files for the IBM AIX Platform	19
Log Level	19
<b>4. Troubleshooting</b>	<b>23</b>
<b>Glossary</b>	<b>25</b>
<b>Index</b>	<b>27</b>

# Figures

---

- FIGURE 1-1    Host Data Paths Between HBAs and the Storage Devices    2
- FIGURE 2-1    SMIT Installation Window for IBM AIX 4.3.3 Operating System    8
- FIGURE 2-2    SMIT Install and Update Window    9



# Tables

---

TABLE 2-1	Installation Package Names for Each Locale	7
TABLE 4-1	Troubleshooting Tips for the Sun StorEdge Traffic Manager Software	23



# Preface

---

The *Sun StorEdge™ Traffic Manager 3.1 Software Installation Guide for the IBM AIX Operating System* provides instructions for installing the Sun StorEdge Traffic Manager software on the host.

This guide is designed for use with the documentation that came with your storage device and is written for experienced system administrators of the IBM AIX operating environment and related disk storage systems.

Throughout this guide, *storage device* is used to designate the storage devices supported in this release. The supported devices are:

- Sun StorEdge 6020 array with 2.1x Firmware Asymmetric Explicit LUN Failover (ELF)
- Sun StorEdge 39xx Asymmetric ELF
- Sun StorEdge 6910 and 6960 Symmetric
- Sun StorEdge 6120 array Asymmetric ELF
- Sun StorEdge 6320 System Asymmetric ELP
- Sun StorEdge 3510 FC array Symmetric
- Sun StorEdge 99xx Symmetric only

---

## Before You Read This Guide

Read the documentation that came with your storage device and have an experienced system administrator's knowledge of the supported IBM AIX operating environment in which you are installing the Sun StorEdge Traffic Manager software.

---

## How This Guide Is Organized

This guide is organized as follows:

Chapter 1 provides an overview of the Sun StorEdge Traffic Manager software.

Chapter 2 describes how to install and remove the software for the driver.

Chapter 3 contains information about accessing the log files and explains the information contained in them.

Chapter 4 provides troubleshooting information.

Glossary contains a list of words and phrases and their definitions.

---

## Typographic Conventions

Typeface	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
<b>AaBbCc123</b>	What you type, when contrasted with on-screen computer output	% <b>su</b> Password:
<i>AaBbCc123</i>	Book titles, new words or terms, words to be emphasized	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this.
	Command-line variable; replace with a real name or value	To delete a file, type <code>rm filename</code> .

---

## Related Documentation

Application	Title	Part Number
Late-breaking information	<i>Sun StorEdge Traffic Manager 3.1 Software Release Notes for IBM AIX, Hewlett-Packard HP-UX, and Microsoft Windows NT, 2000, and 2003 Operating Systems</i>	817-4687-10
Using	<i>Sun StorEdge Traffic Manager 3.1 Software User's Guide</i>	817-3678-10
SAN documentation	<i>Sun StorEdge SAN Foundation Configuration Guide</i>	817-0057-10

---

## Accessing Sun Documentation Online

You can view, print, or purchase a broad selection of Sun documentation, including localized versions at:

<http://www.sun.com/documentation>

---

## Contacting Sun Technical Support

If you have technical questions about this product that are not answered in this document, go to:

<http://www.sun.com/service/contacting>

---

## Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can submit your comments by going to:

<http://www.sun.com/hwdocs/feedback>

Please include the title and part number of your document with your feedback:

*Sun StorEdge Traffic Manager 3.1 Software Installation Guide for the IBM AIX Operating System*, part number 817-3679-10

# Sun StorEdge Traffic Manager Software Overview

---

This chapter contains the following topics:

- “About the Sun StorEdge Traffic Manager Software” on page 1
- “Hub and Switch Configurations” on page 4

---

## About the Sun StorEdge Traffic Manager Software

The Sun StorEdge Traffic Manager is a system for managing multiple paths to storage devices. The Sun StorEdge Traffic Manager system is comprised of a graphical user interface (GUI) application, a command-line interface (CLI) application, and system device drivers for managing the multiple paths. If a failure occurs in one host data path, the Sun StorEdge Traffic Manager software automatically detects the failure and provides continuous access to your data through an alternate data path.

Refer to Chapter 2 of this guide for information about starting the software and to the *Sun StorEdge Traffic Manager 3.1 Software User's Guide* for a description of using the GUI and CLI interfaces. From the GUI, the User's Guide can be accessed by clicking on HELP -> User's Guide. From the CLI, the User's Guide.pdf can be accessed directly.

# System Configuration

The Sun StorEdge Traffic Manager system maintains and presents storage system configuration information. FIGURE 1-1 shows an example of using the Sun StorEdge Traffic Manager GUI application to access the Sun StorEdge Traffic Manager system.

In FIGURE 1-1, each storage device and the LUNs associated with it are shown on the left side of the screen and the paths and host bus adapter (HBA) system names are shown on the right.

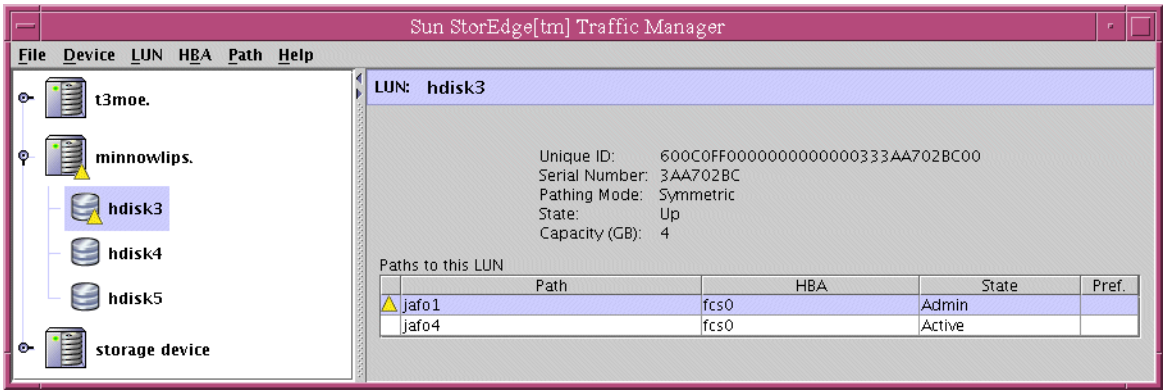


FIGURE 1-1 Host Data Paths Between HBAs and the Storage Devices

## Asymmetric Device Path Management Description

For Asymmetric devices, the following description of failover and failback operations apply.

### Failover

A LUN on a asymmetric device can only have one active controller at a time. The remaining controller is known as the passive controller. Paths to the active controller are known as active paths. Paths to the passive controller are known as passive paths. The process by which a LUN may force a passive controller to become its active controller is known as LUN failover. Upon successful LUN failover, passive paths to a controller become active and previous active paths become passive. On the Sun StorEdge 6020, Sun StorEdge 39xx, and Sun StorEdge 6120 arrays, failover is implemented per device volume. Therefore, if volume slicing is enabled, there may

be multiple LUNs on the volume affected by a failover. Also in a multi-initiator environment, a LUN failover on one host is detected by all other hosts using LUNs on the same volume.

LUN failover can be initiated by both automatic and manual means.

## Automatic Failover by Error Detection

If a path receives errors and fails, it is marked as Down or Removed. If all the active paths for a LUN are marked down and there are remaining passive paths, the driver automatically causes a LUN failover to activate the passive paths.

## Manual Failover Initiated by the User *activate* Command

The user may use the `activate` command to manually initiate a LUN failover by activating a passive path. Previously active paths will become passive. If the LUN is a slice on a volume, all LUNs on that volume will failover for all hosts.

## Manual Failover Initiated by User *restore* Command

On some devices, a LUN may have a default active controller. This is known as the preferred controller. A `restore` command will attempt to cause a failover of all LUNs that do not currently have active paths to their preferred controller.

## Automatic Failback Initiated by an Automatic Restore

If the driver recognizes that a down path becomes passive, an automatic `restore` command may occur. This is currently known as autofailback. The autofailback parameter must be set to `enabled` in order for this to occur.

---

**Note** – Autofailback is not supported in a multi-initiator environment.

---

To learn how to perform failback, see the *Sun StorEdge Traffic Manager 3.1 Software User's Guide*. From the GUI, the User's Guide can be accessed by clicking on HELP - > User's Guide. From the CLI, the User's Guide.pdf can be accessed directly from the `/opt/SunTrafficManager/docs` subdirectory using Adobe Acrobat Reader.

## Symmetric Device Path Management Description

For Symmetric devices, all paths are active unless a path is unhealthy and in which case, it is down. There is no failover or failback, an unhealthy path is just not used. Load balancing occurs across all active paths to improve performance by using all available paths to a storage device.

---

## Hub and Switch Configurations

The Sun StorEdge Traffic Manager software also works with storage device configurations that include hubs and switches. For a list of compatible hubs, see the URL in “Preparing for Installation” on page 6.

For information about configuring a storage device with switches, refer to the documentation for the switch you are using.

## Installing, Removing, and Starting the Sun StorEdge Traffic Manager Software

---

This chapter contains the following topics:

- “Preparing for Installation” on page 6
- “Installing the Software on the IBM AIX Operating System” on page 5
- “Installing the Software From the Command Line” on page 7
- “Installing the Software Using SMIT” on page 7
- “Verifying the Installation” on page 10
- “Uninstalling the Software” on page 10
- “Starting the Sun StorEdge Traffic Manager Application Software” on page 13

---

### Installing the Software on the IBM AIX Operating System

---

**Note** – If you have installed a previous version of the driver, you must uninstall it before installing the new version. See “Uninstalling the Software” on page 10.

---

The installation file is named SunTrafficManageryy (where yy indicates the operating system revision, 51 is for IBM AIX revision 5.1.0 and 43 is for IBM AIX revision 4.3.3). Use the command-line version of the System Management Interface Tool (SMIT) to start the installation.

---

**Note** – You should install the Sun StorEdge Traffic Manager software before physically attaching the array so the arrays can be discovered by the software.

---



---

**Caution** – Do not install the SunTrafficManager 43 file on the IBM AIX Revision 5.1.0 operating system.

---

## Preparing for Installation

Before you begin to install the Sun StorEdge Traffic Manager software, you *must* build a text file named `SunTrafficManagerSN.txt` and put the correct serial number of the software in the text file. The serial number is found on the License Card that you received with the Sun StorEdge Traffic Manager software CD.

---

**Note** – The `SunTrafficManagerSN.txt` file must only contain the serial number. There cannot be carriage returns or any other characters.

---

Save the `SunTrafficManagerSN.txt` file at location `/etc/SunTrafficManagerSN.txt`. The software installation will fail if it does not find the `SunTrafficManagerSN.txt` file.

Before you install the driver, make sure that you have the correct versions of the hardware and software. For the most-up-to date information, see:  
[http://www.sun.com/storage/san/multiplatform\\_support.html](http://www.sun.com/storage/san/multiplatform_support.html).

## ▼ Mounting the CD for CLI Installation

To mount the CD and prepare for a CLI installation, perform the following steps:

- Using the `mount` command, mount the CD to a directory on your system. For example:

```
# mount -r -v cdrefs /dev/cd0/cdrom
```

Where `/cdrom` is the directory to mount to. You can mount to any directory you want. Proceed to either:

- “Installing the Software From the Command Line” on page 7

or

- “Installing the Software Using SMIT” on page 7

## ▼ Installing the Software From the Command Line

- **Install the Sun StorEdge Traffic Manager software file with the CLI on an IBM AIX host. For example:**

```
# installp -acd package
```

Where *package* is one of the package names in TABLE 2-1 that is appropriate for your local. If the package name contains 43, the package must be installed on IBM AIX 4.3.3. If the package name contains 51, the package must be installed on IBM AIX 5.1.0.

TABLE 2-1 Installation Package Names for Each Locale

Locale	Package Name
English	SunTrafficManager43.3.1.0.15
	SunTrafficManager51.3.1.0.15
Simplified Chinese	SunTrafficManager_ZH43.3.1.0.15
	SunTrafficManager_ZH51.3.1.0.15
Japanese	SunTrafficManager_JA43.3.1.0.15
	SunTrafficManager_JA51.3.1.0.15
French	SunTrafficManager_FR43.3.1.0.15
	SunTrafficManager_FR51.3.1.0.15


## ▼ Installing the Software Using SMIT

Use the System Management Interface Tool (SMIT) to start the Sun StorEdge Traffic Manager software.

1. **Log in as superuser.**
2. **Start SMIT.**

```
# smit
```

The SMIT installation window is displayed.

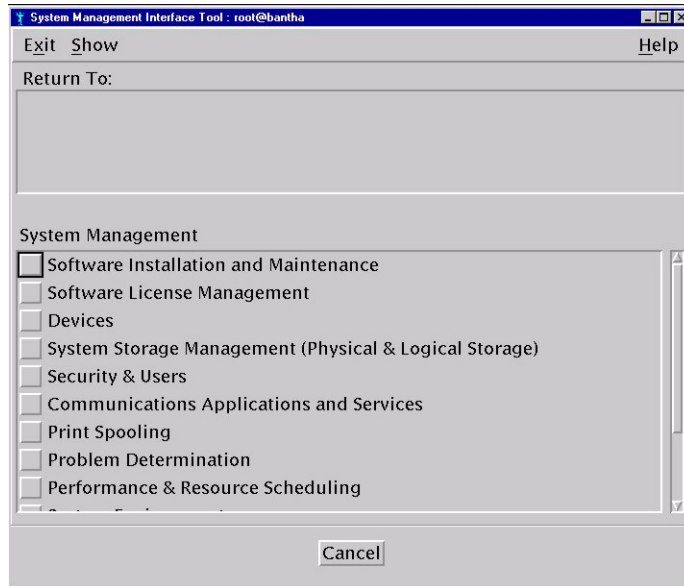

**FIGURE 2-1** SMIT Installation Window for IBM AIX 4.3.3 Operating System

**3. Do one of the following:**

- For IBM AIX 4.3.3 operating system, select Software Installation and Maintenance  
-> Install and Update Software -> Install and Update from LATEST Available Software.
- For IBM AIX 5.1.0 operating system, select Software Installation and Maintenance  
-> Install and Update Software -> Install Software.

**4. Type the full path to the directory where the installation file is in the “\*INPUT device / directory for software” field.**

Click OK to confirm.

5. Click **List** next to “\*SOFTWARE to install,” select the line that starts with SunTrafficManager, and then click **OK**.

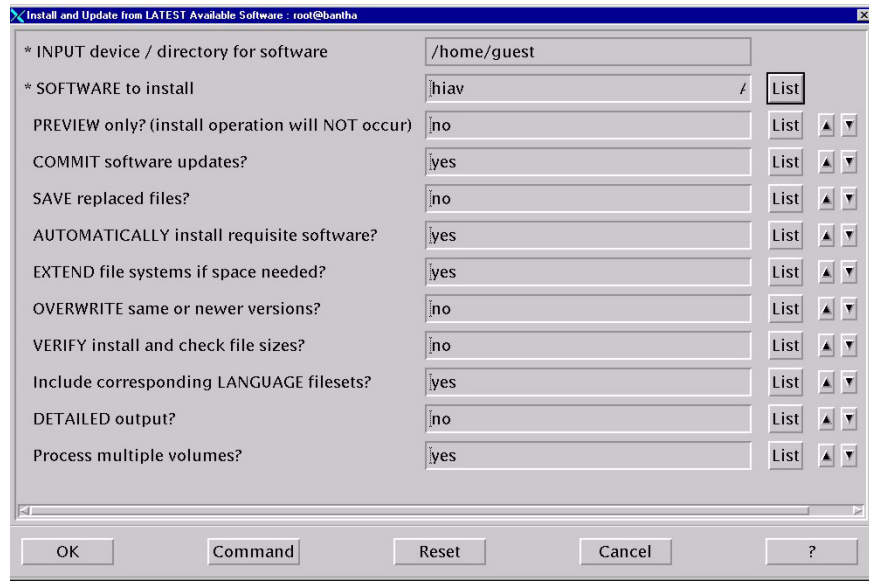


FIGURE 2-2 SMIT Install and Update Window

6. Change the rest of the installation settings as needed.

---

**Note** – During installation in AIX 5.1, set the Accept New License Agreement option to **yes** to accept the Sun StorEdge Traffic Manager 3.1 software serial number. If this is not done, the installation will fail.

---

7. When you are ready to run the actual installation, set “**PREVIEW only**” to **no** and click **OK**.

The system confirms that you want to proceed.

8. Click **OK**.

The Output section of the Install and Update from LATEST Available Software window shows the status of the installation.

9. Exit SMIT and see the next section to verify the installation.

## ▼ Verifying the Installation

### 1. As superuser, type:

```
# ls -lpp -l | grep SunTrafficManager
```

- If the Sun StorEdge Traffic Manager software is installed properly in IBM AIX 5.1.0, a response similar to the following is displayed:

```
SunTrafficManager51.doc 3.1.0.xx COMMITTED Sun Traffic Manager for AIX
SunTrafficManager51.gui 3.1.0.xx COMMITTED Sun Traffic Manager for AIX
SunTrafficManager51.rte 3.1.0.xx COMMITTED Sun Traffic Manager for AIX
```

- If the Sun StorEdge Traffic Manager software is installed properly in IBM AIX 4.3.3, a response similar to the following is displayed:

```
SunTrafficManager43.doc 3.1.0.xx COMMITTED Sun Traffic Manager for AIX
SunTrafficManager43.gui 3.1.0.xx COMMITTED Sun Traffic Manager for AIX
SunTrafficManager43.rte 3.1.0.xx COMMITTED Sun Traffic Manager for AIX
```

### 2. Probe the devices on the host and load the Sun StorEdge Traffic Manager driver into the kernel if you find supported storage devices:

```
# cfgmgr
```

---

**Note** – Install the Sun StorEdge Traffic Manager software on the host before physically attaching the array so the array can be discovered.

---

---

## Uninstalling the Software

If you are upgrading the Sun StorEdge Traffic Manager software to another version, remove the older version first. Perform the following steps to uninstall the Sun StorEdge Traffic Manager software.

## ▼ Preparing for Removal of the Software From the IBM AIX Platform

### 1. Make sure that the operating system is not accessing the storage devices.

Know who is using the storage system in your system configuration and whether the storage system is being used.

### 2. List all the storage devices to determine which ones are known to the Sun StorEdge Traffic Manager software:

```
# lsdev -Cc disk
```

A response similar to the following is displayed, where `hdisk0` is the IBM AIX system disk:

```
host:/ $ lsdev -Cc disk
hdisk0 Available 10-88-00-8,0 16 Bit LVD SCSI Disk Drive
hdisk1 Available 10-68-01-01 Sun 69xx Storage System FCP Disk Array LUN
hdisk2 Available 10-68-01-01 Sun 69xx Storage System FCP Disk Array LUN
hdisk3 Available 10-68-01-01 Sun 69xx Storage System FCP Disk Array LUN
```

### 3. List the volume groups that the disks comprise:

```
# lspv diskname
```

- Where *diskname* is for example, *hdisk0*

### 4. List the file systems on the volume groups of the arrays:

```
# lsvg -l volume_group_name
```

- Where *volume\_group\_name* is the name of the volume group.

### 5. Unmount each of the file systems from the volume groups:

```
# umount file_system_name
```

- Where *file\_system\_name* is the name of the file system.

**6. Vary the volume groups off line:**

```
# varyoffvg volume_group_name
```

**7. Remove all storage devices, where *diskname* identifies each storage device to be removed:**

```
# rmdev -dl diskname
```

**8. List all of the array paths:**

```
# lsdev -Cc jafo
```

**9. Remove all the paths.**

Path deletion might fail if you try to delete the current path and there is a redundant path. Repeat Step 8 and Step 9 until all paths are deleted:

```
# rmdev -dl pathname
```

Refer to your operating system documentation for more information about these functions.



---

**Caution** – Do not use the arrays in a partner group configuration with two HBAs without the Sun StorEdge Traffic Manager driver installed. Uninstalling the driver causes the operating system to see two paths to each LUN, which can result in data corruption.

---

## ▼ Uninstalling the Software From the Command Line

To uninstall the Sun StorEdge Traffic Manager software:

- 1. Log in as superuser.**
- 2. Type the following command:**

```
# installp -u package
```

Where *package* is the appropriate name specified in TABLE 2-1.

## ▼ Uninstalling the Software Using SMIT

1. Log in as superuser.
2. Start SMIT.

```
# smit
```

3. Select Software Installation and Maintenance -> Software Maintenance and Utilities -> Remove Installed Software.
4. Remove all dependents for the software.  
There are three pieces of the Sun StorEdge Traffic Manager software package and all must be selected to completely remove the driver.
5. Change the rest of the settings as needed.
6. When you are ready to run the actual removal, set “PREVIEW only” to “no” and then click OK.  
The system confirms that you want to proceed.
7. Click OK.

---

## Starting the Sun StorEdge Traffic Manager Application Software

This section describes how to start the Sun StorEdge Traffic Manager application software. It contains the topic:

- “Starting the Sun StorEdge Traffic Manager Application Software GUI” on page 14
- “Starting the Sun StorEdge Traffic Manager Application Software CLI” on page 14

## Starting the Sun StorEdge Traffic Manager Application Software GUI

To start the Sun StorEdge Traffic Manager application software GUI in IBM AIX, open a terminal window and type the following:

```
# trafficmgr
```

The Sun StorEdge Traffic Manager software window is displayed.

The Sun StorEdge Traffic Manager multipathing driver is started automatically at system boot or when supported devices are recognized.

To use the Sun StorEdge Traffic Manager software, click Help on the Sun StorEdge Traffic Manager window and select User's Guide from the pull-down menu. The User's Guide is a PDF file accessible by Adobe Acrobat Reader.

## ▼ Starting the Sun StorEdge Traffic Manager Application Software CLI

Entering the `sstm` command with any option on the command line starts the Sun StorEdge Traffic Manager application software CLI if you are in the `sstm` folder or the `sstm` folder is in your path.

To start the Sun StorEdge Traffic Manager CLI:

1. **Open a terminal window and log in as superuser.**
2. **Type the following command from anywhere:**

```
# sstm
```

The Sun StorEdge Traffic Manager command line is displayed.

The Sun StorEdge Traffic Manager multipathing driver is started automatically at system boot or when supported devices are recognized.

To get a full list of available CLI options, type `sstm -?`.

The Sun StorEdge Traffic 3.1 Software User's Guide is loaded in the Sun StorEdge Traffic Manager directory when Sun StorEdge Traffic Manager software is installed. For information about the Sun StorEdge Traffic Manager software, go to `User's Guide.pdf` in the directory to display the user's guide. Use Adobe Acrobat Reader to open the User's Guide.PDF file found at `/opt/SunTrafficManager/docs`.



## Log File Information

---

This chapter describes the log files for the IBM AIX operating environment and the log levels logged in the system log file. See the Sun StorEdge Traffic Manager 3.1 User's Guide for a description of setting the log levels.

Topics in this section include:

- "Accessing the Log Files" on page 19
- "Log Level" on page 19

---

## Listing IBM AIX Error Log Entries for Sun StorEdge Traffic Manager

The logging messages for IBM AIX have log IDs based on message length. To get a listing of AIX error log IDs for Sun StorEdge Traffic Manager software, use the `errpt` command of AIX. For example:

```
> errpt -tj "JAFO_LOG*"

319A03A2JAFO_LOG_INFO_128 INFO H Log entry
8B515DE8JAFO_LOG_INFO_64 INFO H Log entry
B4284724JAFO_LOG_INFO_MAX INFO H Log entry
F2E7E2BFJAFO_LOG_INFO_512 INFO H Log entry
```

To get a listing of only Sun StorEdge Traffic Manager software related error messages, use the AIX `errpt` command specifying to report only labels like `JAFO_LOG`. For example:

```
> errpt -aj "JAFO_LOG*"
```

```
LABEL:      JAFO_LOG_INFO_256  
IDENTIFIER:  F2272237
```

```
Date/Time:   Thu Oct 9 12:18:42 CDT  
Sequence Number: 987696  
Machine Id:  000228BF4C00  
Node Id:     aix2  
Class:       H  
Type:        INFO  
Resource Name: jafo9  
Resource Class: jafo  
Resource Type: t300  
Location:    27-08-01
```

```
Description  
Log entry
```

```
Probable Causes  
none
```

```
Failure Causes  
none
```

```
Recommended Actions  
none
```

```
Detail Data
```

```
JAFO: Path state changed. DOWN-> ACTIVE Path: jafo9 LUN: hdisk2  
Reason:IO status SC_GOOD_STATUS  
08000001010000000000000000  
000000000 1 1 0
```

---

# Accessing the Log Files

## Accessing the Log Files for the IBM AIX Platform

The log files are contained in the following binary file:

```
/var/adm/ras/errlog
```

Use the `errpt` command to view the contents of the log file. For example, to view only Sun StorEdge Traffic Manager related messages, type:

```
errpt -aj "JAFO_LOG*"
```

---

## Log Level

This section describes the various log messages at the various logging levels as configured by the GUI or CLI. See the Sun StorEdge Traffic Manager 3.1 Software User's Guide for a description of setting the logging level for all devices attached to the current host. The Sun StorEdge Traffic Manager 3.1 Software User's Guide is displayed by selecting `Help` from the Sun StorEdge Traffic Manager window and selecting `User's Guide` from the drop down list.

You can configure the following logging levels:

- Informational messages - These include all critical error messages as well as non-critical alerts. Non-critical alerts are usually when something has changed but no functionality is lost.
- Data path change messages - changes to the state of a host data path.
- Critical error messages - Unrecoverable errors, such as when the Sun StorEdge Traffic Manager software loses access to a LUN or is out of memory.
- Caution and internal error messages - Errors the Sun StorEdge Traffic Manager software encounters but does not handle.

If logging level Data Path Changes is not set, data path change messages are not shown.

If logging levels Data Path Changes and Critical Error messages are set, only critical information is shown.

If logging levels Data Path Changes and Internal Errors are set, only non-critical information is shown.

**TABLE 3-1** Log Informational Messages

Message	Message Explanation	Information in the Message
Driver loaded.	The operating system has loaded the Product Namesoftware.	<ul style="list-style-type: none"> <li>• Major version</li> <li>• Minor version</li> <li>• Point version</li> <li>• Release version</li> </ul>

**TABLE 3-2** Log Data Path Changes and Log Critical Errors

Message	Message Explanation	Information in the Message
Path state change.	This message is logged when the state of any path changes for critical reasons.	<ol style="list-style-type: none"> <li>1. Old state and new state. Valid values are: <ul style="list-style-type: none"> <li>• Active</li> <li>• Passive</li> <li>• Down</li> </ul> </li> <li>2. Path name</li> <li>3. Unique LUN ID</li> <li>4. Reason string, valid values are: <ul style="list-style-type: none"> <li>• I/O status—state change as a result of I/O status. There will also be detail data consisting of operating system specific SCSI status.</li> <li>• User initiated—state change as a result of user initiated action, for example, activate or disable</li> <li>• AutoFailback initiated—state change as a result of auto failback action</li> <li>• Failover initiated—state change due to the need for passive to active action</li> </ul> </li> </ol>

**TABLE 3-3** Critical Log Messages

Message	Message Explanation	Information in the Message
Failover command sent to:	This message is logged when the state of any path changes for critical reasons and the logging levels Log Data Path Changes is set in addition to Log Critical Error.	<ol style="list-style-type: none"><li>1. Path name on which the failover command was sent</li><li>2. Unique LUN ID</li><li>3. Unique array ID</li><li>4. Controller ID</li><li>5. Reason string, valid values are:<ul style="list-style-type: none"><li>• User initiated—failover command sent as a result of user initiated action. For example, activate or disable.</li><li>• AutoFailBack initiated—failover command sent as a result of auto restore failback action</li><li>• Failover initiated—failover command sent due to the need for passive to active action</li></ul></li></ol>

**TABLE 3-4** Log Data Path Changes and Log Internal Errors

Message	Message Explanation	Information in the Message
Path state changed to:	This message is logged when the state of any path changes for critical or non-critical reasons and the logging levels Log Data Path Changes and Log Internal Errors are set.	<ol style="list-style-type: none"> <li>1. Old state and new state. Valid values are: <ul style="list-style-type: none"> <li>• Unknown</li> <li>• Active</li> <li>• Passive</li> <li>• Transition</li> <li>• Down</li> <li>• Admin</li> <li>• Removed</li> </ul> </li> <li>2. Path name</li> <li>3. Unique LUN ID</li> <li>4. Reason string, valid values are: <ul style="list-style-type: none"> <li>• IO status—state change as a result of I/O status. There will also be detail data consisting of operating system specific SCSI status.</li> <li>• Device added—state change as a result of a new path</li> <li>• Device removed—state change as a result of a path removed</li> <li>• User initiated—state change as a result of a user initiated action. For example, activate or disable.</li> <li>• AutoFailBack initiated—state change as a result of auto failback action</li> <li>• Failover initiated—state change due to a need for passive to active action</li> </ul> </li> </ol>

**TABLE 3-5** Log Internal Messages

Message	Message Explanation	Information in the Message
LUN state changed.	This message is logged when any noncritical LUN state changes occur.	<ol style="list-style-type: none"> <li>1. Old LUN state and new LUN state. Valid values are: <ul style="list-style-type: none"> <li>• Unknown</li> <li>• Up</li> <li>• Transition</li> <li>• Down_Grace</li> <li>• Down</li> <li>• Removed</li> </ul> </li> <li>2. LUN unique ID</li> </ol>

## Troubleshooting

---

TABLE 4-1 provides Sun StorEdge Traffic Manager troubleshooting information in the IBM AIX operating system.

**TABLE 4-1** Troubleshooting Tips for the Sun StorEdge Traffic Manager Software

Problem	Solution
You want to use the command-line interface.	From a terminal session, type <code>sstm</code> to start the Sun StorEdge Traffic Manager CLI utility.
The physical connection between the host and array(s) is correct, but the host still does not see the array devices.	Check the Event Viewer. Look for messages logged by the driver named <code>Jafo</code> .



# Glossary

---

<b>active path</b>	A path that is healthy and ready for I/O.
<b>array</b>	A Sun StorEdge array that contains an internal RAID controller and disk drives with Fibre Channel connectivity to the data host.
<b>failback</b>	The process of making a LUN's preferred controller the active controller. Also known as restore.
<b>failover</b>	The process of sending a failover command down a passive path to change the active controller for a LUN.
<b>host bus adapter (HBA)</b>	A controller board that connects the host computer bus and the FC-AL that manages the transfer of information between the two channels.
<b>logical unit number (LUN)</b>	A piece of logical storage presented by the device to the host.
<b>passive path</b>	For an asymmetric device, a path to a passive controller. Can be made active by sending a failover command.
<b>preferred controller</b>	On an asymmetric device, the default active controller for a LUN.
<b>restore</b>	The process of making a LUN's preferred controller the active controller. Also known as failback.
<b>volume</b>	One or more drives configured into a RAID group. May be sliced into smaller LUNs to be presented to the host.
<b>worldwide name (WWN)</b>	Unique number assigned to each device on a Fibre Channel loop.



# Index

---

## A

- activate command, initiating a manual failover, 3
- AIX errpt command, listing of error messages, 17
- automatic failover by error detection, 3
- automatic failover, initiated by automatic restore command, 3
- automatic restore, initiating an automatic failover, 3

## C

- CD, mounting for installation procedure, 6
- command line, uninstalling the Sun StorEdge Traffic Manager software, procedure, 12
- conventions, typographic, xii

## D

- description of failover, 2
- documentation, related, xiii

## E

- error detection, causing automatic failover, 3
- error messages, using AIX errpt command, example, 17
- errpt command, listing of error messages in AIX, 17

## F

- failback
  - defined, 3
- failover
  - automatic by error detection, 3
  - automatic initiated by automatic restore, 3
  - description, 2
  - manual failover initiated by restore command, 3
  - manual, initiated by user command, 3

## G

- GUI, starting, 14

## I

- installing
  - a new version, 5
  - from the command line, 7
  - installation package names, 7
  - mounting the CD, 6
  - preparation for, 6
  - using SMIT, procedure, 7
  - verifying the installation, procedure, 10

## L

- log file information, accessing, 19
- log file information, pointer to description, 17
- log file, log levels, description of, 19

log level  
    caution and internal error messages, 19  
    critical error messages, 19  
    data path change messages, 19  
log levels  
    informational messages, 19

## **M**

manual failover, initiated by activate command, 3  
manual failover, initiated by restore command, 3

## **N**

new version, installing, 5

## **P**

package names for installation, 7  
preparing to uninstall the software, procedure, 11

## **R**

related documentation, xiii  
requirements for Sun StorEdge Traffic Manager  
    software, 6  
restore command, initiating a manual failover, 3

## **S**

SMIT, uninstalling the Sun StorEdge Traffic  
    Manager software, procedure, 13  
SMIT, using for installation procedure, 7  
Sun StorEdge Traffic Manager  
    system requirements, 6  
Sun StorEdge Traffic Manager software  
    starting CLI, 13  
    starting GUI, 13  
    system requirements, 6  
    troubleshooting information, 23  
system requirements, 6

## **T**

typographic conventions, xii

## **U**

uninstalling the Sun StorEdge Traffic Manager  
    software  
    from the command line, procedure, 12  
    using SMIT, procedure, 13

## **V**

verifying the installation, procedure, 10